



INSTRUCTIONS MANUAL

**Ethernet interface between the machine and the PC
for operator panel with touch-screen display (ARM)**

Manual code: DM200289

Revision: D

PROCEDURE FOR SETTING UP A REMOTE CONNECTION WITH THE MACHINE


> Connect the PC to the Ethernet port on the machine.

Depending on the machine model, the Ethernet port can be right on the operator panel or inside the electric panel. To locate its position, see the use and maintenance manual of the machine you want to connect to.

> Operations to be carried out at the Operator Panel


1) From the (main) operator panel of the machine:

- Access the menu “**Utility**” → “**Network**”.
- Set the **IP address** (in the example **192.168.0.1**) according to one of the following procedures.
 - a) with the DHCP (Dynamic Host Configuration Protocol) function already enabled, the IP address is assigned automatically. However if the IP address is set this way, it could change every time the machine is switched on.
 - b) Enter the IP address manually by setting the correct parameters after having disabled the DHCP function.

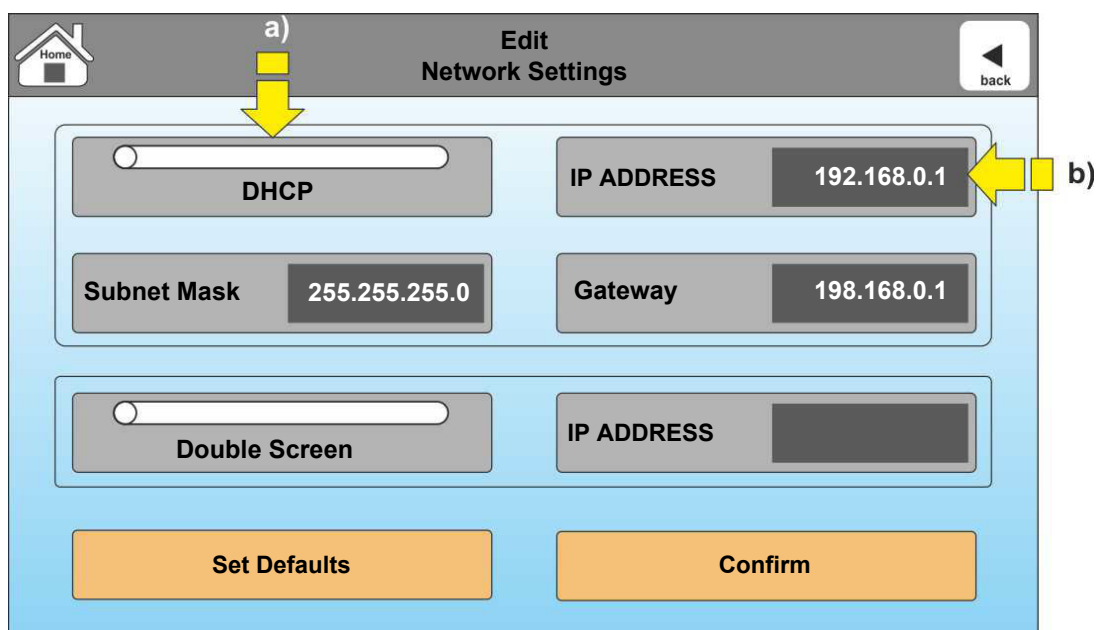


1 - (Configuration of single Operator Panel or main Operator Panel)

- press “confirm” to save the settings; you are then prompted to restart the computer of the machine. Press **OK** to restart.

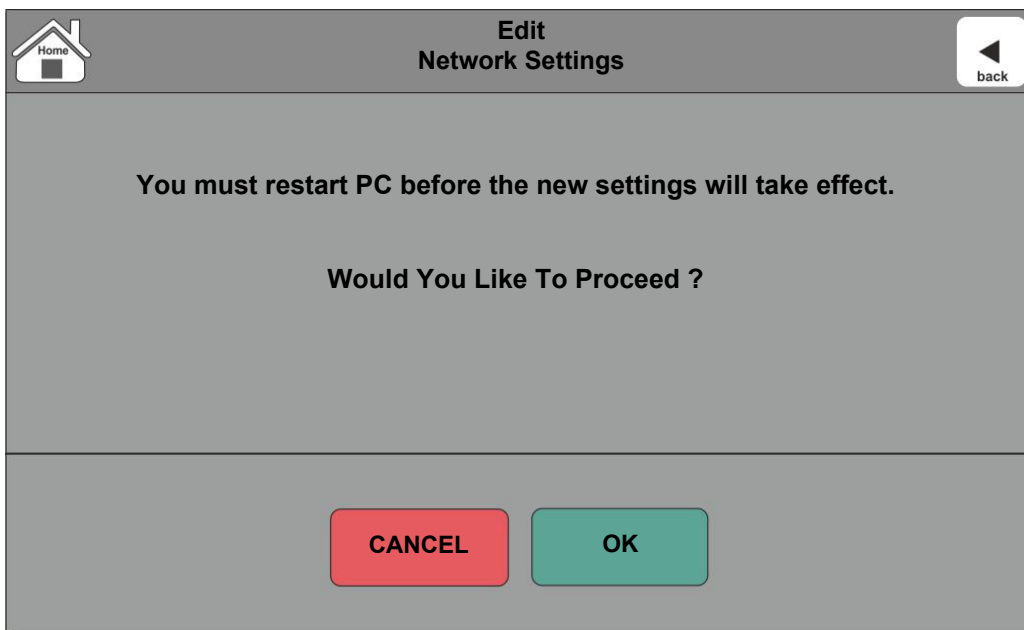

2) At the secondary Operator Panel of the machine (if the machine has two Operator Panels):


- access the menu “**Utility**” → “**Network**”.
- manually enter the **IP Address** (in the example **192.168.0.2**); the DHCP function is not enabled in this case.
- activate the “**Double Screen**” function; activating this function sets this operator panel as the secondary one.
- enter in the field (*) the **IP address** of the main Operator Panel (in the example **192.168.0.1**)
- press “confirm” to save the settings; you are then prompted to restart the computer of the machine. Press **OK** to restart.

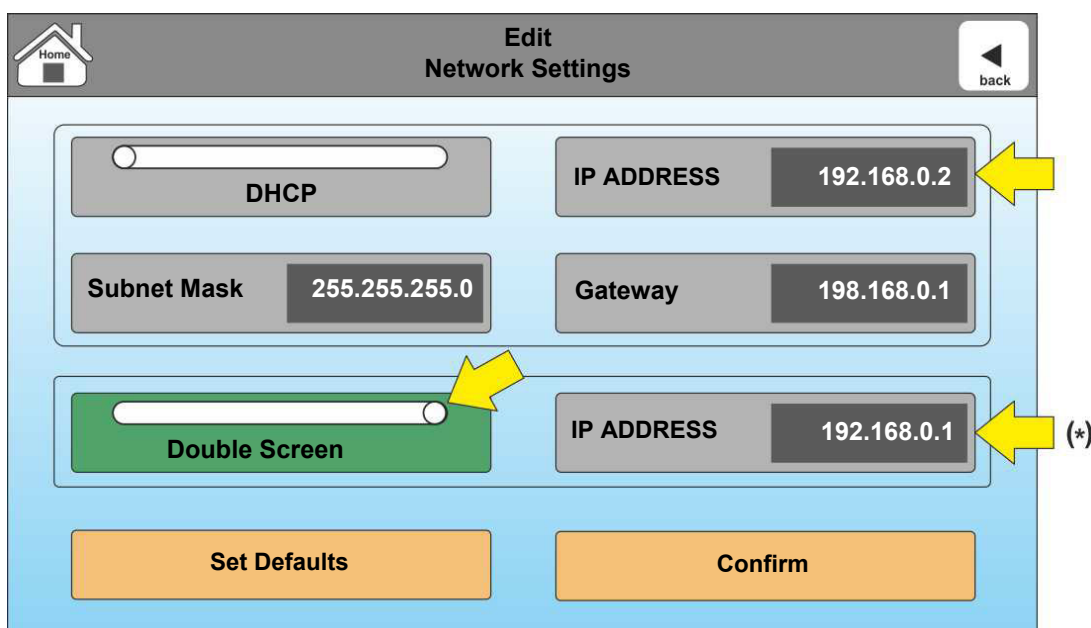


2 - (Configuration of the secondary Operator Panel, if present)

>How to use the “UltraVNC Viewer” program:


- After correctly setting the Cpc, on the computer that you will use to connect to the machine, launch the “Ultra VNC Viewer” program.
- Enter the address of the machine that you wish to connect to (**192.168.0.1**) and press “**Connect**”.

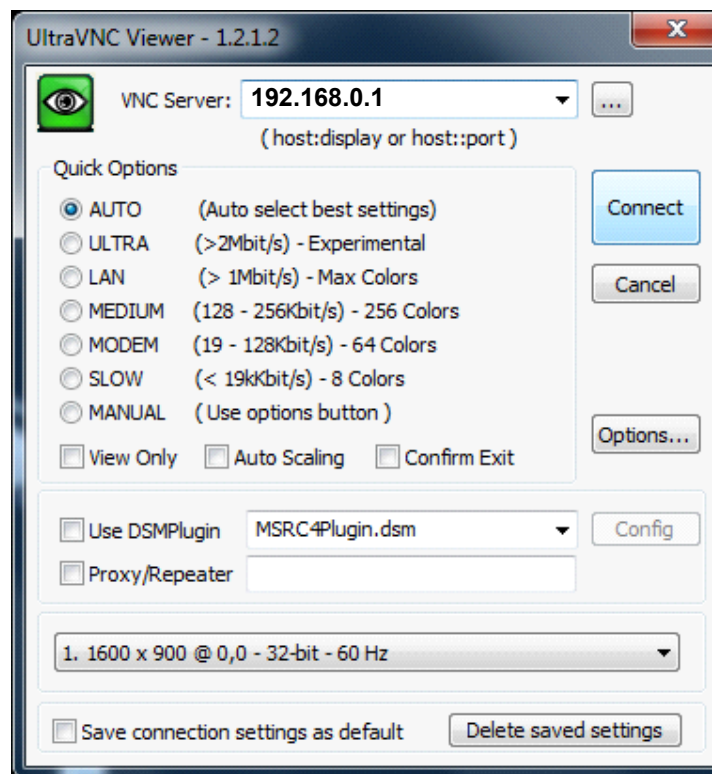

- You will be asked to enter a password. Enter “**x11vnc**” and then press the **Log On** key.

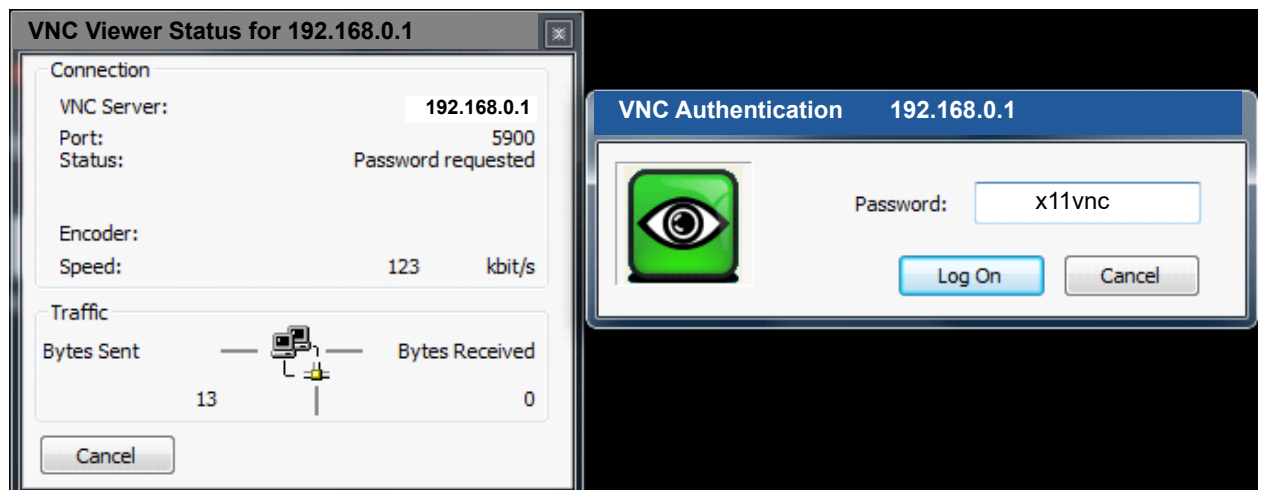

If everything is entered correctly, the following machine screen page will appear:

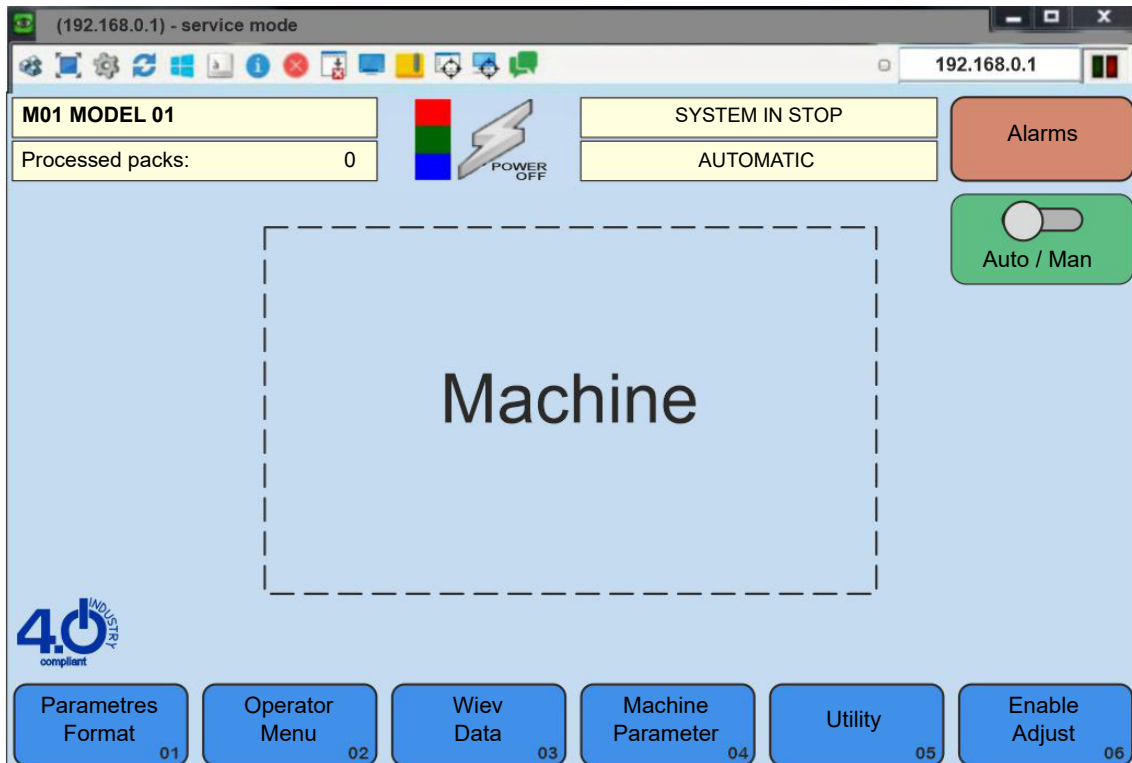

For interfacing you will need to have a program with module communication protocol on TCP/IP. (If you do not have any such program, you can download the “Ananas” program for free from <http://www.tuomio.fi/ananas/>)

Below is a description of how to consult the registers using the “Ananas” program.

- Start the “client modbus” by pressing “Show” as in the figure.

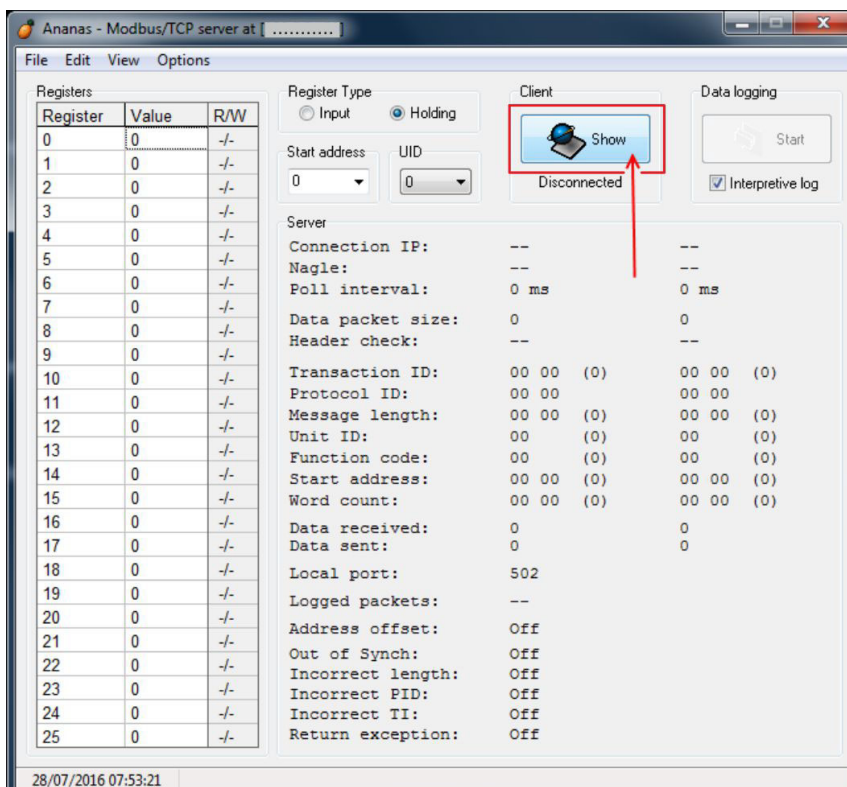


Fig. 1.0.1

- Select “**Connect...**” and then set the address of the CPC that you wish to connect to as **192.168.0.1**, as shown in fig. 1.0.2.

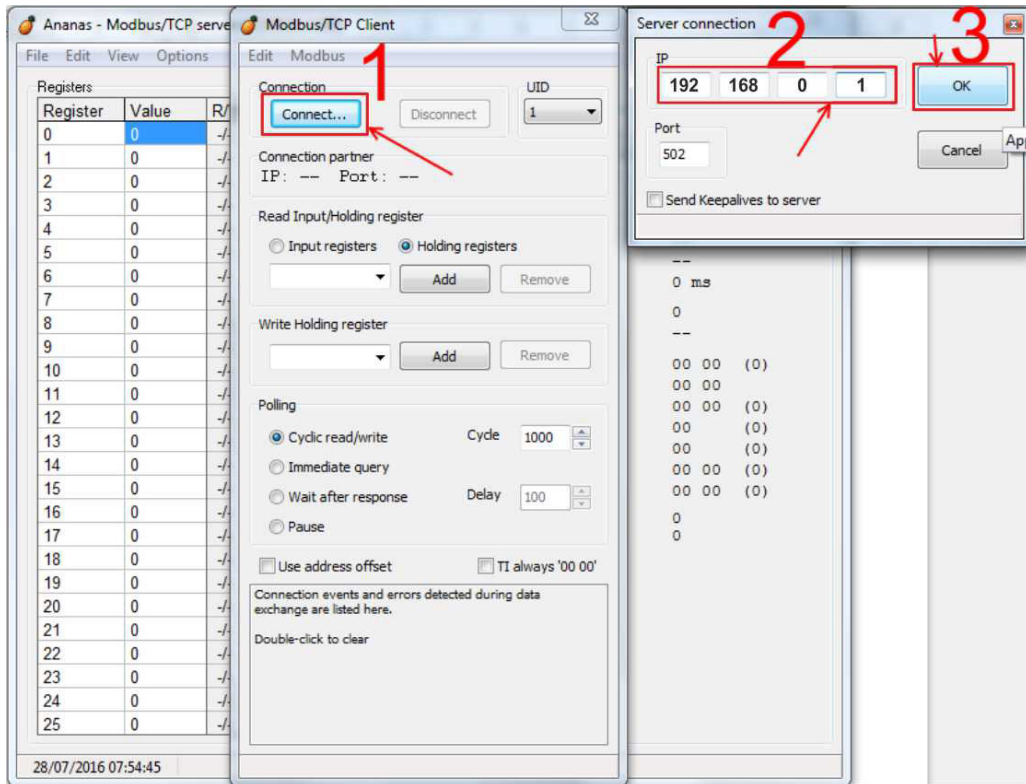


Fig. 1.0.2

The consultable registers are:

Register 13300: this shows you the format currently in use (value 0=format number 1....., value 49=format number 50)

Register 10142: to set the required format

Register 10112: also allows you to enter the production lot (**ID**); the lot number is displayed on the interface with three zeros added (Lot No.5 → 5000)

Register 10161: allows to set the number of packages to be wrapped.

Changes to the format memory that is active on the machine must be made by writing on **Register 10142**. To do so, you must:

- Select the “**Write Single Register...**” function.
- Enter **Address 10142**

Enter the memory of the format that needs to be activated on the machine (the example provided in the figure requests activation of the memory for format 5) and then confirm the writing process by pressing “**Write**”

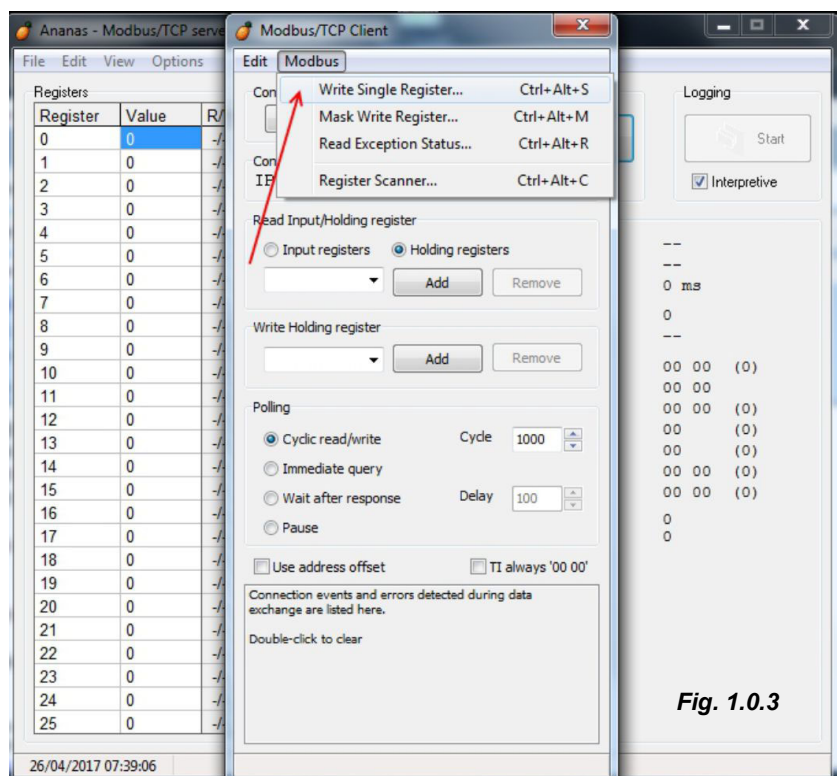


Fig. 1.0.3

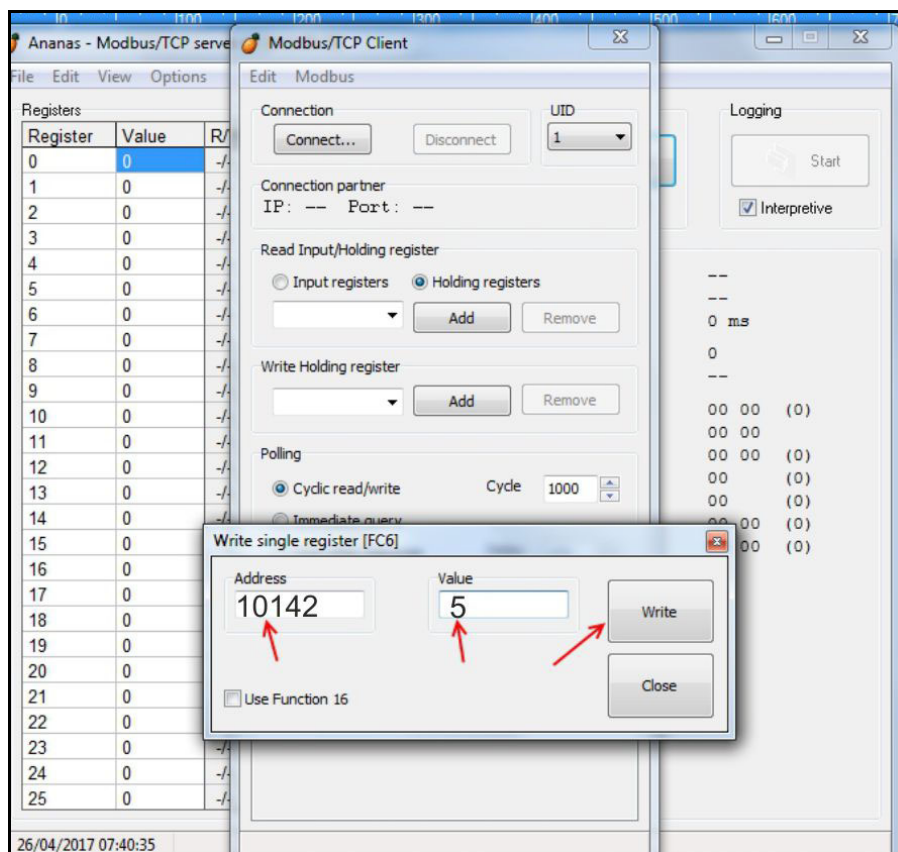


Fig. 1.0.4

If you wish, repeat the operation with register 10112 and 10161.

At this point, a message will be shown on the display, asking you to confirm the format memory change request. Press **“OK”** to confirm or **“CANCEL”** to cancel the operation.


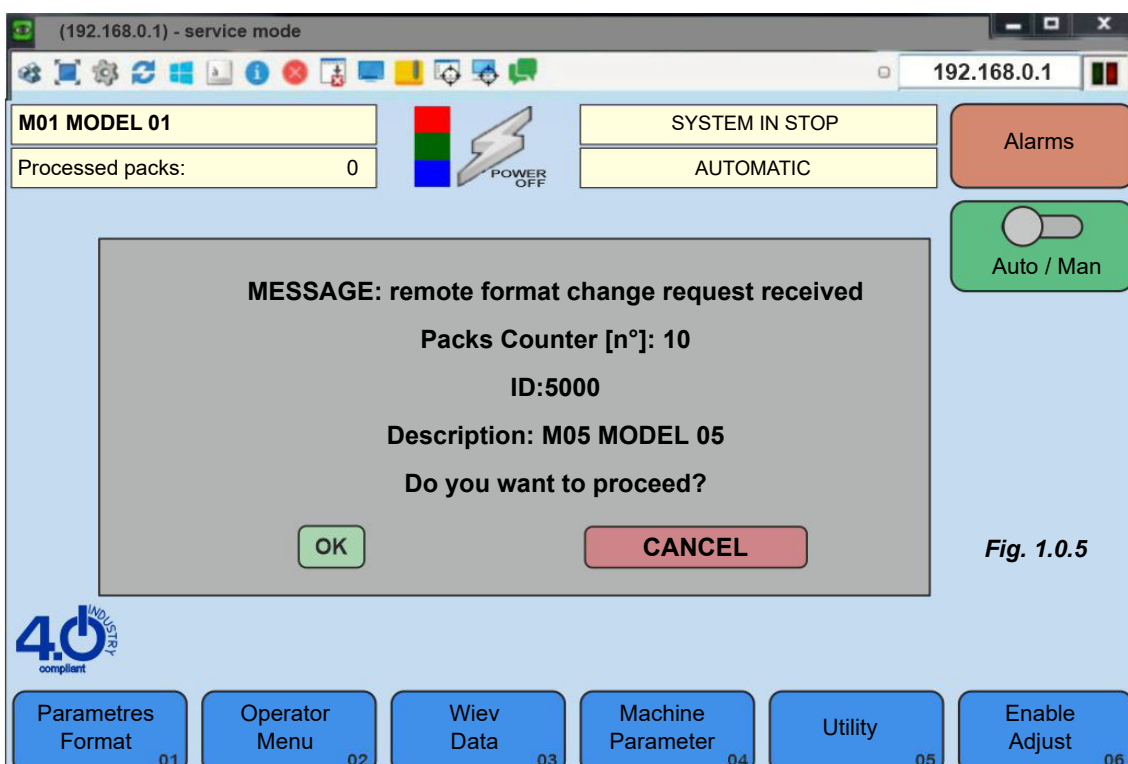


Fig. 1.0.5

Pressing “**OK**” upon the next machine **Start** will indicate a new message (shown in fig. 1.0.6), which will ask whether the format memory update must be effective immediately or postponed.

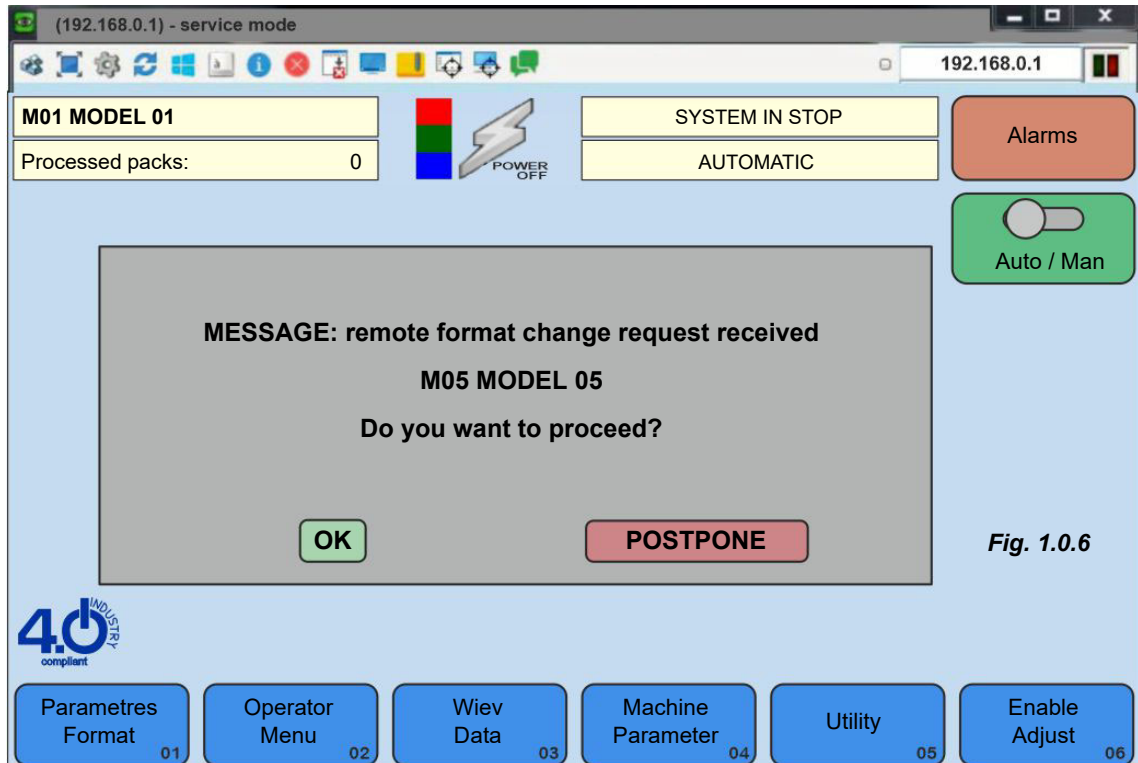

Pressing “**OK**” on the display of the operator panel will show the format memory selected via the PC (in the example: memory M05)

Pressing “**POSTPONE**” will delay the change in the format memory to a subsequent machine **Start**, upon which a new request message will be displayed.



SMIPACK S.p.A. - Via Piazzalunga, 30 - 24015 S. Giovanni Bianco (BG) - ITALY

Tel. +39.0345.40400 - Fax +39.0345.40409 - www.smipack.it