

SECTORS, ZONES, & POINTS

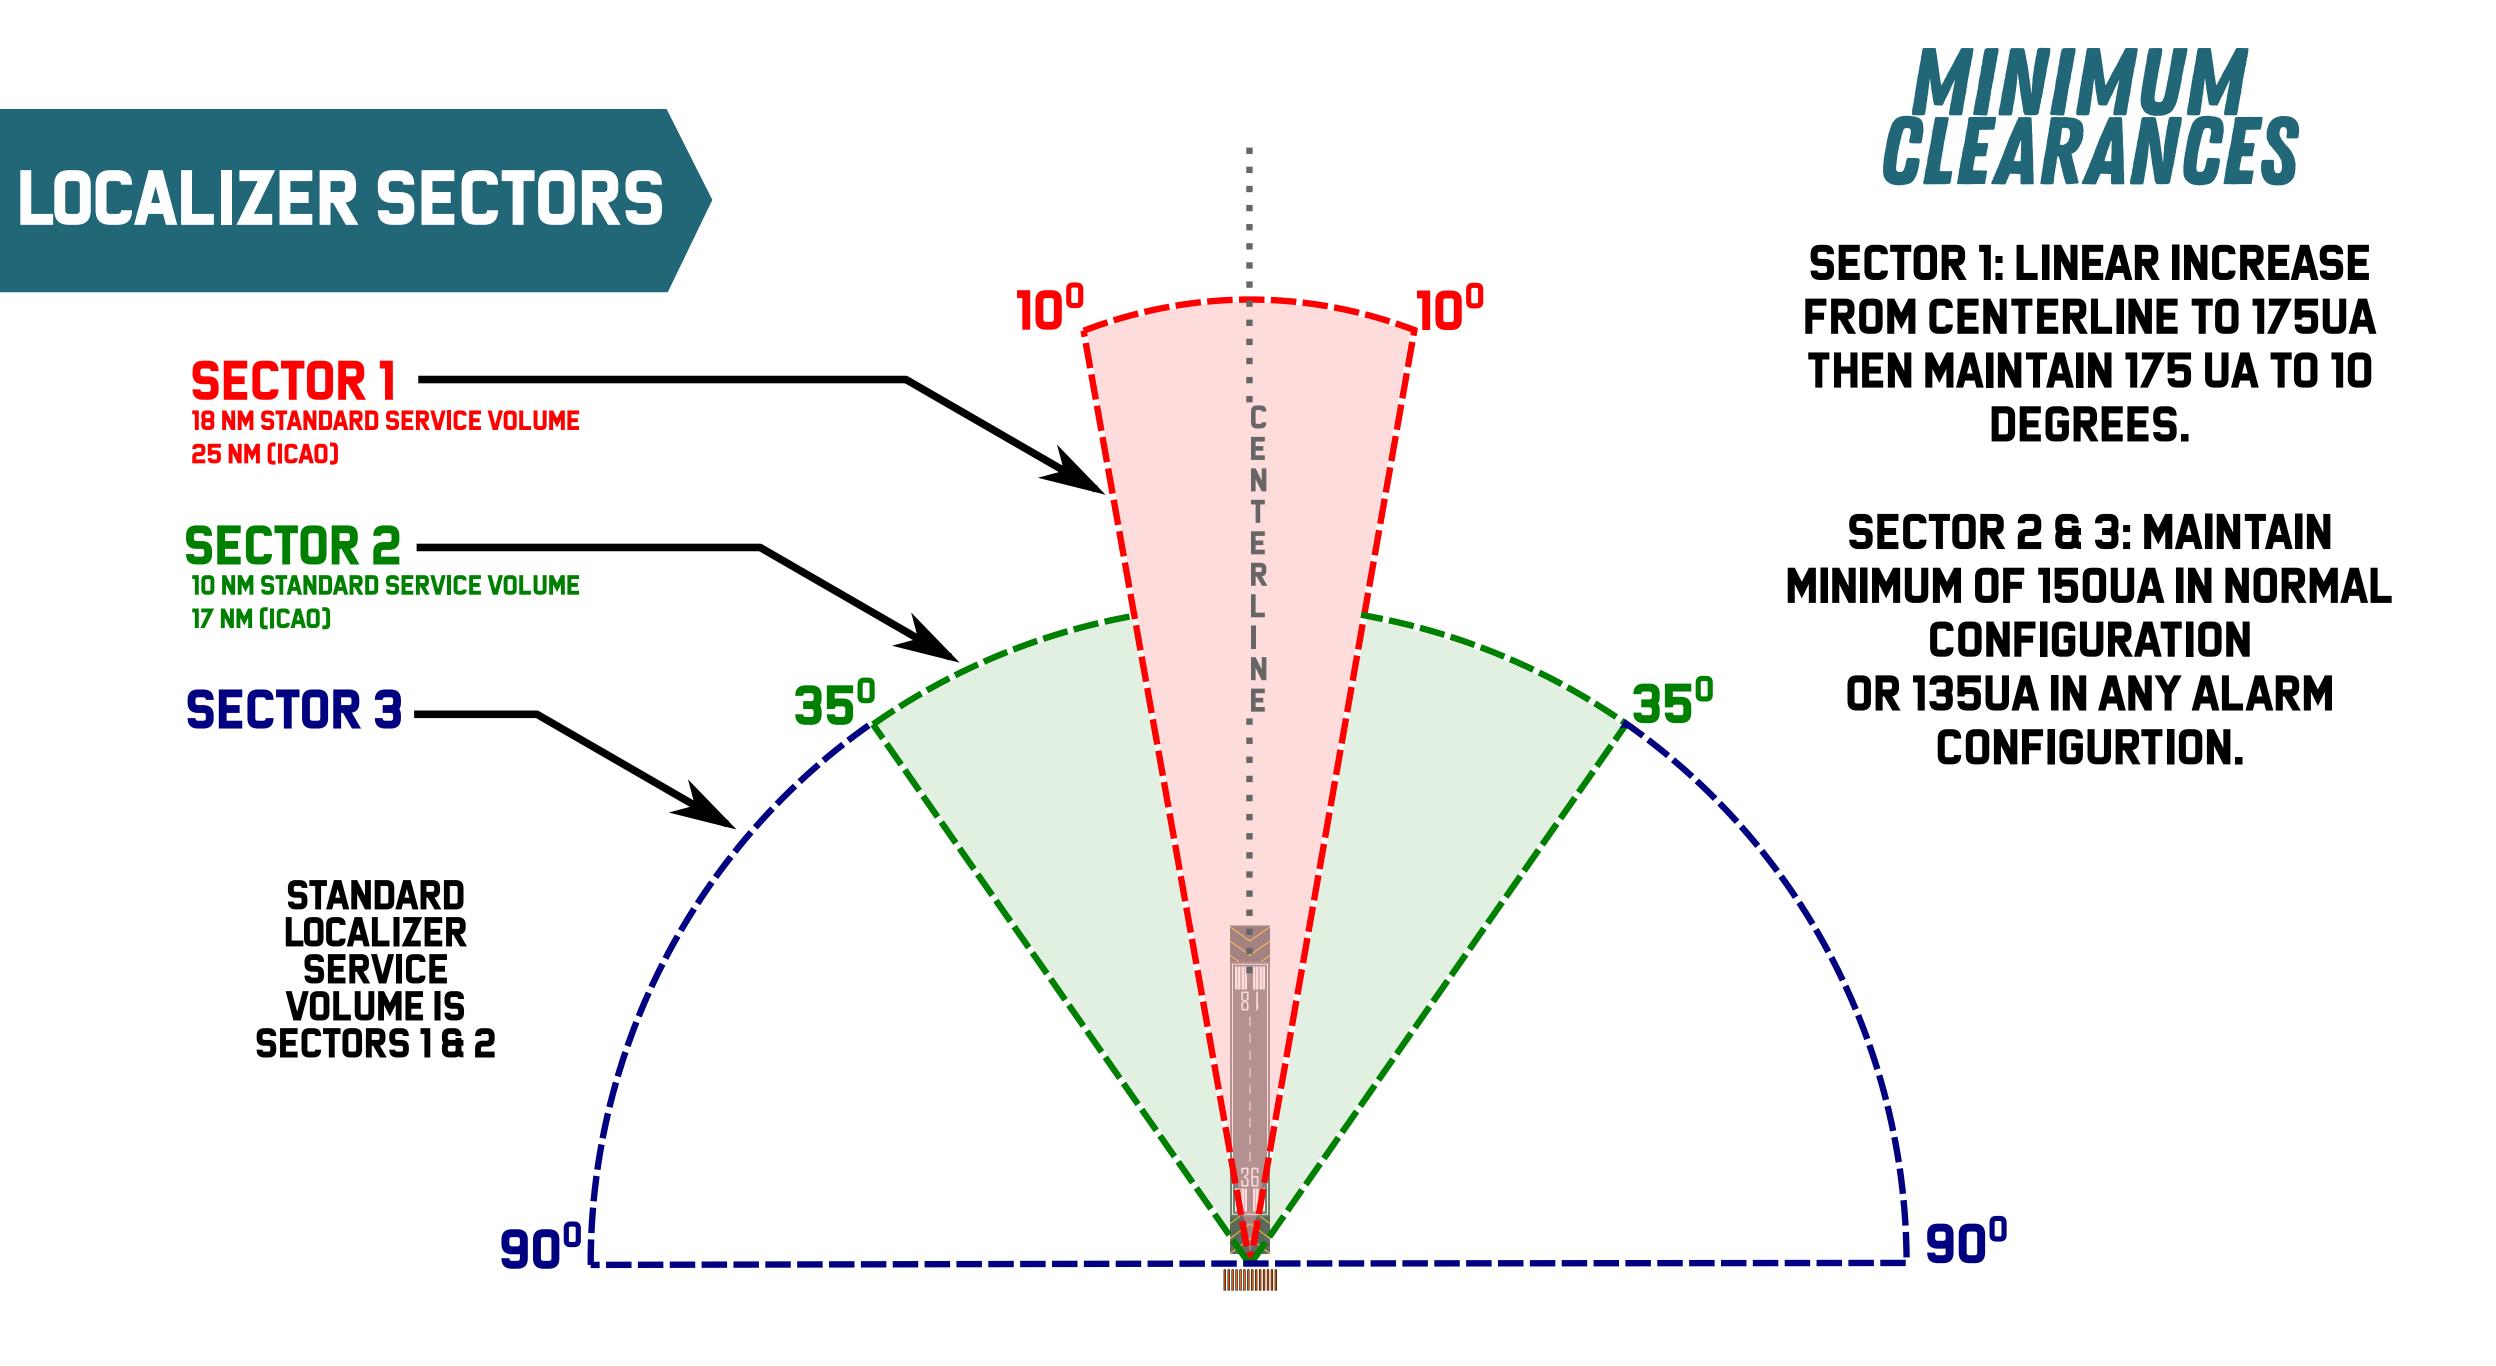

ZONES & POINTS

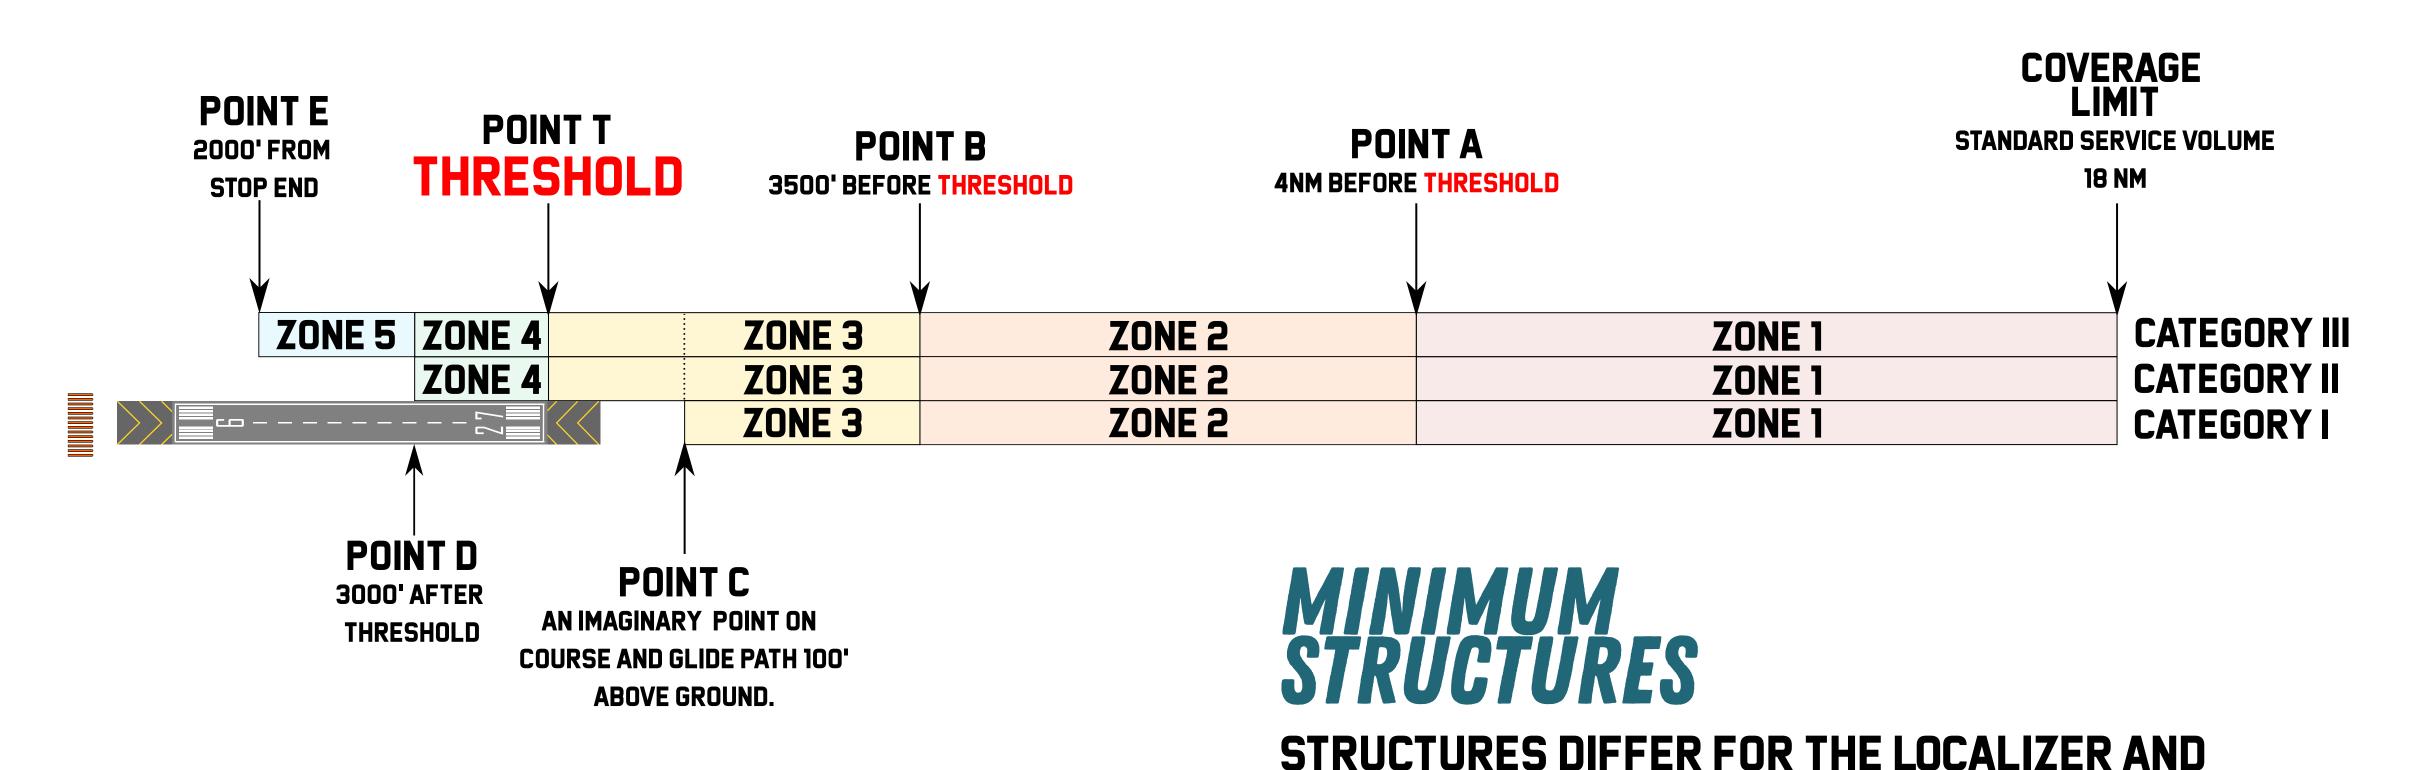

GLIDE SLOPE THROUGH EACH ZONE. SEE FAA ORDER 8200.1D, SECTION 6. FOR SPECIFIC TOLERANCES.

ZONES 4 AND 5 DO NOT APPLY TO GLIDE SLOPES.