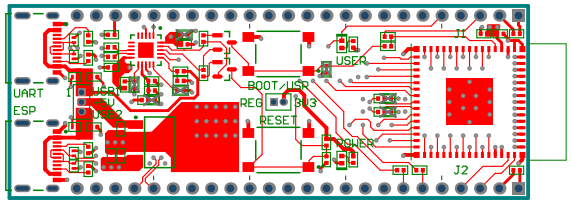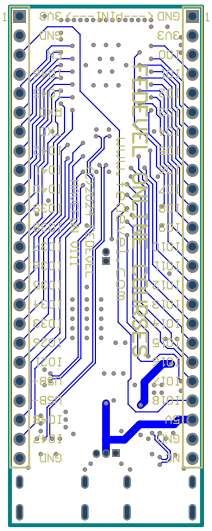
UART
ESP
USER
BOOT/USR
REG
RESET
POWER
J1
J2