

## MINI-COPTER

## ON QUADCOPTER

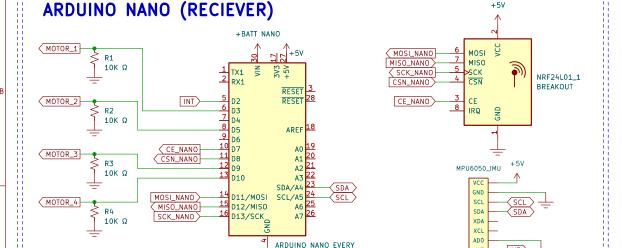

Note: The ADO and INT pins do not need to be connected anywhere. Only connect them (as shown above) if issues are encountered.

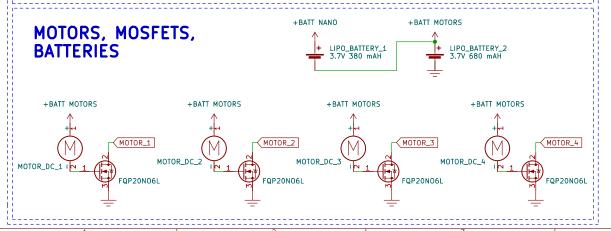

Note: 5V and GND for Transmitter and Reciever are different. All Transmitter parts have same GND and 5V, and all Reciever parts have same GND and 5V.

## ARDUINO UNO (TRANSMITTER)

