

Magneto Telephone with Electro dynamic Transducer (IRS/TC 36-97)

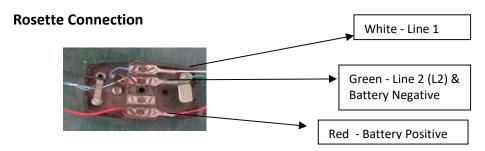

Internal View

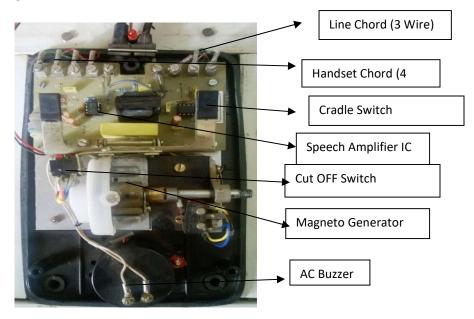

Trouble Shooting

- 1. Check Magneto phone Output voltage: 75 to 90 VAC.
- 2. Make loop between line side and rotate magneto generator, it will be hard, so power supply is extending, if handle is free then no supply is extending to the line.
- 3. The minimum incoming voltage to buzzer should be 35VAC.
- 4. Change the magneto phone power supply 3VDC periodically.