


TIMOZIA

M880UT




Download our app from App store & Play store

iOS

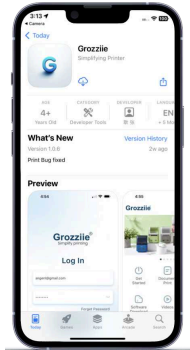

<https://apps.apple.com/us/app/grozziie/id6476171035>

Android

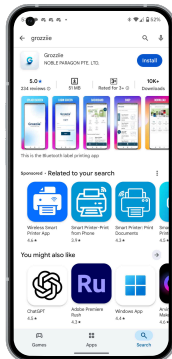

<https://play.google.com/store/apps/details?id=com.grozziie.printer>


01. Product Introduction	
1.1. What's in the Package	02
1.2. Attendance Machine Features	02
02. Specifications	03
03. Placement	03
04. Installation	04
05. Basic Setting	
5.1. Introduction of Keypad	04
5.2. Manually Change the time zone	05
5.3. Check Bluetooth Address	06
5.4. Input Password	06-07
5.5. Change Password	07-08
5.6. Manual Punch (Clock In/Clock Out Time)	08
06. Grozziie App	
6.1. Connect with the Grozziie App	09-10
6.2. How to connect the Attendance Machine with Grozziie App	10-12
6.3. First time setup wizard	12-13
07. Device Setup	13
7.1. Set Time & Date	14
7.2. Set Working Time	14-16
7.3. Set Password	16-17
7.4. Pay Period	17
7.5. About Machine	18
7.6. Print Format	19
7.7. Setup Paper	20-21
7.8. Column Position	21
7.9. Replace Ribbon	22-23
7.10. Backlight Setup	23
7.11. Music Time Settings	24
7.12. DST	24-25
7.13. Display Week Format	25
08. Features of Grozziie App	
8.1. Get Started	26-28
8.2. Live Chat	29
8.3. Video	29
8.4. Online Store	30
09. Time card	31
10. Precautions	32
11. Safety Notices	32
12. After Sales Service	
13. Warranty	

1.1 What's In The Package




①

Punch Card Attendance Machine



②

Power Adapter

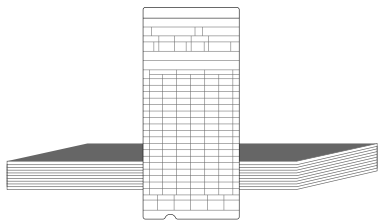


③

Punch Cards



④


User Manual

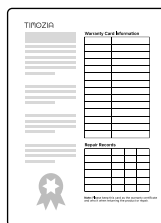

⑤


Warranty Card

1.2 Attendance Machine Features

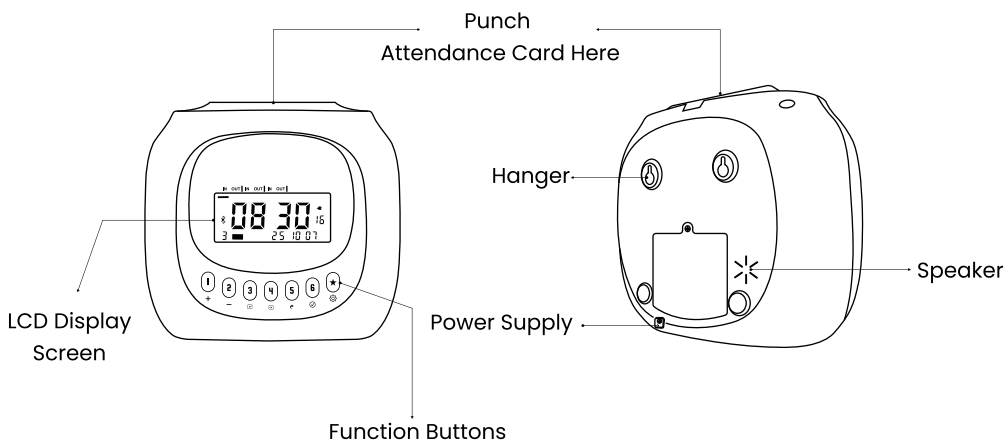

Type	Attendance Machine
Model	M880UT
Input/ Output Power	Input: 90V~240V, Output: 12V~2A
Battery	11V-1800mAH (Only Supported For M880D)
Color	White
Weight	1.1kg
Package(LxWxH)	295mm(L)*290mm(W)*170mm(H)


Proper Placement and good use environment can keep a good condition of the **Attendance Machine**. Properly placed as shown in the following picture

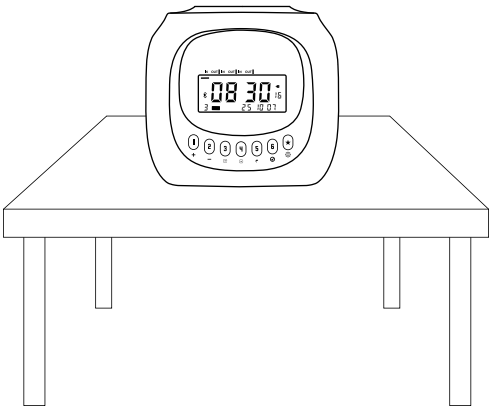

Place the machine on a stable table at least 75cm high.

*** Incorrect Placement**


- A place with much dust.
- The place with direct sunlight or near a heat source.
- A wet place that is in raining or water.
- A place that is strongly shaking or getting impact

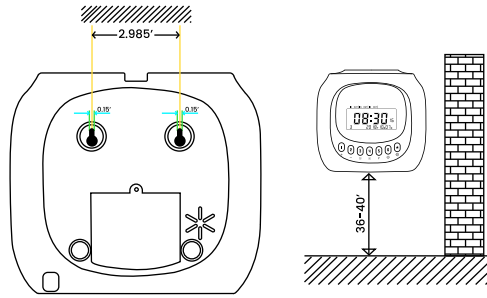

Look at the Picture

- A.** First, determine the installation height (it is recommended to make it 36-40 cm high from the ground and put the first screw into the wall).
- B.** Put the second screw into the wall according to the spacing of the hanging holes on the back of the machine.
- C.** Align the hanging hole and hang the machine on the screw. The screw head shall keep a 3mm distance from the wall

5.1. Introduction Of Keypad

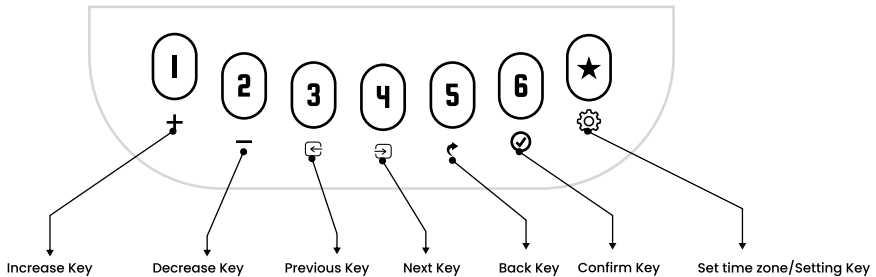

Watch video from this link or scan the QR code

https://printernoble.com/training_videos/english/Attendance/printer_interface.php



5.2. Manually Change The Time Zone


The Punch Card Attendance Machine allows you to configure the time zone to ensure accurate timekeeping.

To Set The Time Zone:


- Press the Setting (⚙️) button repeatedly to scroll through all available time zones (**EST** → **CST** → **MST** → **PST** → **AKST** → **HST**).
- Stop when your desired time is displayed.
- The machine will automatically save the selection and play a confirmation tone/music.

To Verify The Time Zone:

- Insert a punch card into the machine.
- The printed time will include a zone letter (**E, C, M, P, A, H**) confirming the active setting.

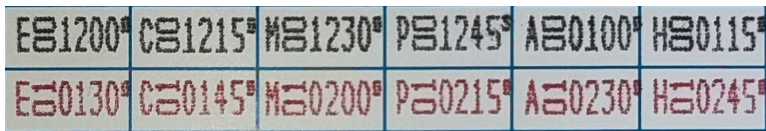

UTC		
Eastern Time (E)	Central Time (C)	Mountain Time(M)
Pacific Time(P)	Alaska Time (A)	Hawaii Time (H)

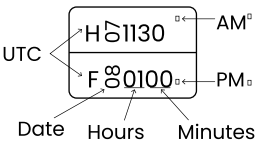

Watch video from this link or scan the QR code

https://printernoble.com/training_videos/english/Attendance/set_timezone_manually.php



5.3. Check Bluetooth Address

You can easily view the Bluetooth MAC address of the Punch Card Attendance Machine for pairing or troubleshooting purposes.


Steps To Check The MAC Address

1. Enter The Menu Interface

Press and hold the **Setting** (⚙️) key to open the menu interface.

2. Access The MAC Address Menu

Use the **Increase (+)** key until the display shows the **“MAC”** menu.

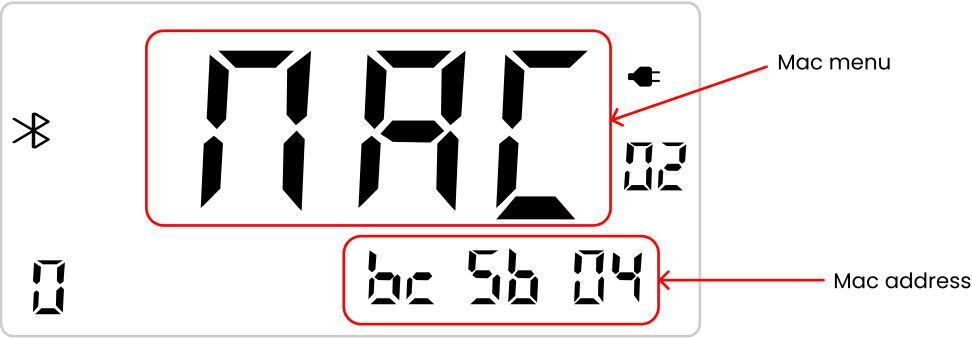


Notes

- The MAC address displayed allows you to identify your machine during a manual Bluetooth search in the **Grozziie App**.
- This helps ensure you are connecting to the correct device.

5.4. Input Password

- Press and hold the **Setting** (⚙️) key to enter the menu interface.
- Use the **Increase (+)** key until the display shows **“-|KEY”** menu.

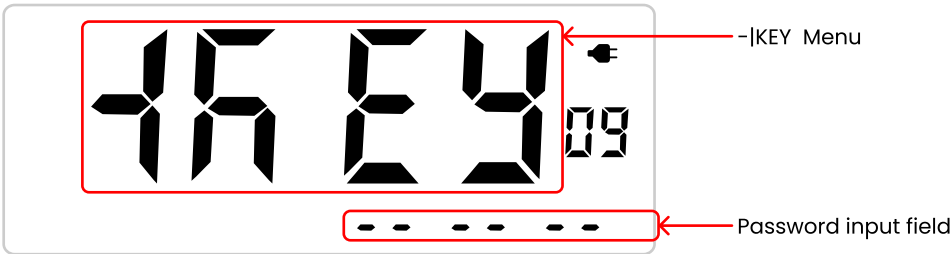


A. Enter The Current Password

- When “-|KEY” menu appears, you will be prompted to enter the current password.
- The default password is **000000**.
- To enter the password
 1. Press the **OK (✓)** key to activate password input. -|KEY Menu Password Input field
 2. Use the **Increase (+)** or **Decrease (-)** keys to adjust the value of the selected digit.
 3. Use the **Previous (←)** and **Next (→)** keys to move between digit positions.
- After entering the full password, press the **Back (↶)** key.
- You can move to the next menu by pressing the **Increase (+)** key.

5.5. Change Password

- If you want to change the password, you must first enter the current password.
- Press the **Increase (+)** key once to move to the next menu.
- The display will show “≡ KEY” menu, which is the Change Password group menu.

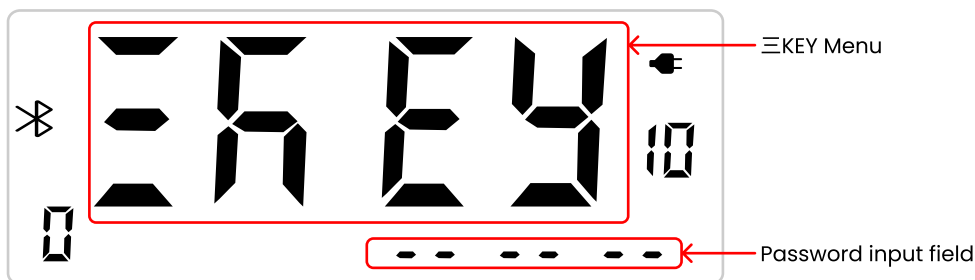

Set A New Password

- The new password must be **six digits long**.
- Press the **OK (✓)** key to activate password input.
- Use the **Increase (+)** or **Decrease (-)** keys to set each digit.
- Use the **Previous (←)** and **Next (→)** keys to move between digit positions.
- After entering the new password, press **OK (✓)**.

Confirm The New Password

- Re-enter the new six-digit password following the same steps.
- Press **OK (✓)** to confirm.
- The system will now save the new password.

Notes

- Always remember your new password. If forgotten, you will not be able to access secure settings.
- The password must contain exactly six digits

Watch video from this link or scan the QR code

https://printernoble.com/training_videos/english/Attendance/set_password_manually.php



5.6. Manual Punch (Clock In/Clock Out Time)

Use this option to record your working hours manually. Select **“Clock In”** at the beginning of your shift and **“Clock Out”** at the end of your shift. The time card includes **six columns** for recording clock-in and clock-out times. You can select which column to print by pressing the corresponding key.

To print in a specific column, press the corresponding key:

Column 1: Press the **(+)** Increase key.

Column 2: Press the **(-)** Decrease key.

Column 3: Press the **(→)** Next key.

Column 4: Press the **(←)** Previous key.

Column 5: Press the **(↶)** Back key.

Column 6: Press the **(✓)** Confirm key.

1		2		3		5		6	
Date	AM		PM		Over Time		Total		
	IN	OUT	IN	OUT	IN	OUT			
1									

Notes

If you need to configure work shifts, you can set the required options through our mobile app.

Watch video from this link or scan the QR code


https://printernoble.com/training_videos/english/Attendance/manual_punch.php



6.1. Connect With The Grozziie App

Download our app from App store and Play store

iOS



<https://apps.apple.com/us/app/grozziie/id6476171035>

Android



<https://play.google.com/store/apps/details?id=com.grozziie.printer>


To connect with the Grozziie app follow the instructions below.

- A. Search for "Grozziie" on the App Store or Google Play to download the app.
- B. Install the app and sign in.
- C. If you do not have an account, create one using your email

To install the app, follow the identical process on your tablet or Chromebook as you would on your mobile phone




D. In our Grozziie app you can choose the language

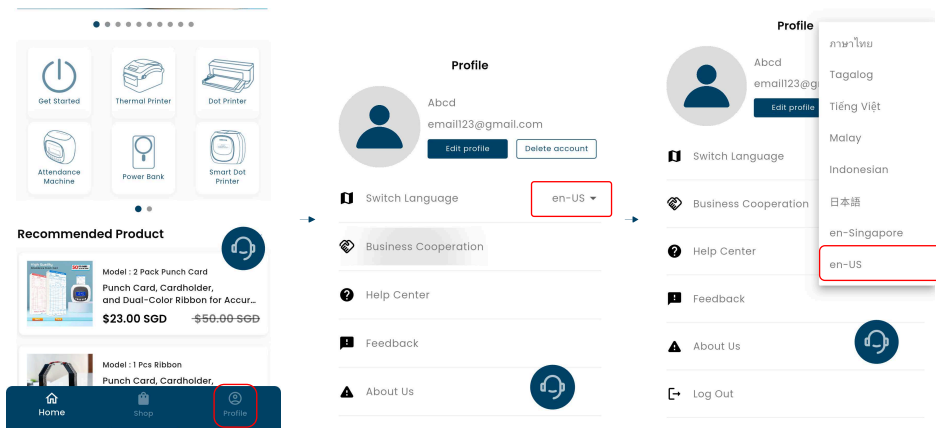


You can change the app language go to **Profile > Switch Language > select language**

Watch video from this link or scan the QR code

https://printrnoble.com/training_videos/english/Attendance/Download_Grozzie_App.php




6.2.How To Connect The Attendance Machine With Grozziie App

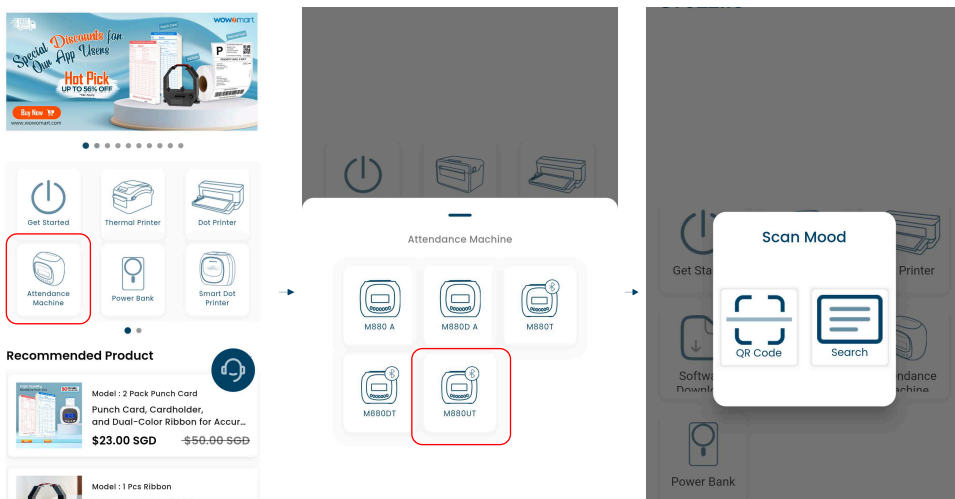


- Ensure the Attendance Machine remains turned on through out the process.
- Tap the Attendance Machine icon in the app.
- Choose M880UT from the list.
- Connect using either the QR Scan feature or the Search option.
- Ensure that your device's **Bluetooth** is also **turned on**.



- After selecting the QR Code Scan option, use the camera to scan the QR code located on the back of the Attendance machine.

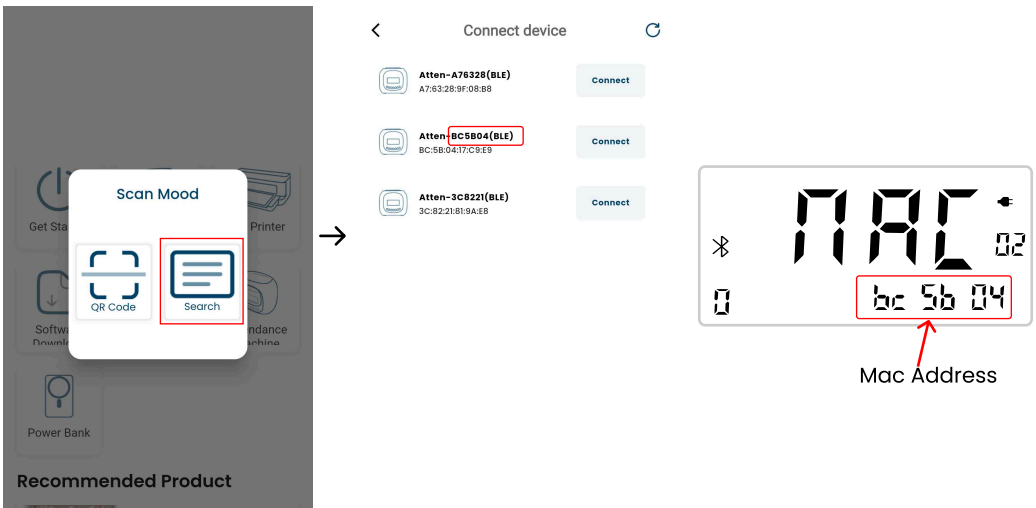

- If you choose the search option, a list of devices will appear, showing the Bluetooth MAC addresses of nearby Attendance Machines.
- You can find your Attendance Machine’s MAC address using **MAC Address Menu**.
- Tap the connect button to establish the connection

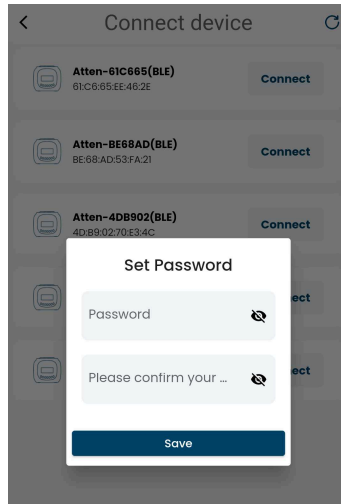

- For the first time connect with the Attendance Machine you need to set the password the password must be 6 digit without “000000”.
- Insert the new password in two input fields and tap on save button.


6.3. First Time Setup Wizard

When setting up the app for the first time, it will guide you through three setup screens:

- **Set Time & Date:** Configure the time, date, and date format.
- **Pay Period:** Select the desired pay period.
- **Set Working Time:** Define shift times and overtime rules.

After each setup screen, tap Next at the bottom right to save your settings. When the setup wizard is complete, a **‘Congratulations!’** pop-up appears—just tap Complete.

Note: On every screen in the app, you will see detailed instructions to help you complete the setup.

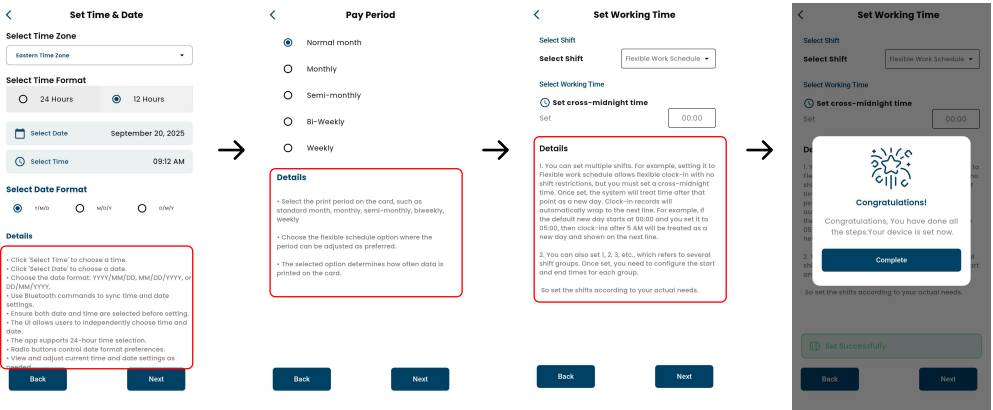

Watch video from this link or scan the QR code

https://printrnoble.com/training_videos/english/Attendance/connection_process_with_APP.php



07 Device Setup

When using the device for the first time, the **Setup Wizard** guides you through all the required settings. If you later need to modify any settings, you can do so through the **Device Setup** option.

After connecting the device, tap the Device Setup icon to open the setup menu and adjust your settings as needed.



Attendance Machine




Device setup

Note: If a password is already set, you must log in using that password. In this case, the wizard will not be displayed

7.1. Set Time & Date

This menu allow to configure the time, date, and date format. After entering the date and time, tap the "Set" button to apply the configuration.

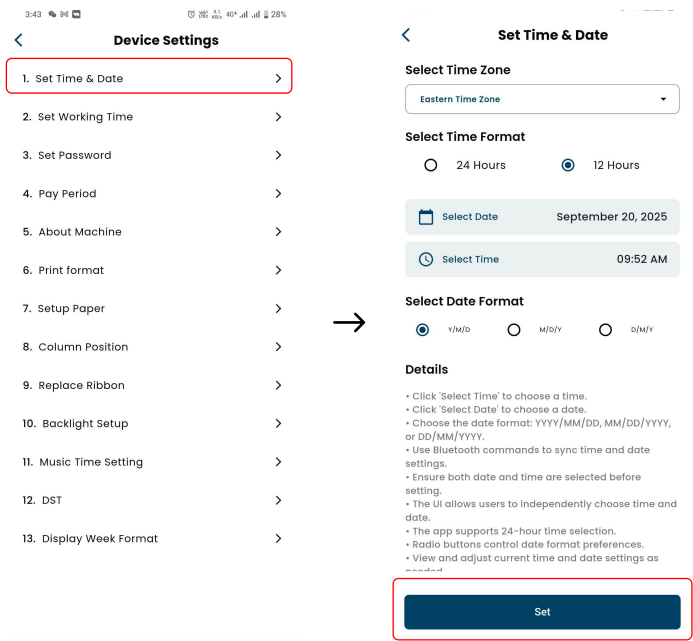

7.2. Set Working Time

In this menu, you can select the Shift and set the Working Time for each shift.

In the Shift Selection drop-down menu, you will see four options:

- **Flexible Work Schedule** – for manual punch
- **1, 2, 3** – for different shift times.

Flexible Work Schedule:

The Flexible Work Schedule mode allows employees to punch in and out without fixed start and end times. This mode is designed for **variable or non-standard hours**. The attendance record is printed on the punch card column according to the cursor's position.

- **Manual Punching** – Employees can clock in and clock out at any time by pressing the appropriate buttons (1 – 6) by changing the cursor's position.
- **No Fixed Shift Time** – The device does not compare punch times to a predefined schedule, so no late or early status is recorded automatically.
- **Color Printing** – When using Flexible Work Schedule, you can manually choose the print color (Black or Red). The Auto color feature is disabled because no fixed shift times exist for comparison.
- **Best Use Cases** – Ideal for part-time workers, freelance schedules, or workplaces where daily start/end times change frequently.

Shifts 1, 2, And 3:


The Punch Card Attendance Machine supports up to **three fixed shifts**. Selecting **Shift 1, 2, or 3** allows you to define and manage separate working times for employees.

- **Shift 1** – Select this to set the **Clock-In** and **Clock-Out** times for **one shift**. This is typically used for single-shift operations.
- **Shift 2** – Select this to set the **Clock-In** and **Clock-Out** times for **two shifts**. This is useful for organizations with a day and evening shift.
- **Shift 3** – Select this to set the **Clock-In** and **Clock-Out** times for **three shifts**. This is ideal for 24 hour operations with rotating or round-the-clock staff.

How It Works:

- Each shift has its own **Clock In** and **Clock Out** times that you can configure in the menu.
- The device compares punch times to the scheduled shift time to determine **late arrivals** or **early departures**.
- When using **Auto Color Format**, the machine automatically prints **Red** if an employee punches in late or leaves early according to the set shift time.
- This mode ensures accurate attendance tracking for multiple shifts in a structured work schedule.

Note: On every screen in the app, you will see detailed instructions to help you complete the setup.

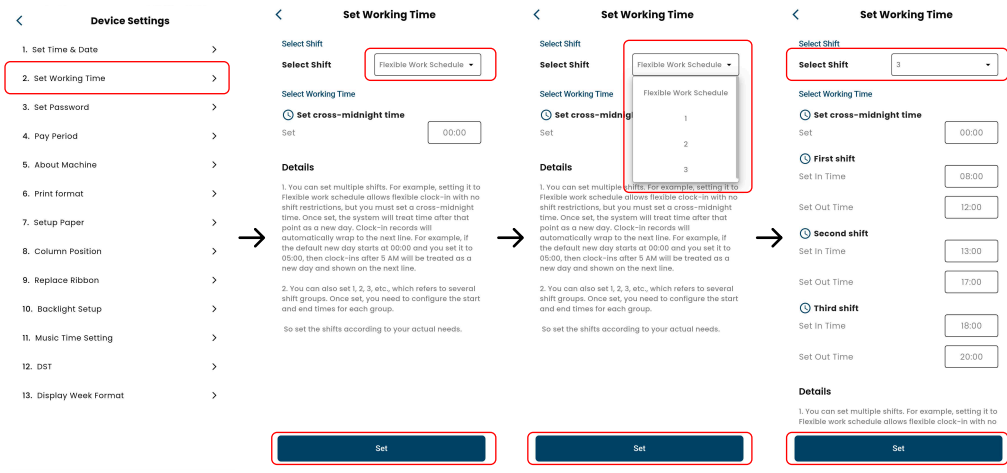


Set cross-midnight time: In this system, each day starts at **midnight (00:00)** and ends at **midnight (24:00)**. For shifts that begin on one day and continue into the next day (such as night shifts).

You can set the **cross-midnight time** to define when the next workday begins. This ensures that all **in/out records** are printed under the **same date** on the punch card.

Example


If you set the cross-midnight time to **03:00 AM**, the device will continue printing all entries on the **same date** until **03:00 AM** on the punch card.

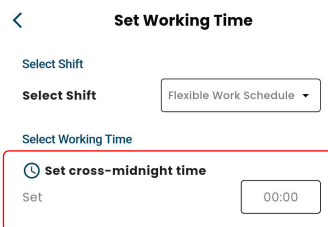

7.3. Set Password

In this menu, you can set a new password.

- The password must be a six-digit numerical code, with each digit between 0 and 9.
- Ensure the "Password" and "Confirm Password" fields match.
- Avoid using 000000 as a password.
- After entering the password, tap the "Set" button to save the changes.

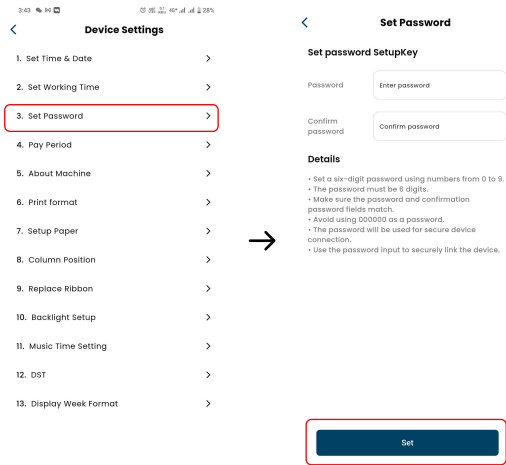


7.4. Pay Period

In this menu, you can select the desired pay period. Available options include:

- Normal Month
- Monthly
- Semi-Monthly
- Biweekly
- Weekly

After entering the desired Pay Period, tap the **"Set"** button to apply the configuration.

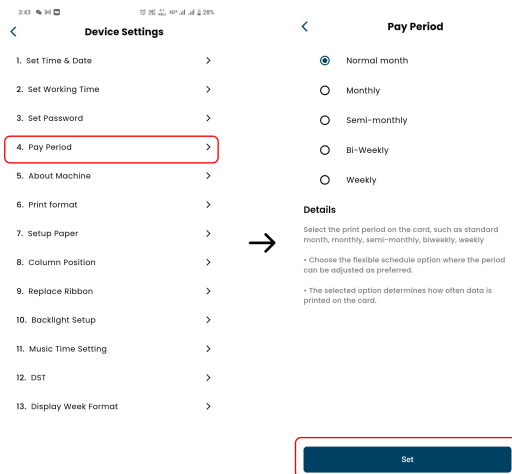


Watch video from this link or scan the QR code

https://printrnoble.com/training_videos/english/Attendance/Device_setup.php



7.5. About Machine

- This menu allows you to set the working mode for the attendance machine from a list of predefined modes: Normal, Self Test, Aging Test, Password Clear, Display Test, Music Test, and Clock Chip Test.
- Each mode sends a specific command to the device via Bluetooth.
- After selecting the Self Test or Aging Test and tap on **"Set"** button, then insert a card to complete the test.
- You can clear the password with or without music, and it will be reset after four hours, requiring a new password.
- In Display Test mode, all display segments will flash multiple times.
- By selecting the Clock Chip Test, you can view the current time from the clock chip on the display.
- Ensure a mode is selected before pressing the **"Set"** button to apply the configuration.
- After using other functions, select **"Normal"** and press the **"Set"** button to restore the machine to its standard functionality.

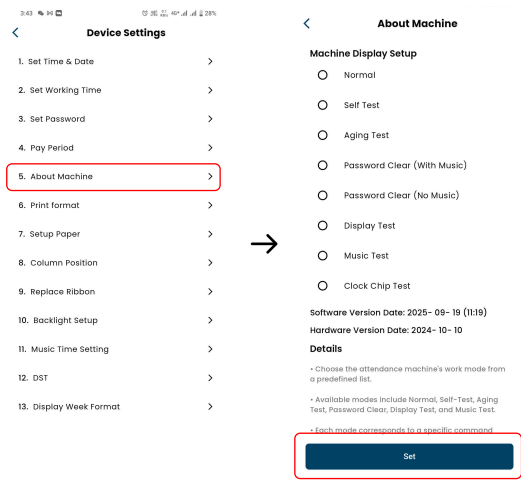

Note: On every screen in the app, you will see detailed instructions to help you complete the setup.

Watch video from this link or scan the QR code


https://printernoble.com/training_videos/english/Attendance/about_machine.php



7.6. Print Format

In this menu, you can set the **Punch Card Print Format**.

- **Day Format** – The **default preset** is **90 Degrees**, so the device prints the date at **90 Degrees** by default. If you want to change this setting, you can select the **date print angle: Normal**.

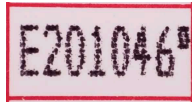

Normal




90 Degree

- **Time Format** – Choose between **24-hour** or **12-hour** time display.
- **UTC Format** – Select either **Normal** or **USA** format.
- **Color Format** – Choose the punch card printing color: **Auto**, **Black**, or **Red**.

How It Works:

- **Auto** – The device automatically prints Red if an employee punches in late or leaves early based on the scheduled shift time. To use this feature, you must select Shift 1, 2, or 3.
- **Black or Red** – The device always prints in the selected color regardless of punch timing. This option is used when the **Flexible Work Schedule** shift is selected.

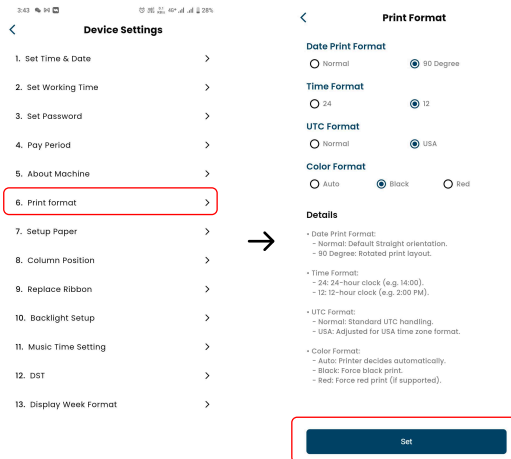

Watch video from this link or scan the QR code


https://printrnoble.com/training_videos/english/Attendance/Print_format.php



7.7. Setup Paper


In this menu, you can configure the paper gap settings for the upper and lower printing positions and select the paper recognition method.

- A. Write the value for set the upper gap for the printed text so you can adjust the position above and below of the printed text.
- B. Choose the paper front and back recognition method. Options include AutoCheck or NoCheck. AutoCheck enables automatic recognition, while NoCheck disables this feature.
- C. After entering the desired times, tap the "Set" button to apply the configuration.

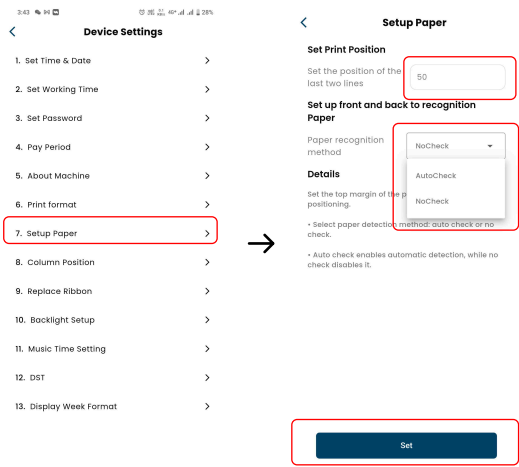

Note: On every screen in the app, you will see detailed instructions to help you complete the setup.


- D. If you want to set the AutoCheck Mode, the machine will automatically detect the front and back of the punch card using an identification point.

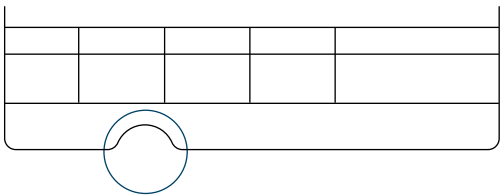

Identification point of punch card

Note: If you are using another company's punch card, ensure that it matches the specifications of our punch card: Height: 18.5 cm and Width: 8.5 cm.

18.5 cm

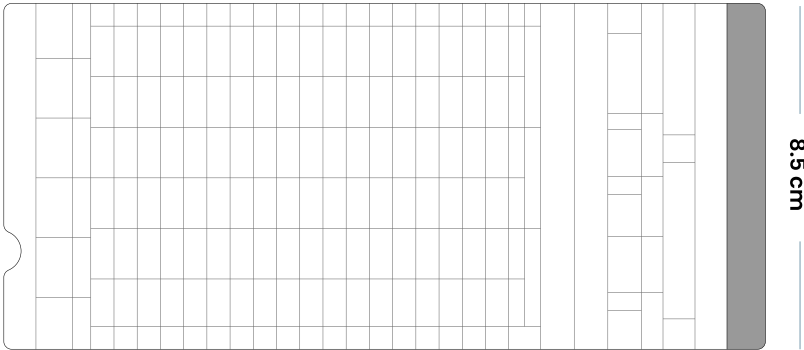

8.5 cm

7.8. Column Position

This setting allows you to adjust the column-wise printing position on the card.

- Set the starting position for the first column in 0.1 mm increments.
- Define the gaps between columns to adjust spacing dynamically.
- Use positive values to move columns to the right and negative values to shift them to the left.
- Ensure precise gap measurements for accurate alignment.
- Press the Save Button to apply the configuration.

3:43 4G

Signal strength, 40% of all 23%

<

Device Settings

1. Set Time & Date >

2. Set Working Time >

3. Set Password >

4. Pay Period >

5. About Machine >

6. Print format >

7. Setup Paper >

8. Column Position >

9. Replace Ribbon >

10. Backlight Setup >

11. Music Time Setting >

12. DST >

13. Display Week Format >

>

Column Position

Column Position

Start Position

From Start to 2nd

From 2nd to 3rd

From 3rd to 4th

From 4th to 5th

From 5th to 6th

Details

- Set the starting position of the first column in 0.1 mm units.
- Define the spacing between columns to adjust the layout dynamically.
- Positive values move the column right; negative values move it left.
- Default reference positions: 20, 141, 262, 383, 505, 628.
- Ensure precise spacing measurements for correct alignment.

Save

Watch video from this link or scan the QR code


https://printernoble.com/training_videos/english/Attendance/Printing_position_setup.php




7.9. Replace Ribbon

This setting is used for ribbon replacement:

- Click the "Replace Ribbon" button to move the print head to the center, making ribbon replacement easier.
- Ensure the ribbon is properly aligned before resuming printing to maintain optimal performance.

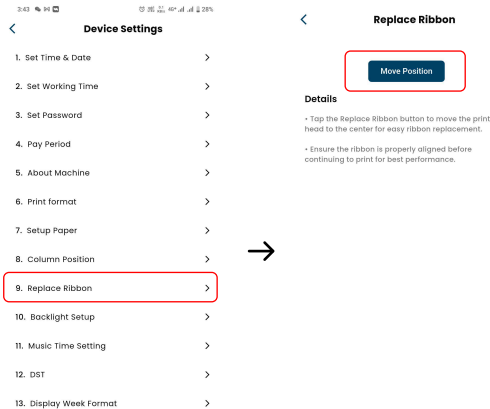

Note: On every screen in the app, you will see detailed instructions to help you complete the setup.

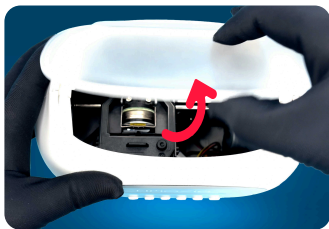

1

Open the transparent cover




2

Take the ribbon out carefully



3

Roll the wheel like this way and try to take out some good ribbon for print

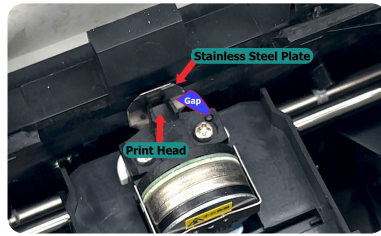

4

Again set the ribbon and make sure that the ribbon is inserted into this gap between the print head and the stainless steel plate

Watch video from this link or scan the QR code


https://printrnoble.com/training_videos/english/Attendance/Replace_ribbon.php



7.10. Backlight Setup

This setting allows you to configure the backlight duration for operation on battery or while connected to an AC adapter:

- A.** Enter the number of minutes after which the backlight will turn off when running on battery.
- B.** Specify the number of minutes after which the machine will power off when running on battery.
- C.** Input the number of minutes after which the backlight will turn off when the machine is connected to an AC adapter.
- D.** After entering the desired times, tap the "Set" button to apply the configuration.

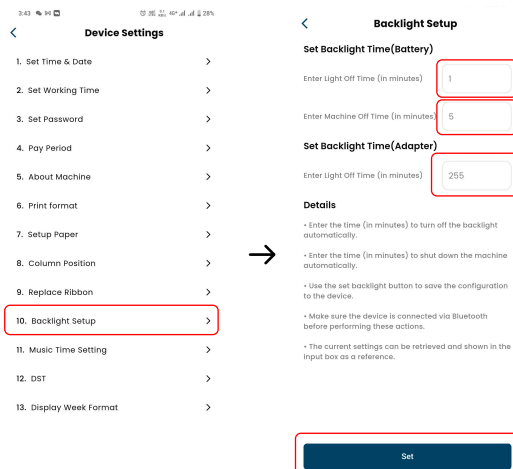


7.11. Music Time Settings

In this menu, you can define and set music play times for every shift's in-time and out-time.

- Two parameters must be set for each shift: Play Music After and Play Music For.
- **Play Music After** specifies the delay (in minutes) after the in-time or out-time before the music starts.
- **Play Music For** determines the duration (in seconds) the music will play

Example: If Play Music After is set to 1 minute and Play Music For is 10 seconds, music will play at 8:01 if the shift time is 8:00. After entering the values, tap the **"Set"** button to apply the configuration.

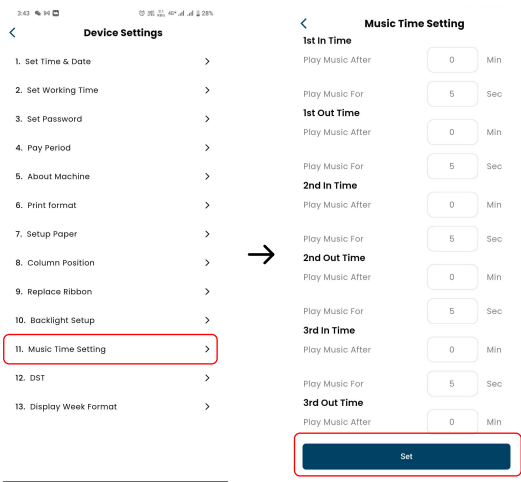


Note: On every screen in the app, you will see detailed instructions to help you complete the setup.

7.12. DST

With this menu, you can set Daylight Saving Time (DST) changes to **Automatic** or **Manual**.


- **Auto DST** – The machine will automatically adjust for DST according to the scheduled changes.
- **Manual** – The machine will not adjust for DST unless you change it manually.

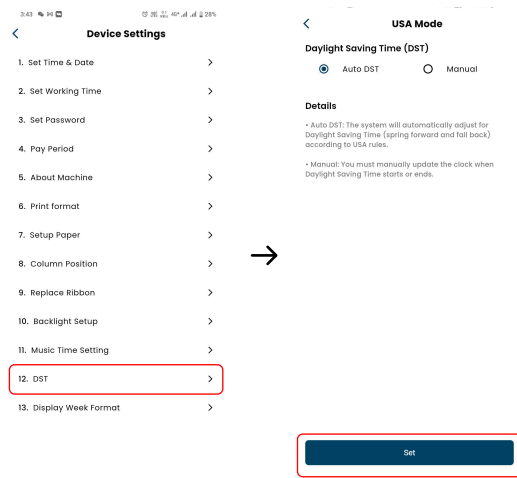

Note: On every screen in the app, you will see detailed instructions to help you complete the setup.

7.13. Display Week Format

- In this menu, you can set your preferred Week Format according to your needs.
- Press the Save Format button to apply the configuration.

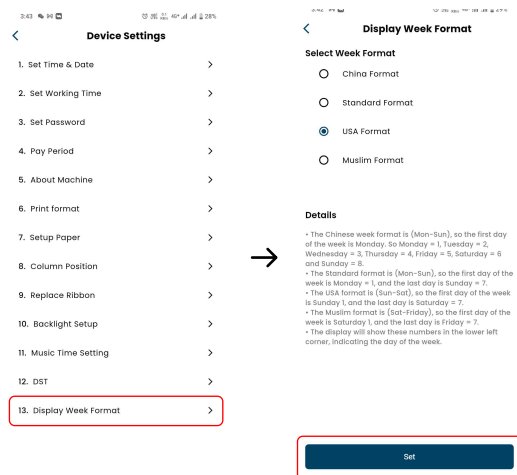


Watch video from this link or scan the QR code

https://printernoble.com/training_videos/english/Attendance/More_settings_in_APP.php



8.1. Get Started


Upon logging into the Grozziie app, you will first see the 'Get Started' section. Here, you can access printer drivers for Windows and Mac, label printing software, Apps, user guide manuals, and video tutorials to help you understand how to use the printer effectively.

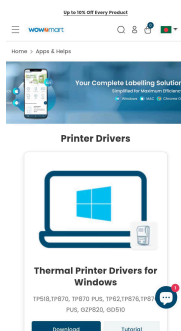

A. Printer Drivers

In this menu, you can find our all-printer driver for Windows and MacBook, along installation video tutorial.

- To download the driver, click the download button.
- After downloading, if you download driver software for windows PC, please transfer the software to a Windows PC.
- If you download driver software for MacBook, please transfer the software to a MacBook.
- Follow the installation steps in the video tutorial, which can be accessed by clicking the tutorial button.

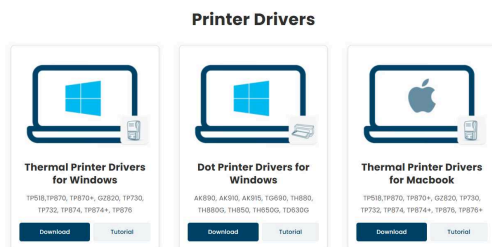


B. Download Software's

This section, you can find the label printing software for Windows and MacBook, and installation video tutorial.

- You can download the software by clicking the download button.
- If you download software for Windows PC, please transfer the software to a Windows PC.
- If you download software for MacBook, please transfer the software to a MacBook.
- By clicking the tutorial button, you can access the video tutorial where you find installation steps.


Download Software's

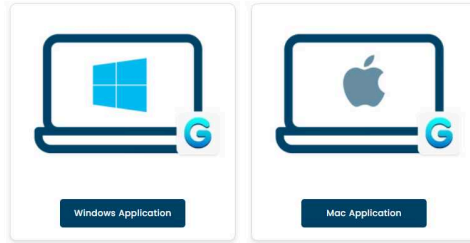


C. Download apps

This menu includes download links for the Attendance Machine app, the Bluetooth thermal printer app, and the Windows computer label printer software.


Download Apps

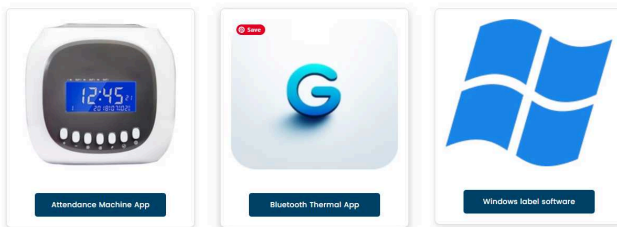

Here, you can find download links for the Grozzi app, compatible with both Android and iOS devices. Use these apps to connect and manage your printers wirelessly

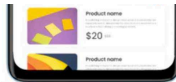


Experience
Seamless Performance –
Download the Mobile App

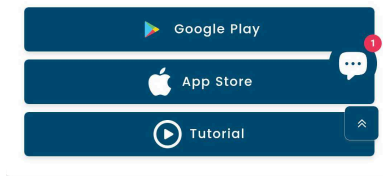

D. Video Tutorials

In this section, you will find video tutorials that provide visual guidance on installing drivers, configuring software, and troubleshooting common printer issues. These tutorials are designed for beginners and will help you get started quickly.

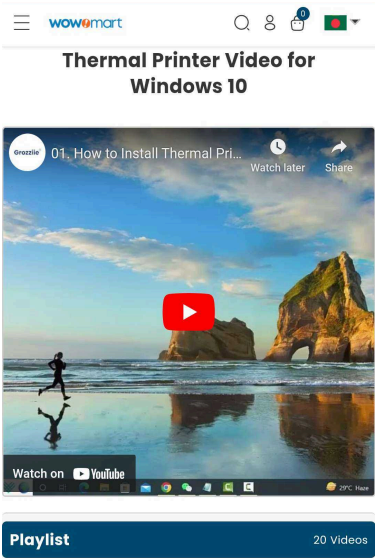



E. User Guides and Manuals

This section contains downloadable user manuals and guides with step-by-step instructions for setting up and using your device. It covers topics such as installation, troubleshooting, and maintenance.



8.2. Live Chat

If you encounter any issues with our products or software, you can contact our Support team via live chat. Our support team is available to assist you with anything you may need. In the live chat, you can share with us Images, Video & files. To share any file, click the (+) icon there you can share Images, Video & files.

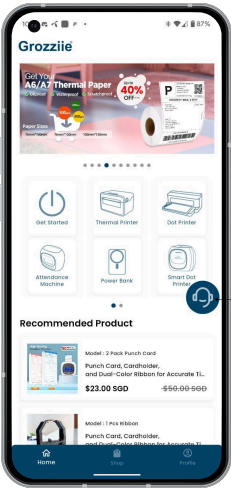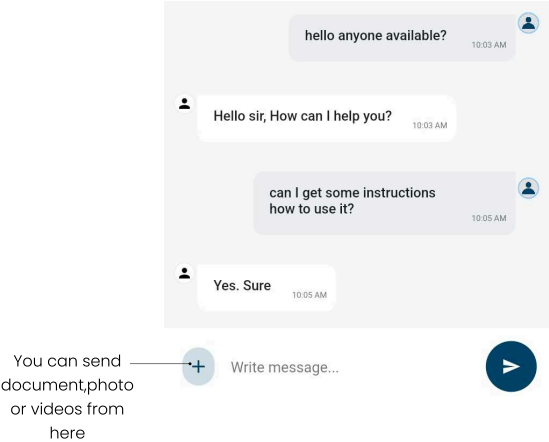

Live Chat


Watch video from this link or scan the QR code

https://printrnoble.com/training_videos/english/Attendance/Live_chat.php




8.3. Video

Our app includes a video option where you can view all of our product videos and learn. how to operate each one.

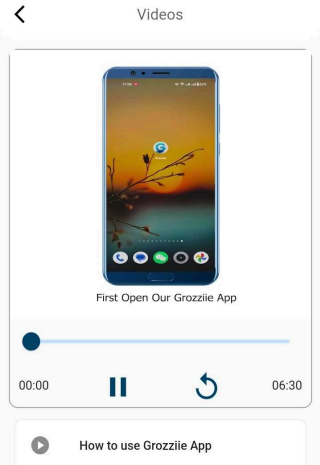


8.4. Online Store

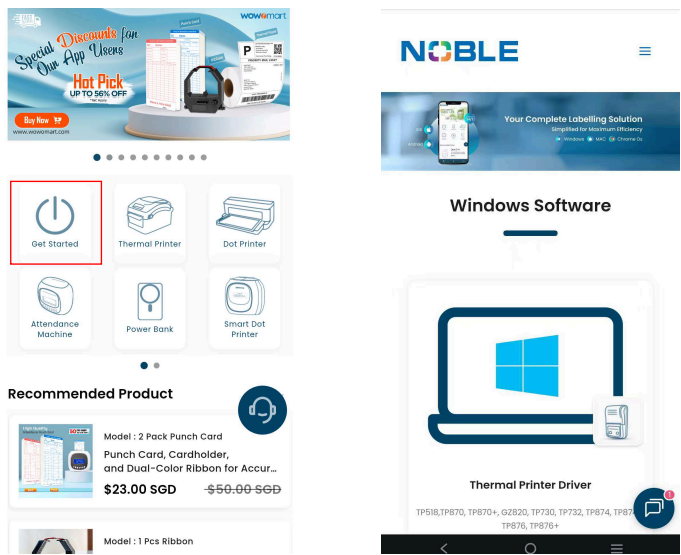

Inside the "Get Started" section, by clicking "Home," you will be redirected to our online store.

This is our online store. You can purchase all of our available products. The store offers a wide range of items, allowing you to easily find and buy what you need directly from the website.

You can also visit our online store directly by using this link: <https://www.wowomart.com>.

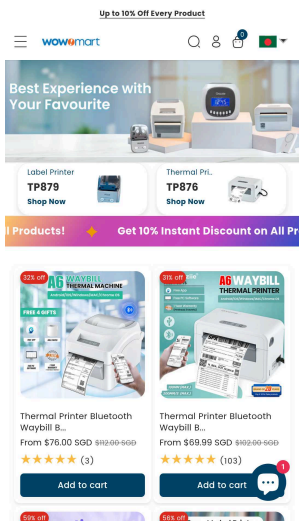

Our time cards make your life easier. Here you can easily understand when employees come to the office and when they leave. Those who came to the office late and left early can be identified and easily understood.

Only for attendance machine

NO.

Name

Department

Position

Day salary

Days

OT salary

Deduction

Paid salary

Attendance Form

Year

Month

Date

AM

PM

Over Time

Total

IN

OUT

IN

OUT

IN

OUT

1

2

3

4

Time card

Column No	Column Details
01	Column for the date.
02	Column for entry time of the 1st shift.
03	Columns for exit time of the 1st shift.
04	Column for entry time for the 2nd shift.
05	Column for exit time for the 2nd shift
06	Columns for overtime entry time.
07	Columns for overtime exit time.
08	Columns for counting total working hours.

10 Precautions

- Avoid using and storing the Attendance Machine in high-temperature, high humidity, or polluted environments.
- The Attendance Machine power adapter should be connected to a properly grounded outlet. Avoid large motors or other power supply voltage fluctuations that can cause the device to use the same socket.
- Users are not allowed to disassemble the machine for repair or renovation.
- Keep the manual for future reference.

11 Safety Notices

- Do not bend the power cord excessively or place objects on the cord.
- Keep the printer out of reach of children.
- Use only approved accessories and do not try to disassemble, or repair the unit by yourself. Keep the attendance machine away from water and other objects that could penetrate the components.
- Please unplug the printer when it is not in use for long periods.
- If your problem is still not resolved, please contact us.

Certificate

Dear customer, thank you for choosing our products. In order to provide you qualified products and enjoy professional services, please read the following warranty terms carefully to ensure that the products are in valid warranty.

Warranty, Refunds And Exchange Policy

Return Policy: You can return items within 30 days of delivery (products must be returned unused).

Warranty or exchange Policy: If product quality problems cause it to be unusable, we are willing to provide warranty or exchange service. You can exchange for a new product within 30 days after the product is delivered. If it exceeds 30 days but does not exceed 300 days, we can provide warranty service. Non-product quality issues are not within the scope of this service.

Shipping Method for Returns & Exchanges: We recommend that you choose a shipping method that can track logistics information online, and inform us of the shipping information for return. We do not accept COD delivery method.

Timeliness: Returns and refunds generally take 3 to 4 weeks; exchanges generally take 1 to 2 weeks. The specific time limit is subject to the courier company.

Refund Amount Issue: We will refund the actual amount of the product ordered to your payment account. If there is a credit card or tax deduction, the actual refund from the bank will prevail, depending on the penalty bank and billing cycle.

If possible, please use the original shipping packaging for returns and exchanges.

If you have any questions, you can contact us through the QR code on the machine.

* Please keep this warranty card in a safe place, no replacement if missing this card.

*Special Note:

The rights of terms interpretation and modification belong to the company

Warranty Card Information

Product Model	
Batch No.	
Invoice No.	
Purchase Date	
Installation Date	
Warranty Time	
Buyer Name	
Buyer Address	
Buyer Phone No.	
Buyer E-Mail	
Vendor Name	
Vendor Address	
Vendor Phone No.	
Warranty Scope	
Product Issues	

Repair Records

Returning Date			
Service Station			
Trouble Shooting			
Repair Date			
Repairman			
Delivery Date			

Note:

Please keep this card as the warranty certificate and who it when returning the product or repair.

TIMOZIA

- Master Your Hours

If you encounter any issues with the product, please contact us promptly.



Email: service@printernoble.com



Whatsapp: +1 (548) 990-7666



Phone: +1 (236) 326-4966



Website: www.pinternoble.com



Support Time: Saturday to Friday, 24hours

TIMOZIA provides a 12-month warranty. If you encounter any issues with the product, please contact the **TIMOZIA** team to promptly receive troubleshooting tips or a replacement.

Visit our website www.pinternoble.com