



For expanding ROM space ram from 128K to 256K.

1. Stuff additional 32K x 8 rams in sockets U5,U6,U7,U8.  
(See diagram below)

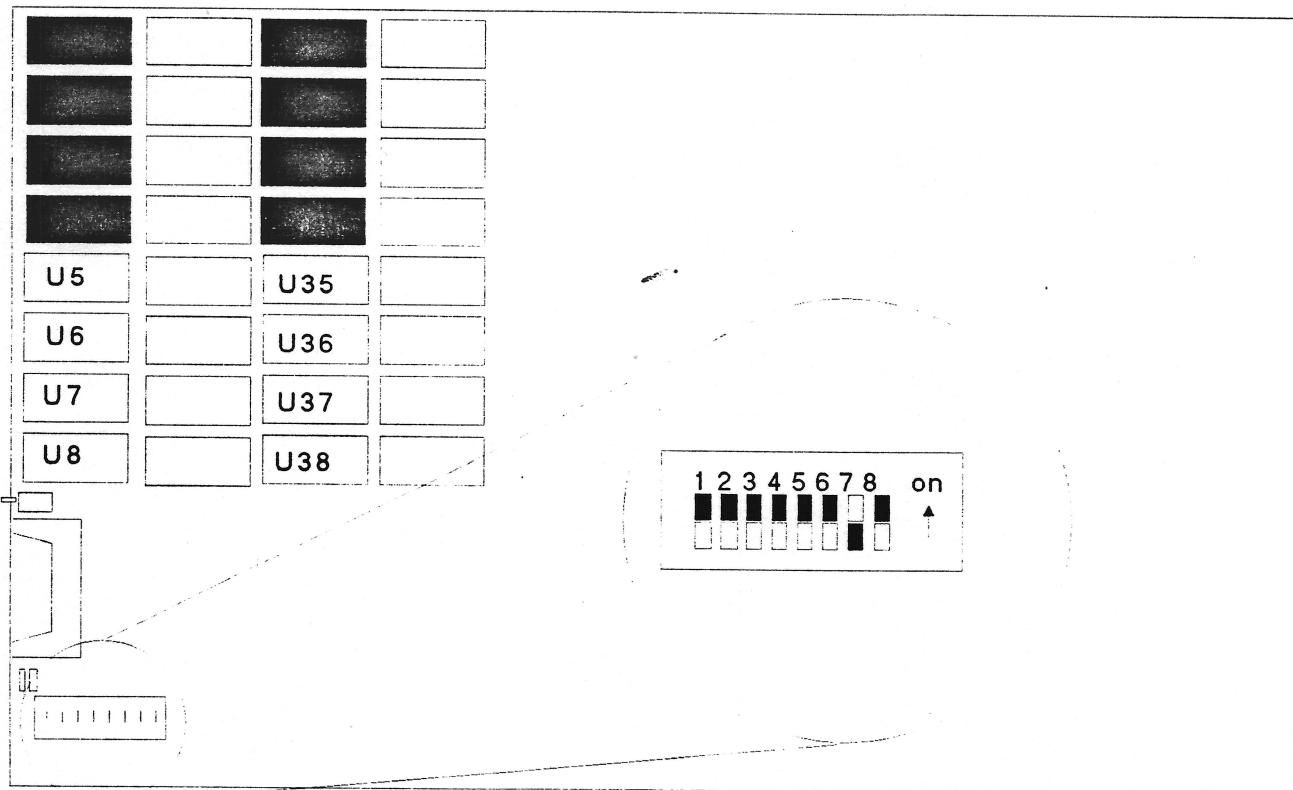

For expanding trace RAM space from 32K lines of trace to 64K lines of trace.

1. Stuff additional 32K x 8 rams in sockets U35, U36, U37, & U38.  
(See diagram below)
2. Set option switch 1 to the off position.  
(See diagram below)

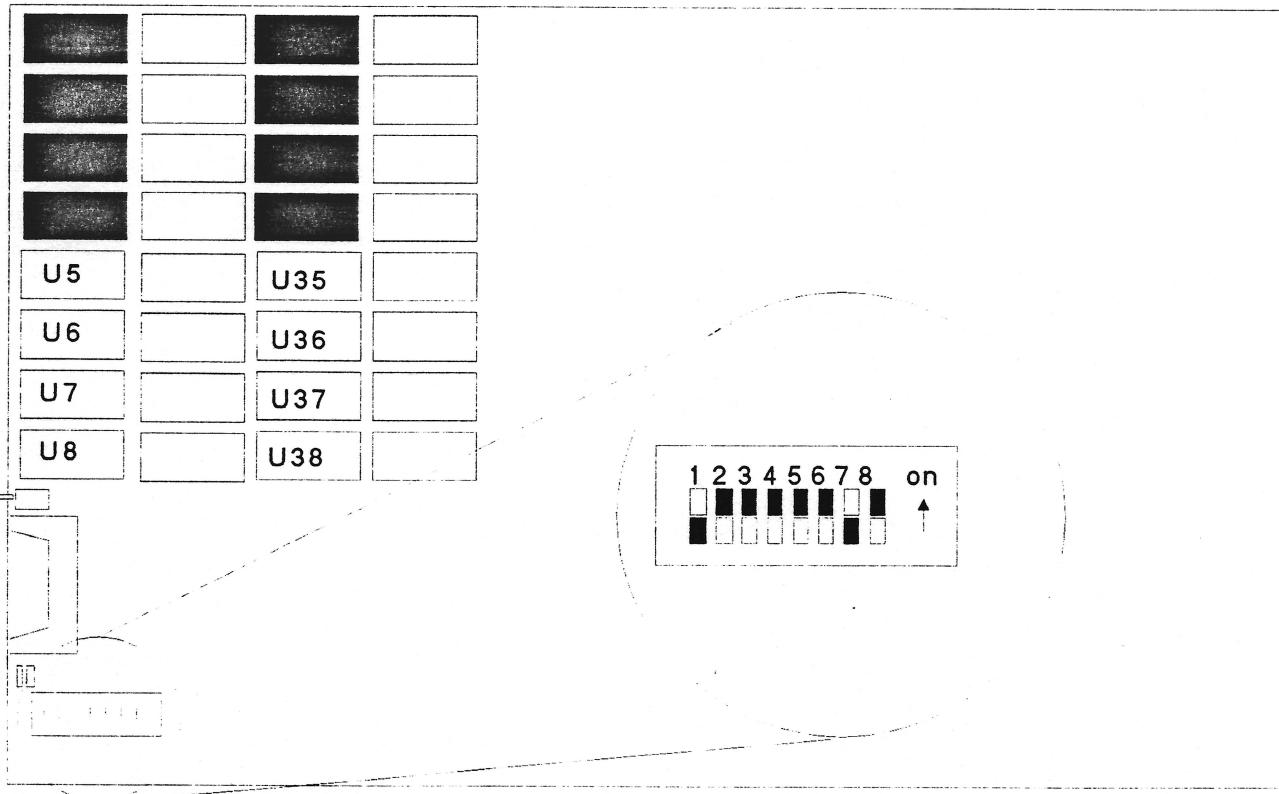


#### NOTES

1. This is a correction to a previous instruction sheet which had the wrong switch settings.  
If you have 64K lines of trace RAM, make sure that your switch settings match the diagram above (otherwise only part of the trace RAM will work).

For expanding ROM space ram from 128K to 256K and trace RAM space from 32K lines of trace to 64K lines of trace.

1. Stuff additional 32K x 8 rams in sockets U5, U6, U7, U8, U35, U36, U37, & U38.  
(See diagram below)
2. Set option switch 1 to the off position.  
(See diagram below)

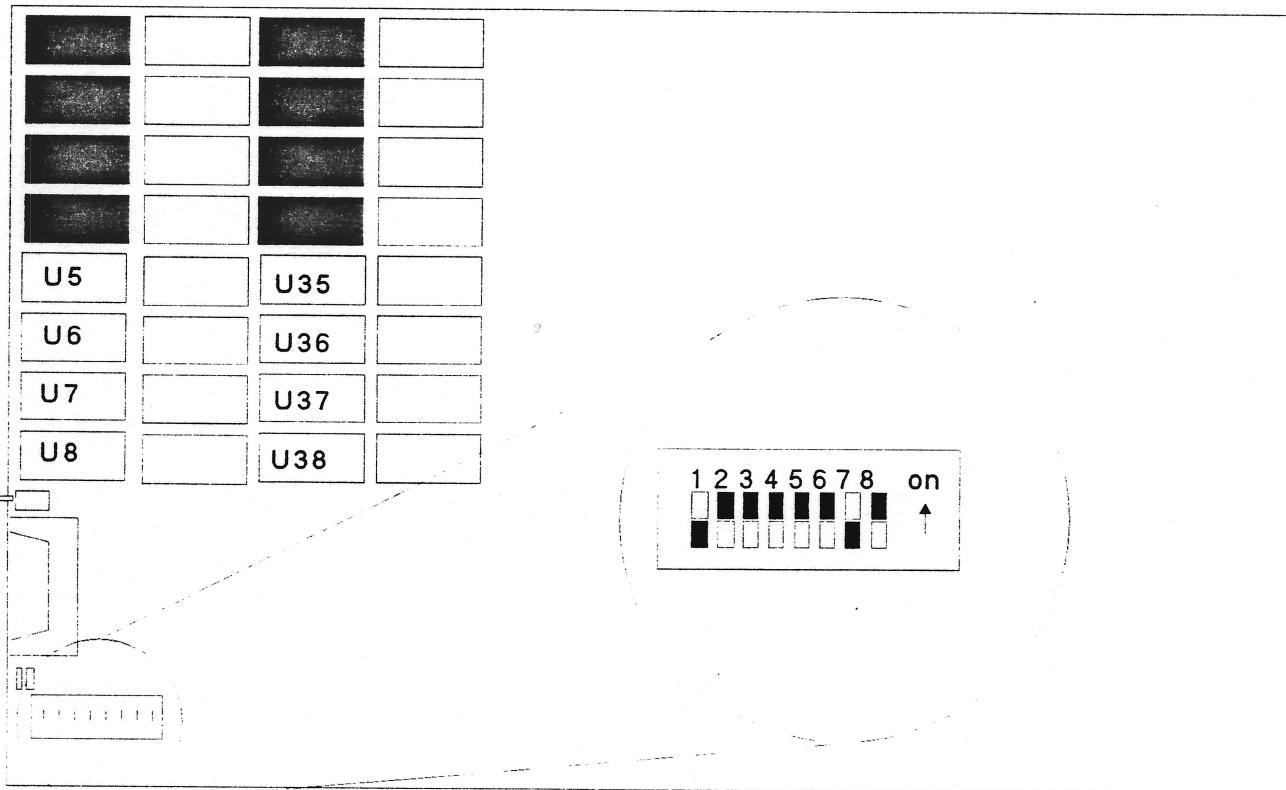

#### NOTES

1. This is a correction to a previous instruction sheet which had the wrong switch settings.  
If you have 64K lines of trace RAM, make sure that your switch settings match the diagram above (otherwise only part of the trace RAM will work).