


The Digi is a desktop dashboard that monitors and analyzes Atlantium Systems.


Connecting to Atlantium controllers, AiO, B&W, and OC

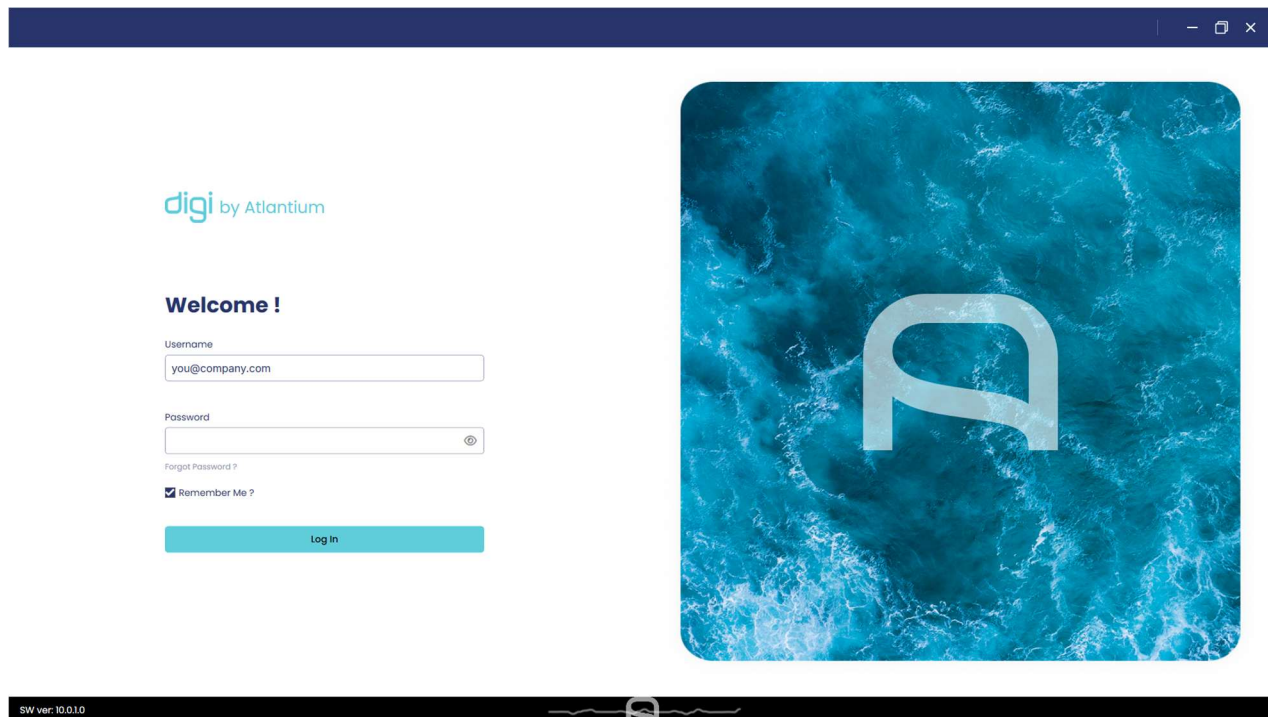


Overview

The digi monitor provides real-time oversight of multiple systems, showing status (Operational, Malfunction, Disconnected), key metrics like Dose, UVT, Flow, and Power, and

*This screen will be empty on the first login

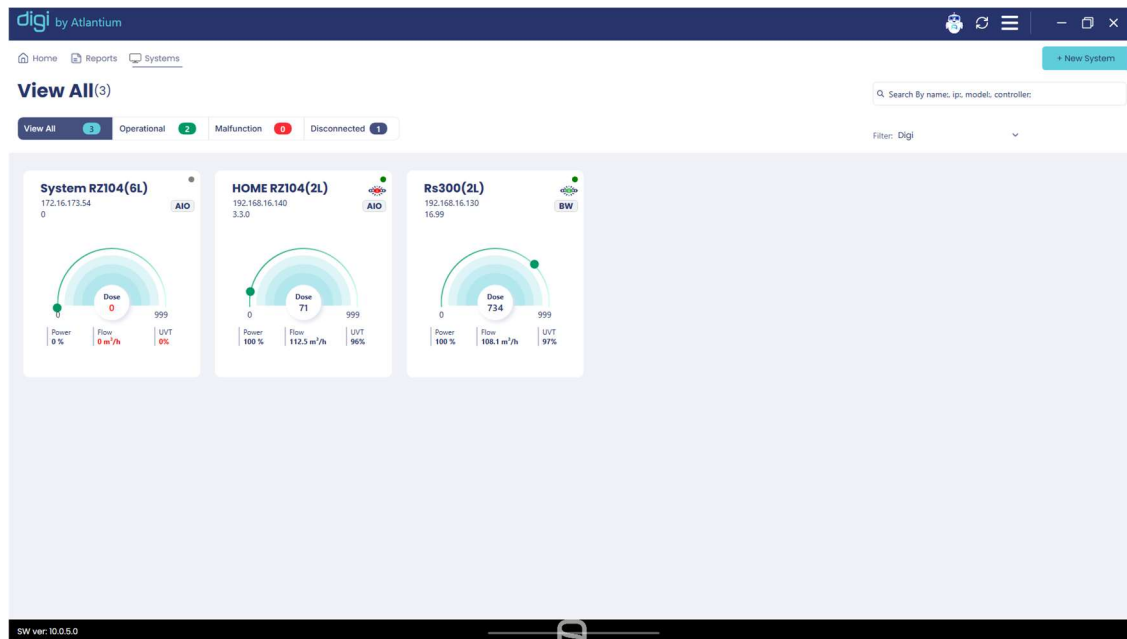

Extended mode screen

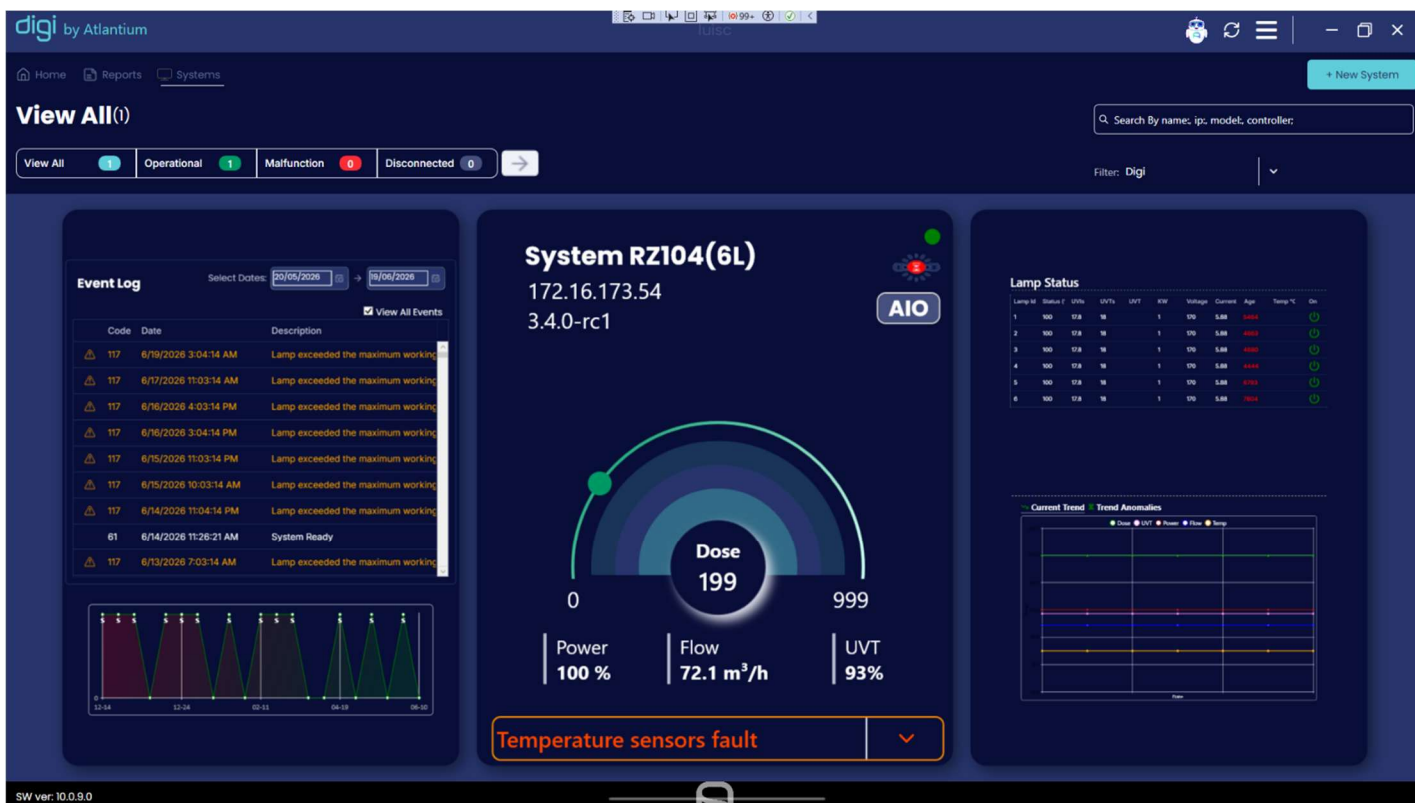

Add a new system

Fill the Register new system checklist form for each system you want to monitor

*form in the appendix part

*Must have digi license and serial number for each system

+ New System

1.- Press add new system button

2.- Insert IP Address

*No need to check the TCP/IP check box

digi by Atlantium luisc

Home Reports Systems + New System

Add New System

Search IP Address
172.16.173.58 Search System

☐ TCP/IP

Serial Number: ATL-SN-xxxx Customer Id: * Required field Name:
Plant: Application: validated Model: RZ104
Software Version: 3.4.0-rc1 Lamps: 6 Application Mode: validated
Device Id String: bb1c16cd-b568-400f-8207-0d8a46c6b209 Units Format: m³/h

Connectivity

Group: Host Id: 1 Port: 2221 Direct Port: 1502 Converter: None
Username: username Password: password Sd Card: 32
Latitude Position: Longitude Position: Controller Model:
☒ Automatic Backup
☐ Send Mail Notifications To Customer
Save Changes Delete Load PIF Copy License Key Here

SW ver 11.0.0.0

3.- Press Search System Button

If the IP address owner is an Atlantium System, Digi will read the system details

4.- Fill or update the system detail fields.

5.- If you have pif file for the system, import it.

6.- To allow mail notifications, select the checkbox

Select the correct Ethernet connection and port.

Set the protocol converter type


Set the corresponding port

Set the controller model

Controllers List Screen

This screen displays the register Atlantium systems.

Use the filter box to select groups.

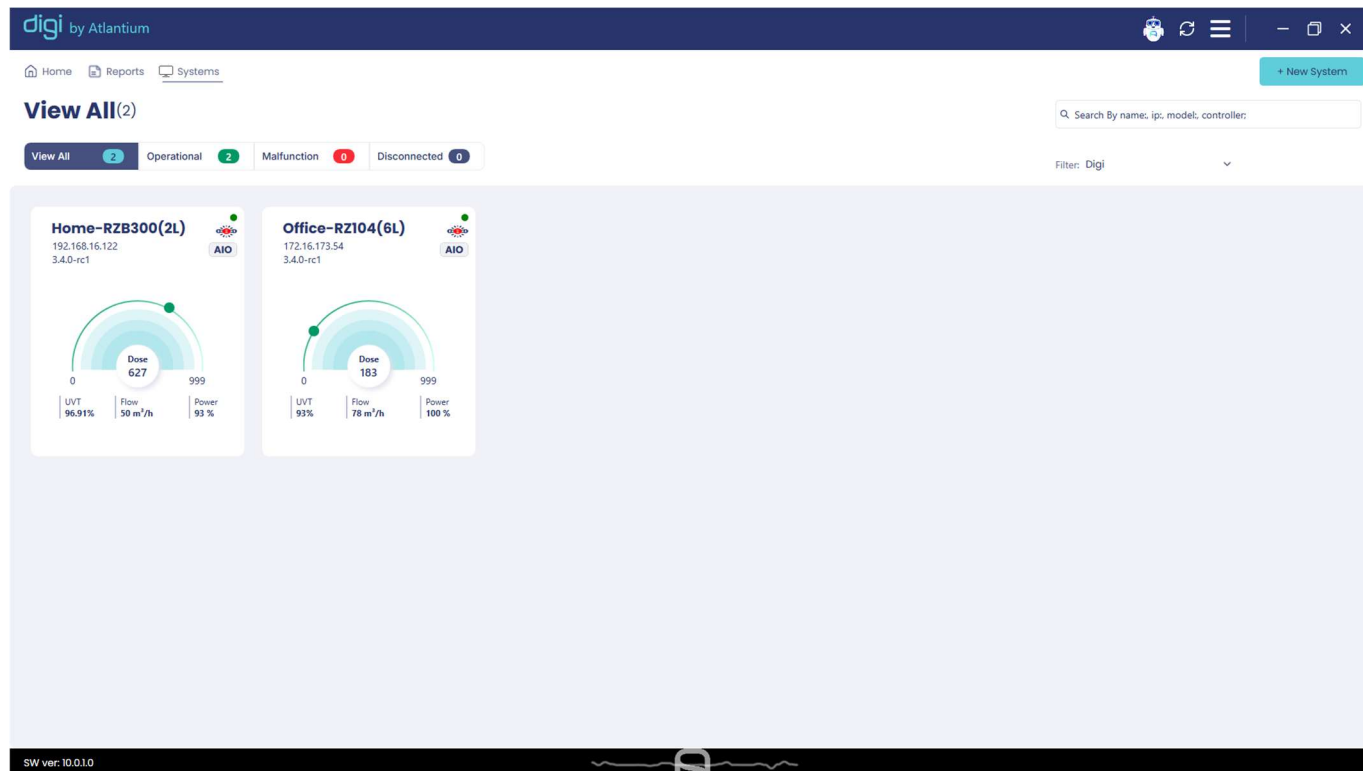


Main System Dashboard Screen


- **Event Log:** Filter by dates, display the main system event log, monthly event summary, and ignition trend.

Status Indicators

Green: On/Operational; Gray: Off; Red: Error.

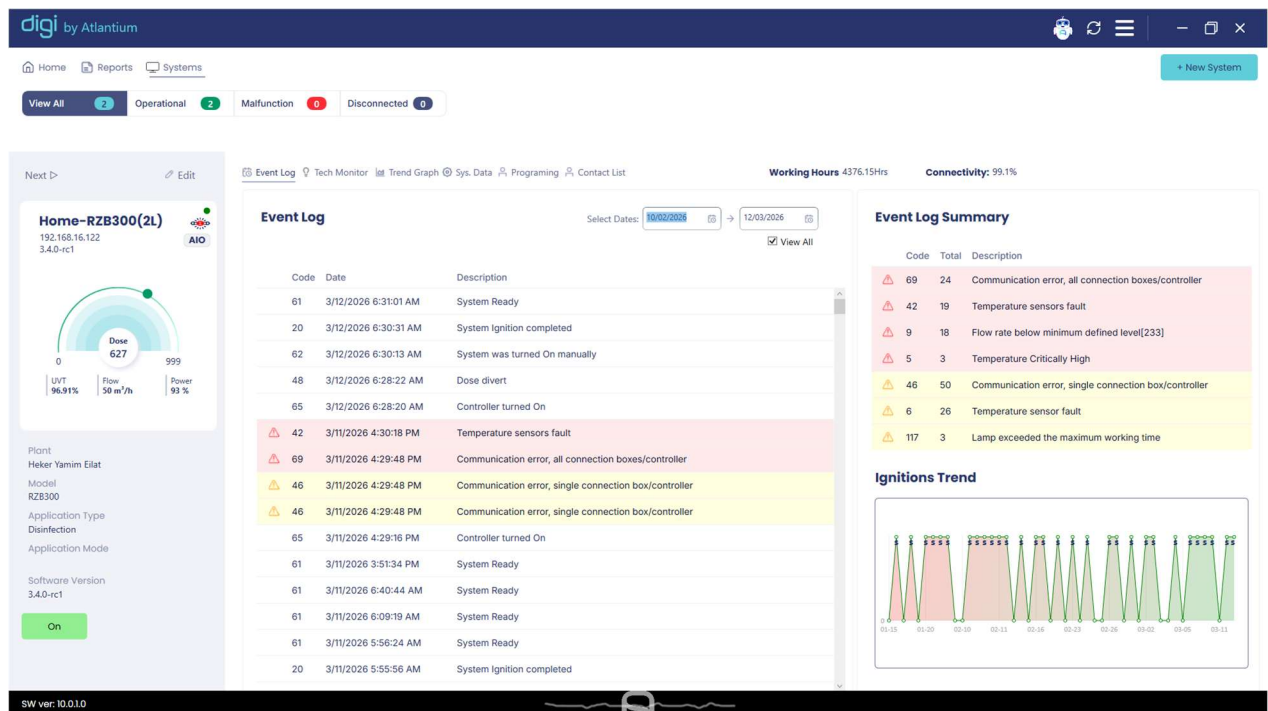

- **Tech Monitor:** Check lamp details (ID, UVIs/UVTs mA, UVT %, kW, voltage, current, age in hours, temp.

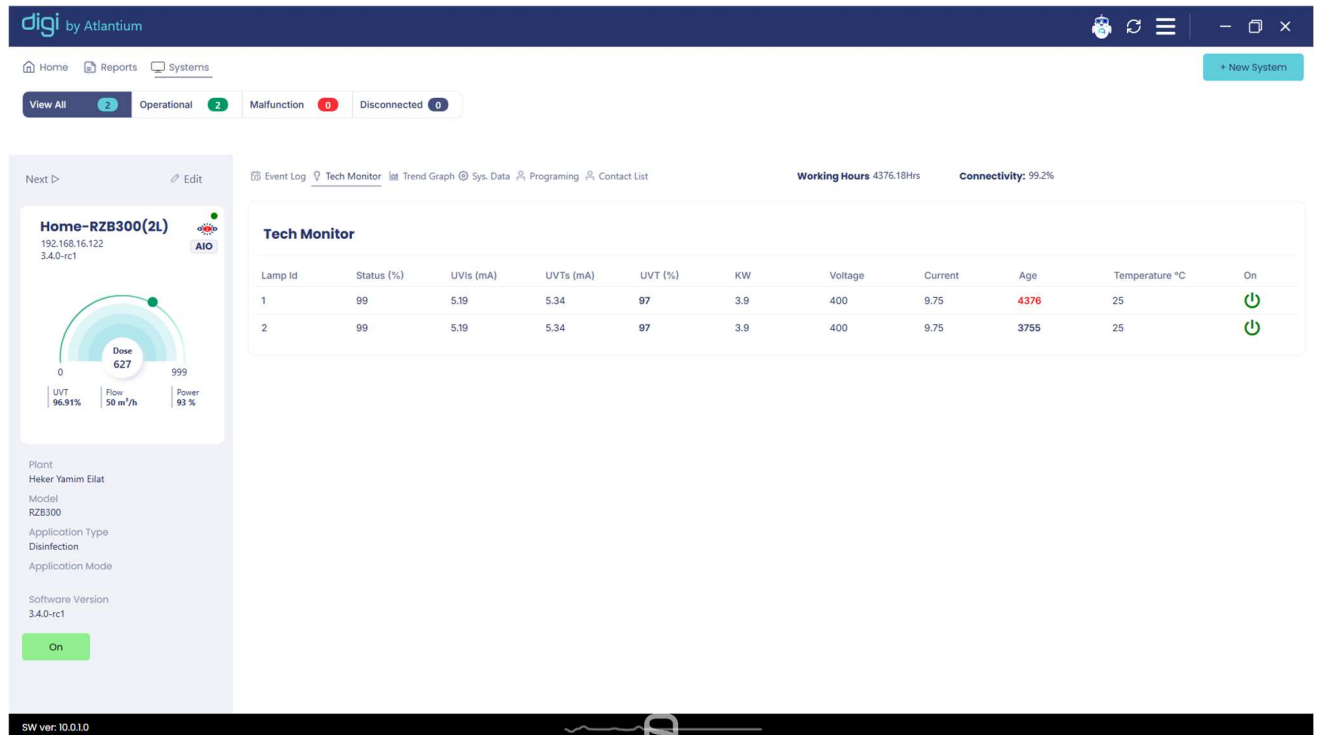

- **Trend Graph:** Plot Dose (mJ/cm²), UVT, Flow (mL/h), Power over time; spot anomalies like system errors.

- **Sys. Data:** View System data, alarms, real-time graph, and anomalies for Dose/UVT/Power/Flow/Temp, working hours (e.g., 5489 hrs).

The screenshot displays the 'digi by Atlantium' web interface. The top navigation bar includes 'Home', 'Reports', and 'Systems'. A status bar shows 'View All' (2), 'Operational' (2), 'Malfunction' (0), and 'Disconnected' (0). The main content area is titled 'System Data' and includes a sidebar for the 'Home-RZB300(2L)' system, showing its IP address (192.168.16.122) and software version (3.4.0-rc1). The main panel displays various system parameters: Customer (Heker Yamim Eliat), Site (Heker Yamim Eliat), Room (Clean room assembly), Segment (Aquaculture), Subsegment (Other), Application (Disinfection), Required UV Dose (120), UVT (95), Flow Rate (5), Water Type (Sea water), Water Temp (Below 50°C (120°F)), and Electricity (400). It also shows real-time values for Flow Rate (50), Minimum Flow (10), Maximum Flow (2000), Flow Delay (0), Dose (627), Minimum Dose (20), Maximum Dose (999), UVT (96.91), Minimum UVT (50), UVT Delta (0), Power (%) (93), and Temperature (25). An 'Alarms' section lists various alerts with their values. A 'Current Trend' and 'Trend Anomalies' section shows a table of data points.

Date	Name	Start	End	Period
12/03/2026 06:30	Power	100.00	93.00	2.00
12/03/2026 06:30	Dose	697.00	642.00	2.00

- **Programming:**

Edit settings;

The screenshot displays the Atlantium digi by Atlantium web interface. The top navigation bar includes links for Home, Reports, and Systems, along with a '+ New System' button. Below the navigation bar, there are status indicators for View All (2), Operational (2), Malfunction (0), and Disconnected (0). The main content area is divided into two sections: a left sidebar and a main panel.

Left Sidebar:

- Home-RZB300(2L)** (192.168.16.122, 3.4.0-rc1)
- Dose** (627)
- UVT** (96.91%)
- Flow** (50 m³/h)
- Power** (93 %)
- Plant:** Heker Yamim Eilat
- Model:** RZB300
- Application Type:** Disinfection
- Application Mode:**
- Software Version:** 3.4.0-rc1
- On** (button)

Main Panel:

- Programming**
- Minimum Flow:** 10 (Send button)
- Maximum Flow:** 2000 (Send button)
- Set Power:** 93 (Send button)

At the bottom of the interface, there is a status bar showing 'SW ver: 10.0.1.0' and a stylized logo.

- **Reports:** Generate compliance, health, or maintenance reports (e.g., UVT calibration, lamp audits); select time periods like "Last Week"

Search Reports

Select System: Home-RZB300

Compliance

- ☐ Monthly UVT Analyzer Calibration
- ☐ Monthly UVT Sensor Calibration
- ☐ Exception Report
- ☐ Settings Report
- ☐ Audit Report
- ☒ Health Report

Maintenance

- ☐ Lamps
- ☐ Ballast
- ☐ UVT Sensor
- ☐ UVI Sensor
- ☐ UVI Reference Report

Select Time Period: Last Month

Generate Report

Health Report

This report provides a comprehensive overview of the maintenance activities

[View Report](#)

SW ver: 10.0.1.0

Search Reports

Select System: Home-RZB300

Compliance

- ☐ Monthly UVT Analyzer Calibration
- ☐ Monthly UVT Sensor Calibration
- ☐ Exception Report
- ☐ Settings Report
- ☐ Audit Report
- ☒ Health Report

Maintenance

- ☐ Lamps
- ☐ Ballast
- ☐ UVT Sensor
- ☐ UVI Sensor
- ☐ UVI Reference Report

Select Time Period: Last Month

Generate Report

Close

ATLANTIUM
Pure Performance

Your Monthly Atlantium System Health Report

DISINFECTION

Calculated Values

Parameter	Average	Minimum	Maximum	Last value
Flow	432.47	427	434	427
Power	43.37	33	37	33
Flow	50	50	50	50
Temperature	25	25	25	25
UVT	95.93	95.9	97	95.9
UVIs	5.31	5.3	5.4	5.3
UVIs	5.2	5.2	5.2	5.2
Lamp/UVT	95.93	95.9	97	95.9

Page 1 of 2

SW ver: 10.0.1.0

Trouble shooting

1. No system was found after the search process.

- Try to make a ping from the command line, if return ok

Check the SD card on the AIO controller.

deleted files or change for an empty one.

2. The Atlantium system was displayed but without data.

-Wait a few minutes, the digi system is copying all the data from the controller and can take a few minutes.

-Check the software version controller (AIO)

if its lower or than 3.3.0 (The System works through FTP)

Uncheck the checkbox in the system details screen.

System Details ×

Buscar dirección IP

192.168.16.140 Q Buscar sistema

☒ TCP/IP

Número de serie	ID del cliente	Nombre
	Heker Yamim Eilat	HOME RZ104

-For an AIO software version up to 3.3.0, check on the controller
General tab -> Connection settings

If you use a converter, try to work on a baud rate of 9600

-If it is an AIO controller, try to close the digi and log in again.

The first connection with the AIO controller is through FTP (historical reasons)

After that, the communication changes to TCP/IP automatically.



VS



Aspect	Digi	Scada
Role	Real-time supervisory, Control, and data acquisition designed for Atlantium systems. Access to private Atlantium data systems	A rea-time system category (Supervisory Control and Data Acquisition) – industrial control system hardware + software
Scope	Enterprise-wide: connects to PLCs/RTUs, sensors, valves, and pumps across multiple locations	Enterprise-wide: connects to PLCs/RTUs, sensors, valves, and pumps across multiple locations
Data	Complete access to Atlantium systems, lamp, and sensors history data (change, installation, and last calibration) General information about Atlantium systems. Historical data analysis, alarms for data trends, anomaly trends	Any process tags exposed by PLCs/RTUs/sensors

Integration	Connects to Atlantium systems over local network/VPN, with IP-based discovery and report features	Integrates with many vendors and protocols, often across an entire facility
AI	Integrated AI module to give help, information, and analyze historical data	Not included
Offline mode	Offline mode is designed to analyze trends and alarms (without system connection)	None
Line live report	Periodic graphic report that displays a periodic system behavior	None
System control	Completed access to all Atlantium Modbus tags and internal database	Only what suppliers are exposed to..
Data backup	Complete Atlantium data back To recovery systems	Partial
Atlantium systems	Support all Atlantium controllers (AIO, B&W, OC...) for all software Versions automatically do not need to be defined, and complete plugin support	Need to define for every new system or connection
Remote alarms	Mail and sms alarm support	support

RUT956 security features



security features supported by Teltonika's RUT956 device.

Category	Feature	Default	Purpose/Description
DDoS Protection	SYN Attack Protection	On	Blocks excessive SYN requests to prevent resource exhaustion.
	Ping Attack Protection	Off	Mitigates ICMP (Ping) flood attacks.
	SSH Attack Prevention	Off	Blocks excessive SSH requests.
	HTTP Attack Prevention	Off	Blocks excessive HTTP requests.
	HTTPS Attack Prevention	Off	Blocks excessive HTTPS requests.
Custom Configuration	Custom Rules	Empty	Allows adding custom firewall rules via iptables commands.
	DMZ	Off	Allows separating LAN-side network into separate zones with heavily restricted access.
Port Scan & TCP Attack Protection	Port Scan Prevention	Off	Detects and blocks port scanning attempts.
	SYN-FIN Attack	Off	Blocks packets with both SYN and FIN flags set.
	SYN-RST Attack	Off	Prevents abrupt TCP session resets.
	X-Mas Attack	Off	Blocks TCP packets with multiple unusual flags set.
	FIN Scan	Off	Blocks FIN packets used to bypass firewalls.
	NULL Flags Attack	Off	Blocks TCP packets with no flags set.

Access Control – Remote	SSH Access	Off	Disabled by default; use only with strong passwords.
	HTTP Access	Off	Disabled by default; use only with strong passwords.
	HTTPS Access	Off	Disabled by default; use only with strong passwords.
	CLI Access	Off	Disabled by default; use only with strong passwords.
Access Control – Local	SSH Access	On	Allows local configuration over LAN.
	HTTP Access	On	Allows local WebUI configuration over LAN.
	HTTPS Access	On	Allows local WebUI configuration over LAN.
	CLI Access	On	Allows local command-line configuration over LAN.
Login Protection	SSH Login Attempts	On	Blocks IP after 10 failed attempts (default).
	WebUI Login Attempts	On	Blocks IP after 10 failed attempts (default).
	2FA	Off	Enables two-factor authentication (2FA) using the OTP verification method to enhance access security.
Configuration Security	SMS Utilities	Admin password	SMS commands require admin password.
	Default Admin Password	On	Default password is present on the device label.
Certificates	Root CA	Preloaded	Default root certificate included; can be replaced.

Other Protections	UPnP	Not installed / Off	Disabled to prevent unauthorized port forwarding.
	UART Interface	Admin password	Requires password to prevent unauthorized physical access.
System integrity	Integrity	Not generated	Generates and verifies the integrity of specified system files. Ensure detection of unauthorized modifications.

Connectivity:

1) 1.- On Local Network

1.1 Version under AIO-3.3.0, connected through ethernet plug
not "realtime", sampling time should be set on AIO controller.

1.2 New AIO versions, connected through ethernet plug with
Tcplp support, real-time monitoring

2) Through the external modem

2.1 Connected to ISO card(serial RTU)

2.2 Connected to ethernet plug

2.3 Connected to the Local network

Register Atlantium Systems checklist.

	Digi System License, get from the Atlantium representative
	Atlantium System Serial number, one per system
	System HostId, IP Address, Port. One per system
	Site, Room
	Atlantium Customer ID