


The Digi is a desktop dashboard that monitors Atlantium Systems.

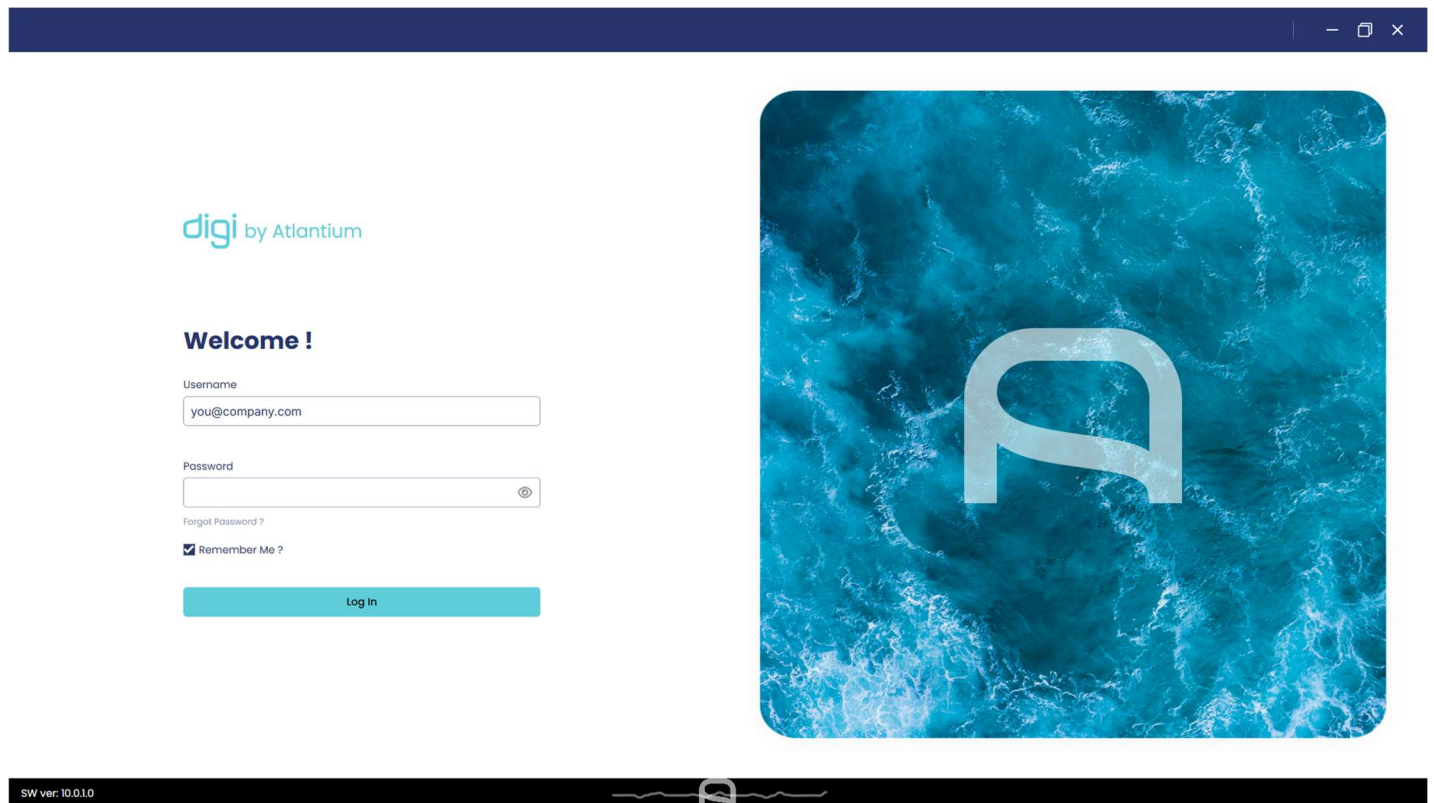

## Overview

The digi monitor provides real-time oversight of multiple systems, showing status (Operational, Malfunction, Disconnected), key metrics like Dose, UVT, Flow, and Power, and tools for maintenance.


Using the local network or mobile VPN through the system's IP address.



## Login and Home Screen


Log in as a "Guest" user without a password to access the welcome screen.

Select one of the options.

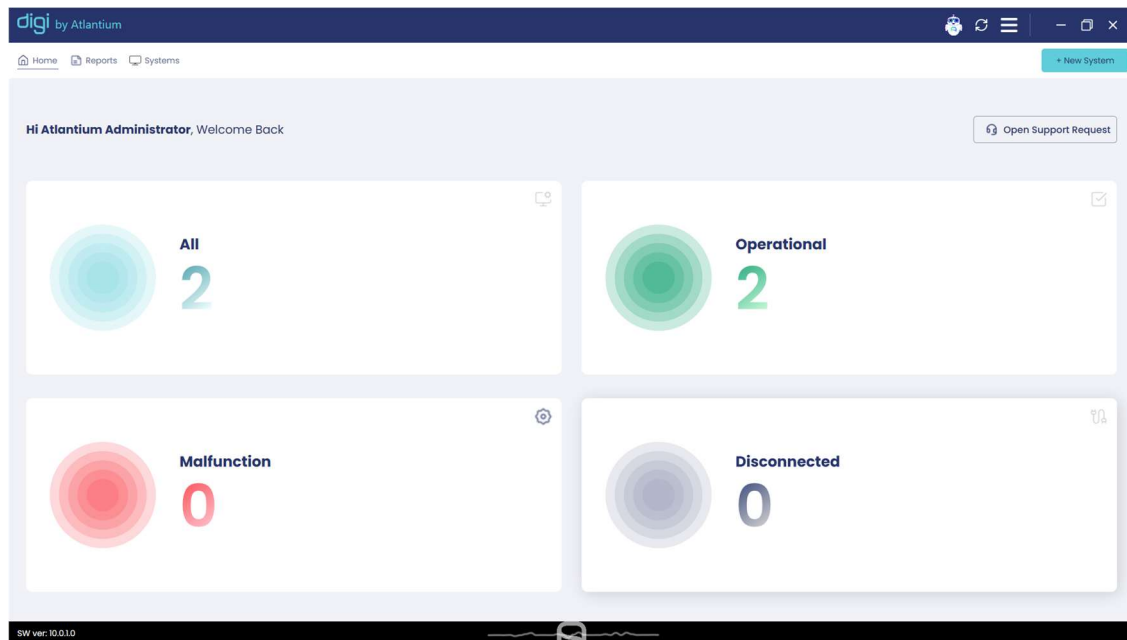

## Register Atlantium Systems

\*This screen will be empty on the first login

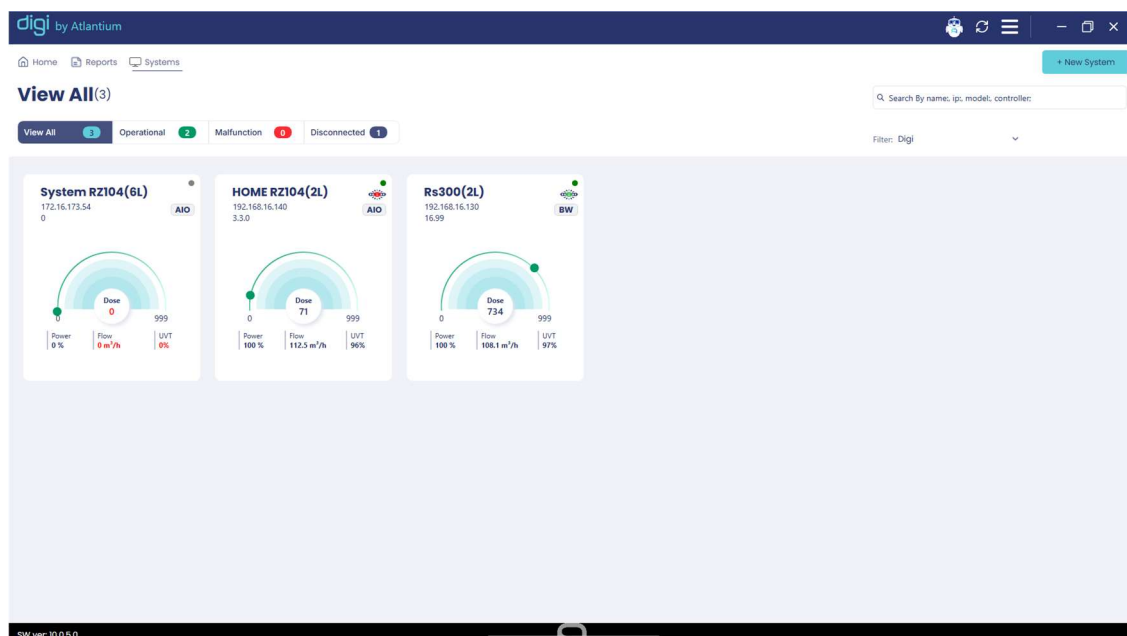

## Add a new system

+ New System

1.- Press add new system button

2.- Insert IP Address

\*No need to check the TCP/IP check box

The screenshot shows the 'digi by Atlantium' web interface. A modal window titled 'Add New System' is open. It contains the following fields and options:

- Search IP Address:** A text input field with a 'Search System' button.
- TCP/IP:** An unchecked checkbox.
- Serial Number:** A text input field.
- Customer Id:** A text input field.
- Name:** A text input field.
- Plant:** A text input field.
- Application:** A text input field.
- Model:** A text input field.
- Software Version:** A text input field.
- Lamps:** A text input field with the value '0'.
- Application Mode:** A text input field.
- Device Id String:** A text input field with the value 'Local'.
- Units Format:** A dropdown menu set to 'm³/h'.
- Connectivity:**
  - Group:** A dropdown menu.
  - Host Id:** A text input field with the value '1'.
  - Port:** A text input field with the value '2221'.
  - Direct Port:** A text input field with the value '1502'.
  - Converter:** A dropdown menu set to 'None'.
  - Username:** A text input field with the value 'username'.
  - Password:** A text input field with the value 'password'.
  - Set Card:** A text input field with the value '32'.
  - Latitude Position:** A text input field.
  - Longitude Position:** A text input field.
  - Controller Model:** A dropdown menu set to 'AIO'.
- Automatic Backup:** A checked checkbox.
- Send Mail Notifications To Customer:** A checked checkbox.
- Buttons:** 'Save Changes' and 'Cancel' buttons.

3.- Press Search System Button

If the IP address owner is an Atlantium System, Digi will read the system details

4.- Fill or update the system detail fields.

5.- If you have pif file for the system, import it.

6.- To allow mail notifications, select the checkbox

Select the correct Ethernet connection and port.

Set the protocol converter type

Set the corresponding port


Set the controller model



## Controllers List Screen

This screen displays the register Atlantium systems.

Use the filter box to select groups.

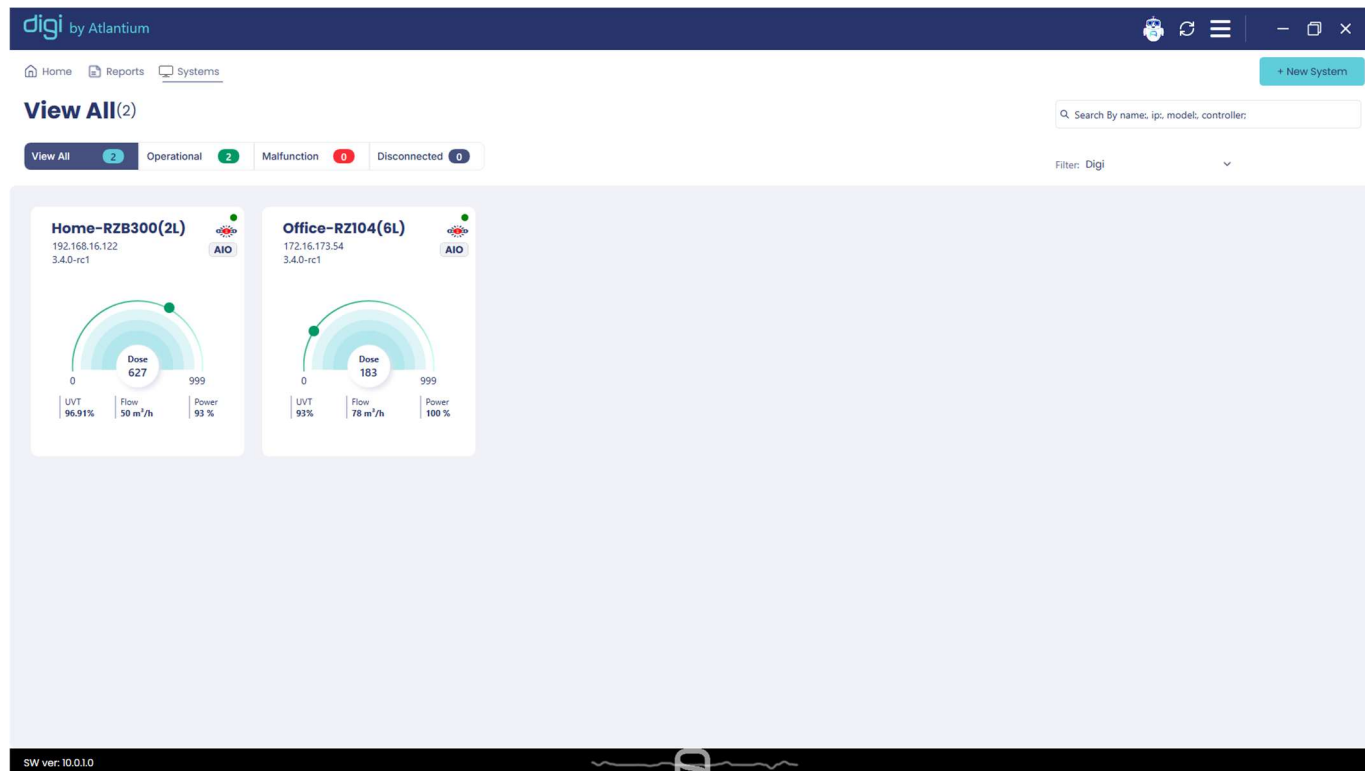


## Main System Dashboard Screen


- **Event Log:** Filter by dates, display the main system event log, monthly event summary, and ignition trend.

### Status Indicators

Green: On/Operational; Gray: Off; Red: Error.

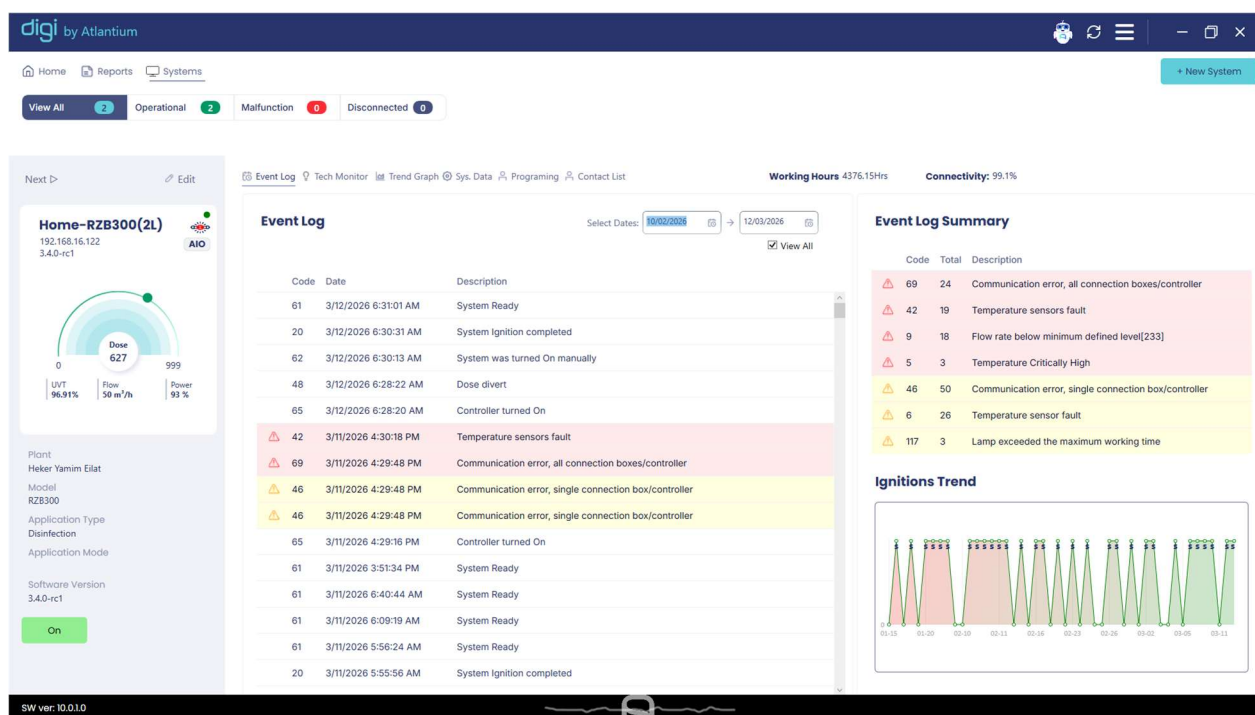

- **Tech Monitor:** Check lamp details (ID, UVIs/UVTs mA, UVT %, kW, voltage, current, age in hours, temp.

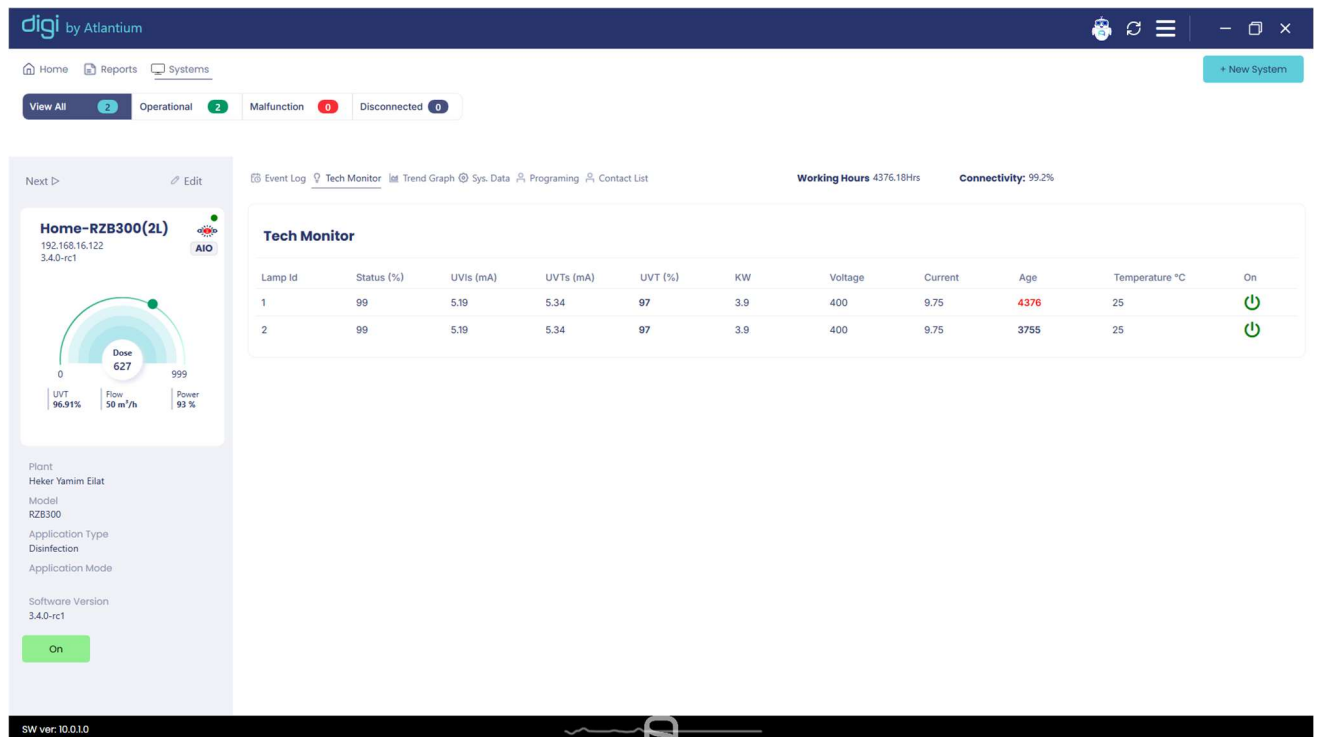

- **Trend Graph:** Plot Dose (mJ/cm²), UVT, Flow (mL/h), Power over time; spot anomalies like system errors.

- **Sys. Data:** View System data, alarms, real-time graph, and anomalies for Dose/UVT/Power/Flow/Temp, working hours (e.g., 5489 hrs).

The screenshot displays the 'digi by Atlantium' web interface. The top navigation bar includes 'Home', 'Reports', and 'Systems'. A status bar shows 'View All' (2), 'Operational' (2), 'Malfunction' (0), and 'Disconnected' (0). The main content area is titled 'System Data' and features a sidebar for the 'Home-RZB300(2L)' unit with a real-time graph and a 'Next' button. The main panel shows various system parameters and settings.

**System Data**

**Customer:** Heker Yamim Eliat  
**Site:** Heker Yamim Eliat  
**Room:** Clean room assembly:  
**Segment:** Aquaculture  
**Subsegment:** Other  
**Application:** Disinfection

**Required UV Dose:** 120  
**UVT:** 95  
**Flow Rate:** 5  
**Water Type:** Sea water  
**Water Temp:** Below 50°C (120°F)  
**Electricity:** 400

**Flow Rate:** 50  
**Minimum Flow:** 10  
**Maximum Flow:** 2000  
**Flow Delay:** 0

**Dose:** 627  
**Minimum Dose:** 20  
**Maximum Dose:** 999

**UVT:** 96.91  
**Minimum UVT:** 50  
**UVT Delta:** 0

**Power (%):** 93

**Temperature:** 25  
**Maximum:** 0

**Alarms**

| Description   | Value |
|---------------|-------|
| System error  | 0     |
| Over dose     | 0     |
| Under dose    | 0     |
| High temp. #4 | 0     |
| Over temp. #5 | 0     |

**Current Trend** **Trend Anomalies**

| Date             | Name  | Start  | End    | Period |
|------------------|-------|--------|--------|--------|
| 12/03/2026 06:30 | Power | 100.00 | 93.00  | 2.00   |
| 12/03/2026 06:30 | Dose  | 697.00 | 642.00 | 2.00   |

SW ver: 10.010

- **Programming:**

Edit settings;

The screenshot displays the Atlantium digi by Atlantium web interface. The top navigation bar includes links for Home, Reports, and Systems, along with a '+ New System' button. Below the navigation bar, there are status indicators for View All (2), Operational (2), Malfunction (0), and Disconnected (0). The main content area is divided into two sections. On the left, a sidebar for 'Home-RZB300(2L)' shows a circular gauge with a 'Dose' of 627 and three data points: UVT (96.91%), Flow (50 m³/h), and Power (93%). Below the gauge, a list of system details includes Plant (Heker Yamim Elat), Model (RZB300), Application Type (Disinfection), Application Mode, Software Version (3.4.0-rc1), and an 'On' button. On the right, the 'Programming' section contains three input fields: Minimum Flow (10), Maximum Flow (2000), and Set Power (93), each with a 'Send' button. The bottom status bar shows 'SW ver: 10.0.1.0' and a stylized logo.



- **Reports:** Generate compliance, health, or maintenance reports (e.g., UVT calibration, lamp audits); select time periods like "Last Week"

