


Home Screen:

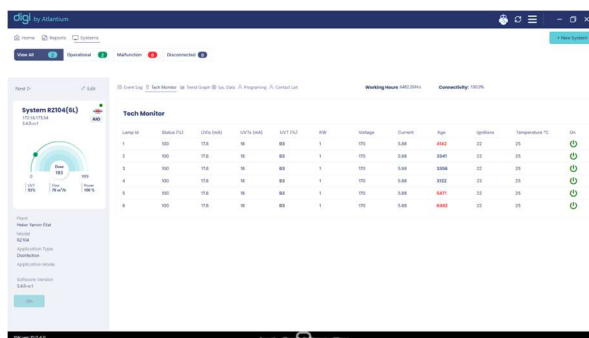

Title: System data tab

- Pif file data
- Flow, Dose, Power, Temperature real-time data
- Working hours
- Real-time System alarms
- Trend anomalies
- Online Data Graph

Title: Programming tab

Programming in real-time the controller

Title: Event log tab

- Event log report
- Event summary
- Total system ignitions

Two views:

- 1.- All Events view
- 2.- By Startups

Title: Tech Monitor tab

- General lamps data
- Status, UVIs, UVTs, Voltage, Current, Age, Temp, (real-time data)

Title: Trend graph tab

- Dose, Power, Flow, UVT, Lamp UVI&UVT sensors trend graphs

- Title: Reports screen
- Compliance reports
 - Monthly UVT Analyzer calibration
 - Monthly UVT Sensor calibration
 - Exception report
 - Setting report
 - Audit report
 - Health report
- Maintenance
 - Lamps
 - Ballast
 - UVT sensor
 - UVI sensor
 - UVI reference rep

Title: Add new system

Press the New System button on the top right of the screen

1. Insert IP address
2. Press the search button (TCP/IP checkbox must be unchecked)
3. If the Atlantium system is connected to the local network, Digi will find it
4. Made changes if needed
5. Load Atlantium PIF file (File must be in CVS format)
6. Press Save
7. Digi will show you the Atlantium system on the System List

8. TCP/IP checkbox: to use an external tcp/ip converter

If tcp/ip checkbox is selected

Use the converter field:

- None
- On board (for AIO controller with software version up to 3.4.0)
- External Converter

Must set the direct port