HALF-DUPLEX RETRANSMISSION OPERATION

RX – 47.635 MHz F1
TX – 47.635 MHz RX

F2
TX


RX – 35.755 MHz
TX – 35.755 MHz

All radios: TX – F1
RX – F2

All radios communicate through the repeater

RX – 35.755 MHz
TX – 47.635 MHz

RX – 35.755 MHz
TX – 47.635 MHz

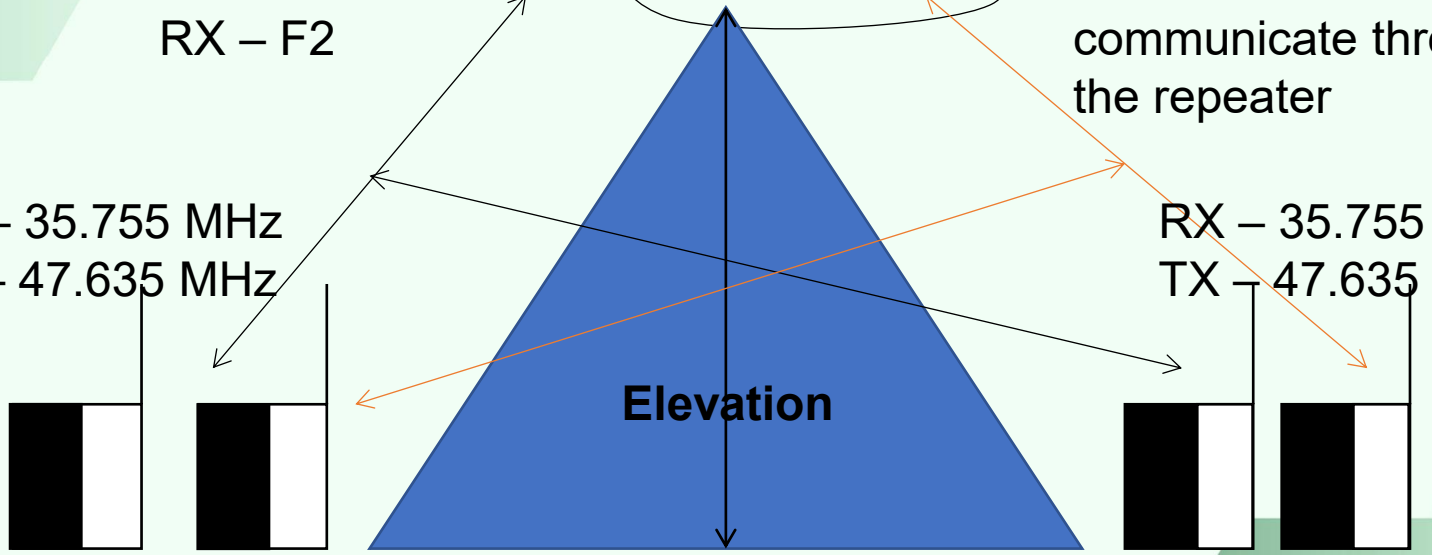


Hardware for Retransmission

- TWO HARRIS RF-5800V-HH RADIO WITH ANTENNA AND BATTERY PACK
- RETRANSMISSION CABLE (12011-0230-A050)

Repeater Setup

- FOR OPTIMUM PERFORMANCE. THE REPEATER SITE SHOULD BE **ELEVATED** ABOVE THE LEVEL OF THE OUTSTATIONS
- CONNECT THE RETRANSMIT CABLE TO THE SIDE CONNECTOR ON EACH RADIO.
- SEPARATE THE RADIO UNITS BY FULLY EXTENDING THE RETRANSMIT CABLE TO PREVENT **RECEIVER DESENSITIZATION** AND **RF INTERFERENCE** BETWEEN UNITS.
- FOR **BEST RETRANSMISSION PERFORMANCE**, ENSURE THE RETRANSMIT CABLE IS IN CONTACT WITH THE GROUND ALONG ITS FULL LENGTH.

Recommended Separation Distance :
Full Cable Length (50ft)

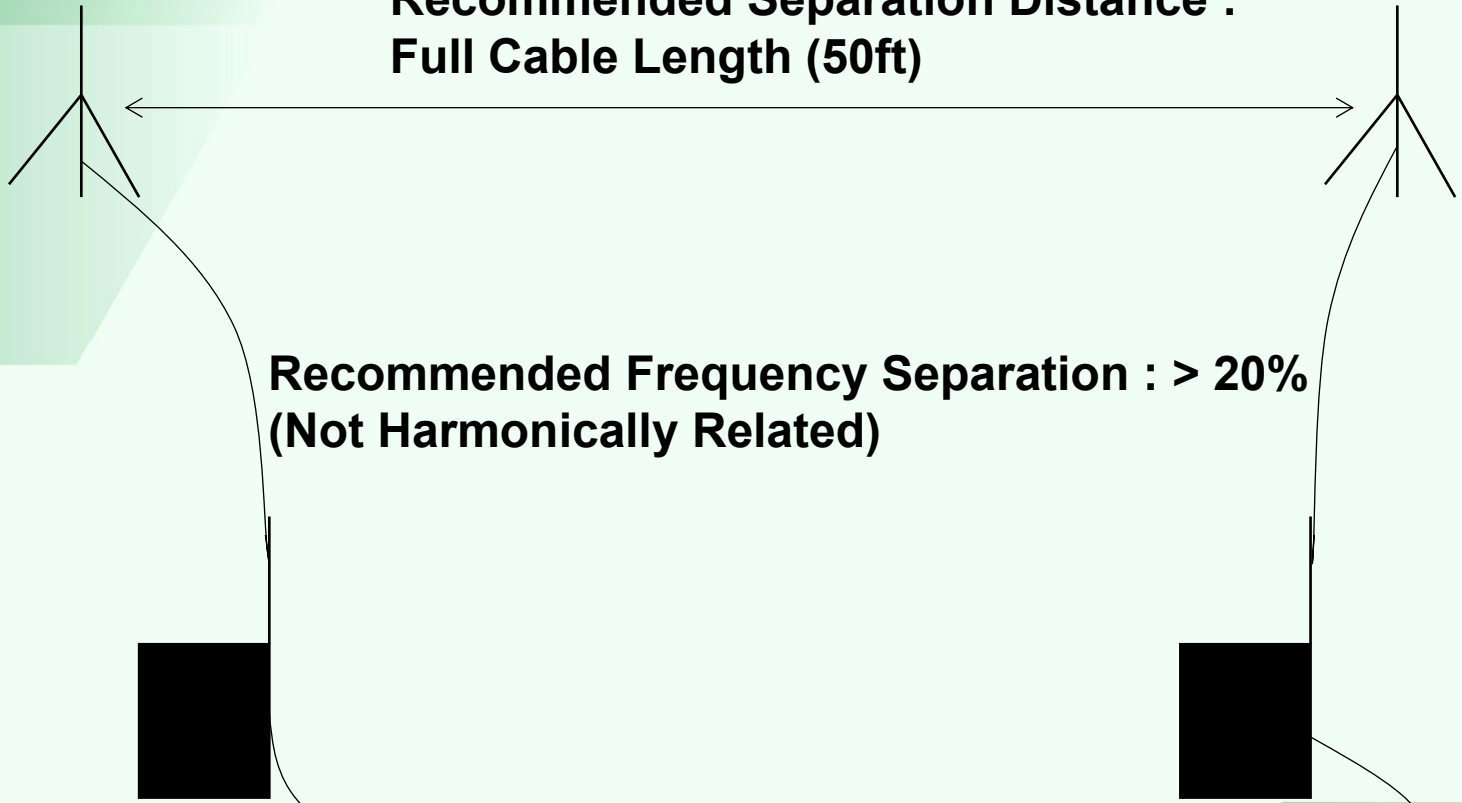

Recommended Frequency Separation : > 20%
(Not Harmonically Related)

Retransmit Cable

Retransmit Settings

PERFORM THE FOLLOWING PROCEDURE TO PLACE THE RADIO IN RETRANSMIT MODE:

- PRESS THE **[8-PGM]** BUTTON.
- USE THE LEFT/RIGHT ARROW KEYS TO SELECT **CFIG** AND PRESS **ENTER**.
- SELECT **GENERAL** AND PRESS **ENTER.**
- FM TRANSMIT TONE **(ON)**
- SILENCE BEEPS? **(NO)**
- ROBUST PREAMBLE **(ON)**
- POWER MANAGEMENT **(ON)**
- ANC CONNECTOR **(ENABLE)**

Retransmit Settings

PERFORM THE FOLLOWING PROCEDURE TO PLACE THE RADIO IN RETRANSMIT MODE:

- PRESS THE **[3-MODE]** BUTTON.
- USE THE UP/DOWN ARROW KEYS TO SELECT **RETRANSMIT** AND PRESS ENTER.
- USE UP/DOWN ARROW KEYS TO SELECT **ON-SYNC** OR **ON-ASYNC** AND PRESS **ENTER**
- **ON-SYNC:** USED WITH **FIRMWARE PRIOR** TO **VERSION 6.0**
- **ON-ASYNC:** USED WITH **FIRMWARE VERSION 6.0** AND **LATER**

Rules for Repeater Operation

- KEEP YOUR **CONVERSATION BRIEF** AND **CONTACTS SHORT**
- **LEAVE PAUSE** BETWEEN OVERS
- DON'T **TUNE UP** ON THE REPEATER FREQUENCY
- DO NOT **KERCHUNK** THE REPEATER