Fixed Frequency Nets

PGM > MODE > PRESET > CHANNEL

- Channel preset are used in FIX, ALE and 3G. ALE can only be programmed with channels 000 – 099. Hailing can only be performed from channels 001 – 010. FIX use channels 000 – 199. 3G uses channels 100 – 162.

- All 3G network programming must be accomplished through the CPA.

Fixed Frequency Nets

NOTE

1. Channel 000 is the manual channel. This is the only channel whose settings can be changed from the channel screen without going into the program mode.




2. Only channels 001 – 010 can be used for hailing channels (HOP)
3. "CLR" is utilized for Plain Text voice operations 30Mhz – 59.995Mhz (FM) in Fixed mode only. This setting enables the operator to communicate with other older analog voice radio systems…I.E. PRC-77…ect.
4. "CVSD" is utilized for Digital Cipher Text voice operations 30Mhz – 59.995Mhz (FM) in Fixed mode only.
5. 200 Fixed channels are able to be programmed in the 5800H.

VHF Fixed Frequency Nets

PGM-MODE-PRESET-CHANNEL
CHANNEL NUMBER
TO CHANGE: 000
ENT TO SAVE - CLR TO EXIT


- **Edit Channel to “001” and press [ENTER]**

VHF Fixed Frequency Nets

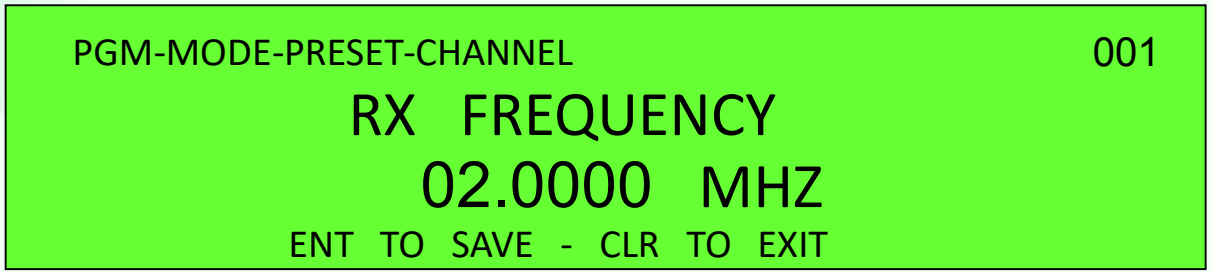

- **Edit RX Frequency "35.7500 MHZ" and press [ENTER]**

VHF Fixed Frequency Nets

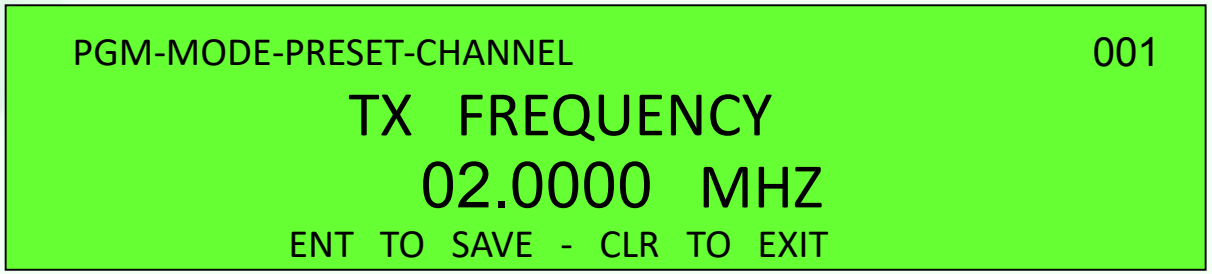

- **Edit TX Frequency "35.7500 MHZ" and press [ENTER]**

VHF Fixed Frequency Nets

PGM-MODE-PRESET-CHANNEL 001

MODULATION

FM

USE ▲ ▼ TO SELECT ITEM

USB – Upper Side Band

LSB – Lower Side Band

FM - Frequency Modulation

AME- Amplitude Modulation Equivalent

CW - Continuous Wave

VHF Fixed Frequency Nets

PGM-MODE-PRESET-CHANNEL

CHANNEL NUMBER

TO CHANGE: 001

ENT TO SAVE - CLR TO EXIT

HF Fixed Frequency Nets

PGM-MODE-PRESET-CHANNEL 002

MODULATION

USB

PRESS ▲ ▼ TO SCROLL

USB – Upper Side Band


LSB – Lower Side Band

FM - Frequency Modulation

AME- Amplitude Modulation Equivalent

CW - Continuous Wave

HF Fixed Frequency Nets

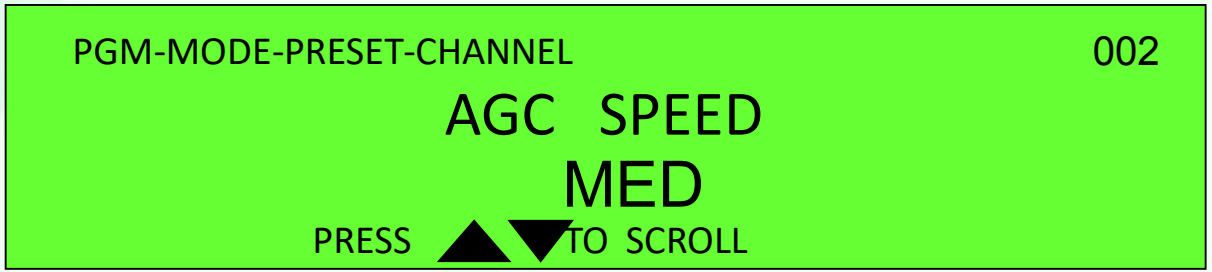

AGC – Automatic Gain Control

NOTE: This option displayed when USB or LSB is used. FM Defaults (DEF)

HF Fixed Frequency Nets

PGM-MODE-PRESET-CHANNEL

CHANNEL NUMBER

TO CHANGE: 002

ENT TO SAVE - CLR TO EXIT