INSTALLATION OF NRDI





1. To find the radio's ethernet address;

[8PGM]




5. ETHERNET > [ENT]



7. DIRECT USB > [ENT]]




8. DHCP SERVER > DISABLED > [ENT]

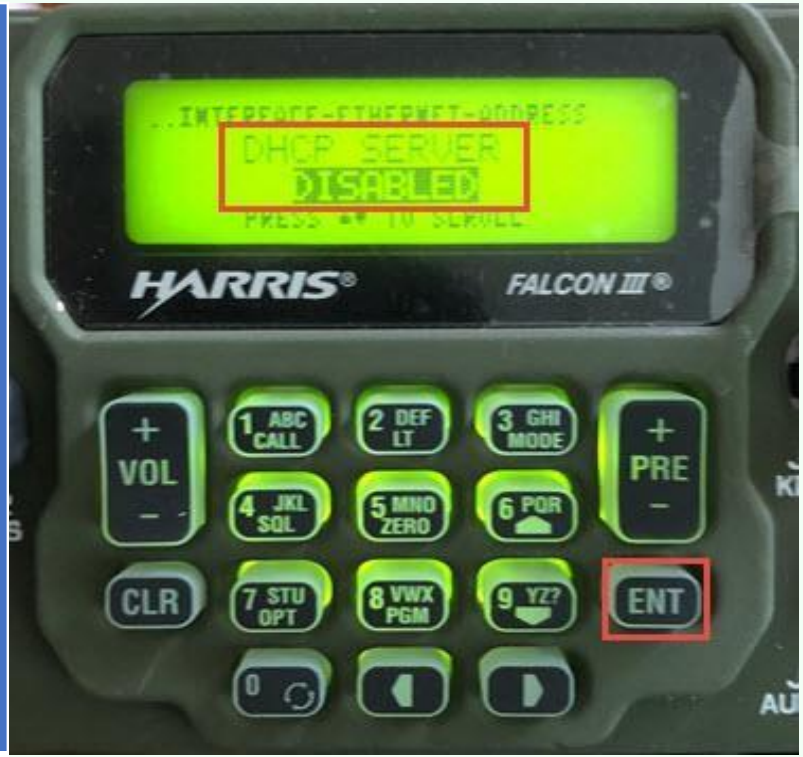

9. Take note of address shown. Press [CLR] until radio returns to main display.




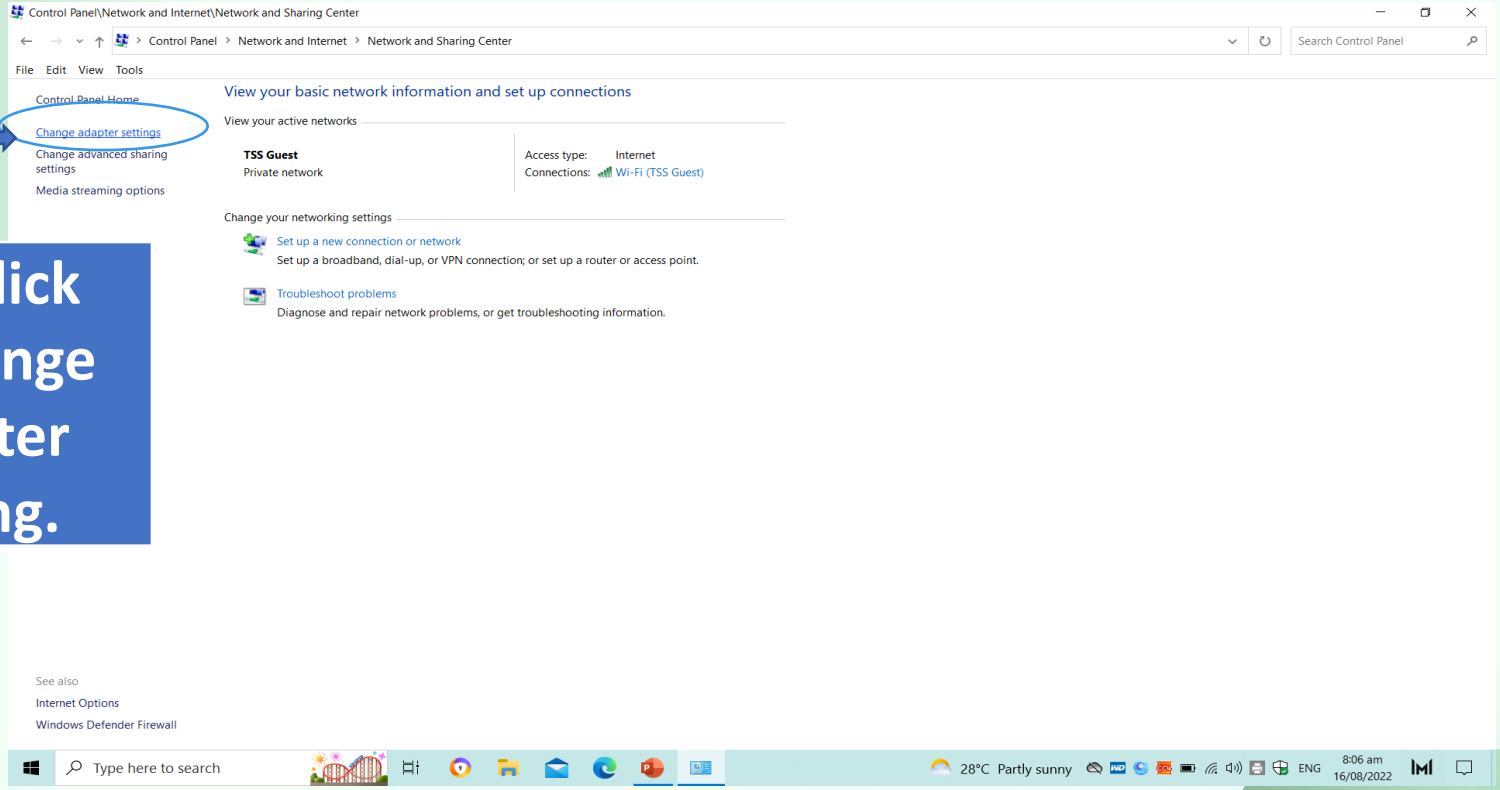


14. Click ``Change adapter setting.


15. Locate the RNDIS connection, right click and then select Properties

Note: The RNDIS connection will not appear until an RNDIS device (the radio) is connected to the PC.

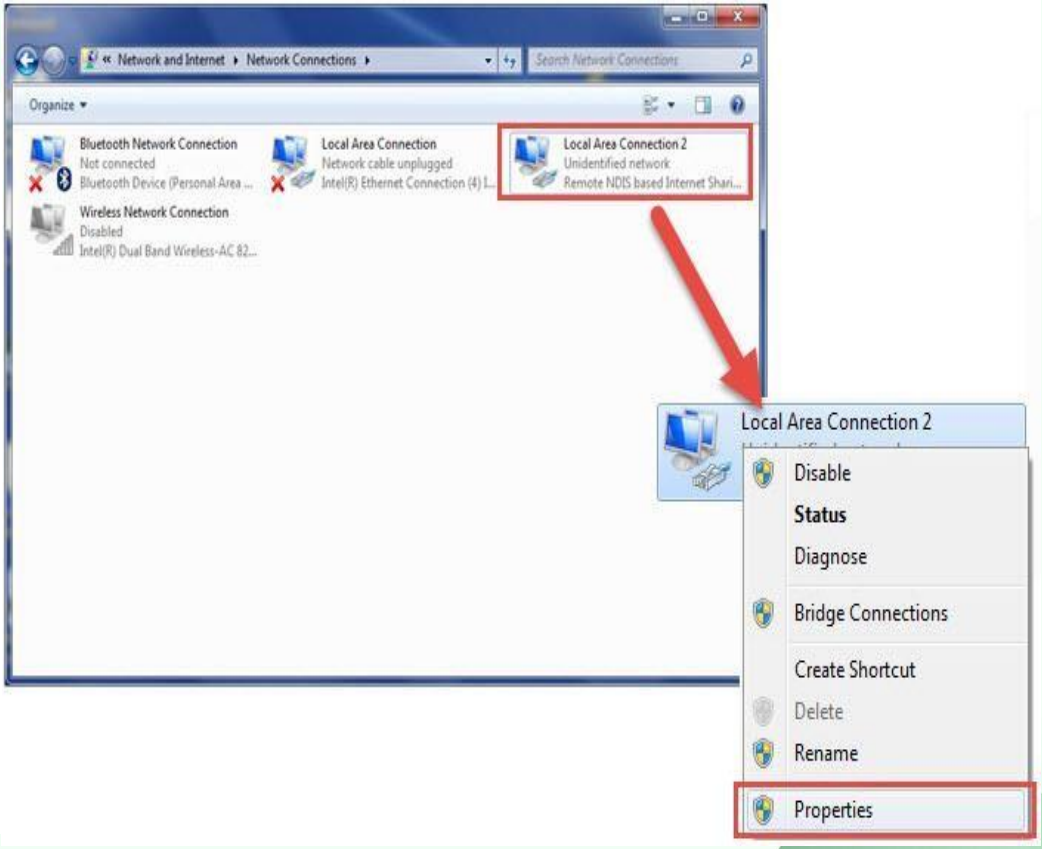

16. Highlight "Internet Protocol Version 4 (TCP/IPV4) and then click Properties.

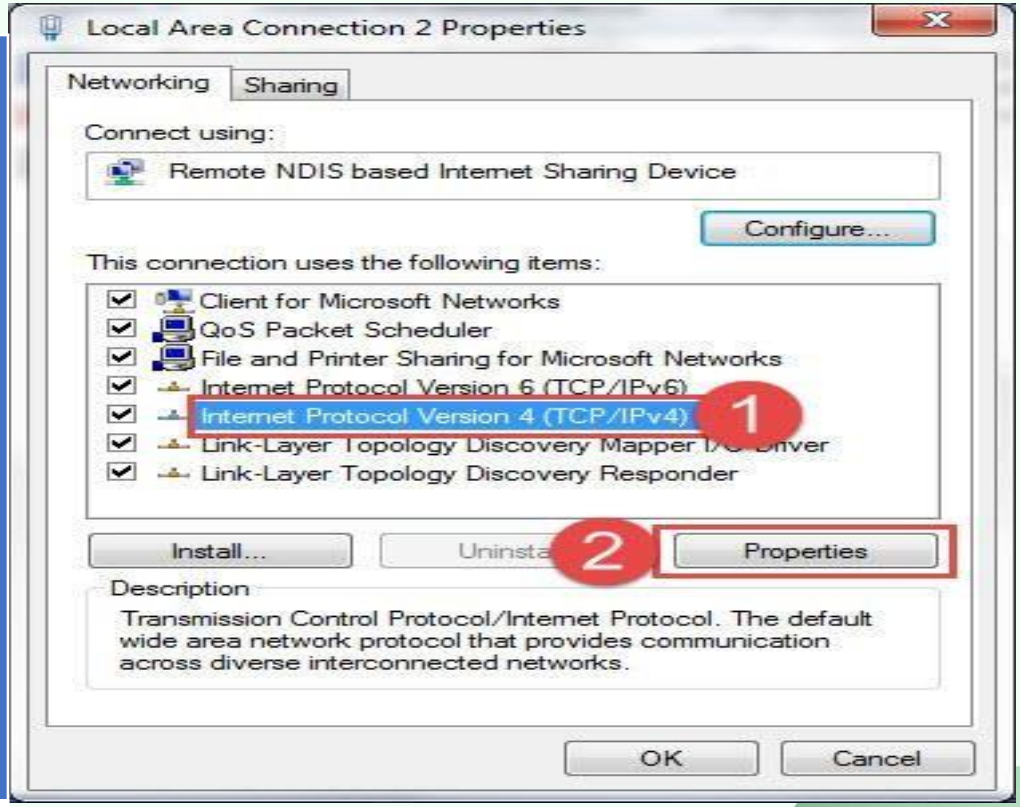

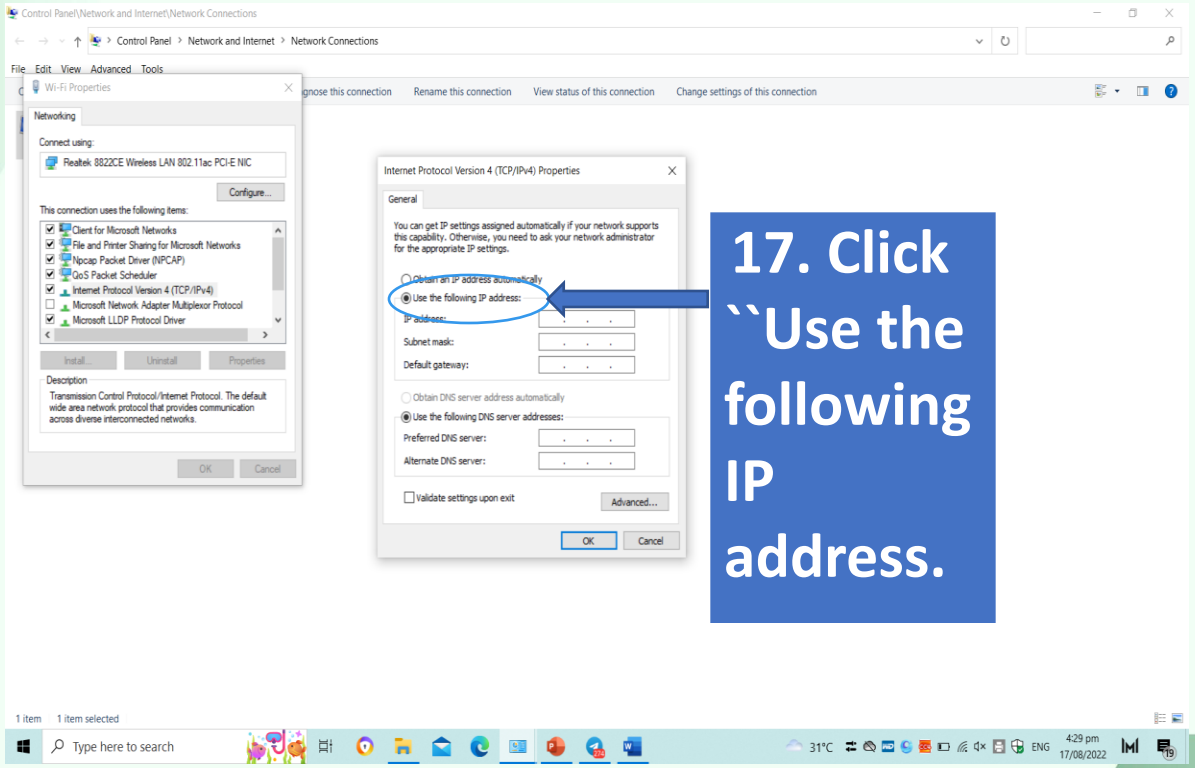

17. Click ``Use the following IP address.

#StrongerArmyStrongerCountry

20. In Command Prompt;

Type “ping 192.168.1.1 ” replace tl 168.254.78.1 radio IP.

The radio should reply as shown.

If no reply from radio, check physical connection to computer and check IP entered

