



The Complete User Guide

Version 1.0 - May 2020



Desktop



App

Table of Content

Company settings.....	2
User Management.....	4
Sites / Buildings / Floors / Drawings.....	6
Attach Operatives.....	10
Client Access.....	11
Company Permissions.....	12
Documents - Desktop.....	15
Downloading and Logging in to the App.....	18
The App Dashboard.....	21
Syncing.....	21
App Settings.....	22
Help.....	24
About.....	24
Messages.....	24
Sites.....	25
All Drawings.....	25
Adding Pins & Pin Histories.....	27
Filters - App.....	30
Documents - App.....	30
Desktop Dashboard.....	32
Viewing Data through the Desktop.....	33
Generating Reports.....	36
Custom Templates.....	39
Recently Deleted Area.....	40
Purchases through the System.....	41
Help Scout & Support.....	43
QR Codes.....	44

Company Settings

Through company settings you can customise your Bolster system to meet your companies requirements. Your company name, address, contact information, VAT details, date format and time zone settings will carry through from the registration page. Company settings can be tweaked and updated as many times as required.

Company Logo & Colour Scheme

Through the Bolster system you can upload your company and set your company colour scheme to make the system look bespoke to you. This will be across the desktop & app as well as outputting your company logo on all PDF reports generated.

- 1) Click  **Company Settings** on the left-hand menu
- 2) In the top right corner click  button
- 3) in the centre of the page click  button and select your company logo from your device (.JPG or .PNG files only)
- 4) Below the company logo area is the colour scheme, here you have two options: use the colour slider  or manually type the hex code 
- 5) Click  button to apply these changes

Further Settings

Within company settings there are further rules and defaults you can set for your company's account. Below will explain a little further what each setting allows.

Use Bolster Labels



Toggle on / off. If your company uses Bolster labels & printers will show a label when creating sites / buildings / floors / drawings to ensure the name fits within the label. It will ensure the Print / Skip options are available through the app when adding pin histories.

Hide On Client List



Toggle on / off. Determine if your company is hidden from the Bolster Approved Companies list

Allow Companies To Edit?



Toggle on / off. Determine if you allow admin to edit existing pin histories through the desktop. Please note, this will also allow admin from any company granted permission to your drawings to edit pin histories.

Enable QR Codes?



Toggle on / off. If your company uses Bolster QR codes this will release the button through the app to assign QR's to pins.

Delete Reports After Download?



Toggle on / off. All data through the Bolster system is hosted through AWS cloud-based servers to ensure your data can be securely accessed from any laptop/computer. You can determine if reports are deleted after first download which will remove it completely from the server.

Default template usage rule

✓ -- select rule --
Use Only Owner Company
Use Only Own
Use Any

Select an option to determine the default rule for template usage when inviting companies to work on your drawings through company permissions.

Use any - use any template the two companies have

Use only owner company - use only the templates from the company who owns the drawing

Use only own - each company can only use their own bespoke templates

Default site list sort

✓ --- Select an option ---
Custom
Date Ascending
Date Descending
Name Ascending
Name Descending

Select an option to determine the default rule for how sites are ordered through the desktop. 'Custom' sort allows you to drag and drop the sites in a bespoke order of your choosing.

Company address, time zone and date format can also be edited / updated when required through the company settings page. When you make any changes to your company settings, ensure you click **Confirm** button to apply the changes.

Below we will explore all aspects of the Bolster Systems desktop and app. A useful icon will advise to you where you carry out the outlined tasks through the system.



Desktop




App

User Management

A subscription to the system allows each company to have 999 users. There are two types of users; Admins & Operatives. Admins have access to both the desktop & application platform, whilst Operatives can only access the application. The user who first sets up a company's account will be the Owner of the account. You can split your 999 available users between Admins & Operatives with no restrictions.

Creating a New User

- 1) Select the correct user type from the left-hand menu
- 2) Click the  /  button
- 3) Fill out the pop-up form inputting the new users information and click 

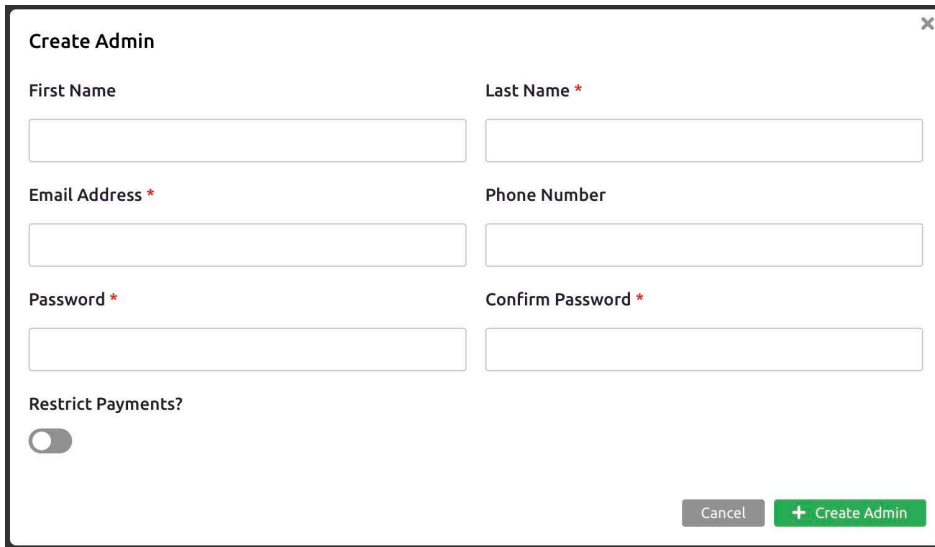

The form is titled "Create Admin" and contains the following fields:

- First Name
- Last Name *
- Email Address *
- Phone Number
- Password *
- Confirm Password *
- Restrict Payments? (toggle switch)

At the bottom right, there are two buttons: "Cancel" and "+ Create Admin".

Add new user form

Managing Existing Users

Restrict Payments

The Owner of the account has the ability to restrict certain admins payments right. This will disable the ability to purchase drawing credits & additional services as well as the ability to spend drawing credits on new drawings or the renewal of existing drawings.

By default, all admin will have payment rights. When creating new admins, the owner of the account & admins with payment rights will have the choice to disable payment rights for the new admin they are creating. Any admin with restricted payment rights will only be able to add new admin with restrict payment rights.

- 1) Click  button next to the correct Admins name
- 2) Click  to apply this change

Change Password

Admins have the ability to change any users password.

- 1) Click  button next to the correct users name
- 2) Enter the new password* twice and click 

**Please note, passwords are case sensitive*

Edit

Admins have the ability to edit any users details at any point. For example, if any operative got a new email address you can update this through the desktop.

- 1) Click  button next to the correct users name
- 2) Update the information as required and click 

Drawing Access


Through User Management you have the ability to view all drawings a specific user has access to and remove their access from any drawings they no longer require*.

- 1) Click  button next to the correct users name
- 2) Next to each drawing there is a check-box to select the drawing(s) you wish to remove the users access from. Alternatively you can click  if you wish to remove access from all drawings
- 3) Once you have selected the correct drawings click 

**Please note, removing access to a drawing will not remove any data a user has added to that drawing. Users can be added and removed from drawings as many times as required.*

Make Admin

Any admin has the ability to upgrade an operative to become an admin. Upgrading an operative to an admin will give them full desktop access as well as the app.

- 1) Click  button next to the correct operatives name
- 2) Click  to apply this change in user type

Revoke Admin

The Owner of the account has the ability to downgrade an admin to become an operative. Downgrading an admin to an operative will remove their desktop access.

- 1) Click  button next to the correct admins name
- 2) Click  to apply this change in user type

Delete

Any admin has the ability to delete a user. Deleting a user WILL NOT delete any data they have added to the system and users can be restored at any point*.

- 1) Click  button next to the correct users name
- 2) Click  button to confirm this change

**Through the 'Recently Deleted' area you can restore any deleted users at any point.*

Generate Report

Any admin has the ability to generate a single user report through User Management. Click  button next to the correct users name and apply the required filters on the page that follows.

Sites / Buildings / Floors / Drawings

The above levelled site structure is how you will upload all drawings to your Bolster system. There are no limits within each level how many you can create. For example, you could create a site with 4 buildings, each building has 10 floors and each floor has 1 drawing uploaded.


Creating sites & uploading a drawing (single upload)

- 1) Click  Sites on the left-hand menu
- 2) Click  button and fill out the pop-up form with the site information and click  button
- 3) Fill out the buildings pop-up (location is an optional reference for your records) and click  button
- 4) Fill out the floors pop-up and click  button
- 5) Fill out the drawings pop-up, click  button and select the drawing from your device (.PDF or .JPG files only) and click  button

** Indicates a required field.*

Creating sites & uploading drawings (multiple uploads)


As you may have noticed, there is the option to add multiple buildings / floors / drawings at once through the pop-up boxes. This is a great option when adding multiple drawings to the system at once. The process for this differs slightly from the above.

- 1) Click  Sites on the left-hand menu
- 2) Click  button and fill out the pop-up form with the site information and click  button.
- 3) Fill out the buildings pop-up (location is an optional reference for your records) for the first building and click  button and fill-out the additional information. This button can be clicked as many times as required, if you add too many buildings use the  button to delete the relevant building input. Once complete click  button.

- 4) Now you have created multiple buildings the automated pop-up forms will stop as you need to determine which building you wish to add floors / drawings to. Click **View** button next to the correct building. Click **+ Add Floor** button and fill out the pop-up. Here you can add single or multiple floors, if multiple, click **+ Add Another Floor** button and fill out the additional information. This button can be clicked as many times as required, if you add too many floors use the  button to delete the relevant floor input. Once complete click **Submit** button.
- 5) If you have only added one floor in the previous step, follow the guidance as outlined above to upload the drawing for the relevant floor through the automated pop-up. If you have added multiple floors click **View** button next to the correct floor. Click **+ Add Drawing** button and fill out the drawings pop-up, click **Browse** button and select the drawing from your device (.PDF or .JPG files only). if you need to upload multiple drawings to a floor click **+ Add Another Drawing** button and fill-out the additional information. this button can be clicked as many times as required, if you add too many drawing use the  button to delete the relevant drawing input. once complete click the **Submit** button
- 6) Once you have successfully uploaded a drawing for a specific floor, use the **<< Back** button to return to the required level and follow the process to upload drawings for the outstanding buildings / floors. alternatively, the / separated site structure that can be found at the top of the page are direct links to take you to the relevant level.

Sites / Demo site name / Building 1 / Floor 1 / Drawing 1

*** Indicates a required field**

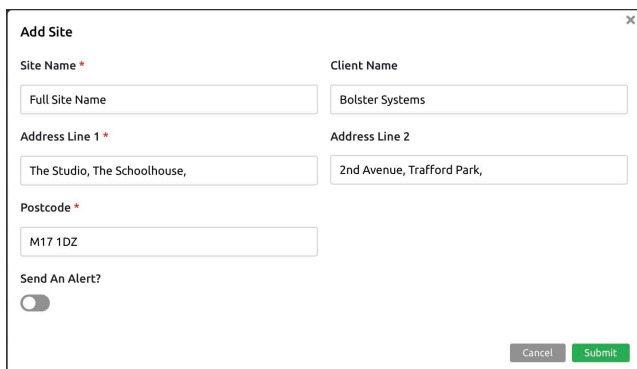

Add Site

Site Name * Client Name


Address Line 1 * Address Line 2

Postcode *

Send An Alert? ☐

Cancel **Submit**

Add new site form

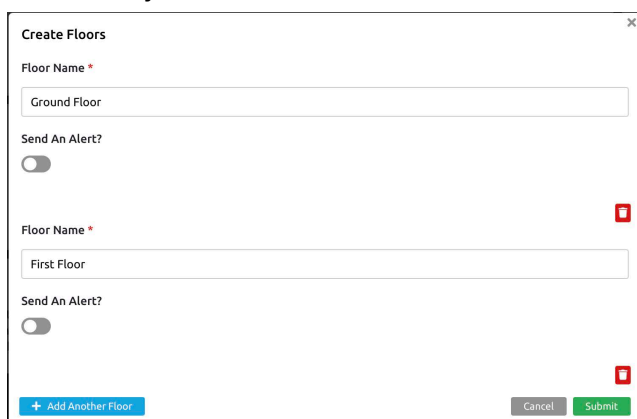

Create Floors

Floor Name *


Send An Alert? ☐

Floor Name *

Send An Alert? ☐

+ Add Another Floor **Cancel** **Submit**

Add new floor form

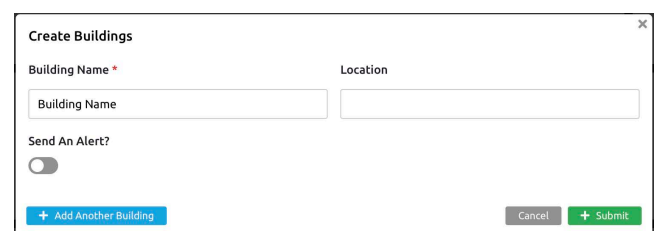


Create Buildings

Building Name * Location

Send An Alert? ☐

+ Add Another Building **Cancel** **Submit**

Add new building form

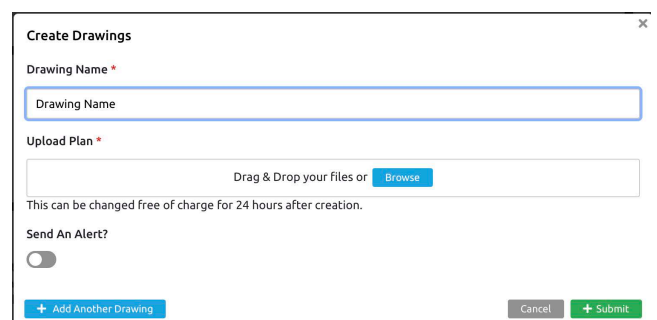

Create Drawings

Drawing Name *

Upload Plan *

This can be changed free of charge for 24 hours after creation.

Send An Alert? ☐

+ Add Another Drawing **Cancel** **Submit**

Add new drawing form

One you have created a site you can revisit at any time to add more levels within that site or edit/update the information you have previously submitted.

Site Navigation

You can navigate through your sites by clicking the **View** button until you have reached the correct level. A quicker way of navigating is to use the collapsible 'tree' structure by clicking **>** button to collapse the level and then clicking **View** button just the once at the correct level!

▼ Demo site name	24/03/2020	Bolster Systems Ltd		Bolster Systems Ltd (Owner)		View
Building name	Created on	Permissions				Action
▼ Building 1	24/03/2020	Bolster Systems Ltd (Owner)				View
Floor name	Created on	Permissions				Action
▼ Floor 1	24/03/2020	Bolster Systems Ltd (Owner)				View
Drawing name	Created on	Last updated	Expires	Permissions		Action
Drawing 1	24/03/2020	24/03/2020 - 16:08	24/03/2021 - 16:08	Bolster Systems Ltd (Owner)		View

Site 'tree' structure

Edit (Site / Building / Floor)

- 1) Navigate to the correct level
- 2) Click **Edit** button
- 3) Update the information as required and click **Confirm** button

Edit (Drawing)

The process of editing/updating a drawing differs dependent on the time after the drawing was first uploaded and if pins have been dropped on the drawing. You have a 24 hour window to edit a drawing without being charged another drawing credit. After 24 hours, contact Bolster Systems.

If you have no pins dropped on the drawing there is no risk in updating the drawing. If you have pins already dropped and the drawing and receive and updated version to replace, contact Bolster Systems to discuss best practice to ensure the pins stay in the same position.

- 1) Navigate to the correct drawing
- 2) Click **Edit** button
- 3) Click **Browse** button and select the new drawing from your device
- 4) Click **Update** button to confirm this change

Through the edit section on a drawing you also have the ability to download the current drawing that has been uploaded. Simply click **Download Current Floorplan**. This will then go to your devices download folder.

Delete

- 1) Navigate to the correct level
- 2) Click  Delete ( Delete Drawing at drawing level) button
- 3) Click  Delete button to confirm this change


Archive

You can archive sites / buildings / floors / drawings once works have been completed. Archiving is a great tool to use to keep your sites list tidy, especially over time when you have several projects uploaded to the system. Archiving sites will not remove any data that has been added to them and they can be un-archived at any point should you need to revisit.


- 1) Navigate to the correct level
- 2) Click  Archive button
- 3) Click  Archive button to confirm this change

Sort/Filter sites

You can sort and filter sites a number of different ways to display them an order that best suits your company. See below the sort and filter options available.

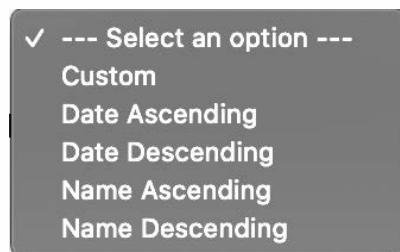

Sort by options

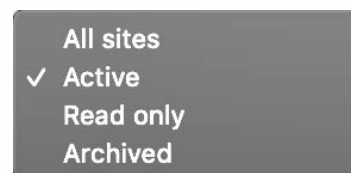

Filter by options

'Custom' sort allows you to drag and drop the sites in a bespoke order of your choosing.

Drawing expiry

Drawings are active through the system for 12 months. After 12 months the drawings turn to read only. Once read only, you can still generate reports on the drawing but cannot add further data. If you require to add further data after 12 months please contact Bolster Systems.

Search sites


At the top of the sites list there is a search bar to search by site name. Simply start typing and the results will auto-complete to return the relevant site(s).

A screenshot of a search bar with a magnifying glass icon on the left and the placeholder text 'Search by site name...'.

Attach Operative

Once you have your sites / buildings / floors / drawings set up, you will need to attach user(s) who require access to them. Again, this can be done at any level. The higher up the site structure you add them, the more they will gain access to. For example, if you have created a site with 2 buildings, each building has 5 floors and each floor has 1 drawing, adding them at site level will attach them to all 10 drawings in one process. If users only require access to specific drawings within a site, navigate to the correct drawing and attach them to the individual drawings.

- 1) Navigate to the correct level
- 2) Towards the bottom of each level you will find an 'Attach Operative' box. click  button.
- 3) Select the user(s) you wish to attach from the drop down list. this list is ordered by when the user has been created through the system date ascending. There is also a search bar that will auto-complete once you start typing a users name or email address. If you select a user by mistake click  to deselect them
- 4) Select the service(s) the user(s) require access to by switching the toggle on 
- 5) Click  button

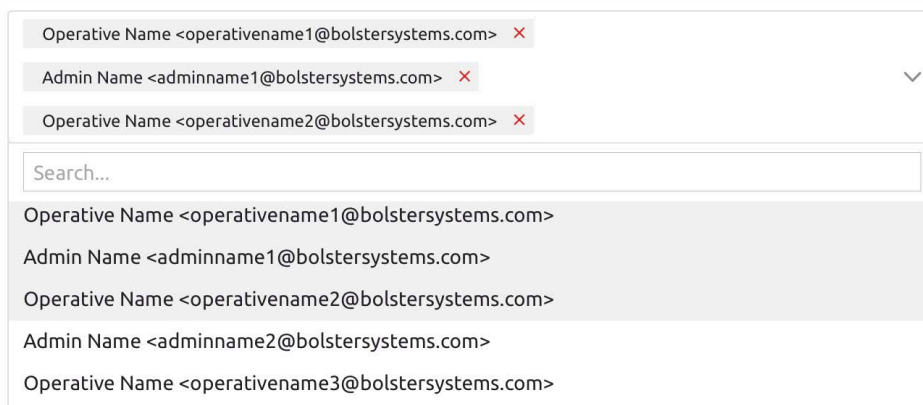

The screenshot shows a dropdown menu for selecting users. At the top, there are three entries: 'Operative Name <operativename1@bolstersystems.com>' with a red 'X' icon, 'Admin Name <adminname1@bolstersystems.com>' with a red 'X' icon, and 'Operative Name <operativename2@bolstersystems.com>' with a red 'X' icon. Below these is a search bar labeled 'Search...'. Under the search bar, there is a list of users: 'Operative Name <operativename1@bolstersystems.com>', 'Admin Name <adminname1@bolstersystems.com>', 'Operative Name <operativename2@bolstersystems.com>', 'Admin Name <adminname2@bolstersystems.com>', and 'Operative Name <operativename3@bolstersystems.com>'.

Select user(s)

Service Types *

- ☒ Fire Stopping
- ☐ Windows
- ☐ Snagging

- ☐ Fire Doors
- ☐ Water Management
- ☐ Internal Walls

- ☐ Fire Dampers
- ☐ Electrical
- ☐ Health and Safety

Select Service(s)

Removing users from drawings

As previously discussed, through user management you can remove operatives from multiple drawings at once via from . Alternatively, you can remove users drawings at drawing level.

- 1) Navigate to the correct drawing
- 2) At the bottom of the page through 'Attach Operative' section click  button next to the correct user
- 3) Click  button to confirm this change

Edit Users Access

At drawing level you can also edit/update the service(s) users have access to for that drawing. For example, if you granted them access to Fire Stopping initially but at a later date they required access for Fire Doors you can do so.

- 1) Navigate to the correct drawing
- 2) At the bottom of the page through 'Attach Operative' section click  button next to the correct user
- 3) Toggle on  any new service(s) the user requires, toggle off  any service(s) they no longer require. At least one service will be required to be selected
- 4) Click  button

Client Access

A great feature of the Bolster system is free client access. Free client access does not use any of your 999 users you receive with your subscription and is completely unlimited. Free client access is designed to give your clients a read-only view of drawings you upload to keep up to date with the progress of the work. They will have no ability to add data, edit / change data or delete data. What they will be able to do is view pin locations, all pin data including images and generate reports. Clients will only receive access to the drawings you give them access to and nothing else. Just like attaching operatives, the higher up the site structure you add them, the more drawing access they will receive.

- 1) Navigate to the correct level
- 2) At the bottom of the page through 'Invite Client' click  button
- 3) Fill in the client details form
- 4) Toggle on  the relevant service(s) you need to grant clients access to
- 5) Click  button

** Indicates a required field*

Removing Clients Access

There are two methods of removing client access from an invited client. The first is through user management, the second is at individual drawing level.

Removing Clients Access (User Management)

- 1) Click **Client Access** on the left-hand menu
- 2) click **Remove Access** button next to the correct client and correct drawing they have been invited to
- 3) Click **Delete** button to confirm this change

Removing Clients Access (Drawing Level)

- 1) Navigate to the correct drawing
- 2) At the bottom of the page through 'Invite Client' click **Delete** button next to the correct client
- 3) Click **Delete** button to confirm this change

Company Permissions

Another great feature of the Bolster system is company permissions. Company permissions is designed to pass works between companies with an active subscription. Management companies can link sub-contractors to work on their drawings, survey companies can pass surveys carried out through the system to installation companies to document remedial works and main contractors can sign off works at completion. The idea behind company permissions is to ensure all stages of works on a site are documented through the same drawings to ensure transparency between building managers and sub-contractors.

Unlike client access, companies who are invited to drawings via company permissions have full ability to add, update and delete pins from drawings like they had uploaded the drawings to their own account. All information added to a drawing will be stamped with the user and company details to ensure full traceability.

Bolster Approved Company List

To invite companies to drawings you will need their 6-digit company code. As previously explored, through company settings each company can find their own 6-digit company code, but through the Bolster Approved Company list you can find all companies using the systems 6-digit code. Alongside your 6-digit code, the Bolster Approved Company list outputs your companies name, address, logo and services you have an active subscription to. The idea behind the list is to win companies work. It allows management companies to find contractors to tender works to as well as allowing contractors to find other contractors to work alongside.

Bolster Systems Ltd

Address

The Studio, The Schoolhouse,
2nd Avenue,
Trafford Park,
M17 1DZ

Telephone

Not provided

Code

058059

Services

Electrical, Fire Dampers, Fire Doors, Fire
Stopping, Health and Safety, Internal Walls,
Snagging, Water Management, Windows



A company's profile as displayed through the Bolster Approved Companies list

Inviting a Company

Just like attaching operatives and inviting clients, the higher up the site structure you invite a company, the more access they will receive.

- 1) Navigate to the correct level
- 2) At the bottom of the page through 'Company Permissions' click **+ Invite** button
- 3) Fill in the form by entering the 6-digit company code, toggle on ☒ the correct service(s) the company needs permission to* and set the template usage rule**
- 4) Click **+ Invite Company** button

***Both companies will require an active subscription to the service(s)**

****Bolster Systems allows companies to outline bespoke templates for their account.**

Use any - use any template the two companies have

Use only owner company - use only the templates from the company who owns the drawing

Use only own - each company can only use their own bespoke templates

Company Details

Please be aware that adding a company that already has permissions within this site may end their current access until they accept this new invitation.

Enter The Company Code *

123456

Service Types *

☒ Fire Stopping

☐ Windows

☐ Snagging

☐ Fire Doors

☐ Water Management

☐ Internal Walls

☐ Fire Dampers

☐ Electrical

☐ Health and Safety

Set Template Usage Rule *

Use Any

Cancel

+ Invite Company

Invite company form

Accepting a Company Permissions Invite

Once you have been invited to drawings from a company you will need to accept the invite before the drawings appear through your sites list.

- 1) Within the top header bar of the desktop, click the pending requests  button.
When you have a pending permission invite this will be signified like so 
- 2) Within Pending Invites click  button
- 3) Click  to confirm this change
- 4) The drawings will now be available through your sites list

Declining a Company Permissions Invite

If you receive a company permissions invite you do not recognise or no longer require you can decline the invite.

- 1) Within the top header bar of the desktop, click the pending requests  button
When you have a pending permission invite this will be signified like so 
- 2) Within Pending Invites click  button
- 3) Click  to confirm this change

Pending Invites

Date	Site name	Service	From	To	Action(s)
26/03/2020	Demo site name	Fire Stopping	Bolster Systems Ltd	Company Name LTD	 

Pending invites area

Removing a Companies Permission

You can remove a companies permission from a drawing at any time. When you remove a companies permission, their access to the drawing will turn to read only showing ONLY the data they have added to the drawing from the period of time they had access and nothing else. Once removed they will have no ability to add, edit / update or remove any data.

- 1) Navigate to the correct level you granted permission
- 2) At the bottom of the page through 'Company Permissions' click  button next to the correct company and service
- 3) Click  button to confirm this change

Company Permissions	 Invite
Name	Actions
Bolster Systems Ltd	(Owner)
Company Name LTD	
> Fire Stopping	

Company Permissions area

Updating existing Company Permissions

You can add permissions for further services to companies you have previously invited at any point.

- 1) Navigate to the correct level you granted permission
- 2) At the bottom of the page through 'Company Permissions' click  button next to the correct company
- 3) Toggle on  the additional service(s) you wish to grant permission for
- 4) Click  button to confirm this change

Documents

Through the Bolster system you can upload all on site required documentation to ensure all operatives on site comply with regulations. Documents can be uploaded at any level of the site structure (site / building / floor / drawing) and they are completely unlimited. Whichever level you upload the documents is the level you will be able to access them through the app. Documents can be uploaded as a .PDF or .JPG file.

There are 3 types of documents: Read Only, Requires Agreement (once), Requires Agreement (multiple). Below we will explore in more detail the different usage of each type of document and how to upload them through the desktop.

View Only

View only documents allow users to view documents through the application. View only documents are perfect for any certification, permits or data sheets.

- 1) Navigate to the correct level
- 2) Through the 'Documents' area (top-right of page at site / building / floor level, bottom of the page at drawing level) click  button
select  View only as the document type, name the document, click  button
- 3) Select the document from your files, set a start date & optional end date*
and toggle on  the service(s) the document is relevant to
- 4) Click  button

* Indicates a required field

* Setting an end date will remove the document after this date. for example, if a document is only valid for 3 days, set the end date to reflect that

Require Agreement (once)

Require agreement (once) allow you to set documents that will force users on site to agree to the document once in some capacity before they can progress to the drawings. Require agreement (once) documents are perfect for any method statements, RAM's etc.

- 1) Navigate to the correct level
- 2) Through the 'Documents' area (top-right of page at site / building / floor level, bottom of the page at drawing level) click  button
- 3) Select  Requires agreement (once) the document type, name the document, click  button and select the document from your files, set a start date & optional end date* and toggle on  the service(s) the document is relevant to
- 4) Toggle on  the required agreement options**
- 5) Click  button

* Indicates a required field

* Setting an end date will remove the document after this date. for example, if a document is only valid for 3 days, set the end date to reflect that

**Requires photo - make users take a photo before they can progress

Requires file view - make the user open and read the document before they can progress

Requires signature - make users digitally sign their agreement to the document before they can progress

Force upsync to continue - make users upsync their agreement to the document before they can progress

Require Agreement (multiple)

Require agreement (multiple) allow you to set documents that will force users on site to agree to the document on multiple different days in some capacity before they can progress to the drawings. Require agreement (multiple) documents are perfect for any method statements, RAM's, safe starts / health and safety checks.

- 1) Navigate to the correct level
- 2) Through the 'Documents' area (top-right of page at site / building / floor level, bottom of the page at drawing level) click  button
- 3) Select  Requires agreement (multiple) as the document type, name the document, click  button and select the document from your files, set a start date & optional end date* and toggle on  the service(s) the document is relevant to
- 4) Toggle on  the required agreement options**
- 5) Set the Agreeance frequency (days) ***
- 6) Click  button

* Indicates a required field

* Setting an end date will remove the document after this date. for example, if a document is only valid for 3 days, set the end date to reflect that

**Requires photo - make users take a photo before they can progress

Requires file view - make the user open and read the document before they can progress

Requires signature - make users digitally sign their agreement to the document before they can progress

Force upsync to continue - make users upsync their agreement to the document before they can progress

***Agreement frequency (days) determines how regularly users have to agree to a document. If everyday set the frequency to 1, if weekly set the frequency to 7 etc.

Document Details

Documents will be available for operatives to view on the mobile app. An attached document will appear to operatives with access to this location, once they have downsynced. If an operative is required to respond to the document before proceeding, select 'Requires agreement'. Additionally, if an operative is required to respond periodically, select the multiple option and you will be able to specify a frequency.

Document Type *

☒ View only ☐ Requires agreement (once) ☐ Requires agreement (multiple)

Name Of Document *

Upload PDF Or Image *

Drag & Drop your files or [Browse](#)

Dates Available *

to

Service Types *

☐ Fire Stopping

☐ Windows

☐ Snagging

☐ Fire Doors

☐ Water Management

☐ Internal Walls

☐ Fire Dampers

☐ Electrical

☐ Health and Safety

[Cancel](#)

[+ Attach Document](#)

View only document form

Document Details

Documents will be available for operatives to view on the mobile app. An attached document will appear to operatives with access to this location, once they have downsynced. If an operative is required to respond to the document before proceeding, select 'Requires agreement'. Additionally, if an operative is required to respond periodically, select the multiple option and you will be able to specify a frequency.

Document Type *

☐ View only ☒ Requires agreement (once) ☐ Requires agreement (multiple)

Name Of Document *

Upload PDF Or Image *

Drag & Drop your files or [Browse](#)

Dates Available *

to

Service Types *

☐ Fire Stopping

☐ Windows

☐ Snagging

Options

☐ Requires photo

☐ Force upsync to continue

☐ Fire Doors

☐ Water Management

☐ Internal Walls

☐ Requires file view

☐ Fire Dampers

☐ Electrical

☐ Health and Safety

☐ Requires signature

[Cancel](#)

[+ Attach Document](#)

Requires agreement (once) document form

Document Details

Documents will be available for operatives to view on the mobile app. An attached document will appear to operatives with access to this location, once they have downsynced. If an operative is required to respond to the document before proceeding, select 'Requires agreement'. Additionally, if an operative is required to respond periodically, select the multiple option and you will be able to specify a frequency.

Document Type *

☐ View only ☐ Requires agreement (once) ☒ Requires agreement (multiple)

Name Of Document *

Upload PDF Or Image *

Drag & Drop your files or

[Browse](#)

Dates Available *

Start date

to

End date (optional)

Service Types *

☐ Fire Stopping

☐ Fire Doors

☐ Fire Dampers

☐ Windows

☐ Water Management

☐ Electrical

☐ Snagging

☐ Internal Walls

☐ Health and Safety

Options

☐ Requires photo

☐ Requires file view

☐ Requires signature

☐ Force upsync to continue

Agreement Frequency (Days)

[Cancel](#)

[+ Attach Document](#)

Requires agreement (multiple) document form


Downloading & Logging in to the App

The Bolster Systems application is free to download on iOS & Android devices from the Apple App Store & Google Play Store. There are a few minimum device specifications required to ensure the Bolster Systems app will work on your device. Please request this from Bolster Systems directly. Below are direct links to the relevant store to download the Bolster Systems app.




Allow Camera & Camera Roll Access

To allow operatives to take photos through the Bolster Systems app, you will have to allow the app access to your camera & camera roll. Simply click 'allow' on the two pop-up notifications that will appear the first time you open the app. If you do not allow access, users will not be able to take photos through the app and subsequently submit pins.

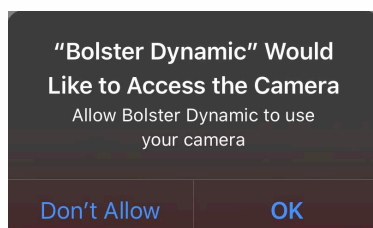

Allow camera access alert

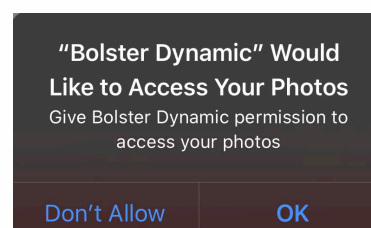

Allow camera roll access alert

Logging in to the App

Once you have downloaded the app for the first time you will be able to log in using the user credentials created through the desktop.

- 1) Open the Bolster Systems app  on your device
- 2) Enter your email & password* as set up through the system
- 3) Click  button

**Passwords are case sensitive*

Log in Error Messages

Logging in to the app could return a few easy to resolve error messages. Below we will explain the reason and solution behind every potential error message.

Required Field

This is a required field.

Both the email and password are a required field to log in to the the app. Ensure you have entered both before trying to log in.

Invalid Email

This is an invalid email.

If you enter an invalid email address through the app the attached error message will be returned. The most common reason for the above message is if a user has missed off the domain (.com, .co.uk, .net etc) to the end of their email. Another reason could be the user has added a space to the beginning or end of the email. Android devices sometimes automatically add spaces to the end of a string of text once you hit return / submit.

Invalid Credentials

Invalid credentials provided.

If you enter an invalid password through the app the attached error message will be returned. Ensure you type the password correctly, remembering passwords are case sensitive. Android devices usually capitalise the first letter of each string of text so ensure this is changed if required. As above, Android devices sometimes automatically add spaces to the end of a string of text once you hit return / submit. If a user has forgotten their password, through the desktop any admin can reset it for them.

Linked to another device

Josephbramwell@bolstersystems...

Users can only be logged in to one device at one time through their login credentials. If a user receives the attached error message any admin can unlink their device via the desktop area.

You are currently linked to another device. Please ask your company admin to unlink your device.

Linked to another device



You're not currently attached to any drawings, please contact your company admin to proceed.


The application can only be used for the documentation of works through drawings. Therefore, if a user has not been attached to any drawings they will not be able to log in to the app. If a user receives the attached error message any admin can attach a user to drawings via the desktop. Once attached, close the app and log back in.

Select a company

If you are only working through your companies drawing you can skip this step as once you log in it will take you directly through to the app dashboard.

As explored above, through company permissions you can be invited to work on other companies drawings and vice versa. If you have been invited you will have to select which companies drawings you are working on. You will have to select the company who OWNS the drawings.

- 1) Log in to the app
- 2) Click the correct company (drawing owner)

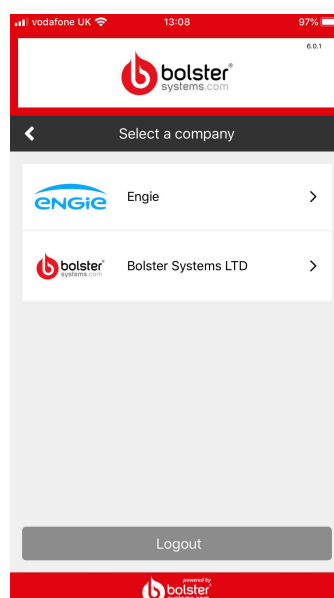


Select a company page

The app dashboard



Once a user has successfully logged in they will go through to the app dashboard. Here they can navigate to all areas of the app. Take a look below at the layout, we will now look at all areas in more detail.

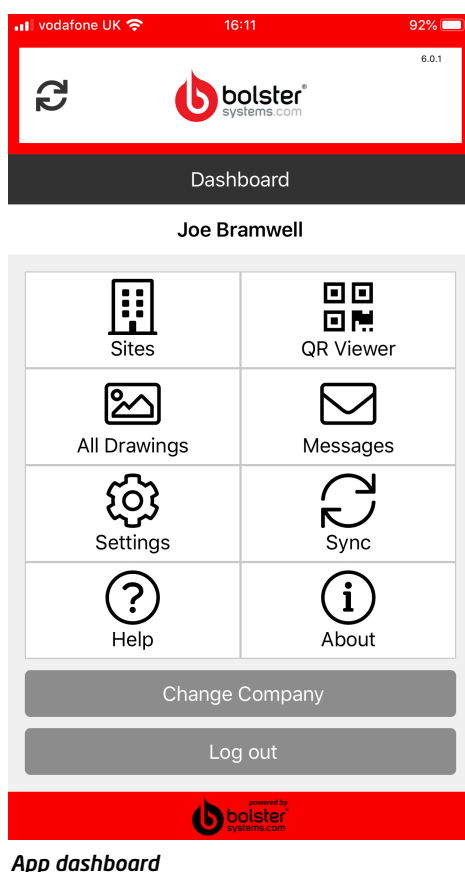


App dashboard

Syncing






The Application can work offline with just two times you will require an internet connection; down-syncing & up-syncing. Down-syncing will bring any new data a user has been linked to down from the cloud to their device. This includes any drawings, documents, new pin data from other users or changes to templates. Pin data added by a user is then stored locally on their device until they up-sync which will move the data to the cloud to be accessed from the app & desktop. This process is fundamental in ensuring all data of works being carried out is up to date. The desktop will not see pin data dropped by users on their mobile devices until they have up-synced.

Down-syncing



- 1) Click the  button top-left of the app (or right-hand side of the app dashboard). The number in green signifies we have data to down-sync
- 2) Click  button. the orange button & number in () signifies we have data to down-sync




3) The sync will now run through the pin data and tilesets (drawings) to download

4) Once complete click  button

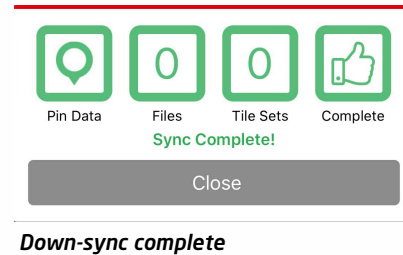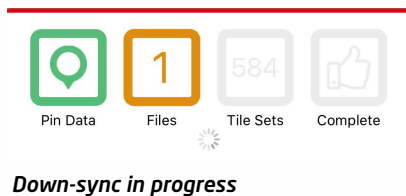

Up-syncing

- 1) Click the  button top-left of the app (or right-hand side of the app dashboard). The number in green signifies we have data to up-sync
- 2) Click  button. The orange button and numbers in () signifies we have data to up-sync
- 3) Up-syncing will first check for any internal updates for the app and then run through pin data and images. If available, the app will update after the up-sync
- 4) Once complete click  button

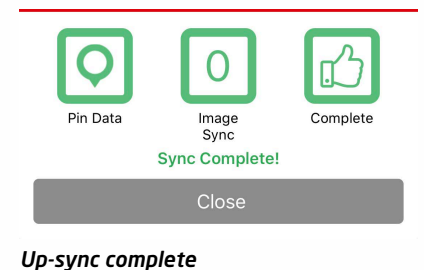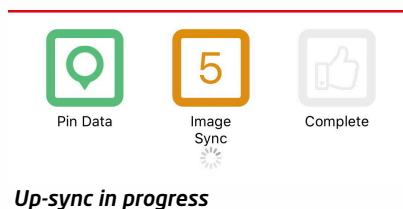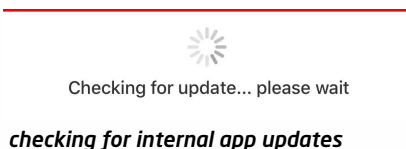

When down-syncing or up-syncing you need to ensure you stay in the app and leave the device unlocked. If you leave the app or the device locks the sync will pause and only resume once back in the app.

Settings


Through settings you can enable auto-sync, check for any internal updates (up-syncing will manually do this) and configure the bluetooth printers.

Auto-sync

Auto-sync will check every 30 minutes for any new data to up-sync. This will only work if connected to wifi or mobile data. To enable auto-sync simply toggle it on .

Check for updates

Up-syncing data will check for and execute any internal app updates available. You can however check through settings for updates.

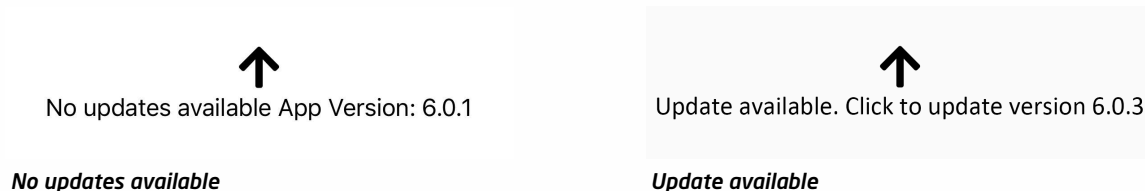


If an update is available

- 1) Click the update available button
- 2) Click **Confirm** button on the following pop-up
- 3) Allow the update to complete

Printer manager


The Bolster System has been developed to work with Zebra ZQ620 or QLn320 Bluetooth printers & custom labels. If you would like more information on printers and labels please contact Bolster Systems directly who will assist. Below outlines how to connect the printer to the device and configure with the app. Please note, printers can only be connected to one device at a time.

- 1) On your device through general settings, connect the printer via Bluetooth. The printer's name can be found on the bar code on the bottom of the printer XXZKJ184105822 Connected ⓘ
- 2) Within the Bolster app go to Settings > Printer manager
- 3) Select the printer from the printers list ☒ XXZKJ184105822
- 4) Select the correct size of labels you are using ☒ 72mm x 72mm ☐ 72mm x 32mm
- 5) Click **Setup config** button to align the labels. This should print out two blank labels
- 6) Click **Test** button to ensure the text is printing in the correct locations on the label

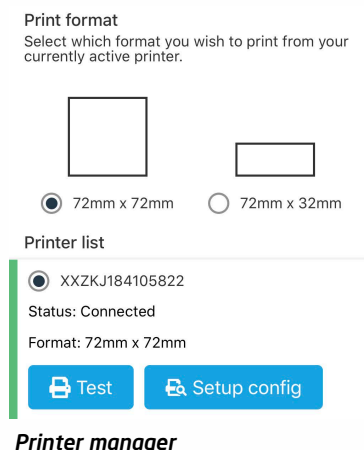

Help

The help page offers useful links to contact Bolster Systems should you require assistance. There you can find links to the desktop version, our support email and office number.

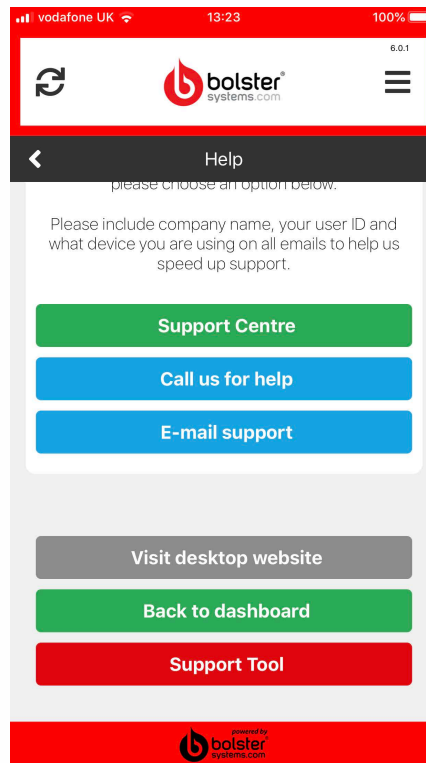

Help page

About

The about page will tell users the app version number they are working on. This number is also displayed in the top-right corner of the app. This helps us diagnose any issues or bugs.

All Content Copyright Bolster Systems Ltd
App Version: 6.0.1

Close

About app message

Messages


Through the messages area on the app operatives can view all operative messages they have received; an inbox.

Sites




Through Sites users can navigate to drawings they have been granted access to through the Sites / Buildings / Floors / Drawings structure.


- 1) Click  from the app dashboard
- 2) Click the correct site
- 3) Click the correct building
- 4) Click the correct floor
- 5) Click the correct drawing

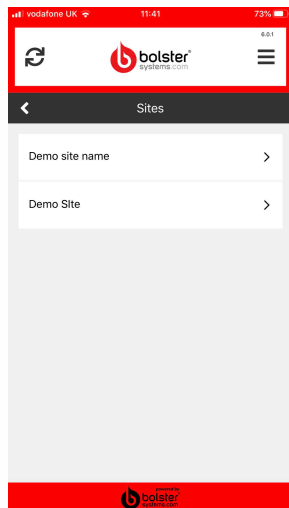


List of sites

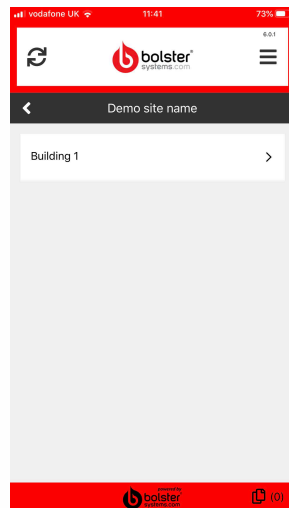

List of buildings

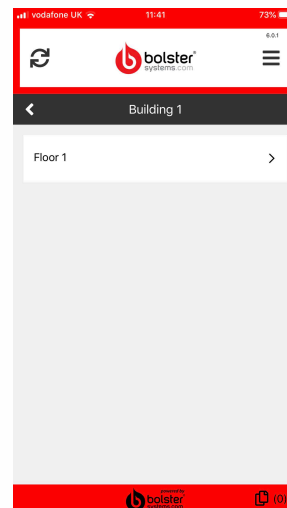

List of floors

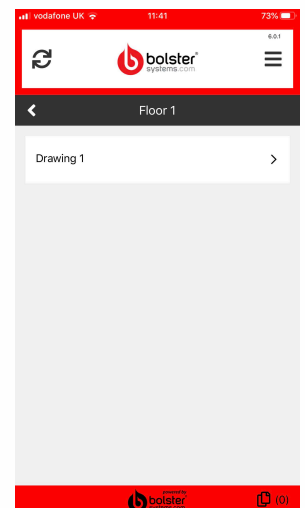

List of drawings

All Drawings




An alternate method of navigation to the correct drawing is through the All Drawings area. Here sites are listed out using the Site / Building / Floor / Drawing structure and can be clicked directly to reduce the steps of the process above.

- 1) Click  from the app dashboard
- 2) Click the correct drawing

Removing drawings from device

Through the All Drawings area of the app, users can also remove their access to drawings they have completed works on. Please ensure the user has successfully up-synced before removing access from drawings.


- 1) Select the drawing(s) you wish to remove from your phone
- 2) Click  button
- 3) Click  button on the following pop-up
- 4) Click  button on the following pop-up

Demo Site > Main > Ground > D1 Test > 


5) You will now need to up-sync data to confirm the change. click  button

6) Click  button and allow the sync to complete


7) Click  button once complete

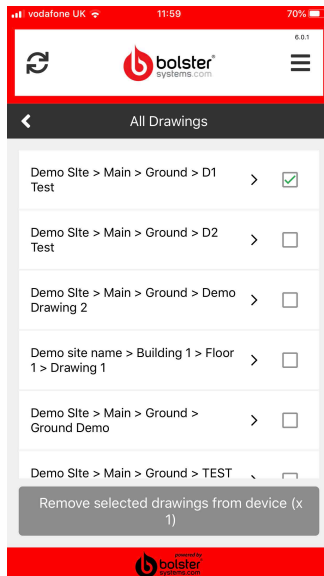

All drawings list

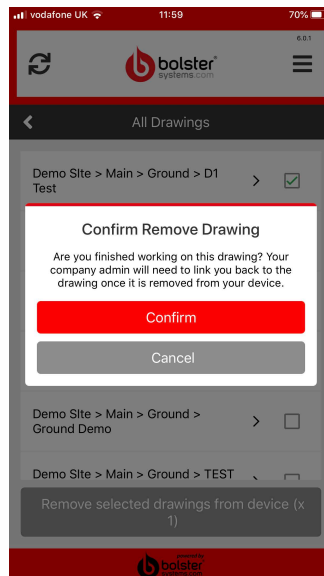

Confirmation of removal

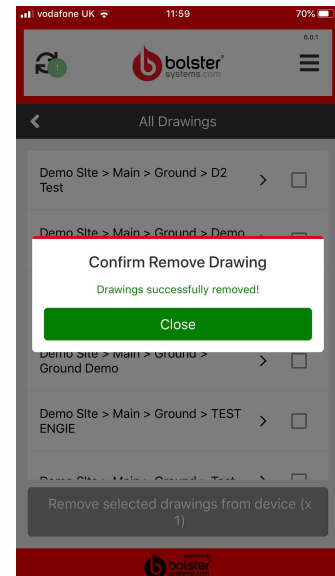

Confirmation of removal 2


Returning to App Dashboard

Wherever you are on the app, clicking  button which can be found top right of the app will return a user to the app dashboard.

Requires Agreement Documents - App

If company admin have uploaded requires agreement documents to any site / building / floor / drawing a user has been granted access to, they will not be able to progress until they have agreed to the document.

- 1) Navigate through to the correct drawing
- 2) Agree to the document as required (view document, take a photo, sign agreeance)
- 3) Click  button
- 4) You may have to up-sync data if set as a requirement from company admin

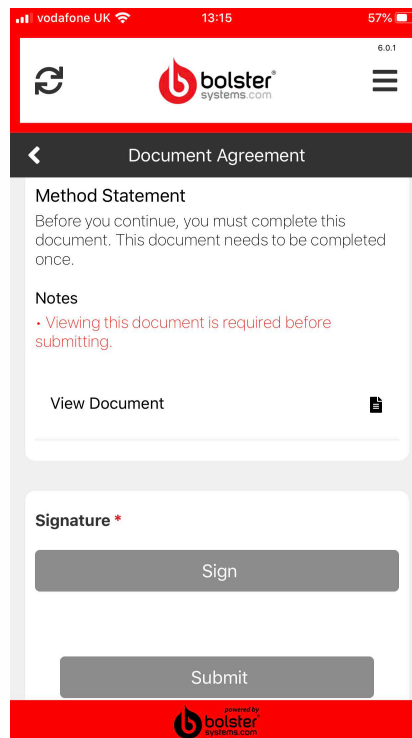

Requires agreement document


Adding Pins & Pin Histories

Once a user has successfully navigated to the correct drawing they are working on they can start adding pins and pin histories. The idea of Bolster Systems is for each issue / defect / asset within a building will have its own pin with multiple pin histories to show each stage of works associated to that pin. Lets take Fire Stopping as an example, History 1 of a pin could be the initial survey signifying a penetration that requires sealing. History 2 will document the install carried out and History 3 will document the sign off of the work. There is no limit to how many histories you can add to each pin and no limit to how many pins you can add to a drawing.


Adding a pin (1st history)

- 1) Navigate to the correct drawing
- 2) Ensure you are in  mode (this is the default mode when you open a drawing)
- 3) Touch the screen in the correct location on the drawing to drop a pin. use your fingers or the  buttons top left to zoom in on the drawing
- 4) Once happy with the pin location click  button in the bottom right of the screen
- 5) Select the correct service and template from the drop down lists
- 6) Fill in the template with the relevant information and correct photos where required *
- 7) Click  or  button (dependent on your companies use of the Bluetooth printers & custom labels)
- 8) Click  button once complete


* Signifies a required field

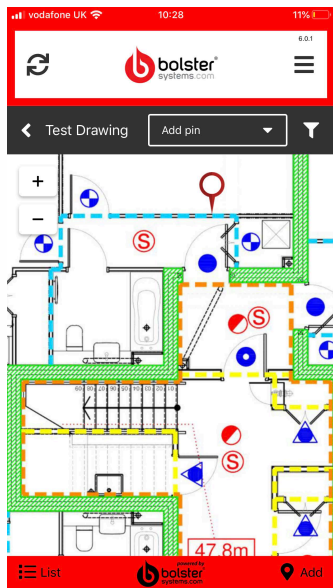


Drop pin location on drawing

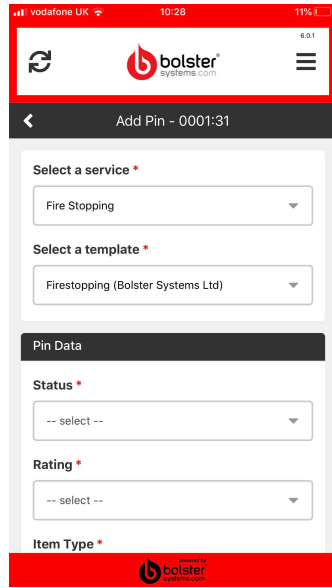

Select correct service & template

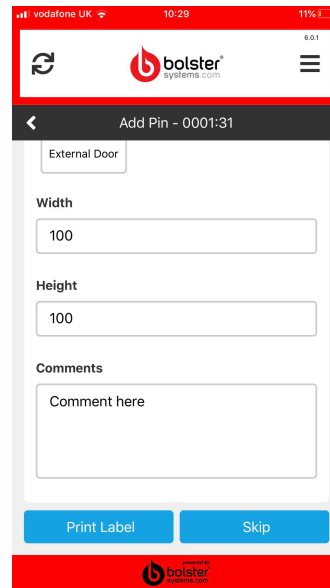

Print or skip label

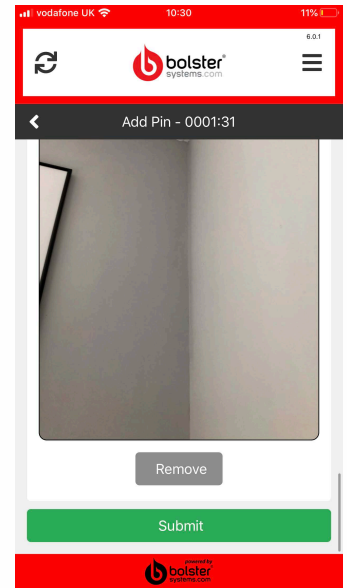

Submit

Pin numbering

As you can see above, each pin has a unique number to the drawing it is dropped on. The pin number is made up of two numbers; **number of pin dropped on drawing in ascending order : user ID**. Each user will begin at 0001 on each drawing. Their user ID is determined by when they was created as a user through the system. As per the annual subscription, each company has 999 available users. The first user will have User ID of 01 and so on.

So the above pin ID of 0001:31 means it is the first pin user 31 has dropped on this drawing.


Adding pin histories

As explained above, each pin can have unlimited pin histories to document the different stages of work associated to that issue / defect / asset. This process ensures all relevant information is stored in one, easy to follow place.

1) The first step is to open the correct pin we need to add a history to. We have to processes to do this: **Pin view** or **List view**.

a) To access pins via **List view** click:  button bottom left of the screen. This area lists all pins on the drawing in ascending order. Find and click the correct pin number from the list  0001:31. There is also a search function through **List view** Search by ID:

b) To access pins via **Pin view** release the drop down at the top of the drawing  and change to **Pin view**. Once in **Pin view** simply click on the correct pin through the drawing page 

2) once you have navigated to the correct pin via your preferred method you will see the latest pin history information for that pin. Scroll to the bottom and click  button


- 3) You will now be taken through to the template pre-filled as per the information from the previous history. Update the information where required. You can change template when adding a new history if required. All pin data that is the same through both templates will also pre-fill if you change template.
- 4) Once you have updated the information, taken the required photos and print or skipped label, click  button to add the pin history.
- 5) The information now submitted will not overwrite any histories previously added. Through the app users will always see the latest pin history to ensure they are working against the latest records on site.

Through the app, users only have the ability to add pin histories. Admin through the desktop have the ability to edit pins should any of the information submitted be incorrect.


Changing pin location

Users through the app have the ability to change the location of a pin should they have incorrectly located initially.

- 1) Open the correct pin (via pin view or list view)
- 2) Click  button top right of the screen
- 3) Through the floor plan at the top of the page change the pin location by simply touching the screen in the new, correct location. A second pin will now appear to determine the new location
- 4) Once happy with the new pin location click  button

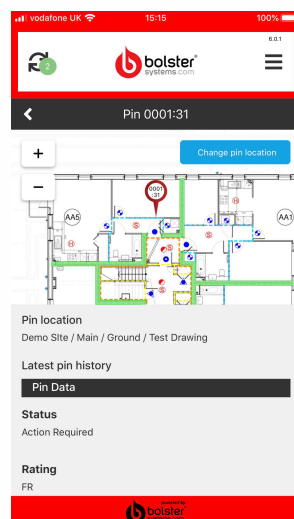

Existing pin location

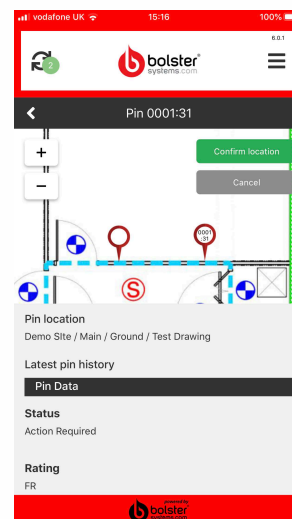


New pin location

Filters




Through a single drawing on the app, users have the ability to filter pins.

- 1) Navigate to the correct drawing
- 2) Click  button top right of the drawing
- 3) Select the required filters. You can filter by service, pin status or select to output the last updated pin. You can combine multiple filters and any filters you apply will also follow through to list view
- 4) Click  button once you have determined your filters
- 5) To remove filters simply click back in to the filters area  deselect the filters and click  button

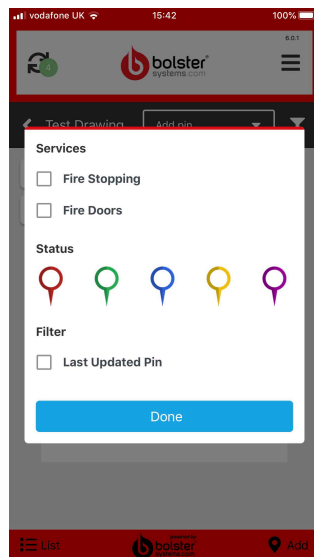

Filters unselected

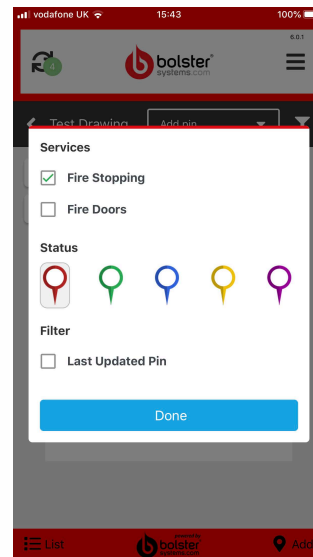

Filters selected

Documents




Above we have explored attaching documents via the desktop and requires agreement documents via the app, but we will look further in to documents and where to access them through the app.

Documents attached at site / building / floor level


- 1) Navigate to the correct level
- 2) Click  button bottom right corner
- 3) Click the correct document you wish to view
- 4) Use the  button to return back to documents to view any further document or return back to the correct level

Documents attached drawing level


- 1) Navigate to the correct drawing
- 2) Click **Add pin** drop down and select documents
- 3) Click the correct document you wish to view
- 4) Use the **<** button to return back to documents to view any further document or return back to the correct drawing. You can also navigate through the drop down back to Add pin

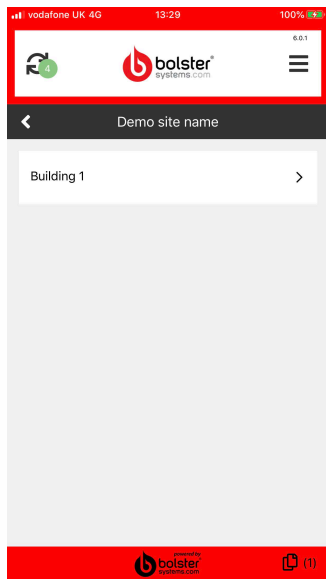


site / building / floor documents

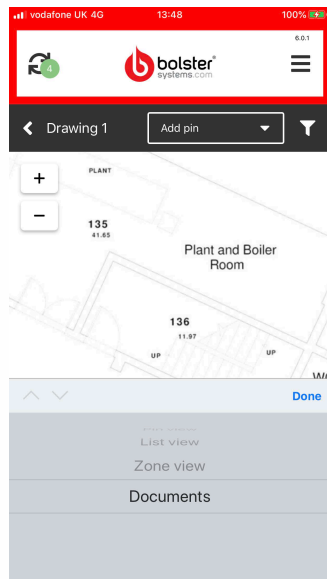

drawing documents

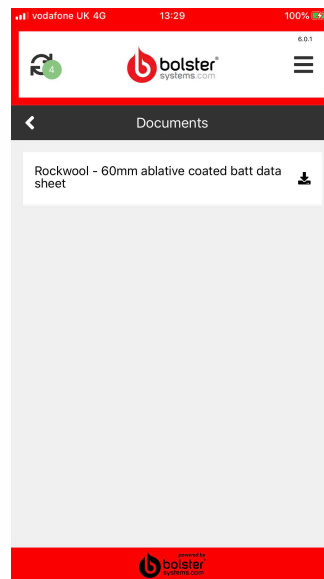

Documents list

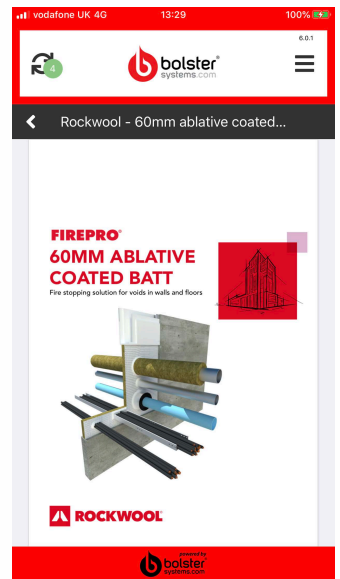

Viewing document


That now covers the app. We advise to ensure all users are always working through the latest version of the app. Up-syncing or checking through settings will enable users to update the app for any internal releases we make. If the app requires updating through the Apple App Store or Google Play Store, Bolster Systems will contact company admins to filter this through to all users within the company.

Bolster Systems would advise all users to up-sync data at the end of everyday once back at the office or home and to down-sync every morning to ensure data is up to date across all users within a company.

Desktop Dashboard



Now users have added data through the app and up-synced, we will be able to see this through the desktop dashboard. The desktop dashboard is designed to give you a general overview of data documented through the system. The default filters show the last 7 days, but you can span across any 30 day time frame. You can view data by users and data by drawings with the ability to generate reports directly from the dashboard.

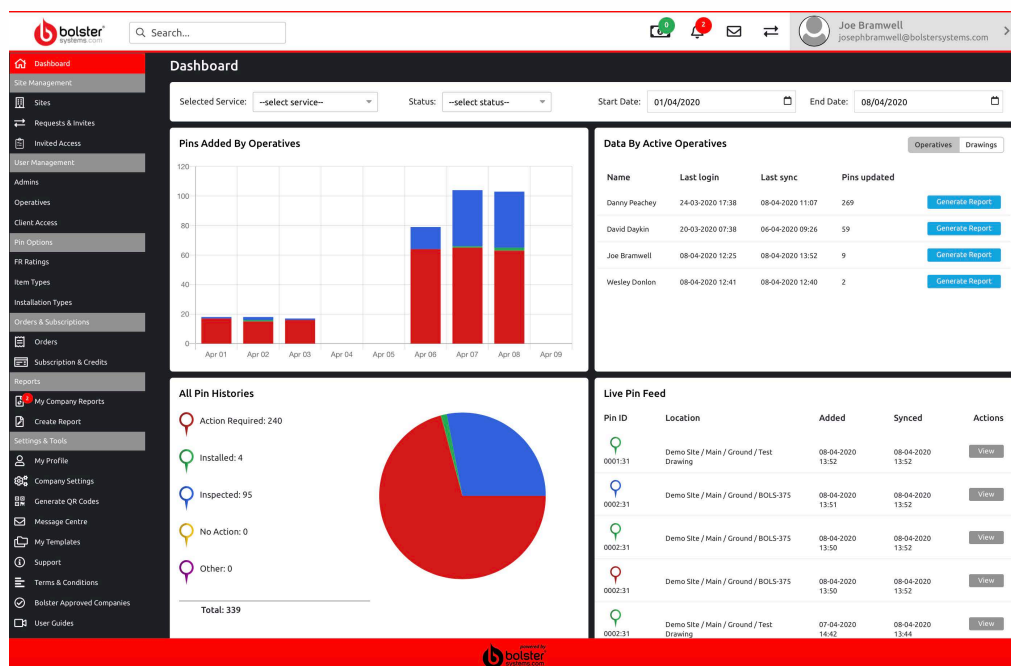

Desktop dashboard

The graph and pie chart show number of pin histories added by all operatives in the specified time frame. In the top right corner you can see a breakdown of number of pin histories added by each user and which drawings they have been added to. Simply toggle between **Operatives** **Drawings**. By clicking **Generate Report** button you will be able to generate reports for the single operative or drawing applying the filters set. Bottom right corner you can see the latest pin histories added. By clicking **View** button that will take you directly to single pin view for the selected pin.

Filtering data through the dashboard

Selected Service: --select service-- Status: --select status-- Start Date: 01/04/2020 End Date: 08/04/2020

Above shows the default filters applied through the desktop dashboard.

Selected service - will allow you to show all services you have an active subscription to our a single service

Status - will allow you to show all pin statuses or a specific status


Start date & end date - defaults to last 7 days. Can change the date range to any 30 day period

Viewing data through the desktop

Above we explored the desktop dashboard which offers a general overview of your companies data. To view specific data for individual jobs you can navigate through to a drawing and look in to works carried out in more detail.

Drawing Level

At drawing level you can view all data added to that drawing by users linked. You also have the ability to generate reports specific to that drawing.

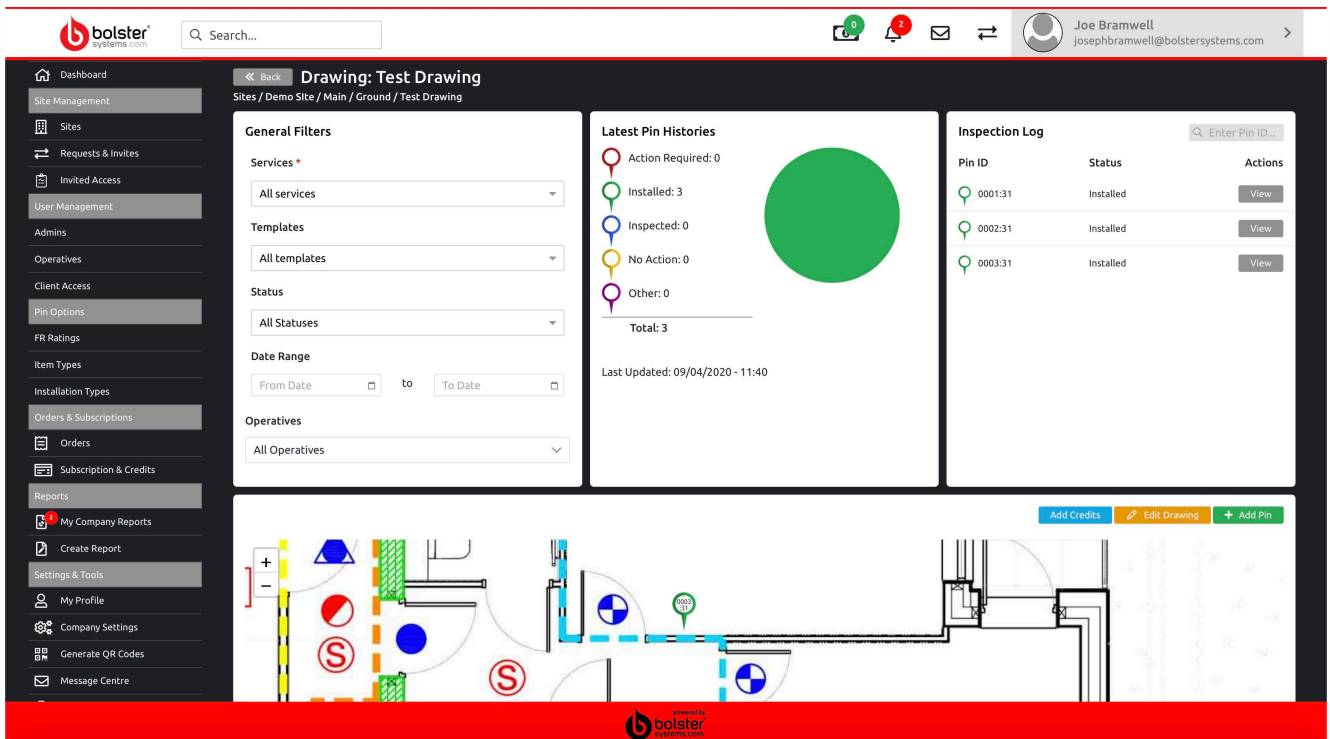

The screenshot displays the Bolster Systems desktop interface. The top header includes the Bolster logo, a search bar, and user information for Joe Bramwell. The left sidebar lists various navigation options. The main content area is titled 'Drawing: Test Drawing' and shows a 'General Filters' section with dropdowns for Services, Templates, Status, Date Range, and Operatives. To the right is a 'Latest Pin Histories' section with a pie chart showing 3 installed pins and 0 action required, inspected, or other pins. Further right is an 'Inspection Log' table with columns for Pin ID, Status, and Actions. The bottom section shows a technical drawing with various symbols and a red bar at the bottom with the Bolster logo.

Pin ID	Status	Actions
0001:31	Installed	View
0002:31	Installed	View
0003:31	Installed	View

Single drawing page

General filters, latest pin histories & inspection log

General filters are generally used when generating reports. But they can also be used to narrow down pins displayed on the drawing. The latest pin history pie chart and inspection log will alter dependent on filters applied also. Above are the default general filters that will be applied once you open a drawing. All data is dynamic to your company and that drawing. For example, templates will only allow a user to filter through templates used on that drawings to ensure you are only searching for data specific to that drawing. If we take a look below at general filters applied and how they have affected the pie chart and inspection log.

General Filters

Services *

Fire Stopping

Templates

Firestopping (Bolster Systems Ltd)

Status

All Statuses

Date Range

From Date to To Date

Operatives

Joe Bramwell - 31

Latest Pin Histories - filtered

- Action Required: 0
- Installed: 2
- Inspected: 0
- No Action: 0
- Other: 0

Total: 2

Last Updated: 09/04/2020 - 11:40

Inspection Log

Enter Pin ID...

Pin ID	Status	Actions
0001:31	Installed	View
0003:31	Installed	View

General filters applied

Single pin view

But what if we wanted to look at data for a specific pin? Through single pin view you can do exactly that. There are two ways to navigate to a single pin: through inspection log or clicking in to a pin through the drawing.

- 1) Click [View](#) button next to the correct pin on the inspection log or click on the drawing directly. If you know the pin number you can search directly through the inspection log

Enter Pin ID...

Once you have navigated through to a single pin you will be able to see all pin data and images for each history associated to that pin. Click an image will enlarge the image.

Pin 0003:31 (History 2 of 2 - Latest)

Type

Fire Stopping

Date added

09/04/2020 - 11:40

Added by

Joe Bramwell

Status

Installed

Last edited

N/A

Last edited by

N/A

Pin Data

Rating

FR

Item Type

Hole

Installation Type

Fire Batt, Mastic

Width

40

Height

40

Comments

Hole sealed using rockwool products

FR

30

Pin Photos

Photos




Edit This History

Delete Pin

Pin 0003:31 (History 1 of 2 - Earliest)

Type

Fire Stopping

Date added

09/04/2020 - 11:39

Added by

Joe Bramwell

Status

Action Required

Last edited

N/A

Last edited by

N/A

Pin Data

Rating

FR

Item Type

Hole

Width

40

Height

40

Comments

Hole requires sealing

FR

30

Pin Photos

Photos



Edit This History

Delete Pin

Single pin data

Through single pin view on the desktop you have the ability to make changes to the pin just like through the app.

Change Pin Location

- 1) Click  button
- 2) On the drawing with your mouse click the new location of the pin, a red pin will appear to signify this new location
- 3) Once happy click  button

Add Pin History

Through the desktop you can also add pin histories. The only difference between the desktop and app is through the desktop any images on the template will pre-fill like all pin data. You can also select images from your files instead of using the camera.

- 1) Click  button
- 2) The template and pin data from the previous history will pre-fill as normal. Update the information as required, you can change template at the top of the page.
- 3) If the template includes images they will pre-fill. click  button to remove any images and click  button to select new images from your device
- 4) Once happy click  button

Edit Pin History

Through the desktop there is an alternative option to 'edit' the pin. This option will only be available if the owner of the drawing (your company or other company if working through their drawings) have enabled edit of pins through company settings. Editing a pin will not add a new pin history, it will not change the date of the pin history and users will not be able to add or remove any new images. The idea of edit is to correct a spelling mistake or an incorrect input.

- 1) Click  button
- 2) Click  button in the following pop-up
- 3) Make the required changes to the pin data. note you cannot change the template or images here
- 4) Once happy click  button
- 5) Through the pin history it will now output last edited (date & time) & last edited by to ensure you have an audit trail of any changes made

Deleting a pin history

You can delete pin histories through single pin view. Deleting pins can only be done through the desktop and there is no ability to 'mass delete' pins to ensure this is not done by mistake.

- 1) Click  button on the correct pin history
- 2) Click  button on the following pop-up to confirm this change
- 3) If you wish to completely delete a pin you will have to follow this process for all pin histories

Any histories deleted can be restored should you have made a mistake.

Navigating through single pin view

You can navigate to other single pins by using the inspection log or clicking   buttons.

Generating reports

Through the desktop, admin can generate unlimited PDF, CSV & floor plan drawing reports. There are multiple ways to generate reports in multiple locations through the desktop. There are multiple different filter and output methods also. You can make the reports as general or specific as you need to. All data through filters outlined below is dynamic meaning you will only be able to filter by data that is present through the site / building / floor / drawings you are reporting on. Operatives for example, will only show the operatives who have added pins to ensure you are filtering by data that exists.

General filters

Services - the only required field when generating a report. Determines the service you wish to report on

Templates - can output pin data for all templates you may have used within a service or a specific one

Status - can report on all or a specific pin status

Date range - you can set a specific date range to report on works documented only within that time period

operatives - can report on all or a specific users work

Advanced filters

Number of histories - can output the latest, earliest or all pin histories

Individual pins - will allow you to select specific pins to include within a report

Pin selector - will allow you to draw an area on the drawing, any pins that fall within that area will be included and no other pins

Advanced - through advanced filters, any question on a template becomes a filter option. Lets take Fire stopping as an example, you could filter data by FR of 60 mins

Output Options

PDF - PDF report will output all images and pin data

- **Include pin location** - zoomed in snapshot of exact pin location on drawing
- **Include floorplan** - will include floorplan drawing with pin locations at the top of report

CSV - excel spreadsheet of only pin data

Floorplan - floorplan drawing with pin locations only


Output order

Date ascending / descending - date pin added from earliest to latest or vice versa

Pin number ascending / descending - pin number from lowest to highest or vice versa

Site/building/floor/drawing ascending / descending - only for higher level reports. will determine the order the drawings are output within reports. Pins within each drawing will be pin number ascending as default

Site / Building / Floor Level Reports

- 1) Navigate to the correct level
- 2) Click **Generate Report** button top right corner
- 3) On the next page, location will be set from the level you clicked to generate
- 4) Apply general filters
- 5) Apply advanced filters (individual pin or pin selector only available at drawing level reports)
- 6) Using the   buttons move drawings you wish to include in the report to the right (hold shift, click the first drawing and the last drawing to select all)
- 7) Determine your output options and output order
- 8) Click  button
- 9) the report will now be generating, click  down the left hand menu
- 10) Click  button on the correct report

Drawing level reports

- 1) Navigate to the correct drawing
- 2) Apply general filters
- 3) Apply advanced filters
 - a) If selecting individual pins, use the   buttons to move the pins you wish to include to the right.
 - b) If using pin selector, click  button in the top corner of the drawing. Using your mouse click the top-left & bottom-right corners of the area you wish to set. This will

create a red box on the drawing with only the pins within the red box being added to the report. You can create as many boxes as required on the drawing by following the process. Click **Delete Mode** button and click the red box you wish to delete should you require. You can also use the **Exclude Pin Mode** button to remove specific pins from a highlighted area to ensure they are not output through the report.

c) if using advanced filters simply select the question you wish to filter by from the left-hand drop down and specify the answer on the right. If the question through the template is a selectable answer (drop downs, multi drop downs, radio buttons etc) the answers that have been selected through the drawing will output dynamically to ensure you select an answer relevant to that drawing. text boxes & numerical inputs will need to be typed in the answer form. Click **Submit** button once happy with the filter. You can add multiple filters by simply clicking **+ Add Filter** and applying any further filters.

4) Determine your output options and output order

5) Click **Generate Report** button

6) The report will now be generating, click **My Company Reports** down the left hand menu

7) Click **Download File** button on the correct report

All site reports

Through the desktop companies also have the ability to generate 'all site' reports. All site reports can be generated for a 7 day period max with the idea being to show your companies productivity within a certain week.

1) Navigate to **Create Report** area

2) 'Location' on the left will default to all sites & operatives

3) Apply general filters

4) Apply advanced filters

5) Determine your output options and output order (advisable to sort by site/building/floor/drawing)

6) Click **Generate Report** button

7) The report will now be generating, click **My Company Reports** down the left hand menu

8) Click **Download File** button on the correct report

Share drawing link

You can include an interactive drawing to your reports to allow clients to see a little easier the exact pin location. This will need to be done for each drawing at drawing level.

- 1) Navigate to the correct drawing
- 2) Scroll to the bottom of the page until you reach the 'Share link' area
- 3) Click  button
- 4) This will now generate a link for this drawing. Click the below link to try it out!




</drawingShareLinks/f27b7663-6287-460c-912d-d2c64313c5a3>

Custom Templates

As we have touched on a few times through this user guide, Bolster Systems allows the creation of custom templates for your companies use. Each service you sign up to will come with default templates as created by Bolster Systems. If you wish to amend these templates slightly or create completely new templates you can do so. All template creation is carried out by Bolster Systems off the back of your guidance. We will require a spreadsheet of exact questions, question type and answers (where applicable). It is best practice to contact the Bolster Systems office to discuss this process further.

Adding FR Ratings / Item / Installation Types (Fire Stopping)

Through the fire stopping template there are FR Ratings, item, installation types. You can customise these options to suit your companies requirements. Any changes made here will add to the drop down options available through the app.

- 1) Click the correct Pin option down the left hand menu   
- 2) Click  /  /  button
- 3) Input the new option through the following pop-up
- 4) Click  /  /  button once happy
- 5) Advise users to down-sync data on the app to see the changes




Edit FR Ratings / Item / Installation Types (Fire Stopping)

You can also edit the default options or any options you have added at any point.

- 1) Click the correct Pin option down the left hand menu   
- 2) Click  next to the correct option
- 3) Make the edit through the following pop-up
- 4) Click  button once happy
- 5) Advise users to down-sync data on the app to see the changes


Edit FR Ratings / item / installation types (Fire Stopping)

You can also enable / disable any pin options

- 1) Click the correct Pin option down the left hand menu   
- 2) Click  /  next to the correct option
- 3) Click  button on the following pop-up
- 4) Advise users to down-sync data on the app to see the changes

Updating bespoke templates (all services)


If you create a custom template for a service, Bolster Systems can set the question to 'allow company edit'. This is only a feature for the question types dropdowns, multi dropdowns or radio buttons and allows you to add / edit options only. If you require more comprehensive template changes please contact Bolster Systems.

- 1) Click  down the left hand menu
- 2) Click  button next to the correct template
- 3) If a question has been set to be editable you will see  button
- 4) Click  in the top right corner
- 5) You can now edit existing options, disable existing options by clicking  button or add options by clicking  button
- 6) Click  button once happy
- 7) Advise users to down-sync data on the app to see the changes

Recently deleted area



Any data that you delete through the desktop is never hard deleted and can be restored if required. This includes site / buildings / floors / drawings, pin histories and users. The recently deleted area will display the date the data type was created, date deleted and who by to ensure an audit trail of activity.

- 1) In the top right corner it will display your name and email, click there to release a drop down menu
- 2) Click  from the menu
- 3) You will now see all deleted data. Once you have found the data you wish to restore, click  button
- 4) Your data will now be restored. If it was a pin history, it will output in single pin view when and who by the history was restored

Deleted Data

Deleted item	Date Created	Date Deleted	Deleted By	Type	
Demo Site / Main / Ground / Test Drawing / 0003:31	09/04/2020 - 13:32	09/04/2020 - 14:15	Joe Bramwell (Bolster Systems Ltd)	Pin History	Restore

recently deleted area

Purchases through the system

All purchases of service subscriptions and drawing credits are carried out directly through the desktop by company admins. Purchases can be made by credit/debit card or BACS. Credit/debit card will activate any purchases instantly, whilst BACS will require full payment before we can manually mark the invoice as paid. You can also download VAT invoices of all purchases made.

Adding a credit/debit card to the system

- 1) Click  Subscription & Credits down the left-hand menu
- 2) Click [+ Add Card](#) button in the 'cards' section
- 3) Fill in the card details and click [Submit](#) button
- 4) Once added you can click  button to remove any card from the system

Purchasing drawing credits

Drawing credits for the upload of floor plan drawings. 1 credit = 1 drawing upload. If you purchase credits in volumes of 10 you will receive 1 free credit.

- 1) Click  Subscription & Credits down the left-hand menu
- 2) On the right enter the number of credits you wish to purchase
- 3) Click [Buy](#) button
- 4) A pop-up will now appear, determine your payment method ☒ Pay by card **or** ☐ Pay by invoice
- 5) Agree to the sales terms and conditions by toggling on the check box ☒
- 6) Click [Buy](#) button to complete the purchase

Purchasing subscriptions

You can add further subscriptions at any point for additional services you carry out as a company.

- 1) Click  Subscription & Credits down the left-hand menu
- 2) Toggle on any additional services you wish to purchase ☒
- 3) Click [Buy](#) button
- 4) A pop-up will now appear, determine your payment method ☒ Pay by card **or** ☐ Pay by invoice
- 5) Agree to the sales terms and conditions by toggling on the check box ☒
- 6) Click [Buy](#) button to complete the purchase

Subscription auto-renewal

You can set your annual subscription for the services you require to auto-renew. You can do this by card or invoice. By card will automatically make the purchase using your primary card, invoice will raise an invoice for you to download and pay prior to the subscription expiry date.

- 1) Click  Subscription & Credits down the left-hand menu
- 2) Toggle on auto-renewal in the top right corner 
- 3) Select your auto renewal option ☐ Pay by card **or** ☐ Pay by invoice

Paying pending invoices

If you raise a purchase via invoices but wish to complete the payment using a card you can do so.

- 1) Click  Subscription & Credits down the left-hand menu
- 2) At the bottom you will see 'pending invoices', click  button next to the correct invoice
- 3) Select the card you wish to pay the invoice with from the drop down list
- 4) Agree to the sales terms and conditions by toggling on the check box 
- 5) Click  button to complete the purchase

Downloading PDF invoices

You can download PDF invoices of all purchases made through the system for your accounts records.

- 1) Click  Orders down the left-hand menu
- 2) Click  button next to the correct order
- 3) Click  button in the top right corner. The PDF will now download

Drawing credit log

You can see exactly which drawing a credit has been used against through the drawing credit log. This is a useful feature for accounts to ensure each credit spend is associated to the correct project.

- 1) In the top right corner it will display your name and email, click there to release a drop down menu
- 2) Click  Drawing Credit Log from the menu
- 3) You will now see all credit purchases and spends. It will inform you what drawing the credit was spent on, who by and when. You can click  button to go directly to the drawing if required

Date	Type	Quantity	Drawing Heirarchy	User	
20/02/2016 - 11:56	Purchased	100	N/A	Wesley Donlon	View Drawing
20/02/2016 - 12:28	Used on new drawing	-1	Manchester Hospital / Main Hospital / Ground / Demo Drawing	Wesley Donlon	View Drawing

Drawing credit log

Help Scout & Support



Through the desktop we have a service called Help Scout. Help Scout is a support messaging system and any support question you raise will go directly to all of the Bolster Systems team for them to get back to you as quickly as possible with the required guidance.

We also have video user guides and this PDF user guide! You can of course email any of the Bolster Systems team direct or call our office for support.

Using Help Scout

- 1) Click  Support down the left-hand menu
- 2) In the bottom right the Help Scout pop-up will now appear. Fill in the form with your name, the subject of your request, you email and the question you wish to ask
- 3) Click [Send a message](#) button when you are complete
- 4) Bolster Systems will then reply to your request. Responses will go directly to your email address
- 5) Click  button to close the Help Scout pop-up

Send a message

How can we help?
We usually respond in a few hours

How can we help?

Send a message

Help Scout

QR codes



A recent addition to the Bolster system is the ability to assign QR codes to single pins. This vastly speeds up the process of adding pin histories when on site.

Systems Print media is Bolster Systems recommended supplier who have 3 QR code label templates available as designed by Bolster Systems, but you can use alternative suppliers if preferred.

Generating QR codes through the desktop


QR codes to be used through the Bolster system must be generated through the desktop of the system to ensure each code is unique and no two companies generate the same QR code. QR codes will be generated as a CSV file for you to forward on to your selected printing company for production.




- 1) Click  **Generate QR Codes** down the left-hand menu
- 2) Through the following pop-up enter the number of QR codes you wish to generate (multiples of 250 only)
- 3) Click  **Generate** button
- 4) This will now automatically download the CSV file to your device

Enable QR codes through Company settings

- 1) Click  **Company Settings** down the left-hand menu
- 2) Click  **Edit Settings** button in the top-right corner
- 3) Toggle on enable QR codes 
- 4) Click  **Confirm** button apply this change

Assigning a QR code to a pin

- 1) Follow the process to add a pin history as outlined on page 27
- 2) Once you have filled in the template as required click  **Attach QR** button
- 3) On the following page scan the QR code you wish to assign to this pin and click  **Attach** button. If you have scanned the incorrect QR code click  **Close** button followed by  **Tap to Scan Again** button to restart the process
- 4) Finalise the adding of the pin history by clicking  **Submit** button
- 5) The QR code will be assigned fully the next time the user up-syncs data


- 1) Navigate to the correct pin and click  button
- 2) At the bottom of the template click  button
- 3) On the following page scan the QR code you wish to assign to this pin and click  button. If you have scanned the incorrect QR code click  button followed by  button to restart the process
- 4) Finalise the adding of the pin history by clicking  button
- 5) The updated QR code will be assigned fully the next time the user up-syncs data

Scanning a QR code

The idea behind QR codes within Bolster Systems is to speed up the process when adding pin histories by scanning the QR code to find the correct pin. To ensure your companies data is secure and only accessed by authorised users, you will have to have the correct drawing(s) the pins are on down-synced to your device. Scanning a QR code through your devices camera out of the Bolster Systems app will not be possible.

- 1) On the app dashboard click  QR Viewer
- 2) On the following page scan the QR code, if you scan a Bolster QR for a pin on a drawing you have access to you will be able to click  button. If you have scanned the incorrect QR code click  button followed by  button to restart the process.
- 3) You will then be taken to the correct single pin view page with the latest histories details and the ability to add a new pin history

If you scan a Bolster QR code for a pin on a drawing you do not have access to you will receive the below error message. Ensure you are scanning the correct QR code and ensure you have access to the drawings. If you do not, any company admin can users to drawings.

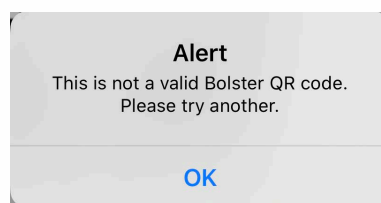

QR code message - no access

If you scan a Bolster QR code through your devices camera you will be directed to a web page advising you to scan the QR code through the Bolster Systems app.

QR codes through the desktop

If a pin has been assigned a QR code, through single pin view on the desktop the below will be output. You will be able to scan the QR from the desktop using the Bolster Systems app to access the pin history.

QR Code



QR code desktop message

This pin has a QR code attached.

Scan this code on the Bolster app to view it on there.