


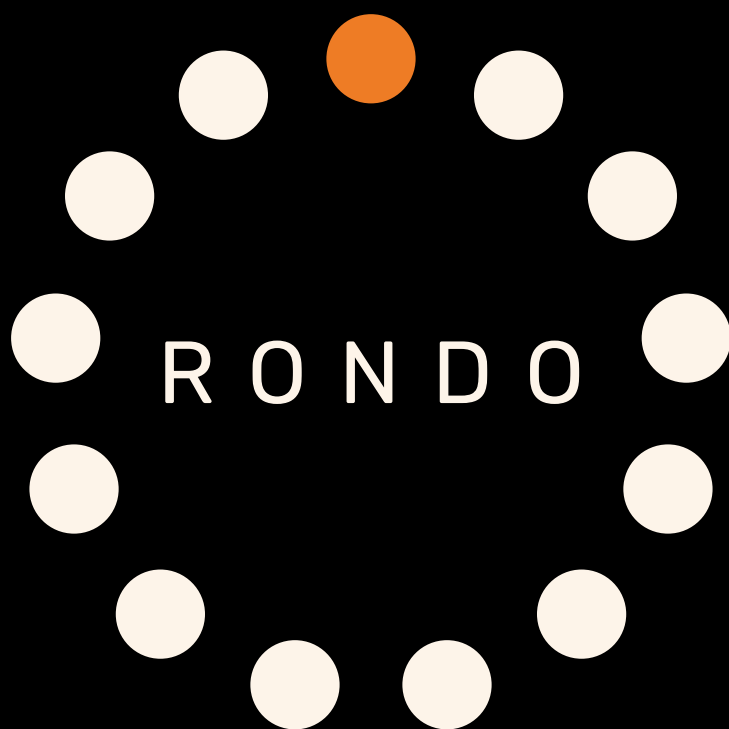

Kitchen timer

User manual

## Welcome

RONDO is a kitchen timer. You set a time, and when it runs out the device lets you know – you hear it, you see it and you feel it. Several times at once are no trouble: potatoes, egg and roast run side by side, each in its own colour.

It needs no internet, no account and no app. Everything happens on the device itself. So you can simply plug it in and use it.

### The device

- **The round screen** shows everything – and responds to touch, like a phone.
- **The ring around the edge turns.** It clicks into place as you feel it: one click, one step. It cannot be pressed – anything that wants pressing, you tap on the screen.
- **Small lights glow behind the rim**, arranged in a circle. They show from across the room how much time is left.
- **A speaker** for the melody and **a small motor** that makes the device buzz quietly – so you notice the alarm even when the kitchen is loud.

## The three gestures

There is nothing else to memorise. These three work the same everywhere:

|                               |                                                                                                                              |
|-------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>Swipe</b><br>left or right | changes the <b>page</b> . The dots along the bottom show which one you are on.                                               |
| <b>Turn the ring</b>          | changes <b>something on the page</b> you are on – a number, a choice, or it scrolls a list. The ring never changes the page. |
| <b>Tap</b>                    | selects and confirms. Whatever you tapped gets a yellow outline – and that is what the ring will change.                     |

If you get lost: just keep swiping until you are back on a page you recognise. You cannot break anything.

## The eight pages


The pages sit side by side like pictures in an album. After switching on you are on **Running now**. Swiping right from there leads to the overview, left to everything else.

|                          |                                                 |
|--------------------------|-------------------------------------------------|
| <b>Overview</b>          | every running time at a glance                  |
| <b>Running now</b>       | the home page: one time large, with its buttons |
| <b>New timer</b>         | this is where you set a new time                |
| <b>Egg timer</b>         | works out the cooking time for eggs             |
| <b>Grill thermometer</b> | shows the temperature inside the meat           |
| <b>Stopwatch</b>         | counts up instead of down                       |
| <b>Presets</b>           | saved times, started with a single tap          |

## Settings

brightness, volume, language, battery

## Your first timer

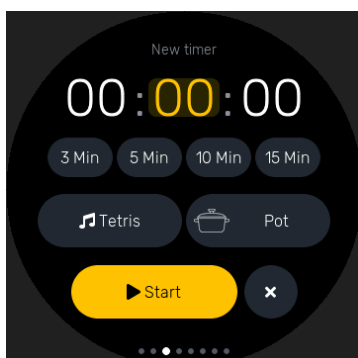

The "New timer" page

### Setting five minutes


From the home page, swipe **left twice** until the top reads "New timer".

1. Tap the **middle two digits** — those are the minutes. They turn yellow.
2. Turn the ring until it reads **05**. One click is one minute.
3. Tap **Start**. Done.

The four buttons below are quicker still: **3, 5, 10 and 15 minutes** with one tap.

The two buttons in the middle are a matter of taste: on the left you pick the **melody** that plays at the end (it is played back as you choose), on the right a **picture** — egg, pasta, bread and so on. The picture is what tells your timers apart later.

## When the time is up

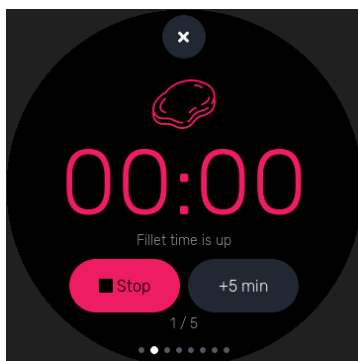

A finished timer

### The alarm


The device brings the finished time to the front by itself, wherever you happened to be. The screen flashes in that timer's colour, the device buzzes, the melody plays and the lights blink along.

**To switch it off, simply tap the middle of the screen.** The whole area is the button — which also works with the back of your hand when your fingers are covered in dough.

If you need a little longer after all, tap **+5 min**.

If nobody reacts, the alarm stops by itself after five minutes. The timer then stays on screen as "time is up", so you can see that something finished.

## Several times at once

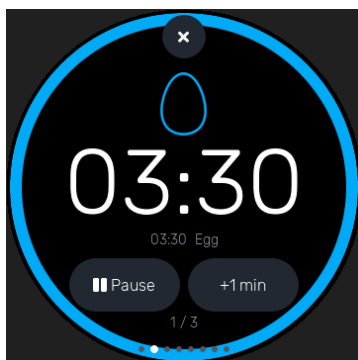

Three timers, the second one shown


## Running now

One time is always shown large here. The coloured arc around the edge empties as the time runs down – so you see the progress without reading the number.

When several times are running, the buttons show something like **1 / 3** beneath them. Use the **ring**, or swipe up and down, to page through them.

**Every time has its own colour.** The ring of lights always takes the colour of the time you are currently looking at.

When nothing is running, RONDO shows its mark: the orange dot travels slowly around the circle. A tap on it takes you straight to a new timer.

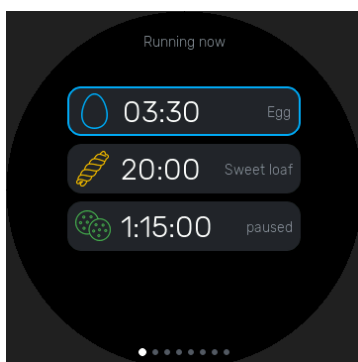


Everything at a glance

## Overview

One page to the right is the list of every running time. A tap on a row brings it to the front, large.

Handy when three things are cooking at once and you only want a quick look at what will be ready next.

## The other pages

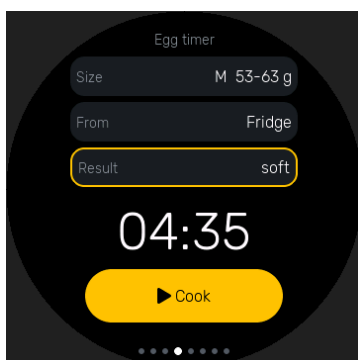


A medium egg from the fridge, soft

## Egg timer

Tell the device **how large** the egg is, whether it comes **out of the fridge**, and how you **like it** – soft, medium or hard. It works out the cooking time.

Tap a row, turn the ring, tap **Cook**. The time then runs like any other.

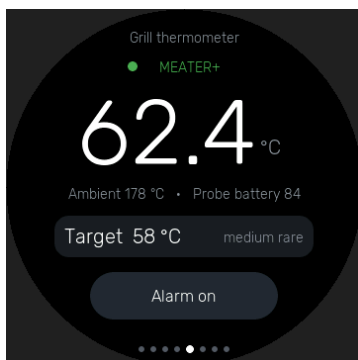

A roast at 62.4 °C

## Grill thermometer

If you have a **MEATER** thermometer, ROND0 shows how warm it is inside the meat – the **core temperature** large, and below it the temperature around the meat and the probe's battery level.


There is nothing to set up: **take the probe out of its charging case** and ROND0 connects by itself. The dot turns green as soon as readings arrive.

The probe only ever talks to one device – and here that is ROND0. The manufacturer's app stays out while the thermometer is connected. That is the intent: a number, an alarm, no assistant.

## Letting the meat call you

Turn the ring until the **target temperature** you want appears in the box – next to it stands what that means: rare, medium rare, medium, well done. Then tap **Alarm on**.

Once the temperature is reached, ROND0 announces it exactly as it does a finished time: the screen flashes, the device buzzes, the melody plays. **Stop** ends it.

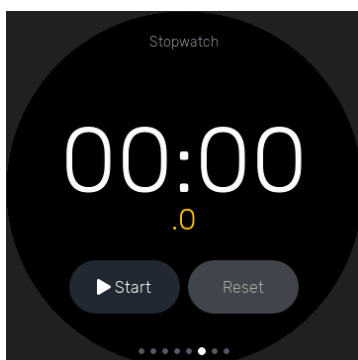


Start, pause, reset

## Stopwatch

Counts up instead of down – for “how long has this been simmering?”.

It keeps running in the background even when you swipe away. While it runs, it also appears on the “Running now” page and in the overview.

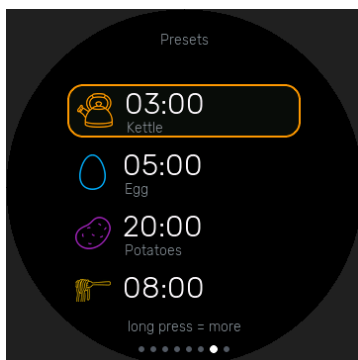


Saved times

## Presets

The device remembers every time you start, automatically. They are all listed here.

**Tapping starts** the time straight away. **Holding it longer** opens a small menu for changing or deleting it.

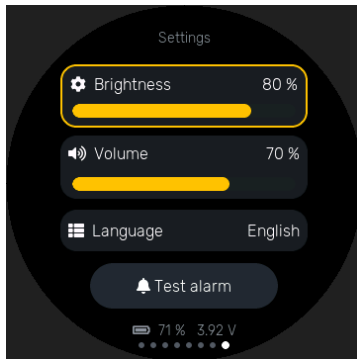

Brightness, volume and language

## Settings

**Brightness** and **volume**: tap the row, then set it with the ring.

**Language**: the same handling – tap the row, turn the ring. The choice is **Deutsch** or **English**; the whole display changes over immediately.

**Test alarm** demonstrates once what happens when a time runs out.

At the very bottom is the **battery level**. While the device is plugged in it shows the voltage instead of a percentage – during charging a percentage would be guesswork.

## The ring of lights

The lights around the rim are not decoration – they are still readable from three metres away:

- **How many are lit** shows the **time remaining** – the circle empties as the time runs down.
- **The colour** says **which** time is meant: the same one shown on the screen.
- Over the **last ten seconds** the ring pulses.
- During an **alarm** it blinks in time with the screen.
- While the **stopwatch** runs, a single bright dot travels around once per second.

## A little help

### The screen is dark.

After a minute without a touch it switches off so as not to be a nuisance. One tap, or a turn of the ring, wakes it. **Your times keep running** – and when one finishes, the screen comes back on by itself.

### I unplugged it and my times are gone.

Running times do not survive a loss of power – the device has no clock that keeps going. Your **presets, brightness, volume and language**, on the other hand, are kept.

### I did not hear the alarm.

Turn the volume up in the settings. The buzzing and the ring of lights always run regardless of it.

### I changed something by accident.

The ring only ever changes whatever currently has the yellow outline. Just tap the thing you actually meant and turn again.

### Deleting asks me to confirm.

That is deliberate: deleting is the one action that cannot be undone.

### **The MEATER app can no longer find my probe.**

Then RONDO is connected to it – the probe only ever admits one device. If you do need the app, briefly disconnect RONDO from power.

### **The temperature alarm did not go off.**

It has to be armed – on the thermometer page the button then reads **Alarm off** (that being the button that switches it off) and the target box has an orange outline. It fires once; change the target afterwards and it is ready again.

### **The thermometer only shows the MEATER mark.**

The probe only transmits while it is **out of the charging case**. Left inside, the page stays on “searching”. The charging case should also be nearby – it is the repeater for the radio signal.

### **The device has stopped responding entirely.**

Disconnect it from power briefly and plug it back in. Presets and settings are kept.

## **Worth knowing**

- Up to **eight times at once** and **twenty presets**.
- A time you start automatically becomes a preset. The same duration with the same picture overwrites the existing one instead of adding a second.
- No Wi-Fi, no account, no cloud – nothing leaves the kitchen. RONDO uses Bluetooth for one thing only: listening to the grill thermometer.
- The ring cannot be pressed – that is not a fault, it is how it is built.