


How to find Serial port


For Windows 7 or Newer

1. Open the run dialog by clicking the keyboard shortcut [Windows]+[R]. Then type "devmgmt.msc", and hit Enter

2. If Windows asks for your permission to continue, click on Continue

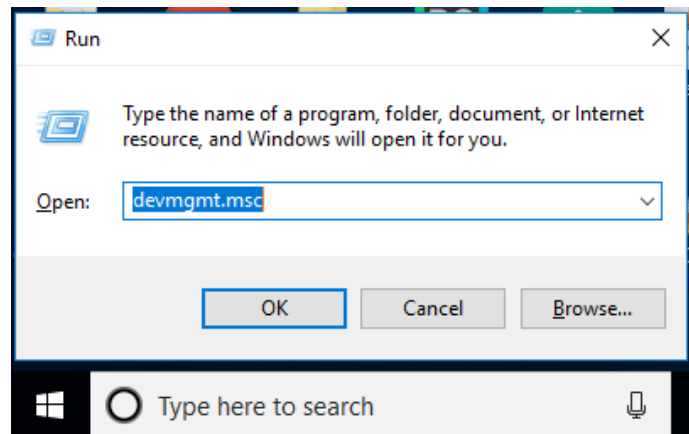

3. The device manager will show up, then find the entry that says "**Ports (COM & LPT)**" and click on the (+ in case Windows 7 OR > in case Windows 10) beside it to expand it. Our devices will be listed as a "**Communication Device Class**"

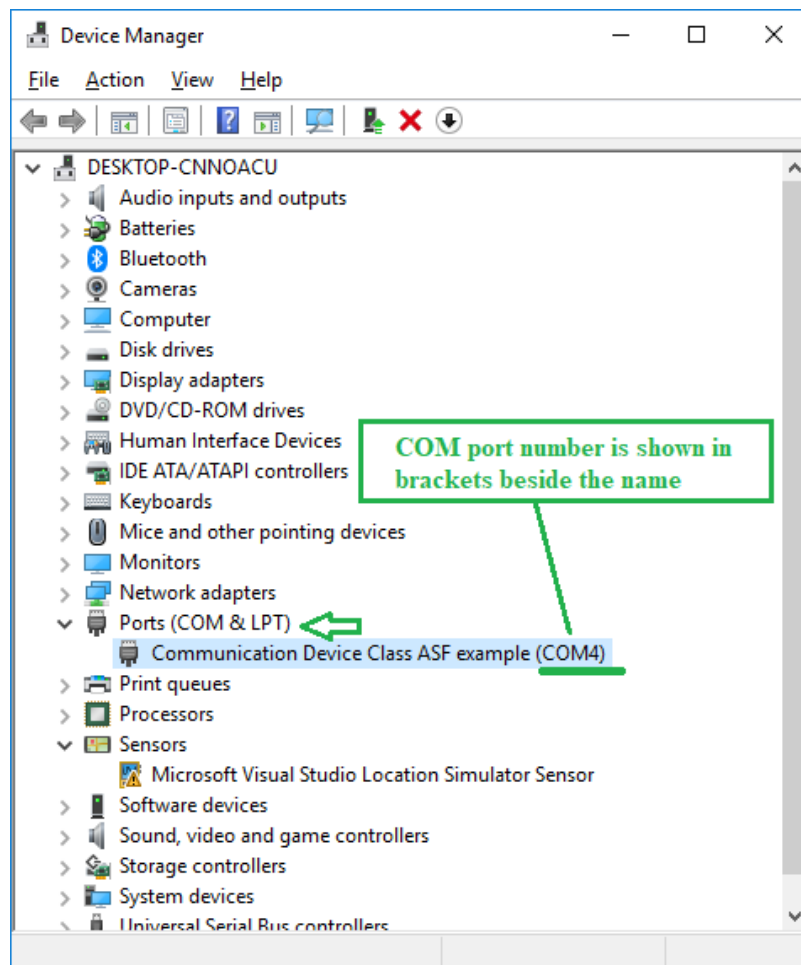

For Linux

- To check the available of serial ports by following commands. e.g.
> **dmesg | grep tty**
- Check the serial port's permission to which device is connected by enter below command. e.g.
> **ll /dev/ttyACM0**
- If there is no write permission in above command, then give read-write permission to serial port e.g
> **sudo chmod a+rw /dev/ttyACM0**

```
gts-4@gts4-VirtualBox: ~  
gts-4@gts4-VirtualBox:~$ dmesg | grep tty  
[ 0.000000] console [tty0] enabled  
[ 1188.138580] cdc_acm 1-2:1.0: ttyACM0: USB ACM device  
[ 1948.749310] cdc_acm 1-3:1.0: ttyACM0: USB ACM device  
[ 3846.227002] cdc_acm 1-2:1.0: ttyACM0: USB ACM device  
[11564.588420] cdc_acm 1-2:1.0: ttyACM0: USB ACM device  
[11861.216504] cdc_acm 1-2:1.0: ttyACM0: USB ACM device  
[12071.235123] cdc_acm 1-2:1.0: ttyACM0: USB ACM device  
[12707.777741] cdc_acm 1-2:1.0: ttyACM0: USB ACM device  
[13057.445549] cdc_acm 1-2:1.0: ttyACM0: USB ACM device  
[16292.004426] cdc_acm 1-2:1.0: ttyACM0: USB ACM device  
[19374.179120] cdc_acm 1-2:1.0: ttyACM0: USB ACM device  
gts-4@gts4-VirtualBox:~$  
gts-4@gts4-VirtualBox:~$ ll /dev/ttyACM0  
cr-xr-xr-x 1 root dialout 166, 0 Jan 24 14:45 /dev/ttyACM0  
gts-4@gts4-VirtualBox:~$  
gts-4@gts4-VirtualBox:~$ sudo chmod a+rw /dev/ttyACM0  
gts-4@gts4-VirtualBox:~$  
gts-4@gts4-VirtualBox:~$ ll /dev/ttyACM0  
crwxrwxrwx 1 root dialout 166, 0 Jan 24 14:45 /dev/ttyACM0  
gts-4@gts4-VirtualBox:~$  
gts-4@gts4-VirtualBox:~$
```