

DC Main/Backup Power Automatic Transfer Switch (ATS) User Manual

Model # ABR19

The ABR19 is a high-speed dual-power transfer module with remote power source selection. In default mode, the load is supplied by the main power source when normal. If the main power is lost or drops below 10V, the module automatically switches to the backup source within 10ms and returns to main power once it recovers. In remote mode, the main or backup power source can be force-selected via the paired remote controller's A/B buttons (pre-paired at factory, ready to use). When switching to backup power, at least one of the two inputs (main or backup) must be above 10V. The module retains the current operating mode and paired remote controllers after power loss.


Specification

Model	Voltage	Max Current	Transfer time	Mode	Display	Remote
ABR19A	12-40V	50A	<10ms	Default or Remote	Yes	A/B buttons, up to 10 paired, range <30m (open area)
ABR19B	12-72V					

Indicator Light Descriptions

Indicator	Label	Color	Normal operation	Pair mode
Main power	MAIN	Red	On: power is supplied from the main source	
Backup power	BACKUP	Blue	On: power is supplied from the backup source	
Mode	MODE	Green	Off: default mode	0.5s flash interval: waiting for pairing
			On: remote mode	2s rapid flash: paired / cleared

Wiring Diagram

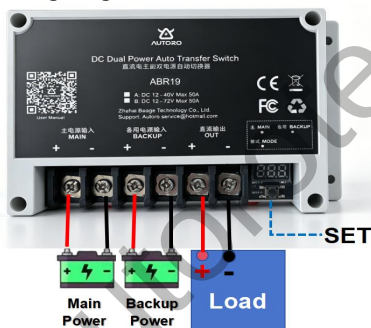

Button Operation - SET

Mode Switching:

- Short press the SET button to switch between Default mode and Remote mode.

Remote Pairing:

- Double press the SET button within 1 second to enter pairing mode (MODE light flashes at 0.5s intervals).
- Press any button on the remote within 10 seconds to complete pairing (MODE light rapid flashes for 2 seconds).
- If no operation within 10 seconds, pairing mode exits automatically and existing pairing info is retained.

Clear Paired Remotes:

- Long press the SET button for 2 seconds to clear all paired remotes (MODE light rapid flashes for 2 seconds, then automatically enters pairing mode).

Remote Controller Function (only valid in Remote mode)

- **A** → Switch to main power
- **B** → Switch to backup power (requires main or backup voltage >10V on at least one input, otherwise invalid)

Note: The module can store up to 10 remote controllers. When the limit is reached, a new pairing overwrites the earliest paired remote.

Contact & Support

Zhuhai Baoge Technology Co., Ltd.

Address: 509 Zone D, No. 77 Huawei Road, Xiangzhou Zhuhai-519070, GD, China.

For cooperation, contact: Autoro.sales@hotmail.com

For technical support, contact: Autoro.service@hotmail.com

Website: <https://www.autorotech.com>



直流电主副双电源自动切换器用户手册

型号：ABR19

ABR19 是支持遥控选电的高速双电源切换模块。默认模式下，主电源正常时由主电源供电；主电源丢失或电压低于 10V 时，10ms 内自动切至副电源，主电源恢复后切回。遥控模式下，可通过已配对遥控器的 A/B 键强制选择主或副电源（出厂已配对，可直接使用）。切换至副电源时，需主或副电源至少一路电压大于 10V。模块掉电记忆当前模式及已配对遥控器。

规格参数

型号	电压	最大电流	切换时间	工作模式	显示功能	遥控器
ABR19A	12-40V	50A	<10ms	默认/遥控	支持	A/B 双键，最多配对 10 个，遥控距离<30m（空旷环境）
ABR19B	12-72V					

指示灯说明

指示灯	标识	颜色	正常工作时	配对模式下
主电源指示灯	主	红	亮起	亮起：主电源供电
副电源指示灯	备用	蓝	亮起	亮起：副电源供电
模式指示灯	模式	绿	熄灭：默认模式 亮起：遥控模式	间隔 0.5s 闪烁：配对等待 快闪 2 秒：配对成功或清除完成

接线图



按键操作 - SET

模式切换：

- 短按 SET 键，切换默认模式 / 遥控模式。

遥控器配对：

- 1 秒内双击 SET 键进入配对等待（MODE 灯间隔 0.5s 闪烁）。
- 10 秒内按遥控器任意键完成配对（MODE 灯快闪 2 秒）。
- 若 10 秒无操作，自动退出配对并保留原配对信息。

清除已配对遥控器：

- 长按 SET 键 2 秒，清除所有配对（MODE 灯快闪 2 秒后自动进入配对等待）。

遥控器功能（仅在遥控器模式下有效）

- A** → 切换至主电源
 - B** → 切换至副电源（需主或副电源至少一路电压>10V，否则无效）
- 注意：模块最多存储 10 个遥控器。满 10 个后新配对会覆盖最早配对的遥控器。

联系与支持

制造商：珠海宝格科技有限公司

地址：广东省珠海市香洲区华威路 77 号 D 区 509

商务合作：Autoro.sales@hotmail.com

技术支持：Autoro.service@hotmail.com

公司网址：<https://www.autorotech.com>

