TM002(04) FLVM Configuration Instructions

- Purpose
- Materials Required
- Procedure
  - Camera
  - Web Relay
  - Modem
  - Solar Controller
  - Testing
  - Finishing Up

Purpose

The instructions contain info for configuring the web relay, modem, camera, and solar controller as part of the Flashing Light Video Monitor. FLVM Configuration Instructions 2-5-2026.docx

Materials Required

1. Laptop or PC with Google Chrome Browser
2. CAT5 cable
3. QTY 4 - Tycon TSBAT12-10L-WT Lithium Battery
4. Android or iPhone cell phone

Procedure

1. Connect batteries to the battery spade connectors
2. Turn BATT breaker to on (up) position
3. Turn LOAD breaker to on (up) position

Camera

1. Remove camera from box and connect it to the CAT5 cable that is coming out of the POE injector.

2. Connect laptop with a CAT5 cable to a spare port on the Netgear switch.
3. Change the laptop's ethernet IP address to **192.168.0.150**
4. Run AXIS IP utility. The camera's IP address will be shown. Click the IP address to open the web interface.

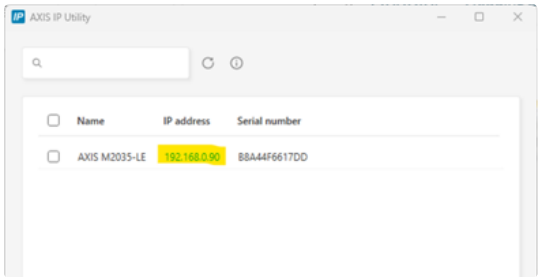

5. On the next page, set the password as 0pTo4600, accept the license agreement, and click 'Add User'.

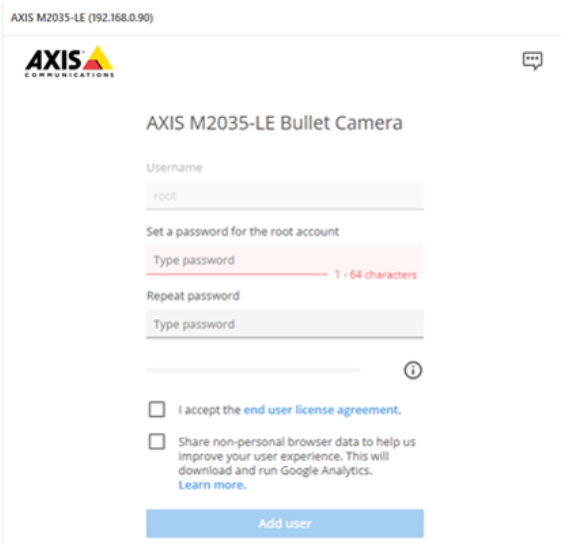

6. Navigate to *System* > *Users*. Click the 'Add User' button and create an account with the following credentials:

   i. User: admin

   ii. Pass: 0pTo4600

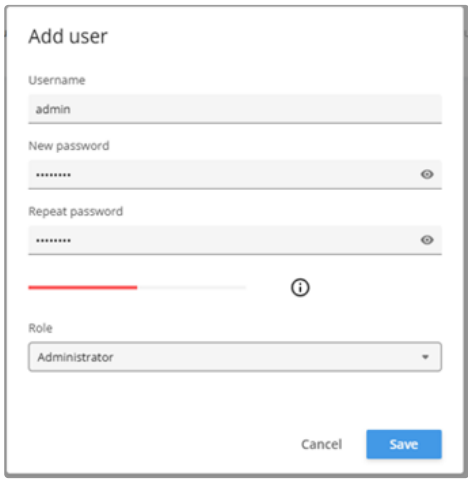

7. Navigate to *System* > *Network*. Turn off the slides for ***Bonjour*** and ***UPnP***.

Web Relay

1. Change laptop PC's IP address to 192.168.1.150.
   a. Note: The procedure for changing the computer's IP address varies by operating system version. If you are unsure how to complete this step, please contact your supervisor or the IT department.
2. Connect to web relay at http://192.168.1.100/
   a. User: admin
   b. Pass: admin

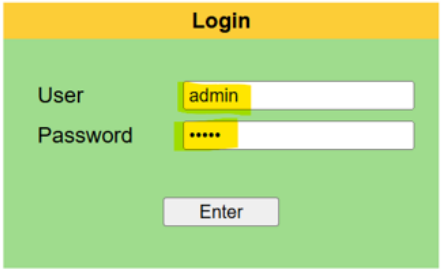

3. Navigate to the Access Settings page
   a. Change the Password and Confirm Password to 0pTo4600
   b. Change Web Server Port to 5000
   c. Click Save.

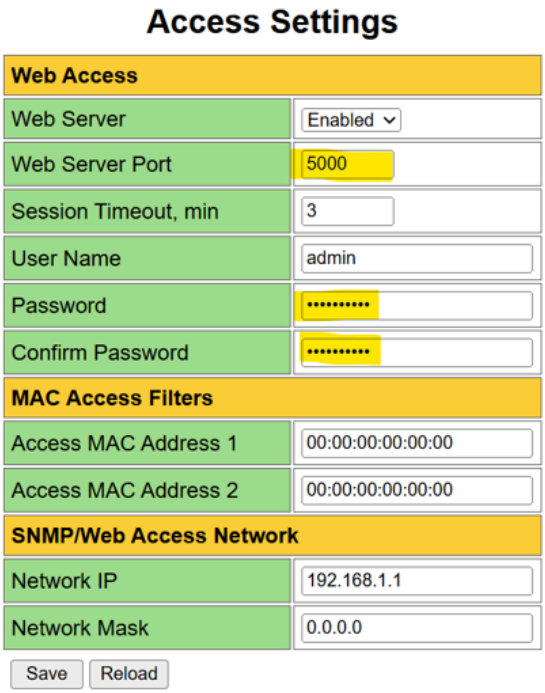

4. Navigate to the I/O Ports Labels page

   a. Change P5.1 to *Camera*

   b. Click Save.

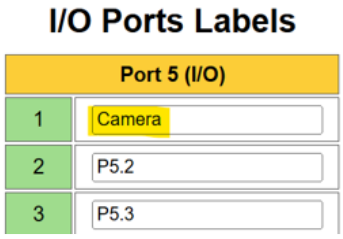

5. Navigate to the SNMP Settings page

   a. Change the Read-only Community string to altro

   b. Change the Read-write Community string altrw

   c. Click Save

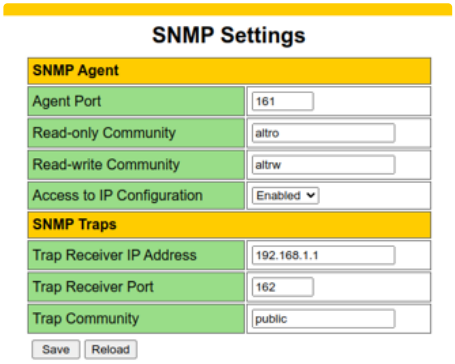

6. Navigate to the Network Settings page

   a. Change IP Address to 192.168.0.200

   b. Change Gateway to 192.168.0.1

   c. Change subnet mask to 255.255.255.0

   d. Click Save.

   e. Click OK if prompted to reboot.

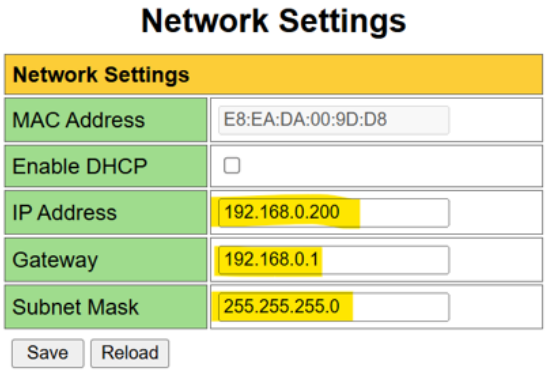

6. Change your computer's IP address to 192.168.0.150
7. Confirm you can connect and login to the web relay at http://192.168.0.200:5000/ You will see the login screen below:

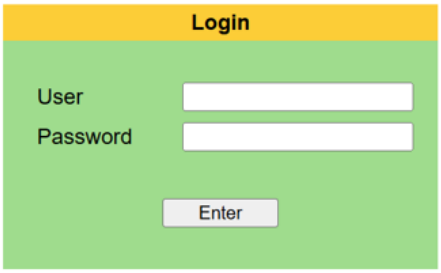

Modem

1. Connect to the modem via the LAN at https://192.168.0.1:9443/
2. Login with the following:

a. User: user

b. Pass: #0pTo4600#

3. Navigate to *Security > Port Forwarding*
4. Add the following entries to the table:

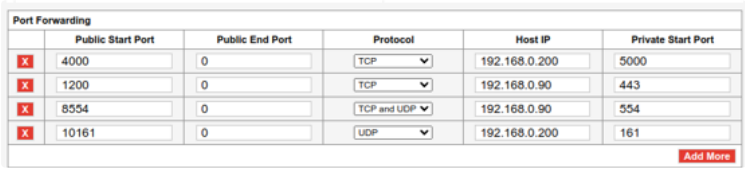

Port Forwarding

	Public Start Port	Public End Port	Protocol	Host IP	Private Start Port
X	4000	0	TCP	192.168.0.200	5000
X	1200	0	TCP	192.168.0.90	443
X	8554	0	TCP and UDP	192.168.0.90	554
X	10161	0	UDP	192.168.0.200	161

Add More

5. Click the *Apply* button.
6. Click *OK.*
7. Click the *Reboot* button.

Solar Controller

1. On your cell phone, go to the app store and download the *VictronConnect* app.

2. A list of devices will be displayed (you may be asked to turn on Bluetooth). Select the device based on the serial number that was noted during production.

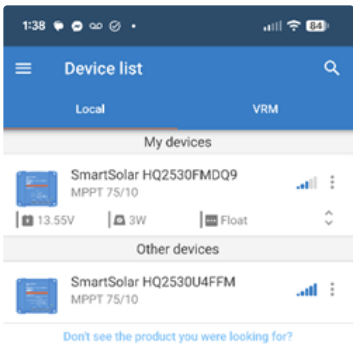

If this is not available, the serial number and factory pin can be found on top of the solar controller.

3. Pair with the device when prompted by using the factory pin.

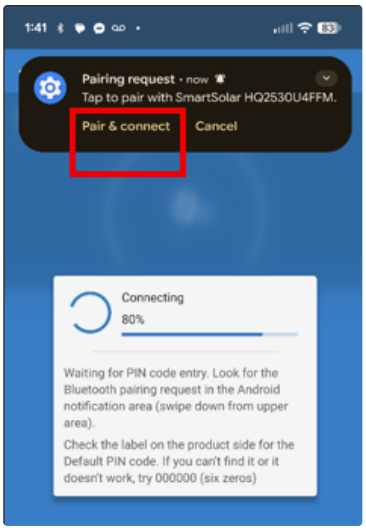

4. Tap the Settings Gear > Battery.

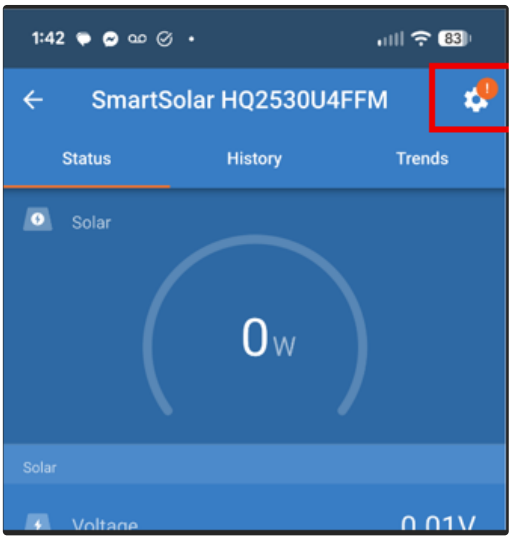

5. Under *Battery Preset*, tap *Select Preset*, scroll down to select *Smart Lithium (LiFePO4)* and tap OK.

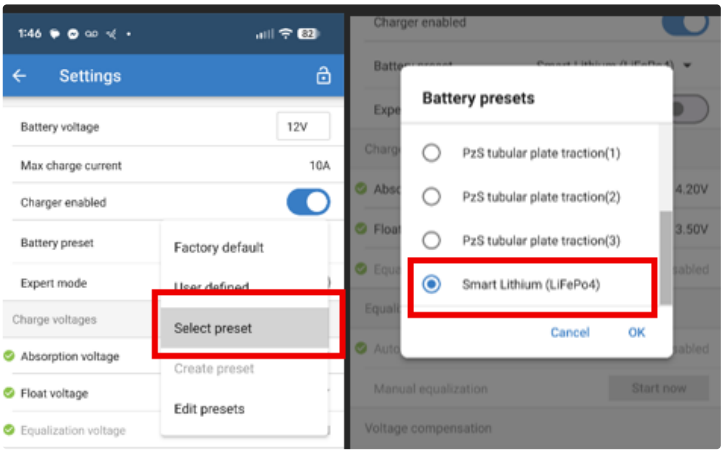

6. Return to the *Settings* screen. Select *Load Output*.
7. Confirm that under the *Operation Mode* menu the *BatteryLife* option is selected.

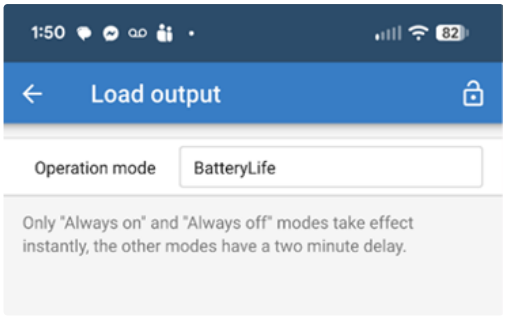

8. Return to the *Settings* screen. Select the three dots in the top right and tap *Product Info*.

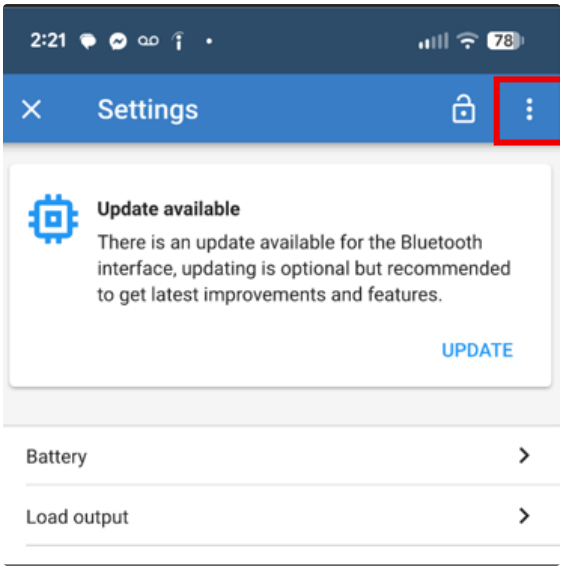

9. Under *Pin Code*, click *Change.* Enter the factory pin, then set the new pin as *460000*. Click OK.

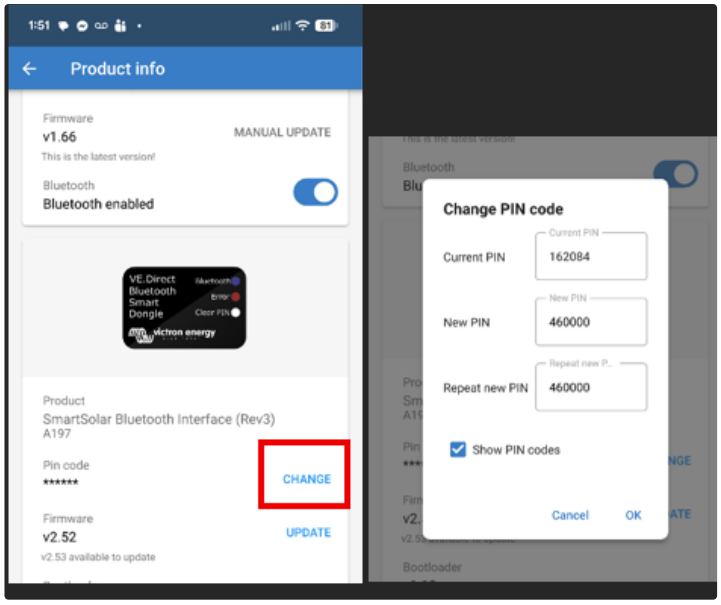

10. Click OK on any menu that pops up.

11. Close the app to disconnect from the solar controller.

Testing

1. Connect to the web relay over the internet at *http://<modem_IP_address>:4000* and login using:

a. User: admin

b. Pass: 0pTo4600

2. Click the *IO Ports Control* menu. Turn on the camera by click the checkbox:

I/O Ports Control

Port 5 (I/O)		
1	Camera	☑
2	P5.2	☐
3	P5.3	☐

3. Connect to the camera over the internet at *https://<modem_IP_address>:1200*. Confirm that you can view the camera's web interface.
4. Testing is completed.

Finishing Up

1. Turn LOAD circuit breaker to off (down) position.
2. Turn BATT circuit breaker to off (down) position.
3. Disconnect laptop CAT5 cable from Netgear switch.

4. Disconnect camera from CAT5 cable.
5. Coil CAT5 camera cable into enclosure and secure with zip tie. Secure battery strap to aluminum plate.

6. Return camera to its cardboard box.
7. Remove batteries from electronics enclosure.