

 MET.32712938		Task Card Title: LATERAL AVIONICS COMPT INSP					
Task Card NO: 200125-06-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: INSP,IL,ACFT_TECH,AP		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 09			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 11	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: DET		Special Code: CAB		MSG Code: 8, MRB, EWIS, GACA		Request: JOB-SETUP,INSPECTION, JOB-CLOSEUP, JOB-CLOSEUP	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRIED OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 125,126							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		24-92-00-220-008-A					
AMM		53-12-11-400-001-A					
AMM		249200-220-008					
ACCESS PANELS:							
812, 822, 824, 831							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
ABS5631A50		SEALING PROFILE				3.0	
ABS5631A25		SEALING PROFILE				3.0	
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
TASK PREPARATION							
Job Description							
A. PERFORM JOB SET UP OF DETAILED INSPECTION OF G, E AND P ROUTES INSTALLED IN THE LATERAL AVIONIC COMPARTMENT (EWIS) AS PER AMM TASK 24-92-00-220-008-A.							
STEP COMPLETION SIGN OFF:							
Qualification / Skill		Number of employees		Duration		Number./Signature	
Date							
Day Month Year							
Mechanic/s		ACFT_TECH/AP		HRS			
Insp.				HRS			
TASK INSTRUCTION							
Job Description							
A. PERFORM DETAILED INSPECTION OF G, E AND P ROUTES INSTALLED IN THE LATERAL AVIONIC COMPARTMENT (EWIS) AS PER AMM TASK 24-92-00-220-008-A.							
STEP COMPLETION SIGN OFF:							



MET.32712938

Task Card Title:

LATERAL AVIONICS COMPT INSP

Task Card NO:

200125-06-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/II			HRS				

Job Description

CLOSE UP

A. OK TO INSTALL THE COCKPIT AND CABIN FLOOR PANELS FROM FR9 TO FR16.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	II/INSP			HRS				

CLOSE UP

Job Description

A. INSTALL THE COCKPIT AND CABIN FLOOR PANELS FROM FR9 TO FR16 AS PER REF. AMM TASK 53-12-11-400-001 AND REF. AMM TASK 53-00-00-400-801, REF. AMM D/O 06-41-53-00.

NOTE: CLOSE THE ACCESS DOOR 813, IF INSTALLED.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.				HRS				

CLOSE UP

Job Description

C. PERFORM JOB CLOSE UP AND RETURN THE AIRCRAFT BACK TO NORMAL CONFIGURATION AS PER AMM TASK 24-92-00-220-008-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.				HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____



MET.32712938

Task Card Title:

LATERAL AVIONICS COMPT INSP

Task Card NO:

200125-06-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

TASK 24-92-00-220-008 -A

On A/C 001-999

Detailed Inspection of G, E and P Routes Installed in the Lateral Avionic Compartment (EWIS)

1. Reason for the Job

Refer to the MPD TASK: 200125-06

DETAILED INSPECTION OF G, E AND P ROUTES INSTALLED IN THE LATERAL AVIONIC COMPARTMENT (EWIS)

NOTE : This is an EWIS (Electrical Wiring Interconnection System) procedure. EWIS is defined in ESPM 20-33-11.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE
No specific	AR	FLASHLIGHT
No specific	AR	MIRROR - INSPECTION, FLEXIBLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
125	LATERAL AVIONIC COMPARTMENT
126	LATERAL AVIONIC COMPARTMENT
812 , 813 , 822 , 824	

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 52-10-00-010-001-A	Opening of the Passenger/Crew Door
Ref. AMM 52-10-00-410-001-A	Closing of the Passenger/Crew Door
Ref. AMM 52-41-00-010-002-A	Open the Avionics Compartment Doors for Access
Ref. AMM 52-41-00-410-002-A	Close the Avionics Compartment Doors after Access
On A/C 003-113	
Ref. AMM 53-00-00-000-801-A	Removal of the Floor Panels in the Cabin from FR12 to FR70
On A/C 001-999	
Ref. AMM 53-00-00-000-801-A-01	Removal of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Removal Procedure - Dry Sealing Concept)
On A/C 003-113	
Ref. AMM 53-00-00-400-801-A	Installation of the Floor Panels in the Cabin from FR12 to FR70
On A/C 001-999	
Ref. AMM 53-00-00-400-801-A-01	Installation of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Installation Procedure - Dry Sealing Concept)
Ref. AMM 53-12-11-000-001-A	Removal of the Cockpit Floor Panels from FR1 thru FR12
Ref. AMM 53-12-11-400-001-A	Installation of the Cockpit Floor Panels from FR1 thru FR12
Ref. ESPM 20-52-12	
Ref. AWM 94-21-06	
Ref. AWM 94-21-20	
Ref. AWM 94-23-05	
Ref. AMM 06-41-53-00	FUSELAGE-DESCRIPTION AND OPERATION
Ref. Fig. (1 / 24-92-00-991-15600)	

3. Job Set-up

Subtask 24-92-00-010-154-A

On A/C 001-999

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

A. Get Access

- (1) Put an ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE in position.
- (2) Open the forward passenger/crew door 831 [Ref. AMM 52-10-00-010-001-A](#).
- (3) Open the access doors 812 822 824 [Ref. AMM 52-41-00-010-002-A](#).
- (4) Open the access door 813 , if installed.

Subtask 24-92-00-862-140-A

On A/C 001-999

B. Make sure that the aircraft electrical circuits are de-energized

[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#) [Ref. AMM 24-41-00-862-002-A-02](#).

4. Procedure

Ref. Fig. 1 / 24-92-00-991-15600

Subtask 24-92-00-410-169-A

On A/C 001-999

A. Preparation for Detailed Inspection

- (1) Remove the cockpit and cabin floor panels from FR9 to FR16 [Ref. AMM 53-12-11-000-001-A](#) and

On A/C 003-113

[Ref. AMM 53-00-00-000-801-A](#)

On A/C 001-999

[Ref. AMM 53-00-00-000-801-A-01](#), [Ref. AMM 06-41-53-00](#).

Subtask 24-92-00-220-058-A

On A/C 001-999

B. Detailed Inspection of G, E and P Routes Installed in the Lateral Avionic Compartment

- (1) Do a detailed inspection of the wiring to make sure that there is no signs of ageing, alteration, overheating, scaling and deformation

Ref. ESPM 20-52-12:

- (a) On the AC/DC feeder routes: 1G, 2G

[Ref. AWM 94-23-05](#), 4G, 6G

[Ref. AWM 94-21-06](#).

- (b) On the AC/DC power-distribution routes: 1P, 2P and 6P

[Ref. AWM 94-23-05](#),

[Ref. AWM 94-21-06](#) and

[Ref. AWM 94-21-20](#).

- (c) On the generator excitation routes: 1E, 2E, 3E and 6E.

[Ref. AWM 94-23-05](#),

[Ref. AWM 94-21-06](#) and

[Ref. AWM 94-21-20](#).

NOTE : Use a FLASHLIGHT or a MIRROR - INSPECTION, FLEXIBLE if necessary.

- (2) Make sure that there is no dust, lint or hydraulic contamination.

5. Close-up

Subtask 24-92-00-410-152-A

On A/C 001-999

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the cockpit and cabin floor panels from FR9 to FR16 [Ref. AMM 53-12-11-400-001-A](#) and

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

On A/C 003-113


Ref. AMM 53-00-00-400-801-A

On A/C 001-999

Ref. AMM 53-00-00-400-801-A-01, Ref. AMM 06-41-53-00.

- (3) Close the access door 813 , if installed.
- (4) Close the access doors 812 822 824 Ref. AMM 52-41-00-410-002-A.
- (5) Close the forward passenger/crew door 831 Ref. AMM 52-10-00-410-001-A.
- (6) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

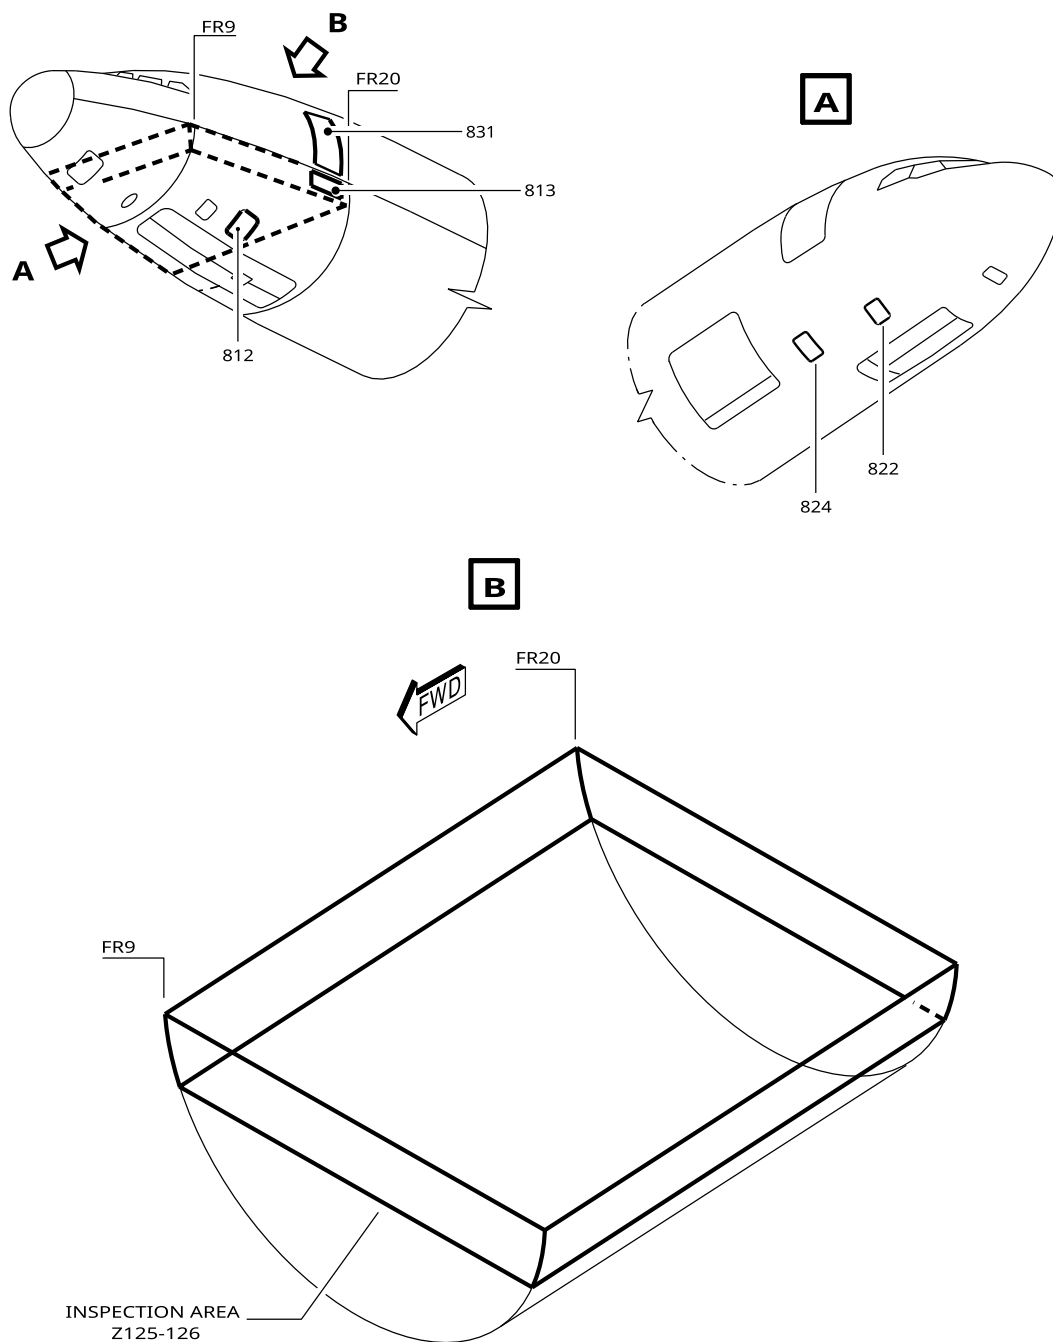

N_MM_249200_6_VMM0_01_00

Lateral Avionic Compartment - Inspection Area - Zones 125-126

Figure 1 / Graphic 24-92-00 -991-15600

TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

TASK 53-12-11-400-001 -A

On A/C 001-999

Installation of the Cockpit Floor Panels from FR1 thru FR12

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Self explanatory

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	2	SCRAPER - NON METALLIC
On A/C 003-250		
No specific		Torque wrench: range to between 1.08 and 1.44 lbf.ft (0.15 and 0.20 m.daN)
No specific		Torque wrench: range to between 1.44 and 1.8 lbf.ft (0.20 and 0.24 m.daN)

B. Consumable Materials

REFERENCE	DESIGNATION
On A/C 001-999	
06LCG9	Non Hardening Jointing Putty-Medium Temp. Area - -
08BAA9	Non Aqueous Cleaner-General - -
On A/C 003-250	
14JAB1	Sealing Profile-- Silicone Foam -
On A/C 001-999	
14SBA1	Textile-Lint free Cotton -

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
211	COCKPIT
212	COCKPIT
212HW , 212JW	
FOR 1VU(L FWD CONSOLE)	
211AW , 211BW	
FOR 101VU(L SIDE CONSOLE)	
211EW , 211FW	
FOR 7VU(R FWD CONSOLE)	
212AW , 212BW	
FOR 700VU(R SIDE CONSOLE)	
212EW , 212FW	

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 25-11-41-400-001-A	Installation of the Third Occupant Seat
Ref. AMM 25-11-51-400-001-A	Installation of the Captain/First Officer Seat
Ref. AMM 25-13-41-400-002-A	Installation of the Sidewall Panels
Ref. AMM 35-12-41-400-001-A	Installation of the Oxygen-Mask Stowage-Box
Ref. AIPC 53110120	
Ref. AIPC 53118120	
On A/C 003-250	
Ref. Fig. (1 / 53-12-11-991-00200)	
Ref. Fig. (1 / 53-12-11-991-00300)	
Ref. Fig. (1 / 53-12-11-991-00400)	

TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

REFERENCE	DESIGNATION
Ref. Fig. (1 / 53-12-11-991-00100)	

3. Job Set-up

Subtask 53-12-11-160-050-A

On A/C 003-250

A. Preparation for the Installation

Ref. Fig. (1 / 53-12-11-991-00200)

Ref. Fig. (1 / 53-12-11-991-00300)

- (1) Do an inspection of the component interfaces and the adjacent area.
- (2) Remove the remaining sealant from the cockpit floor panels (1), (4), (6), (7), (8) and (12) with the SCRAPER - NON METALLIC.
- (3) Make sure that the Sealing Profile-- Silicone Foam - (Material No. **14JAB1**) (15) is in the correct condition. If necessary:
 - (a) Remove the defective Sealing Profile-- Silicone Foam - (Material No. **14JAB1**) (15).
 - (b) Clean the mating surface with Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and the Textile-Lint free Cotton - (Material No. **14SBA1**) .
 - (c) Install the new Sealing Profile-- Silicone Foam - (Material No. **14JAB1**) (15) with the correct width and thickness.
- (4) Make sure that the parts retained from the removed component are clean and in the correct condition.

Subtask 53-12-11-210-054-A

On A/C 001-999

B. Inspection of the Shims

On A/C 003-250

Ref. Fig. (1 / 53-12-11-991-00400)

- (1) Examine the shims between frame 1 and frame 12. If the shims are damaged, do the steps that follow:
 - (a) Use the SCRAPER - NON METALLIC to remove the shims and discard them.
 - (b) Clean the area where you will install the new shims with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and the Textile-Lint free Cotton - (Material No. **14SBA1**) .
 - (c) Install the new shims
Ref. AIPC 53110120 or
Ref. AIPC 53118120.

4. Procedure

Subtask 53-12-11-420-051-D

On A/C 003-250

A. Installation of the Cockpit Floor Panels from FR6 thru FR12

Ref. Fig. (1 / 53-12-11-991-00100)

Ref. Fig. (1 / 53-12-11-991-00300)

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Make sure that the Sealing Profile-- Silicone Foam - (Material No. **14JAB1**) (15) is in position on the cockpit floor panels (12).
- (3) Put the cockpit floor panels (12) in position. Refer to the identification label put during the removal procedure.

TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

- (4) Apply Non Hardening Jointing Putty-Medium Temp. Area - - (Material No. **06LCG9**) on the screws (11).
- (5) Install the screws (11) and TORQUE them **to between 1.44 and 1.8 lbf.ft (0.20 and 0.24 m.daN)**.
- (6) Make sure that clearance J1 between the adjacent cockpit floor panels is 3 -1 mm or +1 mm (0.12 -0.04 in. or +0.04 in.).

Subtask 53-12-11-420-050-D

On A/C 003-250

B. Installation of the Cockpit Floor Panels from FR1 thru FR6

Ref. Fig. (1 / 53-12-11-991-00100)

Ref. Fig. (1 / 53-12-11-991-00200)

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Make sure that the Sealing Profile-- Silicone Foam - (Material No. **14JAB1**) (15) is in position on the cockpit floor panels (6).
- (3) Put the cockpit floor panel (6) in position. Refer to the identification label put during the removal procedure.
- (4) Apply Non Hardening Jointing Putty-Medium Temp. Area - - (Material No. **06LCG9**) on the screws (5) and (9).
- (5) Install the washers (10) and the screws (5) and (9) on the cockpit floor panel (6).
- (6) TORQUE the screws (5) and (9) **to between 1.44 and 1.8 lbf.ft (0.20 and 0.24 m.daN)**.
- (7) Put the cockpit floor panels (7) and (8) in position. Refer to the identification label put during the removal procedure.
- (8) Apply Non Hardening Jointing Putty-Medium Temp. Area - - (Material No. **06LCG9**) on the screws (5).
- (9) Install the screws (5) on the cockpit floor panels (7) and (8).
- (10) TORQUE the screws (5) **to between 1.08 and 1.44 lbf.ft (0.15 and 0.20 m.daN)**.
- (11) Make sure that clearance J1 between the adjacent cockpit floor panels is 3 -1 mm or +1 mm (0.12 -0.04 in. or +0.04 in.).
- (12) Put the cockpit floor panels (1) and (4) in position.
- (13) Install the washers (3).
- (14) Apply Non Hardening Jointing Putty-Medium Temp. Area - - (Material No. **06LCG9**) on the screws (2).
- (15) Install the screws (2) and TORQUE them **to between 1.44 and 1.8 lbf.ft (0.20 and 0.24 m.daN)**.

5. Close-up

Subtask 53-12-11-420-052-C

On A/C 001-999

A. Installation of the Component

- (1) Install the structure of lateral consoles 1VU and 101VU on the left side and 7VU, 700VU and 702VU on the right side.
- (2) Install the sidewall panels on these consoles [Ref. AMM 25-13-41-400-002-A](#):
 - (a) FOR 101VU (L SIDE CONSOLE)
 - 211EW and 211FW
 - (b) FOR 700VU (R SIDE CONSOLE)
 - 212EW and 212FW
 - (c) FOR 1VU (L FWD CONSOLE)
 - 211AW and 211BW
 - (d) FOR 7VU (R FWD CONSOLE)

TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

- 212AW and 212BW
- (e) FOR 702VU (R AFT CONSOLE)
- 212HW and 212JW .
- (3) Install oxygen-mask stowage-boxes 5774HM and 10RN1 on the left side and 10RN2 and 10RN3 on the right side [Ref. AMM 35-12-41-400-001-A](#).
- (4) Install the cockpit carpet.
- (5) Install the textile floor covering.
- (6) Install the CAPT(F/O) seat [Ref. AMM 25-11-51-400-001-A](#).
- (7) Install the third occupant seat [Ref. AMM 25-11-41-400-001-A](#).



Subtask 53-12-11-942-050-A

On A/C 001-999

B. Close Access

- (1) Remove the ground support and maintenance equipment, the special and standard tools and all other items.

TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

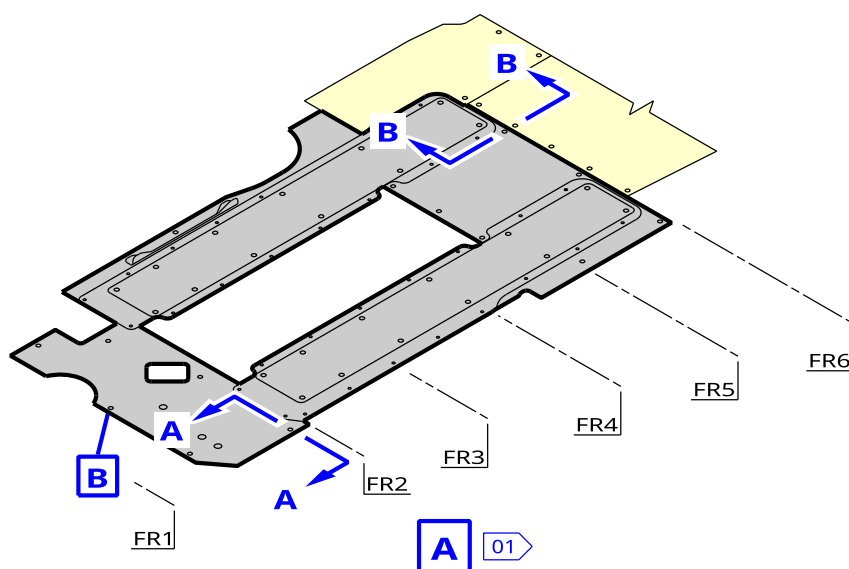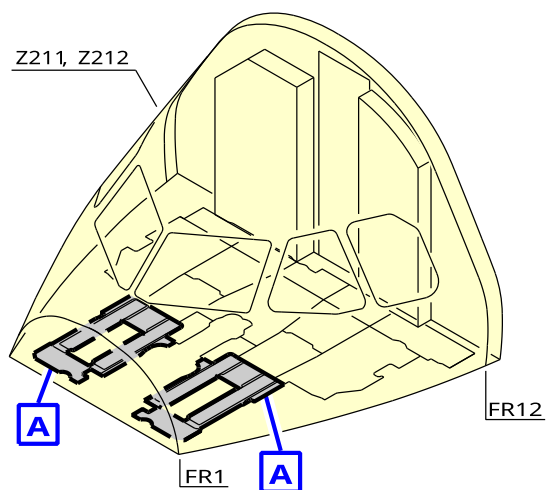

NOTE:

01 LH SHOWN, RH SYMMETRICAL


N_MM_531211_4_AAA0_01_01

Cockpit Floor Panels from FR1 thru FR6

Figure 1 / Graphic 53-12-11 -991-00200

On A/C 003-250

TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

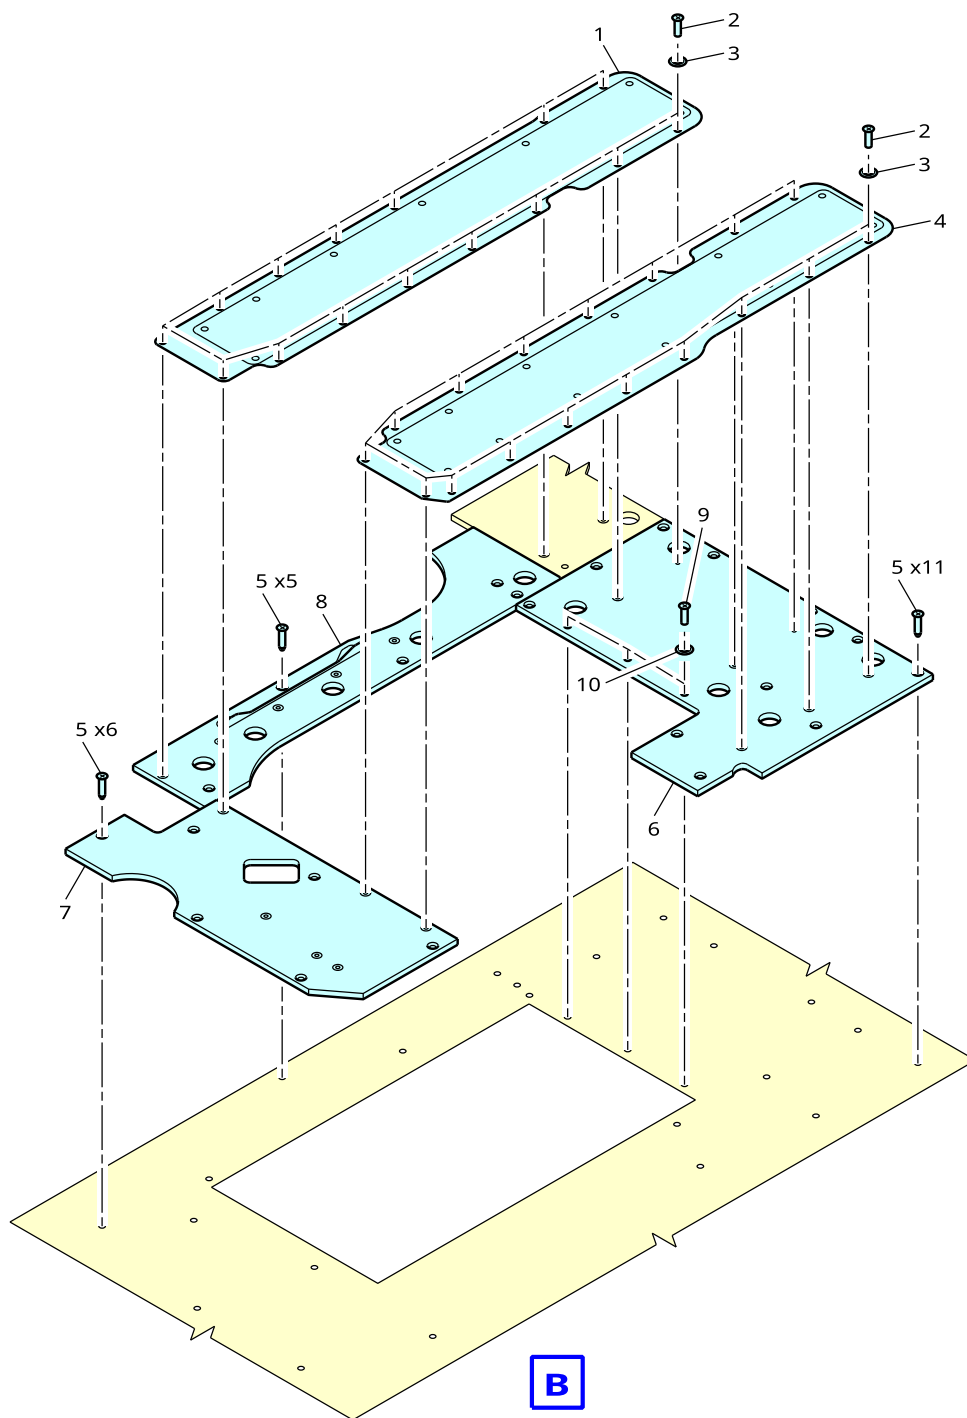


B

N_MM_531211_4_AAA0_02_01

Cockpit Floor Panels from FR1 thru FR6
Figure 2 / Graphic 53-12-11 -991-00200


TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

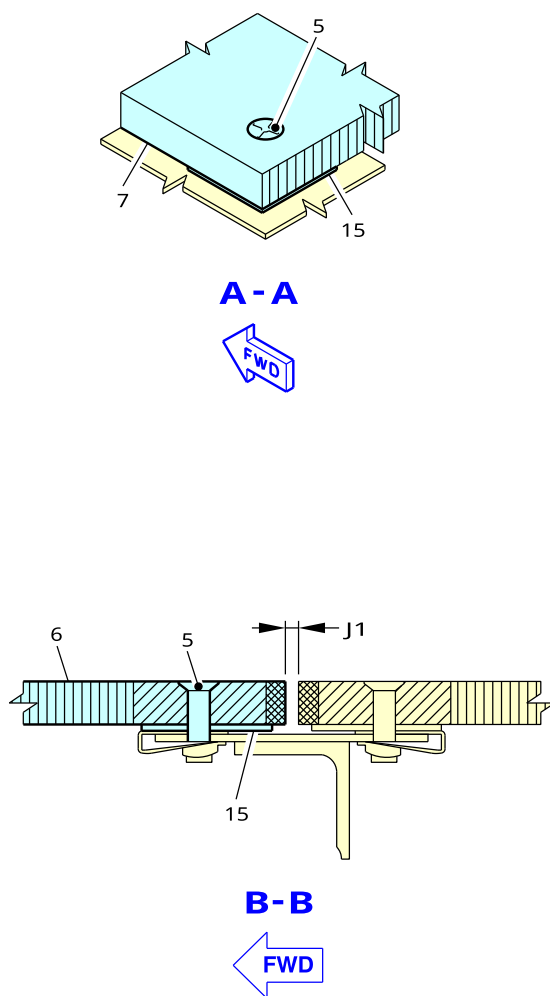

N_MM_531211_4_AAA0_03_00

Cockpit Floor Panels from FR1 thru FR6
Figure 3 / Graphic 53-12-11 -991-00200


TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

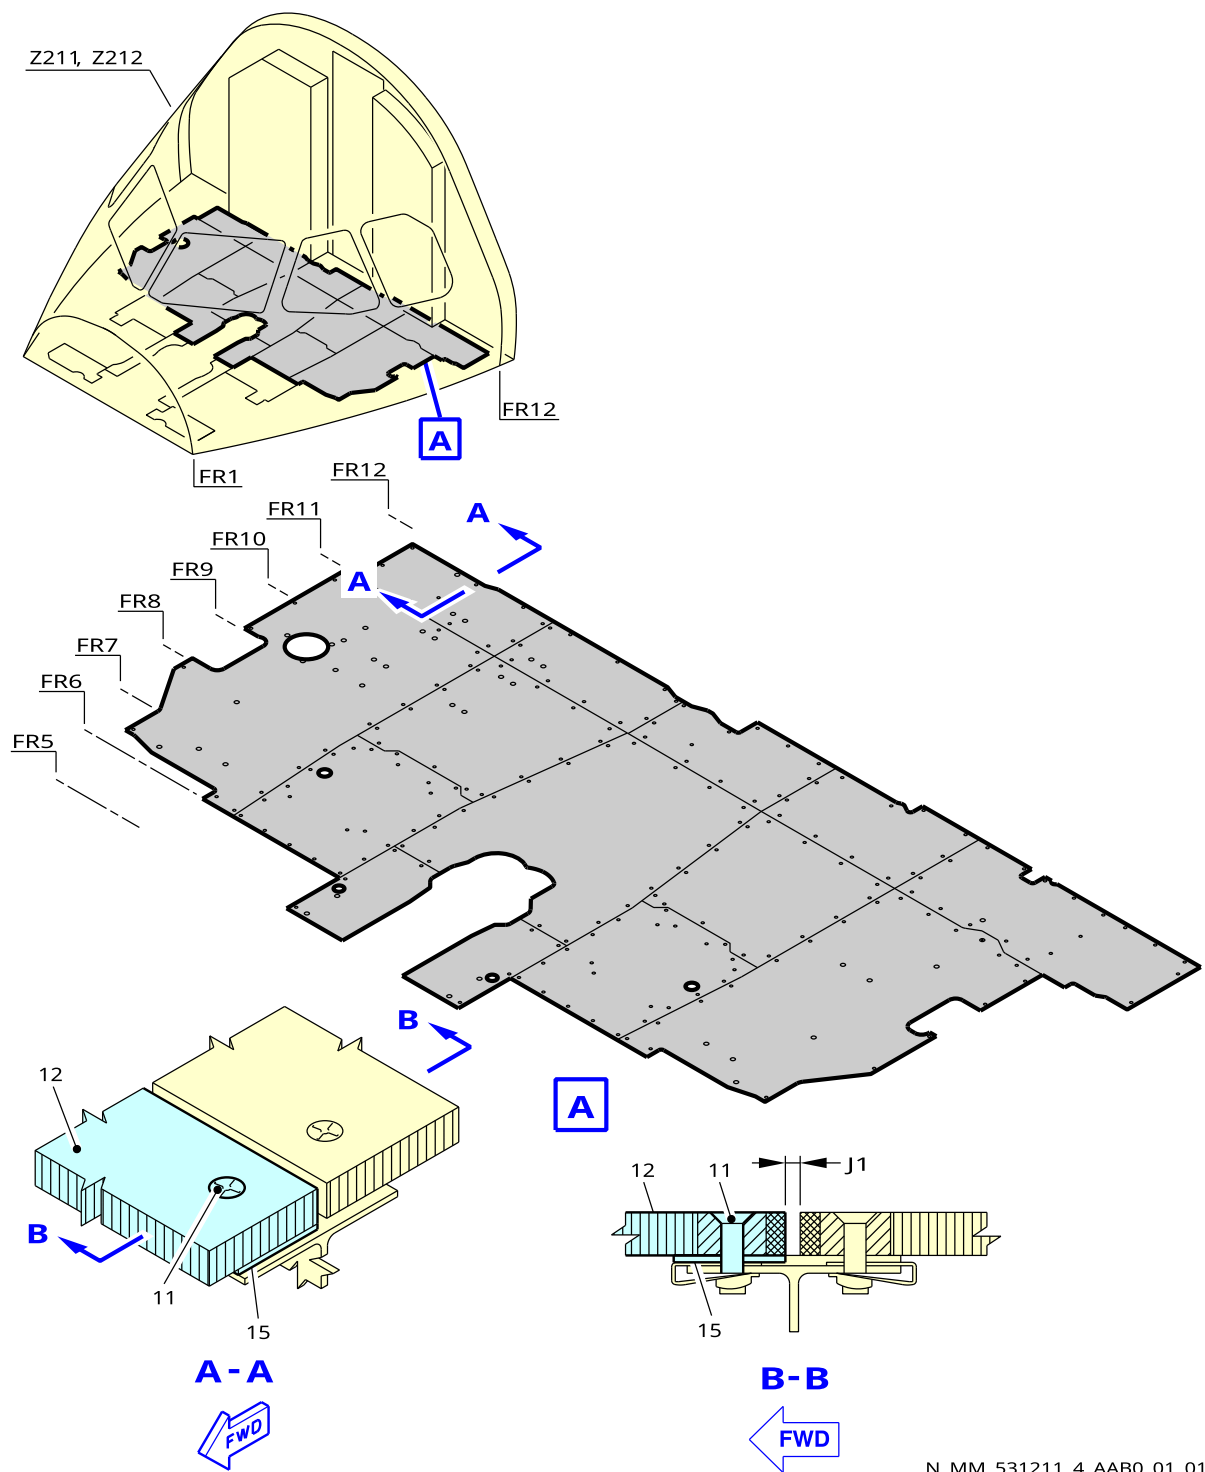

N_MM_531211_4_AAB0_01_01

Cockpit Floor Panels from FR6 thru FR12
Figure 1 / Graphic 53-12-11 -991-00300


TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

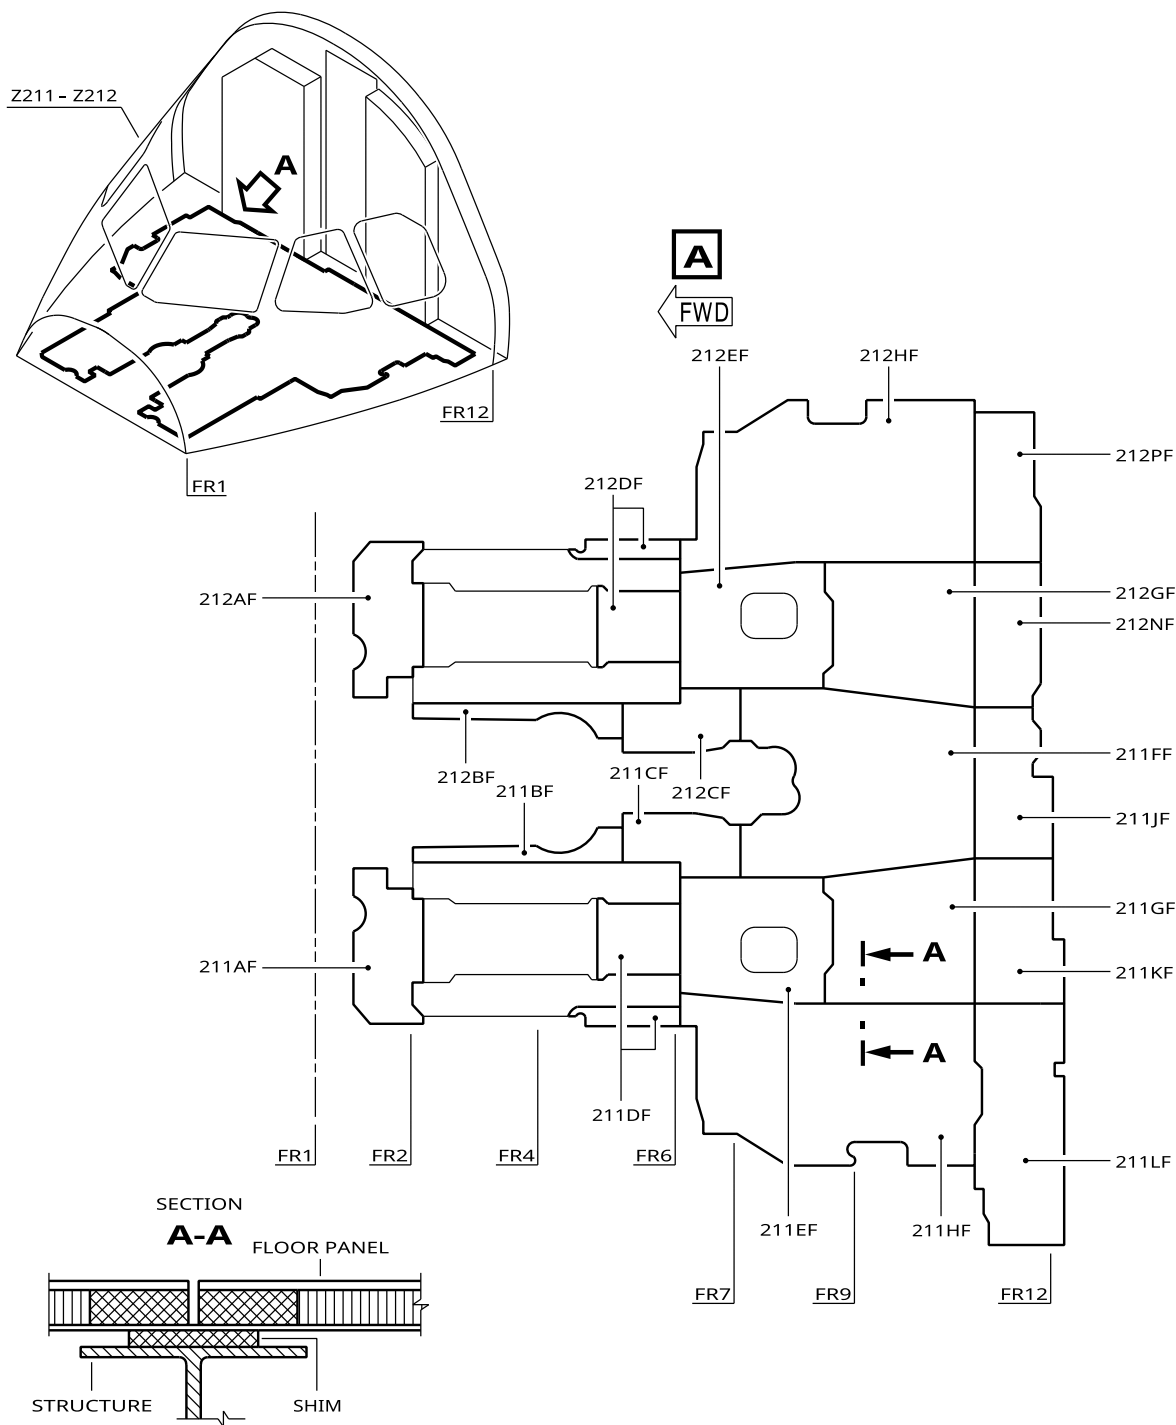

N_MM_531211_4_AGM0_01_01

Shims from FR1 thru FR12
Figure 1 / Graphic 53-12-11 -991-00400

TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - COCKPIT FLOOR - REMOVAL/INSTALLATION

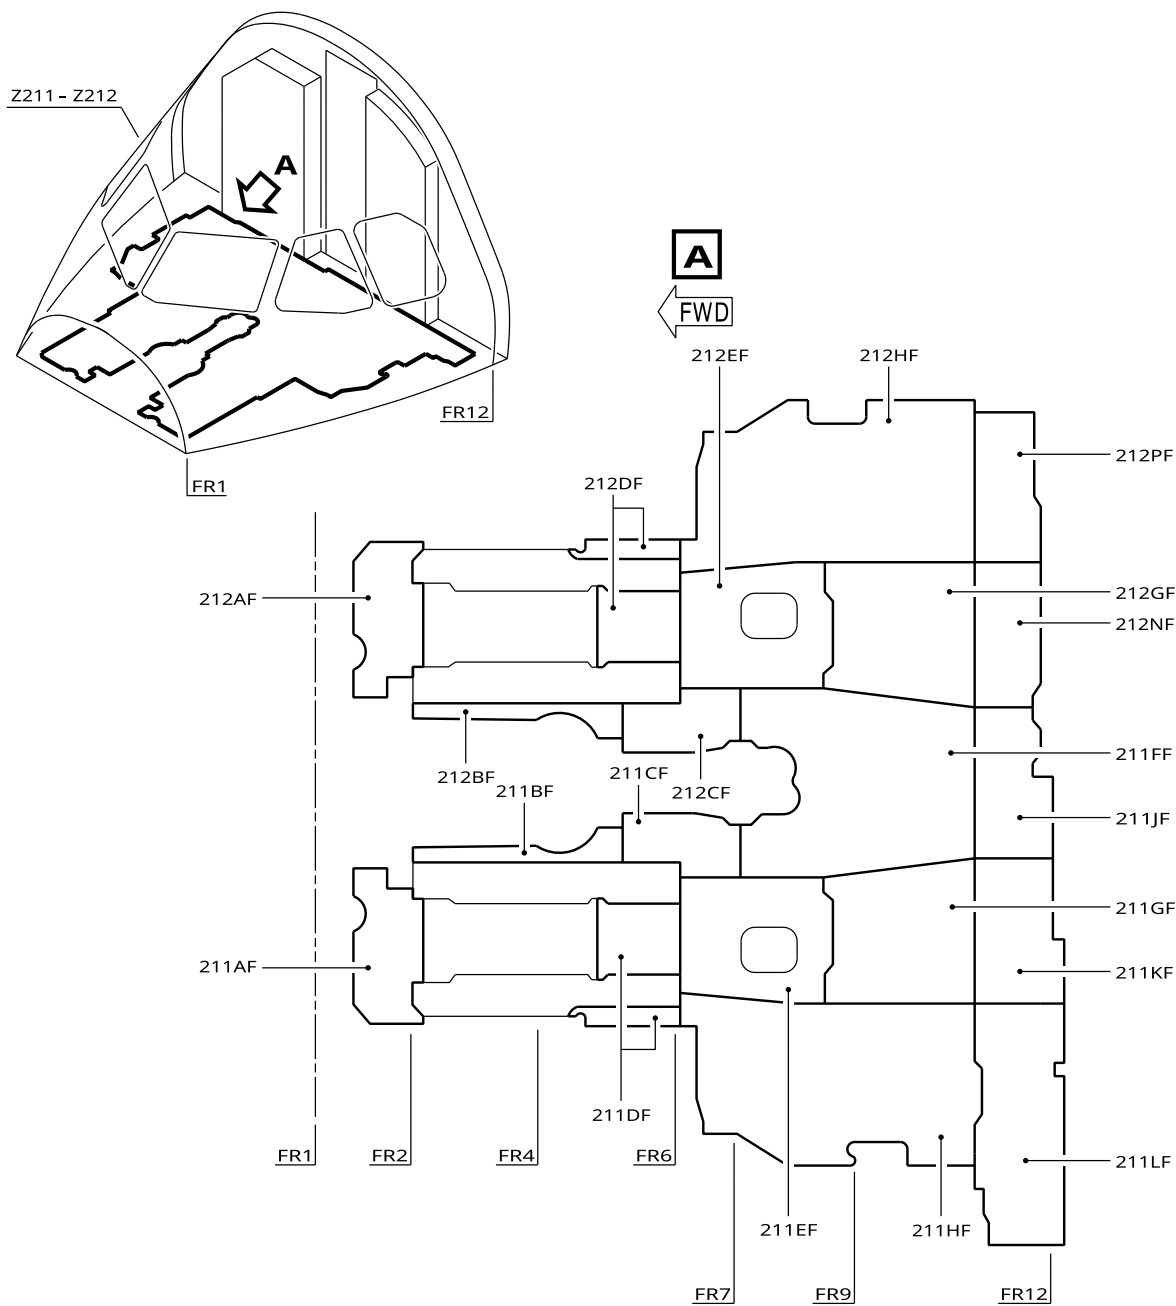

N_MM_531211_4_AAM0_01_01

Cockpit Floor Panels
Figure 1 / Graphic 53-12-11 -991-00100

 MET.32712982		Task Card Title: FWD CARGO COMPARTMENT CLEANING					
Task Card NO: 200131-01-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: II,INSP,AF,AV,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 09			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 15	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: RST		Special Code: AF		MSG Code: MRB, EWIS, GACA		Request: Phase:	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRIED OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 131,132							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		24-92-00-100-025-A					
AMM		249200-100-025					
ACCESS PANELS:							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
No parts assigned to this Task Item							
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
TASK PREPARATION							
Job Description							
A. PERFORM JOB SET UP AS PER AMM 24-92-00-100-025-A AND REMOVE CEILING AND SIDEWALL PANELS IN THE FWD CARGO COMPARTMENT AS FOLLOWS:							
(1) FOR A320 AIRCRAFT FROM FR24 TO FR34.							
(2) FOR A321 AIRCRAFT FROM FR24 TO FR35.7.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
						Day	Month
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.			HRS				
TASK INSTRUCTIONS							
Job Description							
A. CLEAN ALL WIRING INSTALLED IN THE FWD CARGO COMPARTMENT (ONLY CONTAMINATED WIRING). CLEAN THE WIRING IF THERE IS DUST, LINT OR HYDRAULIC CONTAMINATION AS PER AMM TASK 24-92-00-100-025-A.							



Task Card Title:

FWD CARGO COMPARTMENT CLEANING

Task Card NO:

200131-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AV/ACFT_TECH		HRS				
Insp.			HRS				

TASK CLOSE UP**Job Description**

A. OK TO INSTALL THE CEILING AND SIDEWALL PANELS AS APPLICABLE:

- (1) FOR A320 AIRCRAFT FROM FR24 TO FR34.
 (2) FOR A321 AIRCRAFT FROM FR24 TO FR35.7.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	II/INSP		HRS				

TASK CLOSE UP**Job Description**

A. PERFORM CLOSE UP AS PER AMM 24-92-00-100-025-A AND RE-INSTALL CEILING AND SIDEWALL PANELS IN THE FWD CARGO COMPARTMENT AS FOLLOWS:

- (1) FOR A320 AIRCRAFT FROM FR24 TO FR34.
 (2) FOR A321 AIRCRAFT FROM FR24 TO FR35.7.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.			HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

 Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

 Remark's: _____



Task Card Title:

FWD CARGO COMPARTMENT CLEANING

Task Card NO:

200131-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

TASK 24-92-00-100-025 -A

On A/C 001-999

Cleaning of EWIS Installed in the Forward Cargo Compartment (only if Contaminated) (EWIS)

1. Reason for the Job

Refer to the MPD TASK: 200131-01

CLEANING OF EWIS INSTALLED IN THE FORWARD CARGO COMPARTMENT (ONLY IF CONTAMINATED) (EWIS)

NOTE : This is an EWIS (Electrical Wiring Interconnection System) procedure. EWIS is defined in ESPM 20-33-11.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
131	FORWARD CARGO COMPARTMENT
132	FORWARD CARGO COMPARTMENT
825	

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 25-54-12-000-002-A	Removal of the Ceiling Panel From the Forward Cargo Compartment
Ref. AMM 25-54-12-000-003-A	Removal of the Sidewall Panels From the Forward Cargo Compartment
Ref. AMM 25-54-12-400-002-A	Installation of the Ceiling Panel in the Forward Cargo Compartment
Ref. AMM 25-54-12-400-003-A	Installation of the Sidewall Panels in the Forward Cargo Compartment
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 52-30-00-860-003-A	Open the Forward or Aft Cargo-Compartment Door With the Hand Pump
Ref. AMM 52-30-00-860-004-A	Close the FWD or Aft Cargo-Compartment Door with the Hand Pump
Ref. ESPM 20-55-00	
On A/C 003-100; 201-250	
Ref. Fig. (1 / 24-92-00-991-14400)	

3. Job Set-up

Subtask 24-92-00-010-141-A

On A/C 003-100; 201-250

A. Get Access

- (1) Put the ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE in position below forward cargo-compartment door 825 .
- (2) Open forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-001-A](#) or [Ref. AMM 52-30-00-860-003-A](#).
- (3) If you installed Additional Center Tank (ACT) No. 4.1 or ACT No. 4 and/or ACT No. 6 at zone 130, remove it (them) 28-11-27-000-802 or 28-11-27-000-005 and/or 28-11-27-000-007.
- (4) Remove the ceiling panels from the forward cargo compartment between frame 24 and frame 34 [Ref. AMM 25-54-12-000-002-A](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

- (5) Remove the sidewall panels from the forward cargo compartment between frame 24 and frame 34 [Ref. AMM 25-54-12-000-003-A](#).

Subtask 24-92-00-862-129-A

On A/C 001-999

- B. De-energize the aircraft electrical circuits

[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#) [Ref. AMM 24-41-00-862-002-A-02](#).

4. Procedure

On A/C 003-100; 201-250

Ref. Fig. 1 / 24-92-00-991-14400

Subtask 24-92-00-160-073-A

On A/C 001-999

- A. Cleaning of All Wiring Installed in the Forward Cargo Compartment (Only Contaminated Wiring)

- (1) Clean the wiring if there is dust, lint or hydraulic contamination
[Ref. ESPM 20-55-00](#).
- (a) On the AC/DC feeder routes: 1G and 2G.
 - (b) On the AC/DC power-distribution routes: 1P and 2P.
 - (c) On the flight control routes: 7S, 8S, 7M and 8M.
 - (d) On the engine control routes: 1S, 2S, 4S and 5S.
 - (e) On the other routes: 1M and 2M.
 - (f) On the coaxial wiring routes: 1U, 2U, 1T, 2T, 3T, 4T, 9T and 5V.
 - (g) On the audio route: 1R.
 - (h) On the generator excitation routes: 1E and 2E.

5. Close-up


Subtask 24-92-00-410-139-A

On A/C 003-100; 201-250

- A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the sidewall panels in the forward cargo compartment between frame 24 and frame 34
[Ref. AMM 25-54-12-400-003-A](#).
- (3) Install the ceiling panels in the forward cargo compartment between frame 24 and frame 34
[Ref. AMM 25-54-12-400-002-A](#).
- (4) If you removed ACT No. 4.1 or ACT No. 4 and/or ACT No. 6 from zone 130, install it (them)
28-11-27-400-802 or 28-11-27-400-005 and/or 28-11-27-400-007.
- (5) Close forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-002-A](#) or
[Ref. AMM 52-30-00-860-004-A](#).
- (6) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

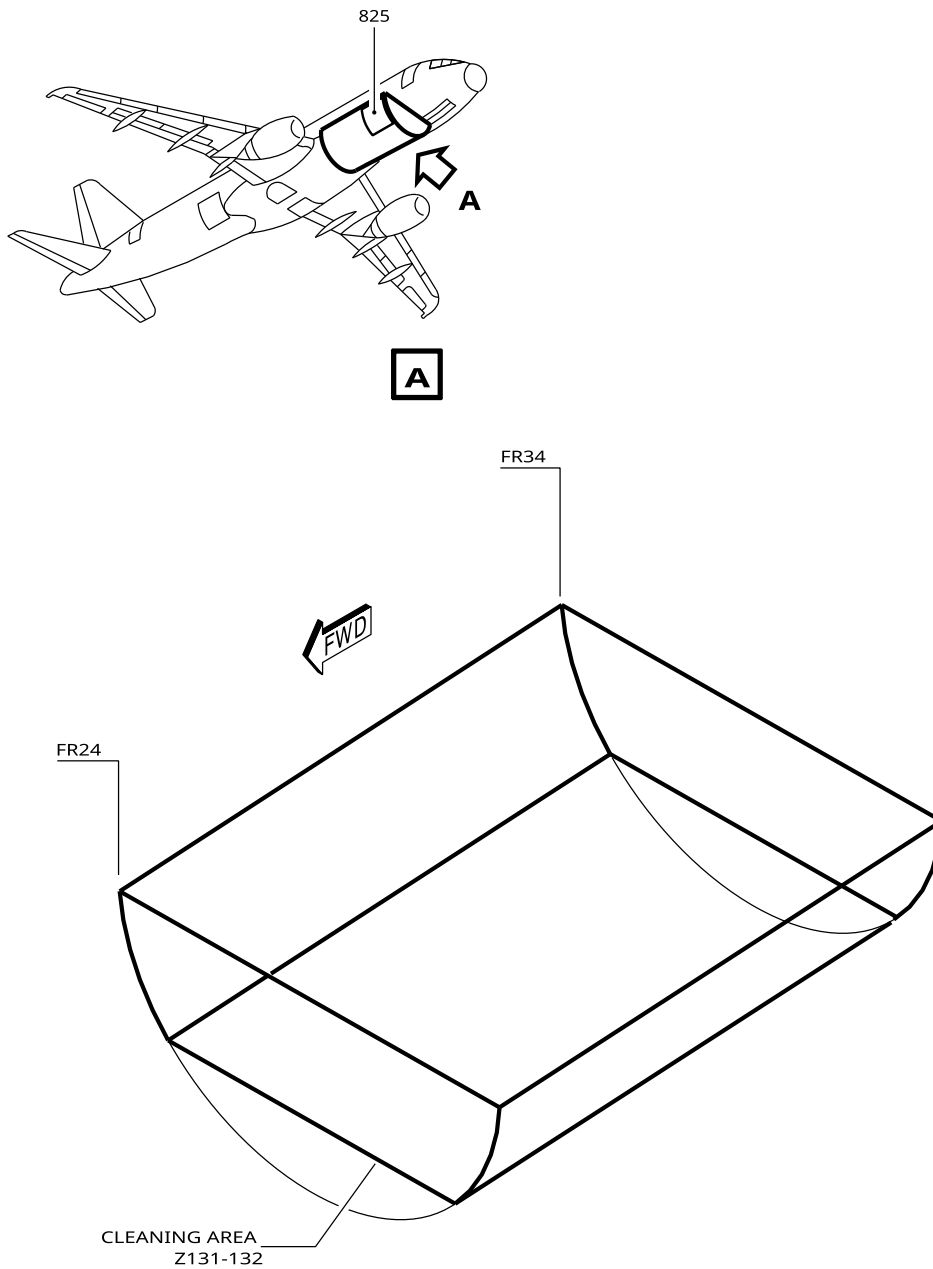

N_MM_249200_7_TLM0_01_00

Forward Cargo Compartment - Cleaning Area - Zones 131-132
Figure 1 / Graphic 24-92-00 -991-14400

 MET.32712984		Task Card Title: FWD CGO UNDER FLOOR BAY (EWIS) CLEAN					
Task Card NO: 200133-01-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: INSP,II,AF,AV,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 09			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 16	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: RST		Special Code: AF		MSG Code: MRB, EWIS, GACA		Request: JOB-SETUP,CLEAN-UP,INSPECTION,JOB-CLOSURE EUP	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRIED OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 133,134							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		24-92-00-100-024-A					
AMM		249200-100-024					
ACCESS PANELS:							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
No parts assigned to this Task Item							
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
TASK PREPARATION							
Job Description							
A. PERFORM JOB SET UP AS PER AMM TASK 24-92-00-100-024-A AND REMOVE FLOOR PANELS IN THE FWD CARGO COMPARTMENT AS APPLICABLE (REF. AMM TASK 53-22-14-000-001-A): (1) FOR A320 AIRCRAFT FROM FR24 TO FR34. (2) FOR A321 AIRCRAFT FROM FR24 TO FR35.7.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
						Day	Month
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.			HRS				
TASK INSTRUCTIONS							
Job Description							
A. CLEAN ALL WIRING INSTALLED UNDER FLOOR BAY OF FWD CARGO COMPARTMENT (ONLY CONTAMINATED WIRING). CLEAN THE WIRING IF THERE IS DUST, LINT OR HYDRAULIC CONTAMINATION AMM TASK 24-92-00-100-024-A.							



Task Card Title:

FWD CGO UNDER FLOOR BAY (EWIS) CLEAN

Task Card NO:

200133-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AV/ACFT_TECH		HRS				
Insp.			HRS				

TASK INSTRUCTIONS**Job Description**

A. OK TO INSTALL FLOOR PANELS AS APPLICABLE:

(1) FOR A320 AIRCRAFT FROM FR24 TO FR34.

(2) FOR A321 AIRCRAFT FROM FR24 TO FR35.7.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

TASK CLOSE UP**Job Description**

B. PERFORM JOB CLOSE UP AS PER AMM TASK 24-92-00-100-024-A AND INSTALL FLOOR PANELS IN THE FWD CARGO COMPARTMENT AS APPLICABLE (REF. AMM TASK 53-22-14-000-001-A):

(1) FOR A320 AIRCRAFT FROM FR24 TO FR34.

(2) FOR A321 AIRCRAFT FROM FR24 TO FR35.7.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	INSP/II		HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____



MET.32712984

Task Card Title:

FWD CGO UNDER FLOOR BAY (EWIS) CLEAN

Task Card NO:

200133-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

TASK 24-92-00-100-024 -A

On A/C 001-999

Cleaning of EWIS Installed in the Underfloor Bay of Forward Cargo Compartment (Only If Contaminated) (EWIS)

1. Reason for the Job

Refer to the MPD TASK: 200133-01

CLEANING OF EWIS INSTALLED IN THE UNDERFLOOR BAY OF FORWARD CARGO COMPARTMENT (ONLY IF CONTAMINATED) (EWIS)

NOTE : This is an EWIS (Electrical Wiring Interconnection System) procedure. EWIS is defined in ESPM 20-33-11.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
On A/C 003-100; 201-250		
No specific	1	ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
133	BAY UNDER FWD CAR COMPT FLOOR
134	BAY UNDER FWD CAR COMPT FLOOR
133AL , 134AR , 825	

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 52-30-00-860-003-A	Open the Forward or Aft Cargo-Compartment Door With the Hand Pump
Ref. AMM 52-30-00-860-004-A	Close the FWD or Aft Cargo-Compartment Door with the Hand Pump
Ref. AMM 53-22-14-000-001-A	Removal of the Forward Cargo-Compartment Floor-Panels
On A/C 001-999	
Ref. AMM 53-22-14-400-001-A	Installation of the Forward Cargo-Compartment Floor-Panels
Ref. AMM 53-22-14-400-001-A-01	Installation of the Forward Cargo-Compartment Floor-Panels (Alternative Installation Procedure with the Skyflex Option)
Ref. ESPM 20-55-00	
On A/C 003-100; 201-250	
Ref. Fig. (1 / 24-92-00-991-12200)	

3. Job Set-up

Subtask 24-92-00-010-131-A

On A/C 003-100; 201-250

A. Get Access

- (1) Put the ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE in position below forward cargo-compartment door 825 .
- (2) Open forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-001-A](#) and [Ref. AMM 52-30-00-860-003-A](#).
- (3) If you installed Additional Center Tank (ACT) No. 4.1 or ACT No. 4 and/or ACT No. 6 at zone 130, remove it (them) 28-11-27-000-802 or 28-11-27-000-005 and/or 28-11-27-000-007.

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

- (4) Open access doors 133AL and 134AR .
- (5) Remove the floor panels from the forward cargo compartment between frame 24 and frame 34 [Ref. AMM 53-22-14-000-001-A](#).

Subtask 24-92-00-862-119-A

On A/C 001-999

B. De-energize the aircraft electrical circuits

[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#) [Ref. AMM 24-41-00-862-002-A-02](#).

4. Procedure

On A/C 003-100; 201-250

Ref. Fig. 1 / 24-92-00-991-12200

Subtask 24-92-00-160-072-A

On A/C 001-999

A. Cleaning of All Wiring Installed in the Underfloor Bay of Forward Cargo Compartment (Only Contaminated Wiring)

- (1) Clean the wiring if there is dust, lint or hydraulic contamination
[Ref. ESPM 20-55-00](#).
 - (a) On the flight control routes: 8S and 8M.
 - (b) On the engine control route: 2S.
 - (c) On the other routes: 1M and 2M.
 - (d) On the coaxial wiring route: 5U.

5. Close-up


Subtask 24-92-00-410-129-A

On A/C 003-100; 201-250


A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install floor panels in the forward cargo compartment between frame 24 and frame 34
[Ref. AMM 53-22-14-400-001-A](#) [Ref. AMM 53-22-14-400-001-A-01](#).
- (3) If you removed ACT No. 4.1 or ACT No. 4 and/or ACT No. 6 from zone 130, install it (them)
28-11-27-400-802 or 28-11-27-400-005 and/or 28-11-27-400-007.
- (4) Close forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-002-A](#) and
[Ref. AMM 52-30-00-860-004-A](#).
- (5) Close access doors 133AL and 134AR .
- (6) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

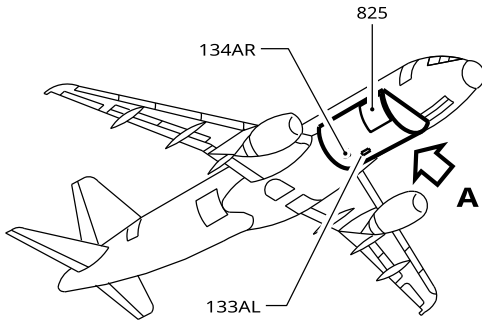

A

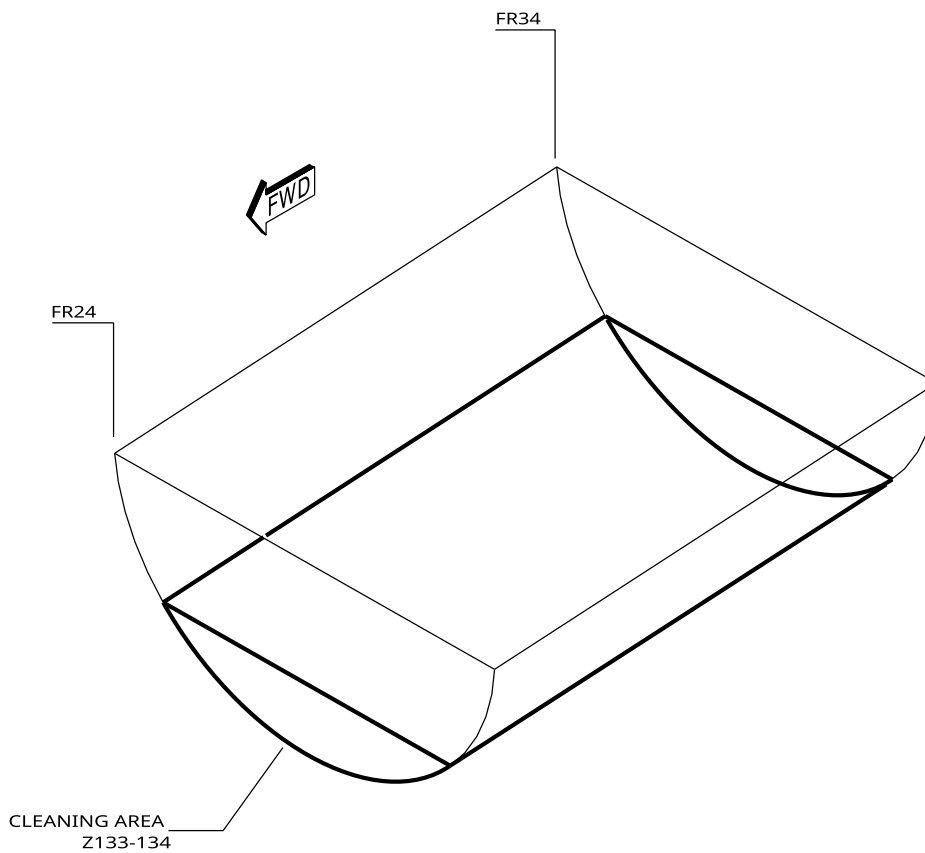

N_MM_249200_7_RLM0_01_00

Forward Cargo Compartment - Cleaning Area - Zones 133-134
Figure 1 / Graphic 24-92-00 -991-12200

 MET.32712930		Task Card Title: ZONE UNDER CABIN FLOOR CLEANING					
Task Card NO: 200145-01-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: II,INSP,CAB,AV,AF,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 18	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: RST		Special Code: CAB		MSG Code: MRB, EWIS, GACA		Request: JOB-SETUP,CLEAN-UP,INSPECTION,JOB-CLOSURE EUP	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 145,146							
DOCUMENT REFERENCES:							
Doc Typ AMM		Reference 24-92-00-100-015-A					
ACCESS PANELS:							
MATERIAL REQUIREMENTS:							
Part Number PS870B1/2		Description SEALANT S/L6 IF SD USE PN PS870				Qty. 12.0	
TT-I-735		ISOPROPYL ALCOHOL				2.0	
NSA3811-0		CORD U/O A925263410 ** UT-2 , B70				403.0	
TOOLING REQUIREMENTS:							
Part Number No tools assigned to this Task Item		Description				Qty.	
Job Description							
PASSENGER CABIN UNDER FLOOR WIRING CLEANING A. REMOVE THE CABIN FLOOR PANELS FROM FR36 TO FR46(REF. AMM TASK 53-32-12-000-002).							
STEP COMPLETION SIGN OFF:							
Qualification / Skill		Number of employees		Duration		Number./Signature	
Mechanic/s		CAB/ACFT_TECH		HRS		Date	
Insp.		HRS		Date		Date	
Job Description							



Task Card Title:

ZONE UNDER CABIN FLOOR CLEANING

Task Card NO:

200145-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

B. CLEAN ALL WIRING INSTALLED IN THE ZONE UNDER CABIN FLOOR (ONLY CONTAMINATED WIRING)

PER AMM TASK 24-92-00-100-015-A.

NOTE: THIS IS AN EWIS (ELECTRICAL WIRING INTERCONNECTION SYSTEM) PROCEDURE. EWIS IS
DEFINED IN ESPM 20-33-11.**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AV/ACFT_TECH			HRS				
Insp.				HRS				

Job Description

C. OK TO INSTALL CABIN FLOOR PANELS.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	II/INSP			HRS				

Job Description

D. INSTALL THE CABIN FLOOR PANELS (REF. AMM TASK 53-32-12-400-002).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				
Insp.	INSP/II			HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____



MET.32712930

Task Card Title:

ZONE UNDER CABIN FLOOR CLEANING

Task Card NO:

200145-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

TASK 24-92-00-100-015 -A

On A/C 001-999

Cleaning of EWIS Installed in the Zone Under Cabin Floor (Only If Contaminated)(EWIS)

1. Reason for the Job

Refer to the MPD TASK: 200145-01

CLEANING OF EWIS INSTALLED IN THE ZONE UNDER CABIN FLOOR (ONLY IF CONTAMINATED) (EWIS)

NOTE : This is an EWIS (Electrical Wiring Interconnection System) procedure. EWIS is defined in ESPM 20-33-11.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
145	PRESS ZONE BETW WING CTR BOX MAIN GEAR
146	PRESS ZONE BETW WING CTR BOX MAIN GEAR

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 52-10-00-010-001-A	Opening of the Passenger/Crew Door
Ref. AMM 52-10-00-410-001-A	Closing of the Passenger/Crew Door
On A/C 003-113	
Ref. AMM 53-00-00-000-801-A	Removal of the Floor Panels in the Cabin from FR12 to FR70
On A/C 001-999	
Ref. AMM 53-00-00-000-801-A-01	Removal of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Removal Procedure - Dry Sealing Concept)
On A/C 003-113	
Ref. AMM 53-00-00-400-801-A	Installation of the Floor Panels in the Cabin from FR12 to FR70
On A/C 001-999	
Ref. AMM 53-00-00-400-801-A-01	Installation of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Installation Procedure - Dry Sealing Concept)
Ref. ESPM 20-55-00	
Ref. AMM 06-41-53-00	FUSELAGE-DESCRIPTION AND OPERATION
Ref. Fig. (1 / 24-92-00-991-08700)	

3. Job Set-up

Subtask 24-92-00-010-116-A

On A/C 001-999

A. Get Access

- (1) Put an ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE in position.
- (2) Open the aft passenger/crew doors 832 (842) [Ref. AMM 52-10-00-010-001-A](#).

Subtask 24-92-00-862-104-A

On A/C 001-999

B. De-energize the aircraft electrical circuits

[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#) [Ref. AMM 24-41-00-862-002-A-02](#).

4. Procedure

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

Ref. Fig. 1 / 24-92-00-991-08700

Subtask 24-92-00-410-172-A

On A/C 001-999

A. Preparation for Cleaning

- (1) Remove the cabin floor panels from FR36 to FR46

On A/C 003-113

Ref. AMM 53-00-00-000-801-A

On A/C 001-999

Ref. AMM 53-00-00-000-801-A-01, Ref. AMM 06-41-53-00.

Subtask 24-92-00-160-064-A

On A/C 001-999

B. Cleaning of All Wiring Installed in the Zone Under Cabin Floor (Only Contaminated Wiring)

- (1) Clean the wiring if there is dust, lint or hydraulic contamination

Ref. ESPM 20-55-00.

(a) On the AC/DC power-distribution route: 1P.

(b) On the engine control routes: 1S and 2S.

(c) On the other routes: 1M and 2M.

5. Close-up

Subtask 24-92-00-410-114-A

On A/C 001-999

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.

- (2) Install the cabin floor panels from FR36 to FR46

On A/C 003-113

Ref. AMM 53-00-00-400-801-A



On A/C 001-999

Ref. AMM 53-00-00-400-801-A-01, Ref. AMM 06-41-53-00.

- (3) Close the aft passenger/crew doors 832 (842) Ref. AMM 52-10-00-410-001-A.

- (4) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

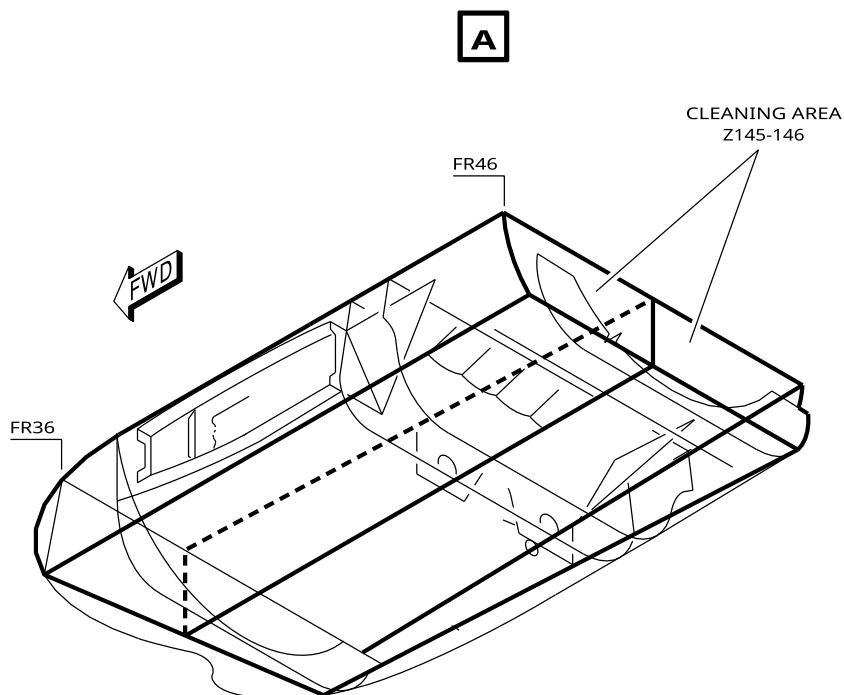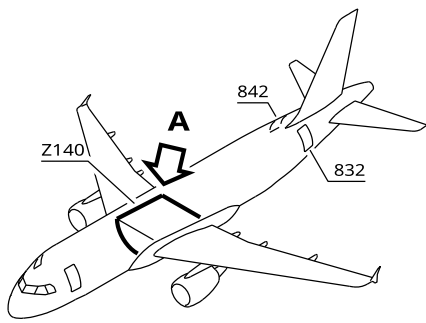

N_MM_249200_7_QLM0_01_00

Zone Under Cabin Floor - Cleaning Area - Zones 145-146

Figure 1 / Graphic 24-92-00 -991-08700

 MET.28325905		Task Card Title: AFT CARGO COMPARTMENT EWIS CLEANING					
Task Card NO: 200151-01-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: INSP,II,RIL,AV,ACFT_TECH,AP		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 09			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 19	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: RST		Special Code: AF		MSG Code: MRB, EWIS, GACA		Request: ON,CLEAN-UP,JOB-SET UP,JOB-CLOSEUP,INSP ECTION	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 151,152							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		24-92-00-100-026-A					
ACCESS PANELS:							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
ABS0376-3-30		SCREW U/O A5327504000860				60.0	
NAS1102-3-8		SCREW U/O 792999-10				20.0	
ABS0376-3-40		SCREW U/O A5327513500061				30.0	
ABS0336-08		STUD				50.0	
ABS0336-13		STUD				30.0	
ABS0208-02		WASHER..REF AOG# S12-5100				50.0	
ABS0336-11		STUD..REF AOG# SB-079360				30.0	
NAS1801-08-6		SCREW				10.0	
NAS1149DN816K		WASHER...				10.0	
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
TASK CLOSE UP							
Job Description							
B. INSTALL THE FLOOR, THE CEILING AND THE SIDEWALL PANELS IN THE AFT CARGO COMPARTMENT FROM FR46 TO FR59.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
						Day	Month
Mechanic/s	ACFT_TECH/AP		HRS				
Insp.	INSP/II		HRS				
TASK CLOSE UP							
Job Description							



Task Card Title:

AFT CARGO COMPARTMENT EWIS CLEANING

Task Card NO:

200151-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

A. OK TO INSTALL THE FLOOR, THE CEILING AND THE SIDEWALL PANELS IN THE AFT CARGO COMPARTMENT FROM FR46 TO FR59.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/II			HRS				

TASK INSTRUCTIONS**Job Description**

A. CLEAN ALL WIRING INSTALLED IN THE AFT CARGO COMPARTMENT, CLEAN THE WIRING IF THERE IS DUST, LINT OR HYDRAULIC CONTAMINATION PER AMM TASK 24-92-00-100-026-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AV/ACFT_TECH			HRS				
Insp.				HRS				

JOB SET UP**Job Description**

A. PERFORM JOB SET-UP AS PER AMM TASK 24-92-00-100-026-A AS FOLLOWS:

- (1) IF INSTALLED, REMOVE THE ADDITIONAL CENTER TANK (REF. AMM TASK 28-11-27-000-001-A).
- (2) REMOVE THE SIDEWALL, THE CEILING AND THE FLOOR PANELS IN THE AFT CARGO COMPARTMENT FROM FR 46 TO FR 59.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.				HRS				

TASK CLOSE UP**Job Description**

D. INSTALL THE ACT, IF REMOVED (REF. AMM TASK 28-11-27-400-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.	INSP/RII			HRS				

TASK CLOSE UP**Job Description**

C. OK TO INSTALL THE ACT, IF REMOVED.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year



Task Card Title:

AFT CARGO COMPARTMENT EWIS CLEANING

Task Card NO:

200151-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Mechanic/s				HRS				
Insp.	II/INSP			HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

_____, _____, _____, _____, _____, _____, _____, _____, _____, _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____

_____, _____, _____, _____, _____, _____, _____, _____, _____, _____

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 2 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 3 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 4 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 5 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

_____, _____, _____, _____, _____, _____, _____, _____, _____, _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

_____, _____, _____, _____, _____, _____, _____, _____, _____, _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

_____, _____, _____, _____, _____, _____, _____, _____, _____, _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

_____, _____, _____, _____, _____, _____, _____, _____, _____, _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

_____, _____, _____, _____, _____, _____, _____, _____, _____, _____

**Task Completion Close Up And
System Update****Station****Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

TASK 24-92-00-100-026 -A

On A/C 003-250; 301-350

Cleaning of EWIS Installed in the Aft Cargo Compartment (Only if Contaminated) (EWIS)

1. Reason for the Job

Refer to the MPD TASK: 200151-01

CLEANING OF EWIS INSTALLED IN THE AFT CARGO COMPARTMENT (ONLY IF CONTAMINATED) (EWIS)

NOTE : This is an EWIS (Electrical Wiring Interconnection System) procedure. EWIS is defined in ESPM 20-33-11.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
151	AFT CARGO COMPARTMENT
152	AFT CARGO COMPARTMENT
826	

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 25-55-11-000-002-A	Removal of the Ceiling Panels From the Aft Cargo Compartment - Frame 47/ Frame 59
Ref. AMM 25-55-11-000-003-A	Removal of the Sidewall Panels From the Aft Cargo Compartment
Ref. AMM 25-55-11-400-002-A	Installation of the Ceiling Panels in the Aft Cargo Compartment - Frame 47/Frame 59
Ref. AMM 25-55-11-400-003-A	Installation of the Sidewall Panels in the Aft Cargo Compartment
On A/C 003-100	
Ref. AMM 28-11-27-000-001-A	Removal of the Additional Center Tank (ACT)
Ref. AMM 28-11-27-400-001-A	Installation of the Additional Center Tank (ACT)
On A/C 001-999	
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 52-30-00-860-003-A	Open the Forward or Aft Cargo-Compartment Door With the Hand Pump
Ref. AMM 52-30-00-860-004-A	Close the FWD or Aft Cargo-Compartment Door with the Hand Pump
Ref. ESPM 20-55-00	
Ref. AMM 06-41-53-00	FUSELAGE-DESCRIPTION AND OPERATION
Ref. Fig. (1 / 24-92-00-991-14500)	

3. Job Set-up

Subtask 24-92-00-010-142-A

On A/C 003-250; 301-350

A. Get Access

- (1) Put an ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE in position.
- (2) Open the aft cargo-compartment door 826 [Ref. AMM 52-30-00-860-001-A](#) and [Ref. AMM 52-30-00-860-003-A](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

Subtask 24-92-00-862-130-A

On A/C 003-250; 301-350

B. De-energize the aircraft electrical circuits

Ref. AMM 24-41-00-862-002-A Ref. AMM 24-41-00-862-002-A-01 Ref. AMM 24-41-00-862-002-A-02.

4. Procedure

Ref. Fig. 1 / 24-92-00-991-14500

Subtask 24-92-00-410-173-A

On A/C 003-250; 301-350

A. Preparation for Cleaning

- (1) If you installed the Additional Center Tank (ACT) or ACTs No. 1 and No. 2 or ACTs No. 1, No. 2 and No. 3 at zones 151 and 152, remove it (them)

On A/C 003-100

Ref. AMM 28-11-27-000-001-A or 28-11-27-000-002 or 28-11-27-000-003 or 28-11-27-000-004.

- (2) Remove the sidewall panels from the aft cargo compartment between frame 47 and frame 59

On A/C 003-250; 301-350

Ref. AMM 25-55-11-000-003-A, Ref. AMM 06-41-53-00.

- (3) Remove the ceiling panels from the aft cargo compartment between frame 47 and frame 59

Ref. AMM 25-55-11-000-002-A, Ref. AMM 06-41-53-00.

Subtask 24-92-00-160-074-A

On A/C 003-250; 301-350

B. Cleaning of EWIS Installed in the Aft Cargo Compartment (Only Contaminated Wiring)

- (1) Clean the wiring if there is dust, lint or other contamination
Ref. ESPM 20-55-00.

5. Close-up

Subtask 24-92-00-410-140-A

On A/C 003-250; 301-350

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the ceiling panels in the aft cargo compartment between frame 47 and frame 59
Ref. AMM 25-55-11-400-002-A.
- (3) Install the sidewall panels in the aft cargo compartment between frame 47 and frame 59
Ref. AMM 25-55-11-400-003-A.
- (4) If you removed the ACT or ACTs No. 1 and No. 2 or ACTs No.1, No. 2 and No. 3 from zones 151 and 152, install it (them)

On A/C 003-100

Ref. AMM 28-11-27-400-001-A or 28-11-27-400-002 or 28-11-27-400-003 or 28-11-27-400-004.



- (5) Close aft cargo-compartment door 826

On A/C 003-250; 301-350

Ref. AMM 52-30-00-860-002-A and Ref. AMM 52-30-00-860-004-A.

- (6) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - CLEANING/PAINTING

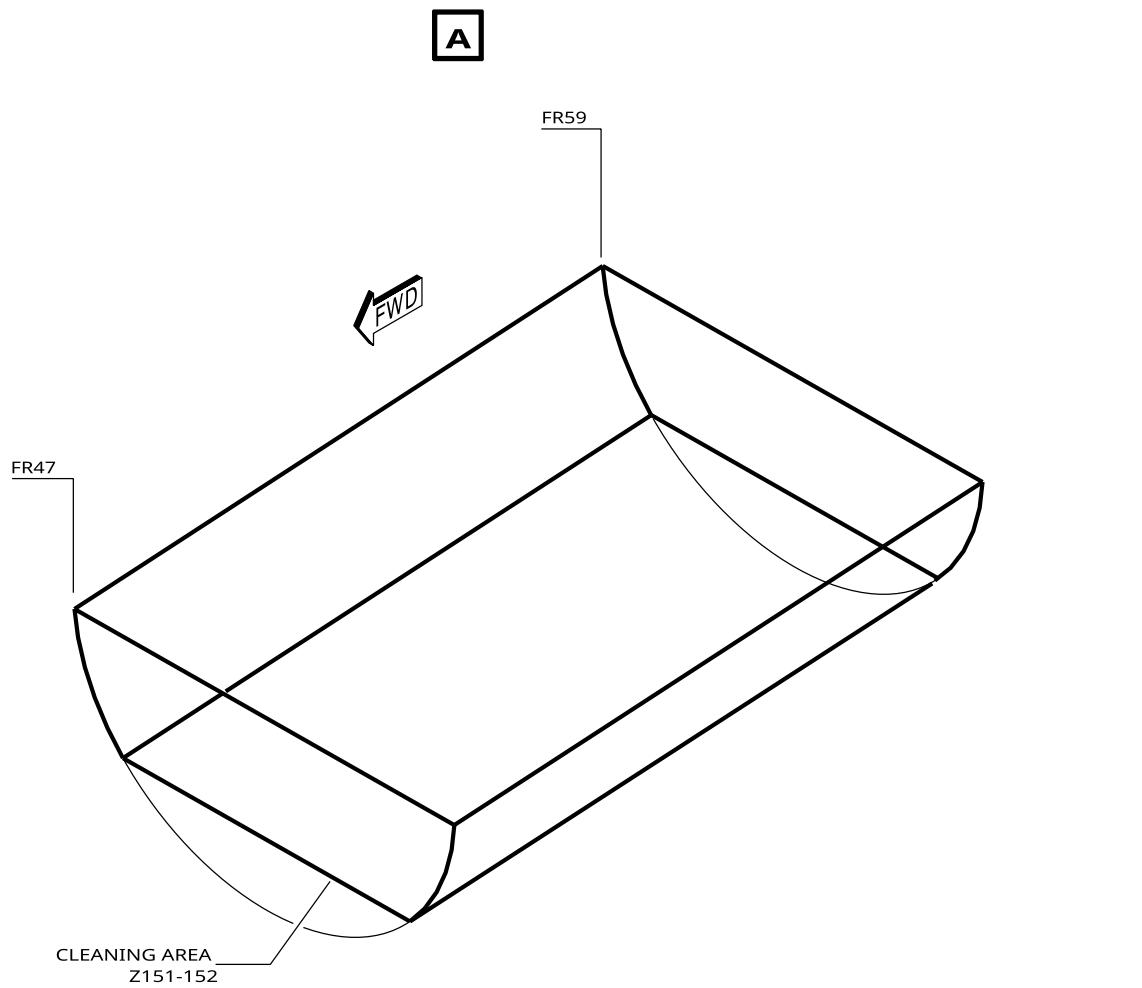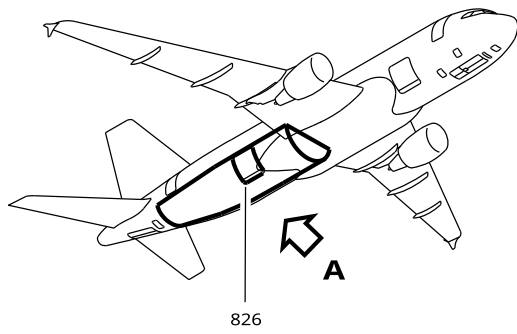

N_MM_249200_7_VLM0_01_00

Aft Cargo Compartment - Cleaning Area - Zones 151-152
Figure 1 / Graphic 24-92-00 -991-14500

 MET.28325775		Task Card Title: ACT (EWIS) WIRING CONNECTION INSP			
Task Card NO: 200151-03-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD	
A/C Type: 320		Block Taskcard		Main Skill: INSP,IL,RII,AV,AF,ACFT_TECH,F T	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 09	
Internal Check:		Check Type:		Work Order NO: 31574335, 32797253	
Tally Sequence NO: 20					
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐					
Type Code: GVI		Special Code: FT		MSG Code: MRB, EWIS, GACA	
Request:		Phase: ,TC/P,INSPECTION,JOB-CLOSEUP,JOB-CLOSEUP,P,JOB-CLOSEUP			
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRIED OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.					
Zones: 151,152					
DOCUMENT REFERENCES:					
Doc Typ		Reference			
AMM		28-11-00-790-013-A			
AMM		28-28-00-710-001-A			
AMM		28-28-00-710-004-A			
AMM		24-92-00-210-046-A			
AMM		28-11-27-000-001-A			
AMM		28-11-27-400-001-A			
ACCESS PANELS:					
153AZ, 153BZ, 154CZ, 197MB, 197NB, 197PB					
MATERIAL REQUIREMENTS:					
Part Number		Description			Qty.
98D28108366001		*** UNKNOWN PART ***			1.0
AMS5687		LOCKING WIRE NICKEL			1.0
NSA8203-114		PACKING *100128250			2.0
NSA8203-151		PACKING *100199990			5.0
NSA8203-219		PACKING			2.0
NSA8203-223		PACKING			5.0
NSA8203-226		O-RING (A330 FLEET)			4.0
VV-P-236		GREASE - PETROLATUM			1.0
D5337557820800		SHIM			8.0
TOOLING REQUIREMENTS:					
Part Number		Description			Qty.
98D28108293000		ADAPTOR WATER DRAIN			1.0
PREPARATION					
Job Description					
A. PREPARE FOR ACT REMOVAL AS PER AMM TASK 28-11-27-000-001-A.					
STEP COMPLETION SIGN OFF:					



Task Card Title:

ACT (EWIS) WIRING CONNECTION INSP

Task Card NO:

200151-03-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/FT			HRS				
Insp.				HRS				

ACT REMOVAL**Job Description**

A. PERFORM THE FOLLOWING TO REMOVE THE ACT AS PER AMM 28-11-27-000-001-A:

- (1) DISCONNECT THE ELECTRICAL HARNESS OF THE ACT.
- (2) DISCONNECT THE BONDING STRAPS OF THE ACT FROM THE AIRCRAFT STRUCTURE.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AV/ACFT_TECH			HRS				
Insp.				HRS				

ACT REMOVAL**Job Description**

B. REMOVE THE ACT AS PER AMM 28-11-27-000-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/FT			HRS				
Insp.				HRS				

TASK INSTRUCTIONS**Job Description**

A. PERFORM GENERAL VISUAL INSPECTION OF ALL WIRING INSTALLED AT THE ACT AMM TASK 24-92-00-210-046-A

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/II			HRS				

ACT INSTALLATION**Job Description**

A. PERFORM AN ADJUSTMENT OF THE ACT AS PER AMM TASK 28-11-27-400-001-A AS FOLLOWS:

- (1) ADJUST THE CRASH-STOPPERS.
- (2) ADJUST THE LATCH ELEMENTS.
- (3) MAKE SURE THAT ALL LATCH ELEMENTS ARE CORRECTLY LOCKED.
- (4) PUT THE LOCKING PLATES IN POSITION ON THE LATCH ELEMENTS, INSTALL THE WASHERS AND THE SCREWS ON THE LOCKING PLATES AND SAFETY THE SCREWS.



Task Card Title:

ACT (EWIS) WIRING CONNECTION INSP

Task Card NO:

200151-03-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	ACFT_TECH/FT			HRS			
Insp.	II/INSP			HRS			

ACT INSTALLATION**Job Description**

B. OK TO INSTALL THE ACT.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s				HRS			
Insp.	II/INSP			HRS			

ACT INSTALLATION**Job Description**

C. CONNECT THE AIR HOSE TO THE ACT PRESSURE LINE (REF. AMM TASK 28-11-27-400-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS			
Insp.				HRS			

ACT INSTALLATION**Job Description**

D. CONNECT THE BONDING STRAPS AND THE ELECTRICAL HARNESS OF THE ACT TO THE AIRCRAFT STRUCTURE AND PERFORM THE ELECTRICAL BONDING ON THE ACT (REF. AMM TASK 28-11-27-400-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AV/ACFT_TECH			HRS			
Insp.	INSP/RII			HRS			

ACT INSTALLATION**Job Description**

E. INSTALL THE WATER DRAIN TUBES ON THE ACT (REF. AMM TASK 28-11-27-400-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	ACFT_TECH/FT			HRS			



Task Card Title:

ACT (EWIS) WIRING CONNECTION INSP

Task Card NO:

200151-03-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Insp.	INSP/RII			HRS			
-------	----------	--	--	-----	--	--	--

ACT INSTALLATION**Job Description**

F. PERFORM THE ELECTRICAL BONDING ON THE ACT WATER DRAIN TUBES (REF. AMM TASK 28-11-27-400-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AV/ACFT_TECH			HRS			
Insp.	INSP/RII			HRS			

ACT INSTALLATION**Job Description**

G. PERFORM AN OPERATIONAL CHECK ON THE ACT WATER DRAIN VALVES (REF. AMM TASK 28-11-27-400-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	ACFT_TECH/FT			HRS			
Insp.	INSP/RII			HRS			

ACT INSTALLATION**Job Description**

H. INSTALL CAVITY DRAIN ASSEMBLY ON THE ACT (REF. AMM TASK 28-11-27-400-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	ACFT_TECH/FT			HRS			
Insp.	INSP/RII			HRS			

ACT INSTALLATION**Job Description**

I. CONNECT THE FLEXIBLE VENT AND FUEL PIPES TO THE ACT (REF. AMM TASK 28-11-27-400-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	ACFT_TECH/FT			HRS			
Insp.	INSP/RII			HRS			

TEST**Job Description**

A. PERFORM A LEAK TEST OF ACT VENT/TRANSFER PIPE SHROUD (REF. AMM TASK 28-28-00-790-005-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year



Task Card Title:

ACT (EWIS) WIRING CONNECTION INSP

Task Card NO:

200151-03-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Mechanic/s	ACFT_TECH/FT			HRS			
Insp.	INSP/RII			HRS			

TEST**Job Description**

B. PERFORM AN OPERATIONAL TEST OF THE ACT MANUAL TRANSFER SYSTEM (REF. AMM TASK 28-28-00-710-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	ACFT_TECH/FT		HRS				
Insp.	INSP/RII		HRS				

TEST**Job Description**

C. PERFORM AN OPERATIONAL TEST OF THE ACT AUTOMATIC TRANSFER SYSTEM (REF. AMM TASK 28-28-00-710-004).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	ACFT_TECH/FT		HRS				
Insp.	INSP/RII		HRS				

CLOSE UP**Job Description**

A. REMOVE THE AIRCRAFT CENTER TANK 1 "R / I" GUIDE FROM THE CARGO FLOOR.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	ACFT_TECH/FT		HRS				
Insp.			HRS				

CLOSE UP**Job Description**

B. OK TO INSTALL ACCESS PANELS AND COVERS.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

CLOSE UP**Job Description**

C. INSTALL ACCESS PANELS AND COVERS AS PER AMM TASK 28-11-27-400-001-A.

STEP COMPLETION SIGN OFF:



Task Card Title:

ACT (EWIS) WIRING CONNECTION INSP

Task Card NO:

200151-03-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/FT			HRS				
Insp.	INSP/RII			HRS				

CLOSE UP**Job Description**

D. REMOVE THE SAFETY CLIPS, THE TAGS AND CLOSE THE CIRCUIT BREAKERS.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AV/ACFT_TECH			HRS				
Insp.				HRS				

CLOSE UP**Job Description**

E. PERFORM CLOSE UP AS PER AMM TASK 28-11-27-400-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/FT			HRS				
Insp.				HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____



Task Card Title:

ACT (EWIS) WIRING CONNECTION INSP

Task Card NO:

200151-03-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

TASK 24-92-00-210-046 -A

On A/C 001-999

General Visual Inspection of EWIS Installed at the ACT(s) (EWIS)

1. Reason for the Job

Refer to the MPD TASK: 200151-03

GENERAL VISUAL INSPECTION OF EWIS INSTALLED AT THE ACT(S) (EWIS)

NOTE : This is an Electrical Wiring Interconnection System (EWIS) procedure. EWIS is specified in Ref. ESPM 20-33-11.

NOTE : This task is applicable only if the Additional Center Tank(s) (ACT) in the aft cargo compartment is (are) installed in zones 151 and 152.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 2M (6 FT)
No specific	AR	FLASHLIGHT
No specific	AR	MIRROR - INSPECTION, FLEXIBLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
151	AFT CARGO COMPARTMENT
152	AFT CARGO COMPARTMENT
826	

C. Referenced Information

REFERENCE	DESIGNATION
On A/C 003-100	
Ref. AMM 28-11-27-000-001-A	Removal of the Additional Center Tank (ACT)
Ref. AMM 28-11-27-400-001-A	Installation of the Additional Center Tank (ACT)
On A/C 001-999	
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 52-30-00-860-003-A	Open the Forward or Aft Cargo-Compartment Door With the Hand Pump
Ref. AMM 52-30-00-860-004-A	Close the FWD or Aft Cargo-Compartment Door with the Hand Pump
Ref. ESPM 20-33-11	
Ref. ESPM 20-52-11	
Ref. Fig. (1 / 24-92-00-991-19400)	

3. Job Set-up

Subtask 24-92-00-010-203-A

On A/C 001-999

A. Get Access

- (1) Put the ACCESS PLATFORM 2M (6 FT) in position in zone 826.
- (2) Open aft cargo-compartment door 826 [Ref. AMM 52-30-00-860-001-A](#) or [Ref. AMM 52-30-00-860-003-A](#).
- (3) If the ACT or ACT No.1 and ACT No.2, or ACT No.1 and ACT No.2 and ACT No.3 is (are) installed in zones 151 and 152, remove it (them)

On A/C 003-100

[Ref. AMM 28-11-27-000-001-A](#) or 28-11-27-000-002 and 28-11-27-000-003 and 28-11-27-000-004.

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

4. Procedure

On A/C 001-999

Ref. Fig. 1 / 24-92-00-991-19400

Subtask 24-92-00-210-127-A

On A/C 001-999

A. General Visual Inspection (GVI) of the Wiring Installed in the ACT(s)

- (1) Do a visual inspection of the wiring to make sure that there are no signs of ageing, alteration, overheating, scaling and deformation
Ref. ESPM 20-52-11.
- (2) If you cannot see the wiring correctly, use the FLASHLIGHT or the MIRROR - INSPECTION, FLEXIBLE.
- (3) Make sure that there is no dust, lint or hydraulic contamination.

5. Close-up

Subtask 24-92-00-410-209-A

On A/C 001-999

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) If you removed the ACT or ACT No.1 and ACT No.2, or ACT No.1 and ACT No.2 and ACT No.3 from zones 151 and 152, install it (them)

On A/C 003-100

Ref. AMM 28-11-27-400-001-A or 28-11-27-400-002 and 28-11-27-400-003 and 28-11-27-400-004.


- (3) Close aft cargo-compartment door 826

On A/C 001-999

Ref. AMM 52-30-00-860-002-A or Ref. AMM 52-30-00-860-004-A.

- (4) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

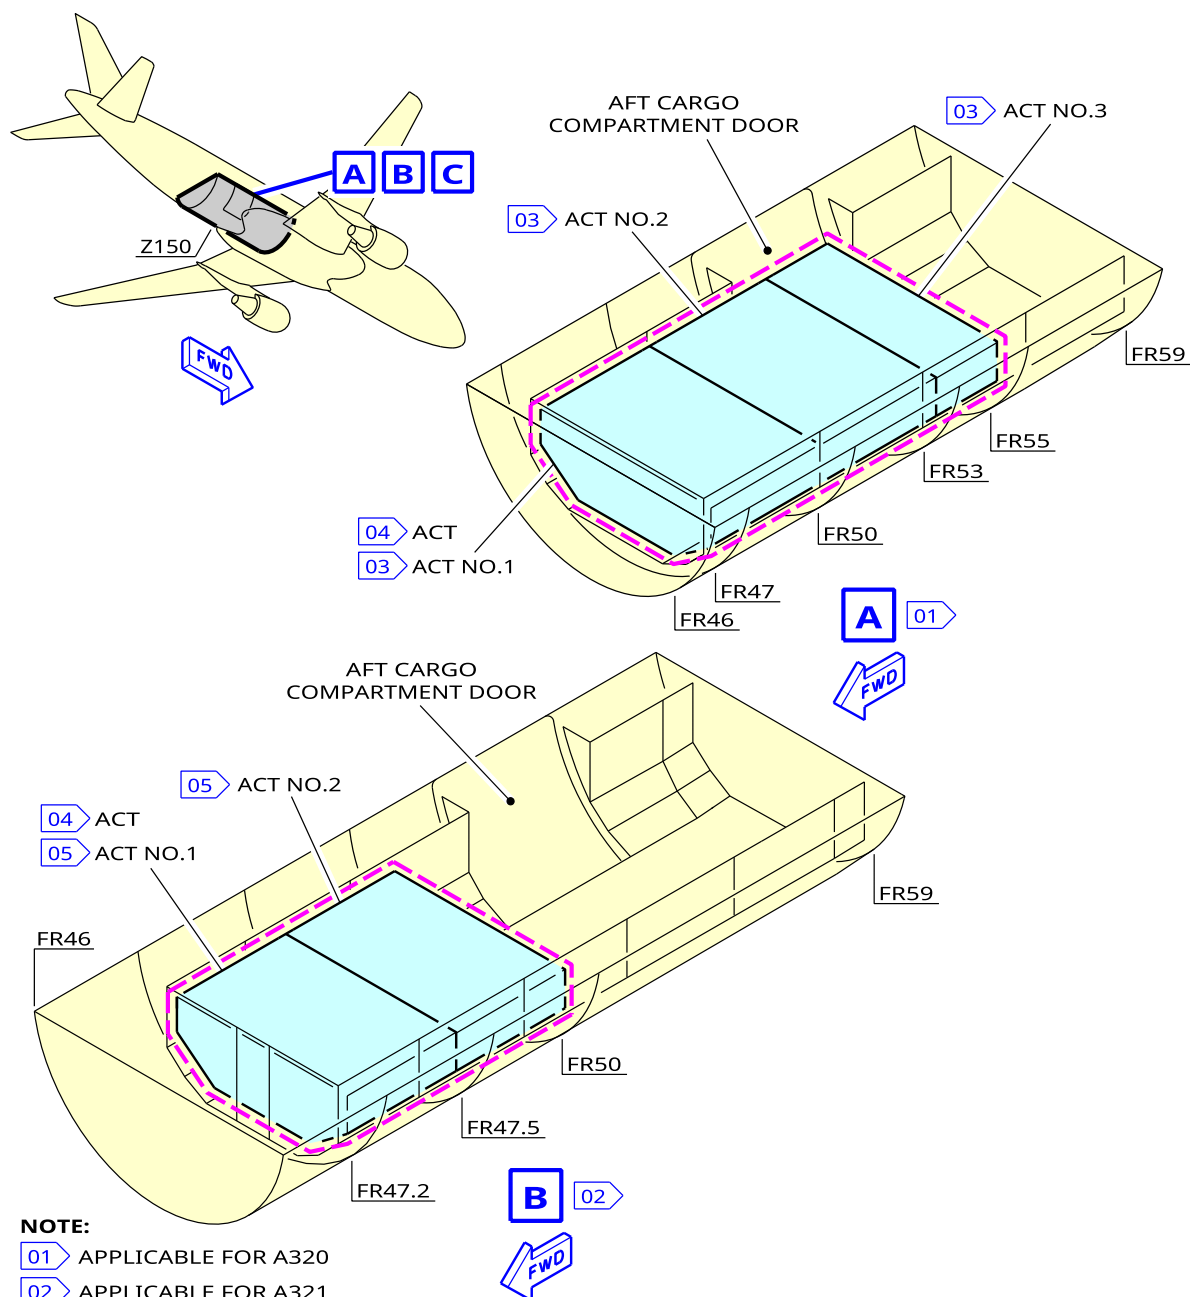

NOTE:


- [01] APPLICABLE FOR A320
- [02] APPLICABLE FOR A321
- [03] APPLICABLE IF ACT NO.1 AND ACT NO.2 AND ACT NO.3 ARE INSTALLED
- [04] APPLICABLE IF THE ACT IS INSTALLED
- [05] APPLICABLE IF ACT NO.1 AND ACT NO.2 ARE INSTALLED

[] INSPECTION AREA

N_MM_249200_6_TQM0_01_00

ACT - Inspection Area - Zones 151-152
Figure 1 / Graphic 24-92-00 -991-19400

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

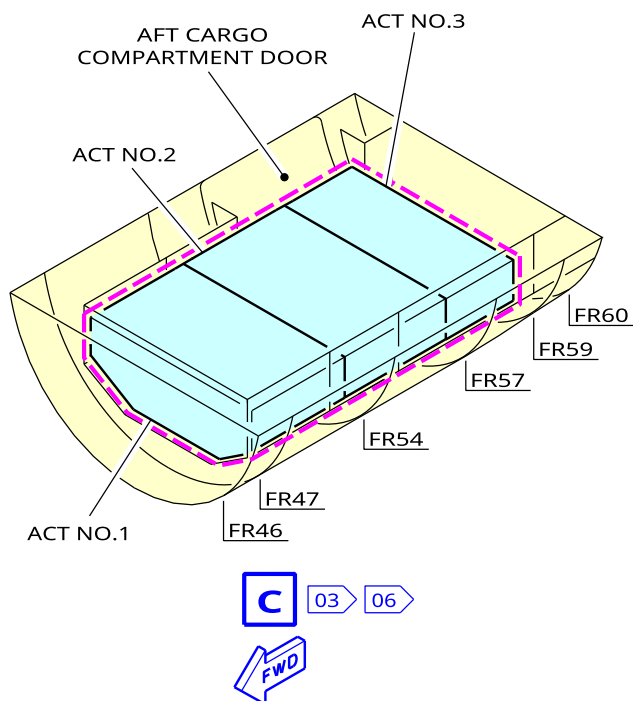

NOTE:

03 APPLICABLE IF ACT NO.1 AND ACT NO.2 AND ACT NO.3 ARE INSTALLED

06 APPLICABLE FOR A319

INSPECTION AREA

N_MM_249200_6_TQM0_02_00

ACT - Inspection Area - Zones 151-152
Figure 2 / Graphic 24-92-00 -991-19400

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

TASK 28-11-00-790-013 -A

On A/C 003-100

Leak Check of the Additional Center Tank (ACT)-Vent/Transfer Pipe-Shrouds and the ACT Drain-Pipe Connectors

WARNING: MAKE SURE THAT THE SAFETY DEVICES AND THE WARNING NOTICES ARE IN POSITION BEFORE YOU START A TASK ON OR NEAR:

- THE FLIGHT CONTROLS
- THE FLIGHT CONTROL SURFACES
- THE LANDING GEAR AND RELATED DOORS
- THE CARGO DOORS
- OTHER COMPONENTS THAT MOVE.

MOVEMENT OF COMPONENTS CAN KILL OR CAUSE INJURY TO PERSONS AND/OR DAMAGE TO EQUIPMENT.

1. Reason for the Job

Self explanatory

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 1M(3 FT)
No specific	AR	ADAPTER - EXTENSION, FILLING SYSTEM, DRY AIR
No specific	AR	AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY
No specific	1	CAP - BLANKING
No specific	AR	GAGE 0 TO 2000 PSI (0 TO 138 BAR) - PRESSURE
No specific	1	GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI)
No specific	AR	SAFETY BARRIER(S)
No specific	AR	SAFETY CLIP - CIRCUIT BREAKER
No specific	AR	WARNING NOTICE(S)
98D28108417000	1	TEST TOOL-PRESSURE,ACT
98D28108658000	1	TOOL-PRESSURE TEST,ACT
99D28108418000	1	ACT VALVE CONTROL BOX

B. Consumable Materials

REFERENCE	DESIGNATION
No specific	soap solution

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
150	AFT CARGO COMPARTMENT FWD PRESS BULKHEAD TO AFT BULKHEAD OF AFT CARGO COMPARTMENT
151BC , 151CC , 151GC , 154AR , 241EF , 241JF , 251AF , 251AG , 251FF	

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-861-002-A	Energize the Aircraft Electrical Circuits from the External Power
Ref. AMM 24-41-00-861-002-A-01	Energize the Aircraft Electrical Circuits from the APU
Ref. AMM 24-41-00-861-002-A-02	Energize the Aircraft Electrical Circuits from Engine 1(2)
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 25-55-11-000-002-A	Removal of the Ceiling Panels From the Aft Cargo Compartment - Frame 47/ Frame 59

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

REFERENCE	DESIGNATION
Ref. AMM 25-55-11-400-002-A	Installation of the Ceiling Panels in the Aft Cargo Compartment - Frame 47/Frame 59
Ref. AMM 28-00-00-910-001-A	Fuel Safety Procedures
Ref. AMM 28-25-00-650-001-A	Pressure Defuel
Ref. AMM 28-25-00-650-005-A	Procedure to Drain the Remaining Fuel From the Additional Center Tank (ACT)
Ref. AMM 31-60-00-860-001-A	EIS Start Procedure
Ref. AMM 31-60-00-860-002-A	EIS Stop Procedure
Ref. AMM 32-00-00-481-001-A	Installation of the Safety Devices on the Landing Gears
Ref. AMM 32-12-00-010-001-A	Open the Main Gear Doors for Access
Ref. AMM 32-12-00-410-001-A	Close the Main Gear Doors after Access
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 53-32-12-000-002-A	Removal of the Cabin Floor Panels
Ref. AMM 53-32-12-400-002-A	Installation of the Cabin Floor Panels
Ref. AMM 53-42-12-000-001-A	Removal of the Cabin Floor Panels from FR47 thru FR64
Ref. AMM 53-42-12-400-001-A	Installation of the Cabin Floor Panels from FR47 thru FR64
Ref. Fig. (1 / 28-11-00-991-03100)	
Ref. Fig. (1 / 28-11-00-991-03500)	
Ref. Fig. (1 / 28-11-00-991-03600)	
Ref. Fig. (1 / 28-11-00-991-03700)	
Ref. Fig. (1 / 28-11-00-991-03800)	
Ref. Fig. (1 / 28-11-00-991-03900)	

3. Job Set-up

Subtask 28-11-00-941-117-A

On A/C 003-100

A. Safety Precautions

WARNING: OBEY THE FUEL SAFETY PROCEDURES. THIS CAN PREVENT INJURY AND DAMAGE.

- (1) You must obey the fuel safety procedures when you do work on the fuel system
[Ref. AMM 28-00-00-910-001-A.](#)
- (2) Make sure that the ground safety locks are installed on the landing gears
[Ref. AMM 32-00-00-481-001-A.](#)
- (3) Put the WARNING NOTICE(S) in position to tell persons not to operate the Main Landing Gear (MLG) doors.
- (4) As necessary, use the applicable SAFETY BARRIER(S), specified by the operator's instructions and your local regulations.

Subtask 28-11-00-860-119-B

On A/C 003-100

B. Aircraft Maintenance Configuration

- (1) Energize the aircraft electrical circuits
[Ref. AMM 24-41-00-861-002-A](#) [Ref. AMM 24-41-00-861-002-A-01](#)
[Ref. AMM 24-41-00-861-002-A-02.](#)
- (2) Do the EIS start procedure (upper ECAM DU and lower ECAM DU only)
[Ref. AMM 31-60-00-860-001-A.](#)
- (3) In the cockpit, on the ECAM control panel:
 - (a) Push (in) the FUEL P/BSW.
 - (b) The FUEL page comes into view on the lower ECAM DU.
 - (c) Make sure that the ACT indication is shown on the ECAM FUEL page.

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

- (4) Defuel all the ACT(s) [Ref. AMM 28-25-00-650-001-A](#).
- (5) Drain the remaining fuel from the ACT(s) [Ref. AMM 28-25-00-650-005-A](#).
- (6) On the refuel/defuel control panels 800VU and 801VU, make sure that:
 - The MODE SELECT switch is in the OFF and guarded position
 - All the REFUEL VALVE switches are in the NORM and guarded position.
- (7) Put the WARNING NOTICE(S) in position on these panels to tell persons not to operate the refuel/defuel system:
 - The refuel/defuel control panels 800VU and 801VU
 - The HYD/FUEL panel 40VU
 - The FUEL panel 28VU.

Subtask 28-11-00-010-090-B

On A/C 003-100

C. Get Access

- (1) Open the aft cargo-compartment door [Ref. AMM 52-30-00-860-001-A](#).
- (2) Get access to the ACT air shut-off valve and the ACT test ports T1 and T2 as follows:
Ref. Fig. (1 / 28-11-00-991-03100)
 - (a) Remove the applicable ceiling panel 151GC or 151CC or 151BC
[Ref. AMM 25-55-11-000-002-A](#).
- (3) Open the MLG doors to get access [Ref. AMM 32-12-00-010-001-A](#):
 - To the ACT fuel transfer-pump 1QH
 - To the ACT transfer-valve actuator 6QH
 - To the ACT cavity drain-line in the MLG bay.
- (4) Put an ACCESS PLATFORM 1M(3 FT) on the LH side of the MLG bay.
- (5) On the lower fuselage zone 150, get access to the ACT cavity drain-line below the ACT(s) as follows:
 - (a) Remove the access panels 154AR , 197PB and 153AZ from the lower fuselage.
- (6) In the cabin, get access to the ACT-vent/transfer pipe-shroud connectors as follows:
 - (a) Remove the cabin floor panels 241EF and 241JF [Ref. AMM 53-32-12-000-002-A](#).
 - (b) Remove the cargo ceiling panels 251AG , 251AF and 251FF
[Ref. AMM 53-42-12-000-001-A](#).

Subtask 28-11-00-865-133-A

On A/C 003-100

- D. Open, safety and tag the circuit breaker(s) that follow(s). Use the SAFETY CLIP - CIRCUIT BREAKER as necessary.

PANEL	DESIGNATION	FIN	LOCATION
121VU	ACT PUMP SUPPLY	25QH	Q29

4. Procedure

Subtask 28-11-00-790-093-A

On A/C 003-100

A. Leak Test of the ACT-Vent/Transfer Pipe-Shrouds

NOTE : If two ACT(s) are to be installed, do the test that follows after the installation of the ACT1 but before the installation of the ACT2.

- (1) Preparation for the Test:
 - (a) In the cockpit, on the HYD/FUEL panel 40VU:
 - 1 Push (in) the ACT P/BSW to open the ACT transfer valve 165QM.
 - 2 Make sure that the FAULT light and the FWD light on the ACT P/BSWs are on.

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

- (b) In the MLG bay:
- 1 Make sure that the ACT fuel transfer-pump 1QH is off and you hear no sound from the pump.
 - 2 Make sure that the indicator on the ACT transfer-valve actuator 6QH is in the open position.
- (c) On the lower fuselage, close the applicable ACT cavity drain-lines on the ACT as follows:
Ref. Fig. (1 / 28-11-00-991-03500)
- 1 Remove the nut (2) and disconnect the hose (3) from the drain fitting (1).
 - 2 Install the TEST PLUG (MS 21913-8) (4) on the disconnected hose end.
 - 3 Put a CAP - BLANKING on the drain fitting (1).
- (2) Installation of the Test Tool:
Ref. Fig. (1 / 28-11-00-991-03600)
Ref. Fig. (1 / 28-11-00-991-03700)
- (a) On the RH side of the MLG bay, install the **TOOL-PRESSURE TEST,ACT** (98D28108658000) on the ACT cavity drain-line as follows:
- 1 Loosen the nuts (5) and (7) and disconnect the elbow (6) from the T-connection.
 - 2 Put a CAP - BLANKING on the T-connection.
 - 3 Connect the **TOOL-PRESSURE TEST,ACT** (98D28108658000) to the ACT cavity drain-line.

NOTE : If the **TOOL-PRESSURE TEST,ACT** (98D28108658000) is not available, you can use the alternative test tools that follow:

- An AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY
- A GAGE 0 TO 2000 PSI (0 TO 138 BAR) - PRESSURE
- An applicable ADAPTER - EXTENSION, FILLING SYSTEM, DRY AIR.

WARNING: WHEN YOU USE COMPRESSED AIR:

- USE THE CORRECT PROTECTION (FACE SHIELD OR GOGGLES)
- DO NOT POINT THE AIRFLOW AT YOURSELF OR OTHER PERSONS.

LOOSE PARTICLES AND/OR HIGH PRESSURE AIR CAN CAUSE INJURY.

(3) Test

ACTION	RESULT
1. In the MLG bay, on the ACT cavity drain-line: • Start the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) • Carefully pressurize the ACT cavity drain-line to 1.4 bar (20 psi).	On the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) pressure-gage: • The air pressure in the ACT cavity drain-line increases to 1.4 bar (20 psi).
2. Close the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) shut-off valve.	On the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) pressure-gage: • Make sure that the air pressure in the ACT cavity drain-line is stable at 1.4 bar (20 psi) for 15 minutes.
3. In the MLG bay, on the ACT cavity drain-line: • Stop the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) • Carefully release the air pressure from the ACT cavity drain-line.	On the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) pressure-gage: • The air pressure in the ACT cavity drain-line decreases to 0 bar (0 psi).

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

- (4) Leaks are not permitted. If the pressure decreases during the 15 minutes, then:
 - (a) Do a leak check of the ACT cavity drain-line and vent/transfer pipe-shroud connections as follows:
 - 1 Use the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) to maintain the test pressure in the ACT cavity drain-line.
 - 2 Use a soap solution or a leak detector spray to find leak(s).
 - 3 When you find the leak(s), stop the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI).
 - 4 Carefully release the air pressure from the ACT cavity drain-line.
 - 5 Repair or replace as necessary.
- (5) Do the test again.
- (6) Removal of the Test Tool:
 - (a) In the MLG bay, remove the **TOOL-PRESSURE TEST,ACT** (98D28108658000) from the ACT cavity drain-line as follows:
 - 1 Remove the CAP - BLANKING from the T-connection.
 - 2 Clean the component interfaces and the adjacent area.
 - 3 Do an inspection of the component interfaces and the adjacent area.
 - (b) Assemble the ACT cavity drain-line as follows:
 - 1 Connect the elbow (6) to the T-connection and tighten the nuts (5) and (7).
 - (c) On the lower fuselage, at the ACT cavity drain-line:
 - 1 Remove the TEST PLUG (MS 21913-8) (4) from the disconnected hose end.
 - 2 Remove the CAP - BLANKING from the drain fitting (1).
 - 3 Clean the component interfaces and the adjacent area.
 - 4 Do an inspection of the component interfaces and the adjacent area.
 - 5 Install the hose (3) on the drain fitting (1).
 - 6 Do not twist the hose (3) when you tighten the nut (2).

Subtask 28-11-00-790-096-A

On A/C 003-100

B. Leak Test of the ACT1 Pressure Hose

- (1) Installation of the Test Tool:
 - (a) In the aft cargo-compartment:
 - 1 Install the **ACT VALVE CONTROL BOX** (99D28108418000) on the ACT air shut-off valve-actuator 3QH as follows:
Ref. Fig. (1 / 28-11-00-991-03800)
 - Disconnect the connector 3QH-A from the ACT air shut-off valve-actuator 3QH
 - Connect the **ACT VALVE CONTROL BOX** (99D28108418000) to the ACT air shut-off valve-actuator 3QH
 - Connect the connector of the **ACT VALVE CONTROL BOX** (99D28108418000) to the connector-plug 3QH-A.
 - 2 Open the ACT air shut-off valve 168QM with the **ACT VALVE CONTROL BOX** (99D28108418000).
 - 3 Make sure that the indicator on the ACT air shut-off valve-actuator 3QH is in the open position.
 - 4 Close the ACT vent valve 167QM1 with the **ACT VALVE CONTROL BOX** (99D28108418000).

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

NOTE : The ACT vent valve 167QM1 is installed on the ACT1. You can see the position of the valve only on the indication for the ACT vent-valve actuator 4QH1:

- For the ACT vent-valve actuator 4QH1, in the cabin remove the applicable cabin floor panel and the cargo ceiling panel above the ACT1.

5 Install the **TEST TOOL-PRESSURE,ACT** (98D28108417000) on the T1 and T2 test ports.

Ref. Fig. (1 / 28-11-00-991-03900)

NOTE : If the **TEST TOOL-PRESSURE,ACT** (98D28108417000) is not available, you can use the alternative test tools that follow:

- An AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY
- A GAGE 0 TO 2000 PSI (0 TO 138 BAR) - PRESSURE
- An applicable ADAPTER - EXTENSION, FILLING SYSTEM, DRY AIR.

WARNING: **WHEN YOU USE COMPRESSED AIR:**
 - **USE THE CORRECT PROTECTION (FACE SHIELD OR GOGGLES)**
 - **DO NOT POINT THE AIRFLOW AT YOURSELF OR OTHER PERSONS.**
LOOSE PARTICLES AND/OR HIGH PRESSURE AIR CAN CAUSE INJURY.

(2) Test

ACTION	RESULT
1. In the aft cargo-compartment: • Start the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) • On the TEST TOOL-PRESSURE,ACT (98D28108417000), pressurize the test port T1 to 1.00 bar (15 psi).	On the pressure-gage at the test port T2: • The air pressure indication increases to 0.195 bar (3 psi). NOTE : It takes approximately 15 minutes to pressurize the ACT. NOTE : If the air pressure becomes too high, the pressure holding-valve will open at 0.195 bar (3 psi) and the burst discs of the ACT vent system will break at 1.1 +0.0 bar or -0.1 bar (16 +0 psi or -1 psi).
2. Leak Test: • Do a leak check of the ACT pressurization system connections • Listen for the sound of a gas leak from ACT1 pressure hose connections • Use a soap solution or a leak detector spray to find leaks.	Leaks are not permitted.
3. If there are leaks, do a repair or replace as necessary.	
4. Do the test again.	
5. In the aft cargo-compartment: • Stop the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI)	On pressure-gage at the test port T2: • The air pressure in the ACT cavity drain-line decreases to 0 bar (0 psi).

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

ACTION	RESULT
- On the TEST TOOL-PRESSURE,ACT (98D28108417000), release the air pressure from the test port T1 - On the ACT VALVE CONTROL BOX (99D28108418000), open the ACT vent valve.	

(3) Removal of the Test Tool:

(a) In the aft cargo-compartment:

- 1 Remove the **TEST TOOL-PRESSURE,ACT** (98D28108417000) from the T1 and T2 ports.
- 2 Open the ACT1 vent valve 167QM1 with the **ACT VALVE CONTROL BOX** (99D28108418000).
- 3 Close the ACT air shut-off valve 168QM with the **ACT VALVE CONTROL BOX** (99D28108418000).
- 4 Disconnect the **ACT VALVE CONTROL BOX** (99D28108418000) from the connector-plug 3QH-A and the ACT air shut-off valve-actuator 3QH.
- 5 Connect the connector-plug 3QH-A to the ACT air shut-off valve-actuator 3QH.

(b) Close the ACT transfer valve 165QM as follows:

- 1 In the cockpit, on the HYD/FUEL panel 40VU release (out) the ACT P/BSW.
- 2 Make sure that the FAULT light and the FWD light on the ACT P/BSWs are off.
- 3 In the MLG bay, make sure that the indicator on the ACT transfer-valve actuator 6QH is in the closed position.

Subtask 28-11-00-790-097-A

On A/C 003-100

C. Leak Test of the ACT-Vent/Transfer Pipe-Shroud between ACT1 and ACT2

NOTE : When both the ACT(s) are installed, do the test that follows.

(1) Preparation for the Test:

(a) In the cockpit, on the HYD/FUEL panel 40VU:

- 1 Push (in) the ACT P/BSW to open the ACT transfer valve 165QM.
- 2 Make sure that the FAULT light and the FWD light in the ACT P/BSWs are on.

(b) In the MLG bay:

- 1 Make sure that the ACT fuel transfer-pump 1QH is off and you hear no noise from the pump.
- 2 Make sure that the indication for the ACT transfer-valve actuator 6QH is in the open position.

(2) Installation of the Test Tool:

Ref. Fig. (1 / 28-11-00-991-03600)

Ref. Fig. (1 / 28-11-00-991-03700)

(a) On the RH side of the MLG bay, install the **TOOL-PRESSURE TEST,ACT** (98D28108658000) on the ACT cavity drain-line as follows:

- 1 Loosen the nuts (5) and (7) and disconnect the elbow (6) from the T-connection.
- 2 Put a CAP - BLANKING on the T-connection.
- 3 Connect the **TOOL-PRESSURE TEST,ACT** (98D28108658000) to the cavity drain-line.

NOTE : If the **TOOL-PRESSURE TEST,ACT** (98D28108658000) is not available, you can use the alternative test tools that follow:

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

- An AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY
 - A GAGE 0 TO 2000 PSI (0 TO 138 BAR) - PRESSURE
 - An applicable ADAPTER - EXTENSION, FILLING SYSTEM, DRY AIR.
- (b) In the aft cargo-compartment:
- 1 Install the **ACT VALVE CONTROL BOX** (99D28108418000) on the ACT air shut-off valve-actuator 3QH as follows:
Ref. Fig. (1 / 28-11-00-991-03800)
 - Disconnect the connector 3QH-A from the ACT air shut-off valve-actuator 3QH
 - Connect the **ACT VALVE CONTROL BOX** (99D28108418000) to the ACT shut-off valve-actuator 3QH
 - Connect the connector of the **ACT VALVE CONTROL BOX** (99D28108418000) to the connector-plug 3QH-A.
 - 2 Open the ACT air shut-off valve 168QM with the **ACT VALVE CONTROL BOX** (99D28108418000).
 - 3 Make sure that the indicator on the ACT air shut-off valve-actuator 3QH is in the open position.
 - 4 Close the ACT vent valve 167QM with the **ACT VALVE CONTROL BOX** (99D28108418000).

NOTE : The ACT vent valves 167QM1-2 are installed on the ACT(s). You can see the position of the valves only on the indication for the ACT vent-valve actuator 4QH:

- For the ACT vent-valve actuator 4QH1, in the cabin when you remove the applicable cabin floor panel and the cargo ceiling panel above the ACT1
 - For the ACT vent-valve actuator 4QH2, in the aft cargo-compartment when you remove the right impact wall.
- 5 Install the **TEST TOOL-PRESSURE,ACT** (98D28108417000) on the T1 and T2 test ports.
Ref. Fig. (1 / 28-11-00-991-03900)

NOTE : If the **TEST TOOL-PRESSURE,ACT** (98D28108417000) is not available, you can use the alternative test tools that follow:

- An AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY
- A GAGE 0 TO 2000 PSI (0 TO 138 BAR) - PRESSURE
- An applicable ADAPTER - EXTENSION, FILLING SYSTEM, DRY AIR.

WARNING: WHEN YOU USE COMPRESSED AIR:

- **USE THE CORRECT PROTECTION (FACE SHIELD OR GOGGLES)**
- **DO NOT POINT THE AIRFLOW AT YOURSELF OR OTHER PERSONS.**

LOOSE PARTICLES AND/OR HIGH PRESSURE AIR CAN CAUSE INJURY.

(3) Test

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

ACTION	RESULT
1. In the aft cargo-compartment: - Start the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) - On the TEST TOOL-PRESSURE,ACT (98D28108417000), pressurize the test port T1 to 1.00 bar (15 psi).	On the pressure-gage at the test port T2: The air pressure indication increases to 0.195 bar (3 psi). NOTE : It takes approximately 15 minutes to pressurize the ACT(s). NOTE : If the air pressure becomes too high, the pressure holding-valves will open at 0.195 bar (3 psi) and the burst discs of the ACT vent system will break at 1.1 +0.0 bar or -0.1 bar (16 +0 psi or -1 psi).
2. In the MLG bay, on the pressure-gage at the ACT cavity drain-line: - Monitor the air pressure indication - If necessary, pressurize the ACT cavity drain-line with the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) to 0.20 bar (3 psi).	On the pressure-gage at the ACT cavity drain-line: The air pressure indication increases to 0.20 bar (3 psi).
3. Leak Test: - Do a leak check of the ACT-vent/transfer pipe-shroud connections between ACT1 and ACT2 - Do a leak check of the ACT pressurization system connections - Do a leak at the ACT interspace drains - Use a soap solution or a leak detector spray to find leaks.	Leaks are not permitted.
4. If there are leaks, do a repair or replace as necessary.	
5. Do the test again.	
6. In the MLG bay, on the ACT cavity drain-line: - Stop the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) - Carefully release the air pressure from the ACT cavity drain-line.	On the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) pressure gage: The air pressure in the ACT cavity drain-line decreases to 0 bar (0 psi).
7. In the aft cargo-compartment: - Stop the GROUND PRESSURE GENERATOR - 0 TO 2 BAR (0 TO 30 PSI) - On the TEST TOOL-PRESSURE,ACT (98D28108417000), release the air pressure from the test port T1 - On the ACT VALVE CONTROL BOX (99D28108418000), open the ACT vent-valves.	On pressure-gage at the test port T2: The air pressure in the ACT cavity drain-line decreases to 0 bar (0 psi).

(4) Removal of the Test Tool:

(a) In the aft cargo-compartment:

- 1 Remove the **TEST TOOL-PRESSURE,ACT** (98D28108417000) from the T1 and T2 ports.
- 2 Open the ACT vent valve 167QM1 with the **ACT VALVE CONTROL BOX** (99D28108418000).
- 3 Close the ACT air shut-off valve 168QM with the **ACT VALVE CONTROL BOX** (99D28108418000).
- 4 Disconnect the **ACT VALVE CONTROL BOX** (99D28108418000) from the connector-plug 3QH-A and the ACT air shut-off valve-actuator 3QH.
- 5 Connect the connector-plug 3QH-A to the ACT air shut-off valve-actuator 3QH.

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

- (b) In the MLG bay, remove the **TOOL-PRESSURE TEST,ACT** (98D28108658000) from the ACT cavity drain-line as follows:
 - 1 Remove the CAP - BLANKING from the T-connection.
 - 2 Clean the component interfaces and the adjacent area.
 - 3 Do an inspection of the component interfaces and the adjacent area.
- (c) Assemble the ACT cavity drain-line as follows:
 - 1 Connect the elbow (6) to the T-connection and tighten the nuts (5) and (7).
- (d) Close the ACT transfer valve 165QM as follows:
 - 1 In the cockpit, on the HYD/FUEL panel 40VU release (out) the ACT P/BSW.
 - 2 Make sure that the FAULT light and the FWD light in the ACT P/BSWs are off.
 - 3 In the MLG bay, make sure that the indicator on the ACT transfer-valve actuator 6QH is in the closed position.

5. Close-up

Subtask 28-11-00-410-089-B

On A/C 003-100

A. Close Access

- (1) Remove the access platform(s).
- (2) Close the MLG doors after access [Ref. AMM 32-12-00-410-001-A](#).
- (3) On the lower fuselage zone 150, install the access panels 154AR, 197PB and 153AZ.
- (4) Install the applicable ceiling panels 151GC , 151CC and 151BC
[Ref. AMM 25-55-11-400-002-A](#).
- (5) Close the aft cargo-compartment door [Ref. AMM 52-30-00-860-002-A](#).
- (6) In the cabin:
 - (a) Install the applicable cabin floor panels 241EF and 241JF [Ref. AMM 53-32-12-400-002-A](#).
 - (b) Install the applicable cargo ceiling panels 251AG , 251AF and 251FF
[Ref. AMM 53-42-12-400-001-A](#).

Subtask 28-11-00-865-134-A

On A/C 003-100

- B. Remove the SAFETY CLIP - CIRCUIT BREAKER and the tag(s) and close this (these) circuit breaker(s):

PANEL	DESIGNATION	FIN	LOCATION
121VU	ACT PUMP SUPPLY	25QH	Q29

Subtask 28-11-00-860-122-A

On A/C 003-100

- C. Put the aircraft back to its initial configuration.
- (1) Do the EIS stop procedure
[Ref. AMM 31-60-00-860-002-A](#).
 - (2) De-energize the aircraft electrical circuits
[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#)
[Ref. AMM 24-41-00-862-002-A-02](#).

Subtask 28-11-00-942-121-A

On A/C 003-100


D. Removal Of the Equipment

- (1) Remove the safety barriers.
- (2) Remove the WARNING NOTICE(S).
- (3) Remove the ground support and maintenance equipment, the special and standard tools and all other items.


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

- (4) Make sure that the work area is clean and clear of tools and other items.

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

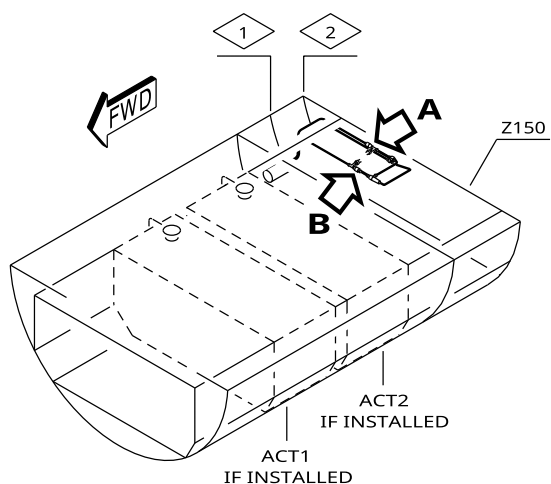


A/C	FRAME		APPLICABLE ACCESS PANEL FOR T1 AND T2
	1	2	
A319	57	58	151GC
A320	53	54	151CC
A321	51	52	151BC

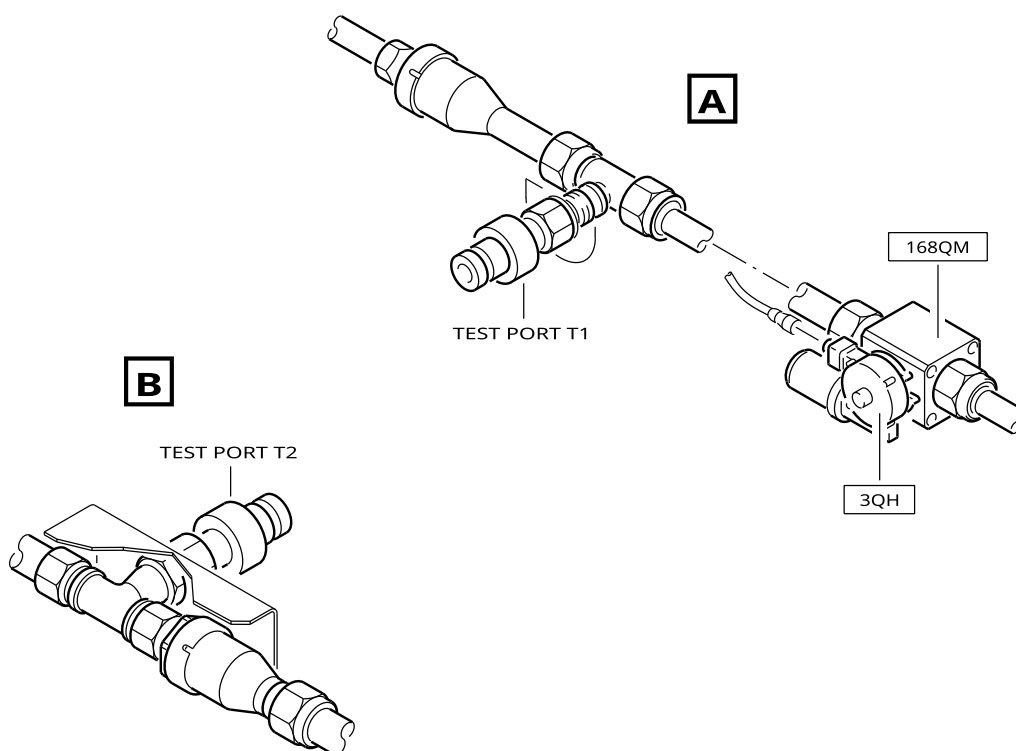

N_MM_281100_5_EAM0_01_00

Test Ports T1 and T2
Figure 1 / Graphic 28-11-00 -991-03100

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

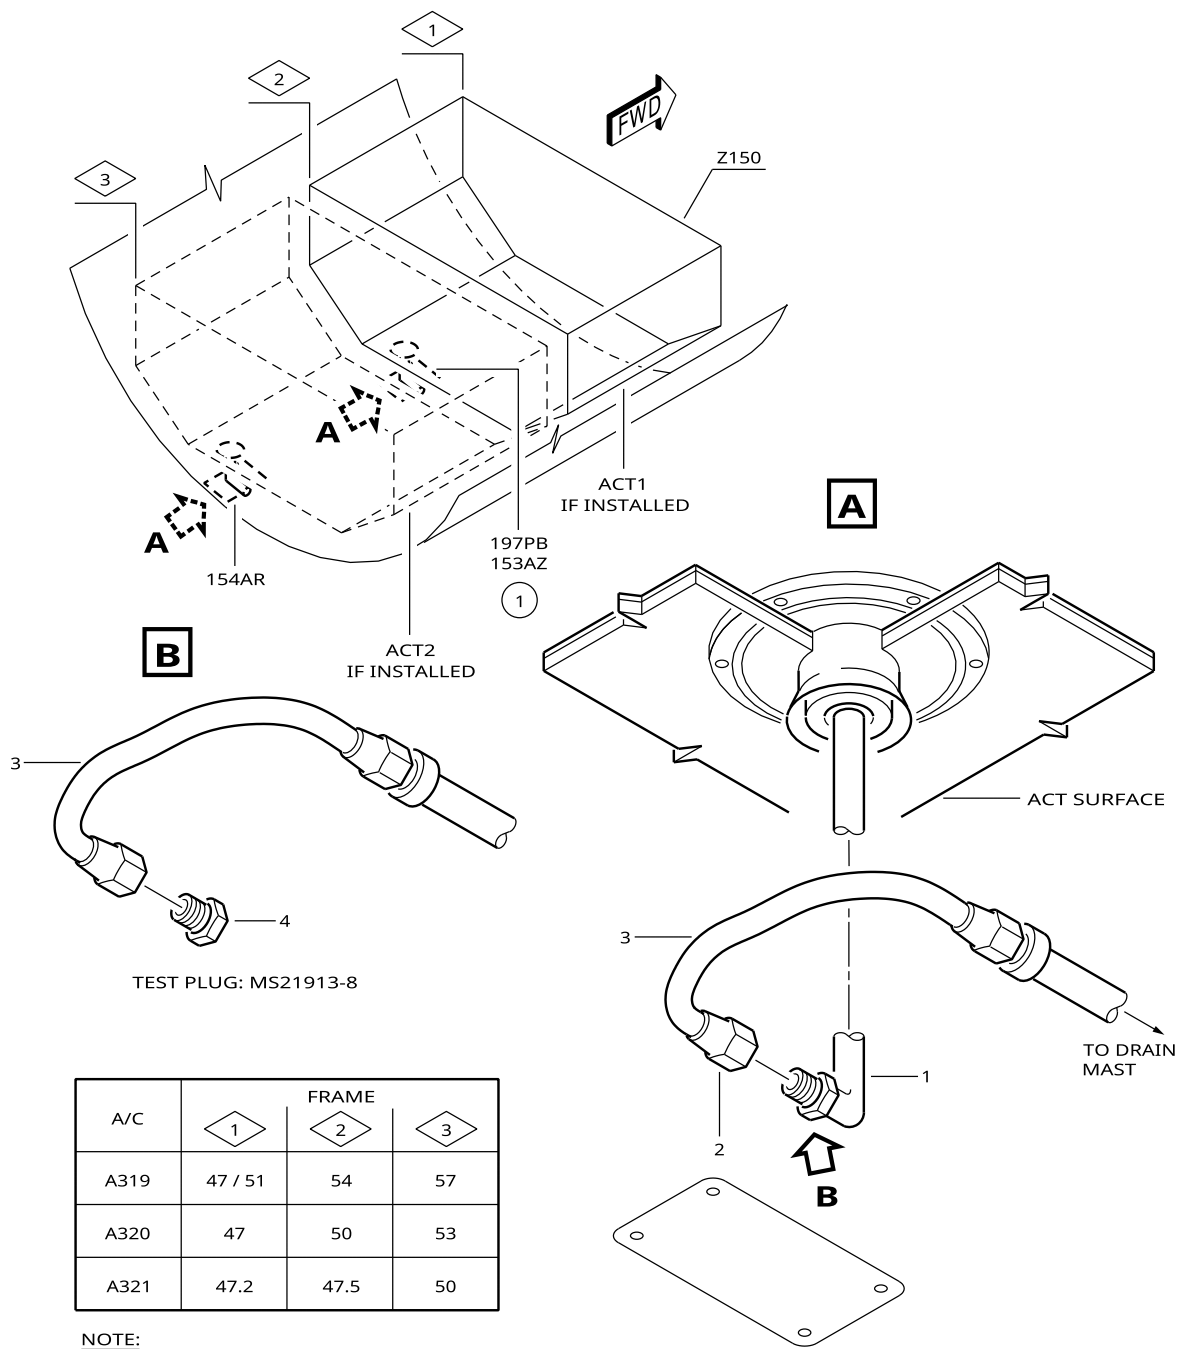


NOTE:

- ① REMOVE ACCESS PANEL 197PB TO GAIN ACCESS TO ACCESS PANEL 153AZ

N_MM_281100_5_ECM0_01_00

ACT Cavity-Drain Connection
Figure 1 / Graphic 28-11-00 -991-03500

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

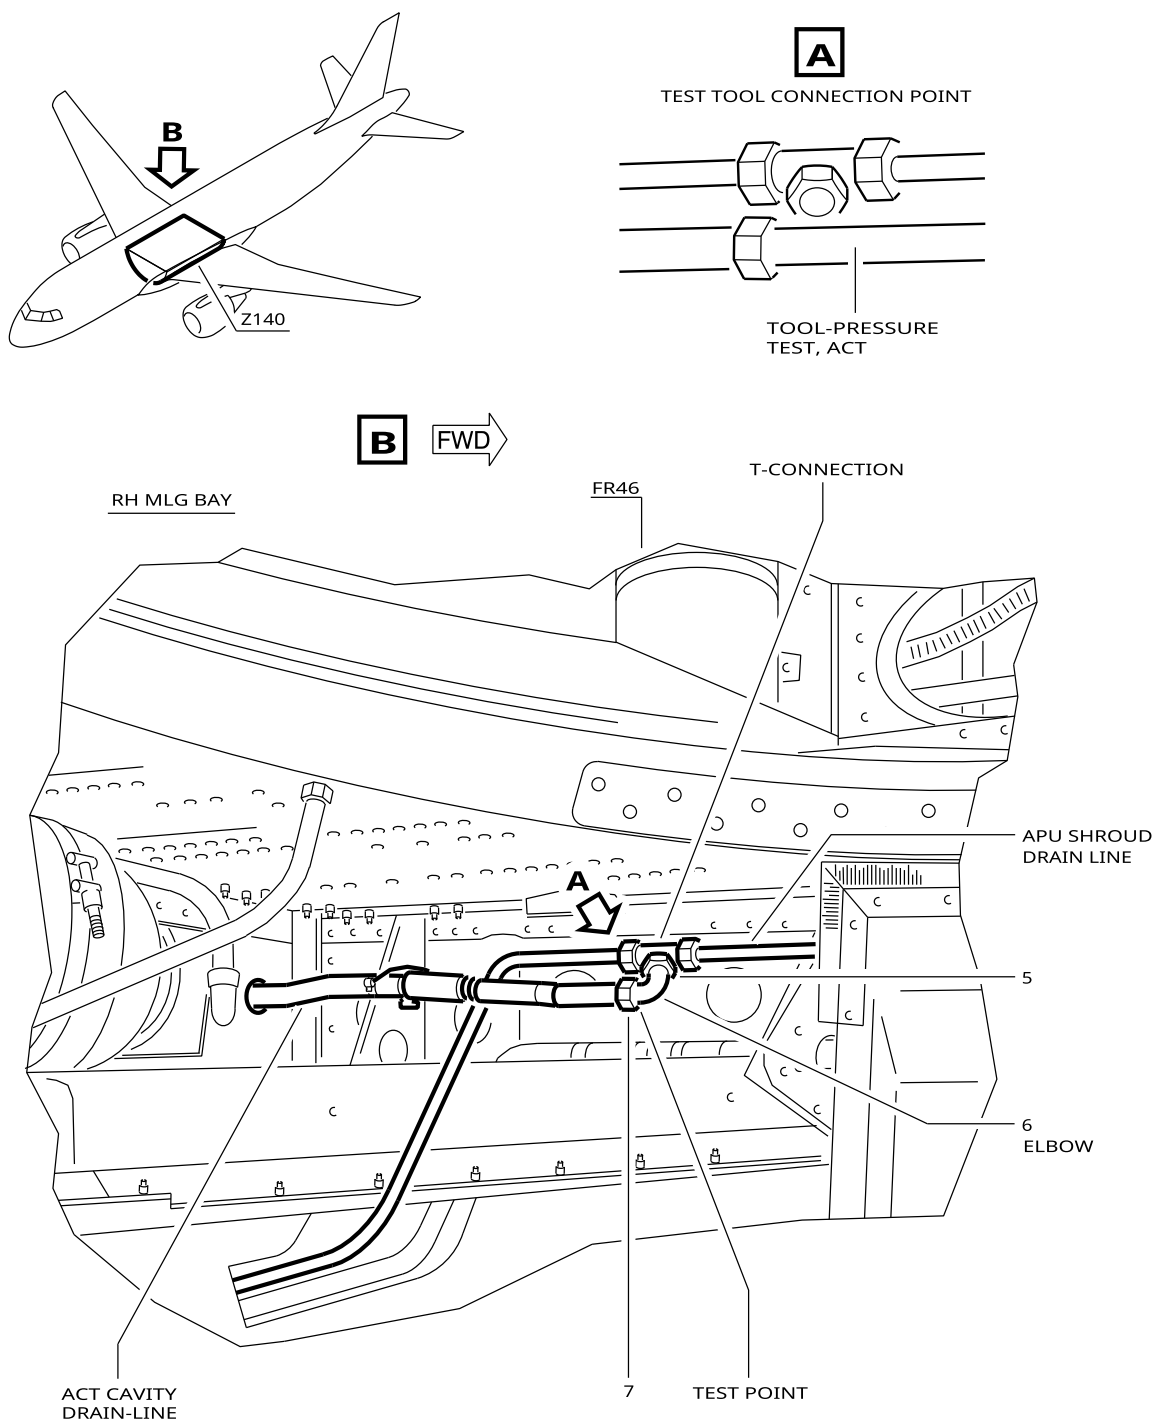


N_MM_281100_5_EDM0_01_00

Access to the ACT Cavity Drain-Line (AFT ACT)
Figure 1 / Graphic 28-11-00 -991-03600


TF-N AIRCRAFT MAINTENANCE MANUAL TANKS - ADJUSTMENT/TEST

AFT AREA OF
RH-MAIN LANDING GEAR BAY

SOLUTION 1 SELF-MADE TOOL

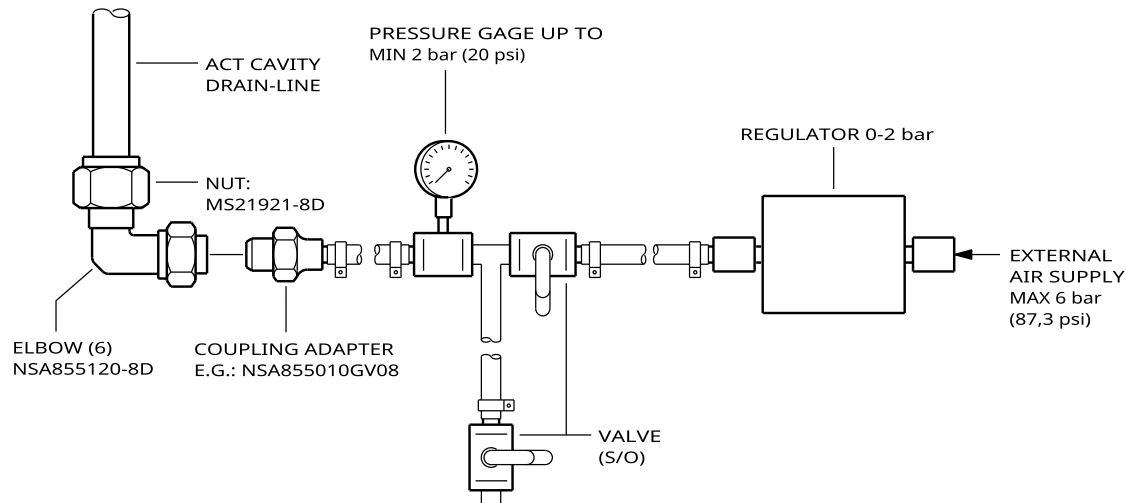


SOLUTION 2 AIRBUS TOOL

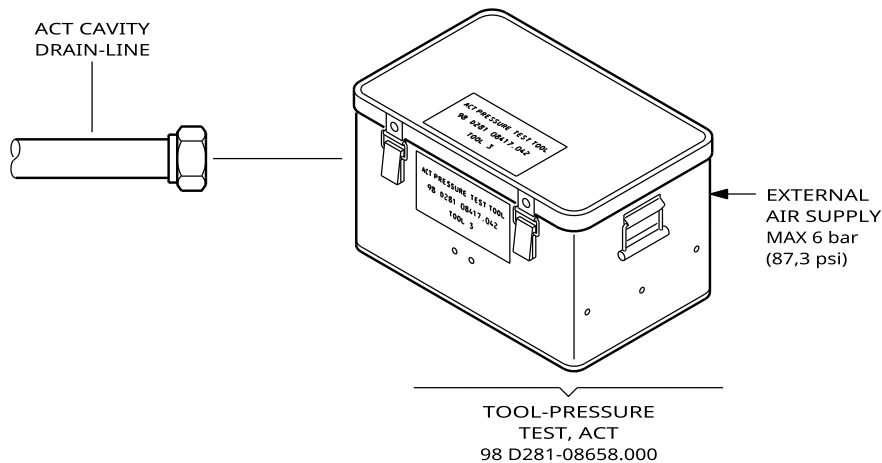


N_MM_281100_5_EEM0_01_00

ACT Test Arrangement (TEST-PRESSURE TEST, ACT)
Figure 1 / Graphic 28-11-00 -991-03700

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANKS - ADJUSTMENT/TEST

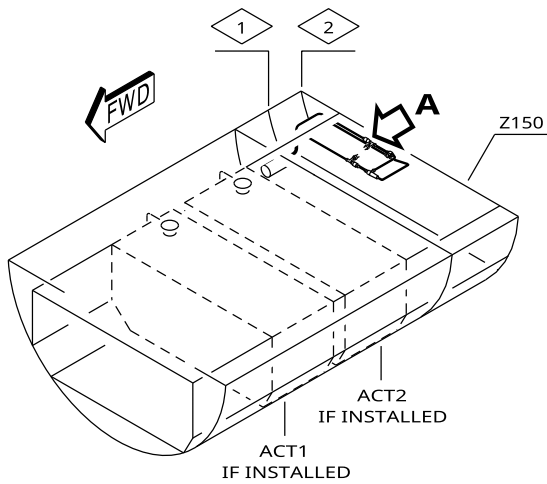

A/C	FRAME		APPLICABLE ACCESS PANEL FOR T1 AND T2
	1	2	
A319	57	58	151GC
A320	53	54	151CC
A321	51	52	151BC

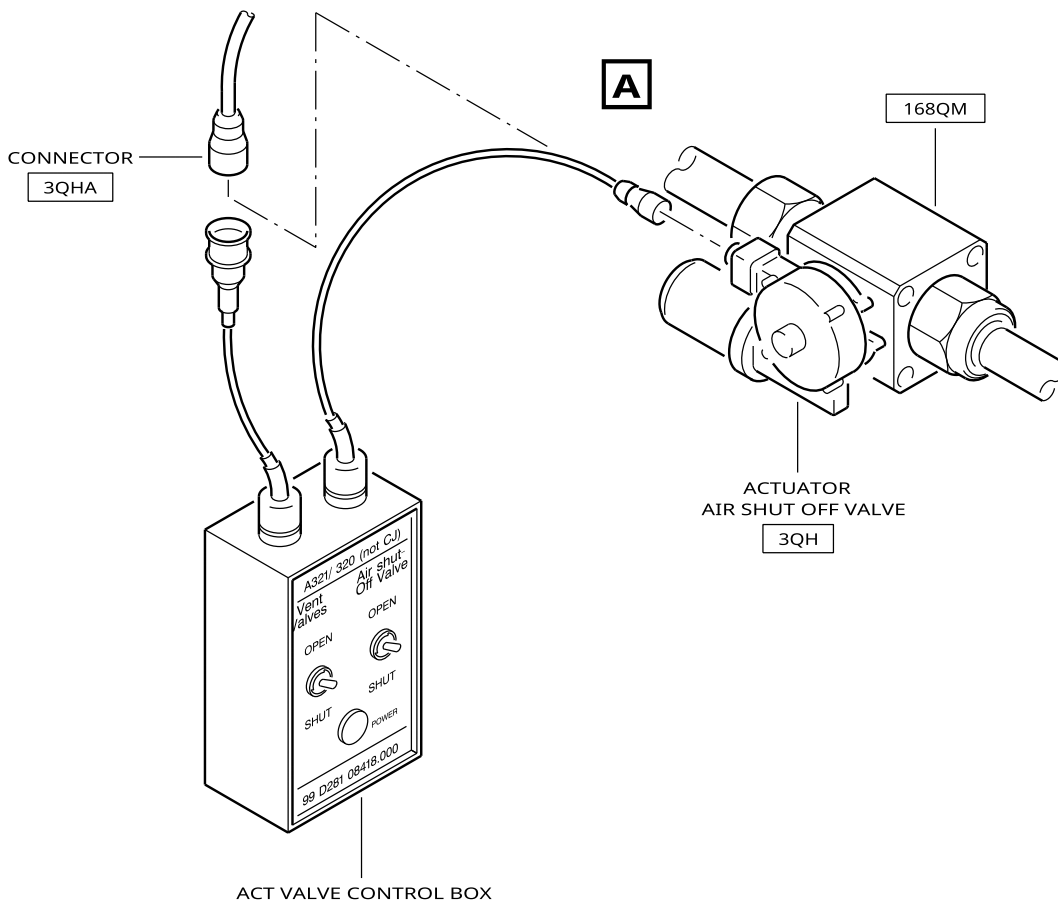



N_MM_281100_5_EGM0_01_01

ACT-Valve Control Box
Figure 1 / Graphic 28-11-00 -991-03800


TF-N AIRCRAFT MAINTENANCE MANUAL TANKS - ADJUSTMENT/TEST

AFT CARGO
T1 AND T2 TEST TOOL

SOLUTION 1 SELF-MADE TOOL

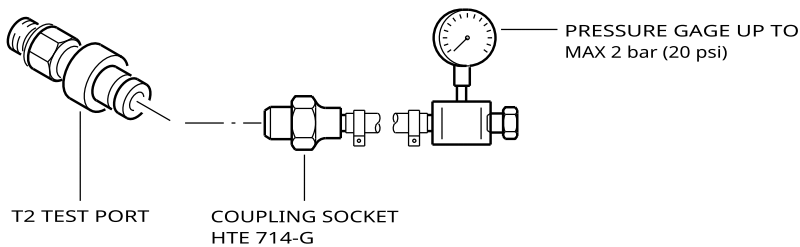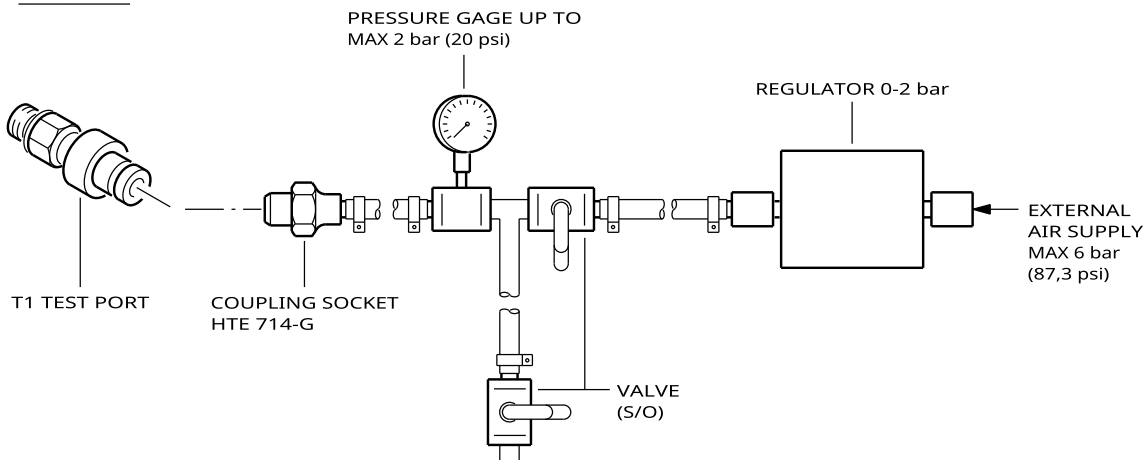

SOLUTION 2 AIRBUS TOOL

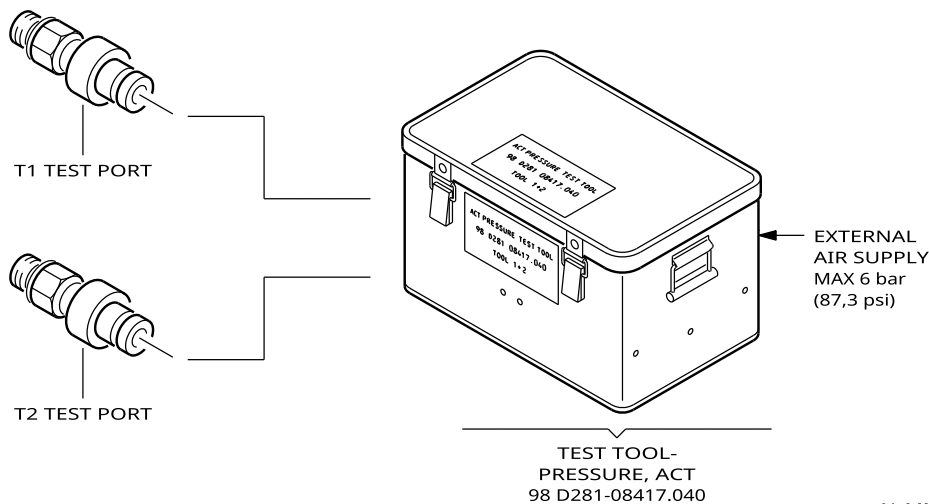

N_MM_281100_5_EHM0_01_00

ACT Test Arrangement (TEST TOOL-PRESSURE, ACT)
Figure 1 / Graphic 28-11-00 -991-03900

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

TASK 28-11-27-000-001 -A

On A/C 003-100

Removal of the Additional Center Tank (ACT)

WARNING: MAKE SURE THE AREA AROUND THE AIRCRAFT IS SAFE BEFORE YOU START THE REFUEL/DEFUEL PROCEDURE. IN THE SAFETY AREA, DO NOT:

- SMOKE
- MAKE SPARKS OR FIRE
- USE ANY EQUIPMENT WHICH IS NOT APPROVED FOR REFUEL/DEFUEL PROCEDURES.

AIRCRAFT FUEL IS FLAMMABLE.

WARNING: BE CAREFUL NOT TO GET AIRCRAFT FUEL IN YOUR MOUTH OR IN YOUR EYES. IF YOU GET FUEL ON YOUR SKIN OR ON YOUR CLOTHES, FLUSH IT IMMEDIATELY WITH WATER.

IF NECESSARY, GET MEDICAL HELP.

AIRCRAFT FUEL IS POISONOUS.

WARNING: DO NOT GET YOUR CLOTHES SOAKED WITH FUEL.

WARNING: MAKE SURE THAT YOU HAVE THE CORRECT FIRE FIGHTING EQUIPMENT AVAILABLE.

WARNING: BE CAREFUL WHEN YOU REMOVE OR INSTALL THIS EQUIPMENT. THIS EQUIPMENT IS HEAVY (MORE THAN 12 KG (26.5 lb)) AND CAN CAUSE INJURY AND/OR DAMAGE.

WARNING: HEAVY WEIGHT. MINIMUM 2 PERSONS OR ASSISTED HANDLING REQUIRED.

1. Reason for the Job

Self explanatory

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 2M (6 FT)
No specific	1	CAP - BLANKING
No specific	2	CAP - SEALING
No specific	1	CONTAINER 30 L(8 USGAL)
No specific	1	PLIERS - THIN NOSE
No specific	AR	PLUG - BLANKING
No specific	AR	PLUG - DUMMY
No specific	AR	SAFETY CLIP - CIRCUIT BREAKER
No specific	AR	TAPE - ADHESIVE
No specific	1	WARNING NOTICE(S)
No specific		Torque wrench: range to between 0.82 and 1.06 m.daN (72.57 and 93.81 lbf.in)
98D28108298001	1	STOWAGE - CONTAINER FUEL, ACT
98D28108328000	1	CONTAINER - REST FUEL, ACT
98D28108561000	1	EXTRACTOR - WATER DRAIN TUBE
98D28108563000	2	COVER, FUEL VENT-ACT

B. Consumable Materials

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

REFERENCE	DESIGNATION
03FAB1	Mineral Oil base Grease-- Vaseline or Petrolatum -
14QFB1	Wire-Locking Dia: 0.8 mm CRES Nickel Alloy -
14SBA1	Textile-Lint free Cotton -

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
153AZ , 153BZ , 154CZ , 197MB , 197NB , 197PB , 241JF , 241NF	

D. Expendable Parts

FIG.ITEM	DESIGNATION	IPC-CSN
124	O-RING	IPC-CSN(28-11-04-05 ITEM 040)
129	O-RING	IPC-CSN(28-11-04-05 ITEM 040)
134	O-RING	IPC-CSN(28-11-04-05 ITEM 040)
123	O-RING	IPC-CSN(28-11-04-05 ITEM 060)
133	O-RING	IPC-CSN(28-11-04-05 ITEM 060)
132	O-RING	IPC-CSN(28-11-04-05 ITEM 120)
124	O-RING	IPC-CSN(28-11-84-05 ITEM 045)
129	O-RING	IPC-CSN(28-11-84-05 ITEM 045)
134	O-RING	IPC-CSN(28-11-84-05 ITEM 045)
123	O-RING	IPC-CSN(28-11-84-05 ITEM 065)
133	O-RING	IPC-CSN(28-11-84-05 ITEM 065)
132	O-RING	IPC-CSN(28-11-84-05 ITEM 125)

E. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-42-00-861-001-A	Energize the Ground Service Network from the External Power
Ref. AMM 25-52-54-000-001-A	Removal of the Protection Cover
Ref. AMM 28-00-00-910-001-A	Fuel Safety Procedures
Ref. AMM 28-11-49-000-001-A	Removal of the ACT Integrated Impact Wall
Ref. AMM 28-25-00-650-001-A	Pressure Defuel
Ref. AMM 28-25-00-650-005-A	Procedure to Drain the Remaining Fuel From the Additional Center Tank (ACT)
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 53-32-12-000-002-A	Removal of the Cabin Floor Panels
Ref. AMM 53-42-14-000-001-A	Removal of the Aft Cargo-Compartment Floor-Panels Zone 150
Ref. AMM 53-42-14-400-001-A	Installation of the Aft Cargo-Compartment Floor-Panels Zone 150
Ref. AMM 53-42-14-400-001-A-01	Installation of the Aft Cargo-Compartment Floor-Panels (Alternative Installation Procedure with the Skyflex Option)
Ref. Fig. (1 / 28-11-27-991-00700)	
Ref. Fig. (1 / 28-11-27-991-00400)	
Ref. Fig. (1 / 28-11-27-991-01500)	
Ref. Fig. (1 / 28-11-27-991-01600)	
Ref. Fig. (1 / 28-11-27-991-02000)	
Ref. Fig. (1 / 28-11-27-991-01900)	
Ref. Fig. (1 / 28-11-27-991-00800)	

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

REFERENCE	DESIGNATION
Ref. Fig. (1 / 28-11-27-991-02100)	
Ref. Fig. (1 / 28-11-27-991-01100)	

3. Job Set-up

Subtask 28-11-27-860-050-A

On A/C 003-100

A. Aircraft Maintenance Configuration

- (1) Obey the fuel safety procedures [Ref. AMM 28-00-00-910-001-A](#).
- (2) Energize the ground service network [Ref. AMM 24-42-00-861-001-A](#).
- (3) Defuel the Additional Center Tank (ACT) [Ref. AMM 28-25-00-650-001-A](#).
- (4) Open the aft cargo-compartment door [Ref. AMM 52-30-00-860-001-A](#).
- (5) Put an ACCESS PLATFORM 2M (6 FT) in position at the opening of the aft cargo compartment door.
- (6) On the refuel/defuel control panel 800VU/801VU:
 - put the refuel valve switch in the OPEN position,
 - put the MODE SELECT switch in the REFUEL position.
- (7) Put all switches related to the fuel system to OFF.
- (8) Look on the ECAM Fuel Page and make sure that the ACT-System does not show.
- (9) Put the WARNING NOTICE(S) in position on:
 - the refuel/defuel panel 800VU 801VU,
 - the fueling panel 40VU,
 to tell persons not to operate the refuel/defuel system.

Subtask 28-11-27-865-050-A

On A/C 003-100

B. Open, safety and tag the circuit breaker(s) that follow(s). Use the SAFETY CLIP - CIRCUIT BREAKER as necessary.

PANEL	DESIGNATION	FIN	LOCATION
121VU	ACT/RFL/VALVE	33QU	L29
121VU	FUEL/HI/LVL/SPLY	1QJ	L25
121VU	FUEL/RFL/DFL/SPLY	2QU	L24
121VU	FUEL/RFL/DFL/XFR/DEFUEL/VALVE	1QU	L23
121VU	ACT XFR VALVE MAN CTL	30QH	N29
121VU	ACT/XFR VALVE/AUTO CTL	9QH	P29
121VU	ACT PUMP SUPPLY	25QH	Q29

Subtask 28-11-27-220-050-D

On A/C 003-100

C. Visual Inspection - Before Removal of an Additional Center Tank.

- (1) Do a check of the leak monitors and look for signs of fuel leakage.
 - remove the access panel 197MB to gain access to the access panel 154CZ.
 - remove the access panel 197NB to gain access to the access panel 153BZ.
 - look for signs of fuel leakage at the openings of the access panels 154CZ and 153BZ.
 - if you find signs of leakage, clean it with lint-free cotton cloth Textile-Lint free Cotton - (Material No. **14SBA1**) .

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

NOTE : Leaks are not permitted.

- (2) Put a CONTAINER 30 L(8 USGAL) in position below the openings of the access panels 197MB and 197NB.

Subtask 28-11-27-010-051-D

On A/C 003-100

D. Get Access

- (1) On the lower center fuselage:
 - (a) Remove the access panels:
 - 197MB , 197NB , 154CZ and 153BZ to get access to the water drain system of the ACT
 - 197PB and 153AZ to get access to the cavity drain system of the ACT.
- (2) In the cabin compartment:
 - (a) Remove access panel 241NF from cabin floor panel 241JF
[Ref. AMM 53-32-12-000-002-A.](#)
 - (b) Remove the applicable access panel from the cargo ceiling, to get access to the line connections of the ACT.
- (3) In the aft cargo compartment:
 - (a) If installed, remove the protective covers from the roller tracks
[Ref. AMM 25-52-54-000-001-A.](#)
 - (b) Remove the integrated impact wall from the ACT [Ref. AMM 28-11-49-000-001-A.](#)

Subtask 28-11-27-680-050-A

On A/C 003-100

E. Drain the remaining fuel from the ACT [Ref. AMM 28-25-00-650-005-A.](#)

4. Procedure

Subtask 28-11-27-020-051-G

On A/C 003-100

A. Removal of the ACT

- (1) Disconnect the electrical harness of the ACT as follows:
Ref. Fig. (1 / 28-11-27-991-00700)
 - (a) On the cargo ceiling, disconnect electrical connectors 7617VC-A (81), 7618VC-A (85) and 7619VC-A (88) from the electrical ports (89), (86) and (87).
 - (b) Put a PLUG - DUMMY on the electrical ports (89), (86) and (87).
 - (c) Connect the electrical connectors (81), (85) and (88) to the stowage ports (77), (78) and (79) on the ACT (1).
- (2) Disconnect the bonding straps of the ACT from the aircraft structure as follows:
Ref. Fig. (1 / 28-11-27-991-00400)
 - (a) Remove the screws (33) from the anchor nuts (38).
 - (b) Disconnect the bonding straps (34) from the aircraft structure (31).
 - (c) Attach the bonding straps (34) to the ACT (1) with an TAPE - ADHESIVE.
- (3) Disconnect the air hose assembly from the ACT pressure line as follows:
 - (a) Loosen the union nut (36).
 - (b) Disconnect the air hose assembly (39) from the elbow union (35).
 - (c) Attach the air hose assembly (39) to the ACT (1) with the TAPE - ADHESIVE.

NOTE : You can remove the air hose assembly from the ACT after the removal of the ACT from the cargo compartment.

- (4) Remove the water drain tubes from the ACT as follows:

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

Ref. Fig. (1 / 28-11-27-991-01500)

- (a) Put the removed parts in the **STOWAGE - CONTAINER FUEL, ACT** (98D28108298001).
- (b) Remove the screw (18) and the washer (17) from the bonding strap (15).
- (c) Disconnect the bonding strap (15) from the aircraft structure.
- (d) Remove the retaining ring (14) from the flange (13).

NOTE : You can use a **PLIERS - THIN NOSE** to remove the retaining ring.

- (e) Remove the flange (13) and the compression spring (12) from the drain tube (10).
- (f) Put an **EXTRACTOR - WATER DRAIN TUBE** (98D28108561000) into the drain tube (10).
- (g) Turn the **EXTRACTOR - WATER DRAIN TUBE** (98D28108561000) 90 deg (90 deg) until it hangs in the drain tube (10).
- (h) Pull the **EXTRACTOR - WATER DRAIN TUBE** (98D28108561000) down and remove drain tube (10) from the access hole.
- (i) Remove and discard the O-rings (11).

- (5) Remove the cavity drain assembly from the ACT as follows:

Ref. Fig. (1 / 28-11-27-991-01600)

- (a) Make sure that the access panel (30) is removed from the fuselage.
- (b) Disconnect the union nuts (27) from the drain fitting (26) and the pipe fitting (29).
- (c) Make sure that you do not twist the hose (28) when you loosen the nuts (27).
- (d) Remove the hose (28) from the aircraft.
- (e) Push and turn the cavity drain assembly (25) clockwise approximately to 60 deg (60 deg).
- (f) Make sure that the locking plate (23) of the cavity drain assembly (25) is disengaged from the ACT.
- (g) Remove the cavity drain assembly (25) from the cavity drain port.
- (h) Remove and discard the O-rings (22) and (24).
- (i) Put the **PLUG - BLANKING** in each disconnected line end.

- (6) Disconnect the flexible vent pipe from the ACT as follows:

Ref. Fig. (1 / 28-11-27-991-02000)

NOTE : You can use the access openings in the cabin floor and the cargo ceiling, to disconnect the vent and fuel pipe from the ACT.

- (a) Remove the nuts (46) from the studs (51).
- (b) Disconnect the flexible vent pipe (45) from the ACT flange (48).
- (c) Remove and discard the O-rings (49) and (50).

- (7) Disconnect the flexible fuel pipe from the ACT as follows:

Ref. Fig. (1 / 28-11-27-991-01900)

- (a) Put a **CONTAINER - REST FUEL, ACT** (98D28108328000) below the flexible fuel pipe (60) to catch the remaining fuel in the pipe.
- (b) Remove the nuts (59) from the studs (54).
- (c) Disconnect the flexible fuel pipe (60) from the ACT flange (57).
- (d) Remove and discard the O-rings (55) and (56).

- (8) Prepare for removal of the ACT as follows:

Ref. Fig. (1 / 28-11-27-991-00800)

Ref. Fig. (1 / 28-11-27-991-02100)

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

- (a) Put an applicable platform at the cargo door opening to remove the ACT.
- (b) Remove the screws (91), the washers (92) and the locking plates (93) from the latch elements (94).
- (c) Install the screws (91) and the washers (92) in the latch elements (94).
- (d) Lower the latch elements (94) to release the ACT.
- (9) Remove the ACT from the aft cargo compartment as follows:
 - (a) Carefully move the ACT (1) on the roller tracks away from the flexible vent pipe (45) and the flexible fuel pipe (60).
Ref. Fig. (1 / 28-11-27-991-02000)
Ref. Fig. (1 / 28-11-27-991-01900)
 - (b) Move the ACT out of the cargo compartment.

NOTE : The ACT weighs approximately 374 kg (824.5286 lb).

- (10) Support the flexible vent pipe (45) and the flexible fuel pipe (60) as follows:
 - (a) Put a CAP - SEALING on the end of the flexible vent pipe (45) and the flexible fuel pipe (60).

Subtask 28-11-27-210-054-A

On A/C 003-100

B. Visual Inspection - After the Removal of the ACT (ACT1 and ACT2)

- (1) In the aft cargo compartment:
 - (a) Remove the applicable aft cargo-compartment floor-panel(s) in the area below the removed ACT (ACT1 and ACT2) [Ref. AMM 53-42-14-000-001-A](#).
 - (b) Do a check of the aft cargo-compartment floor (area below the removed aft cargo-compartment floor-panel(s)) for the signs of fuel leakage:
 - 1 Make sure that there are no leaks.
 - 2 If you find the signs of fuel leakage, clean the applicable area with a Textile-Lint free Cotton - (Material No. **14SBA1**) .
 - (c) Install the removed aft cargo-compartment floor-panel(s) [Ref. AMM 53-42-14-400-001-A](#)
[Ref. AMM 53-42-14-400-001-A-01](#).

5. Close-up

Subtask 28-11-27-551-050-A

On A/C 003-100

WARNING: BEFORE YOU DO WORK IN OR NEAR A FUEL TANK, MAKE SURE THAT YOU OBEY ALL THE SAFETY PROCEDURES. THIS WILL PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE AIRCRAFT.

A. Preparation for Storage

NOTE : The subsequent procedure is the same for each ACT. Therefore only one ACT is given.

- (1) If the ACT is not to be reinstalled within twenty days, you must do the following:
 - (a) Do the storage procedure in the workshop.

NOTE : Because of the possibility that the bladder tank can be damaged, the storage procedure must be done in the workshop only.

Subtask 28-11-27-010-052-D

On A/C 003-100

B. Remove the air hose assembly (39)

Ref. Fig. (1 / 28-11-27-991-01500)

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

Ref. Fig. (1 / 28-11-27-991-00400)

- (1) Remove the O-ring (9) from the water drain port in the base of the ACT (1).
- (2) Loosen the union nut (40) and remove it from the ACT pressurization check valve (32).
- (3) Remove the air hose assembly (39).
- (4) Put CAP - BLANKING on the port of the check valve (32) and on the elbow union (35).
- (5) Put a CAP - BLANKING on each end of the air hose assembly (39).
- (6) Remove the ACT guide from the aft cargo compartment.

Ref. Fig. (1 / 28-11-27-991-02100)

- (a) Loosen and remove the fasteners (112) and (113) from the mounting bracket (114).
- (b) Remove the rigging pins (111) from the guide.

Subtask 28-11-27-420-051-A

On A/C 003-100

C. Install protective blank flange caps on the ACT

Ref. Fig. (1 / 28-11-27-991-01100)

NOTE : The openings of the ACT must be closed when the ACT is removed from the aircraft and the ACT must be put into storage.


- (1) Install the cavity-drain blanking plug on the ACT:
 - (a) Apply a thin layer of Mineral Oil base Grease-- Vaseline or Petrolatum - (Material No. **03FAB1**) on the new IPC-CSN(28-11-84-05 ITEM 125) O-RING (132) or IPC-CSN(28-11-04-05 ITEM 120) O-RING (132) .
 - (b) Put the O-ring (132) on the cavity drain plug (131).
 - (c) Put the cavity drain plug (131) into the opening of the ACT (1).
 - (d) Turn the cavity drain plug (131) 60 deg (60 deg) counterclockwise to seal the port.
 - (e) Make sure that cavity drain plug (131) is fully engaged.
- (2) Install the protective blank flange caps on the fuel and vent line ends of the ACT:
 - (a) Apply a thin layer of Mineral Oil base Grease-- Vaseline or Petrolatum - (Material No. **03FAB1**) on the new:
 - IPC-CSN(28-11-84-05 ITEM 065) O-RING (123) or IPC-CSN(28-11-04-05 ITEM 060) O-RING (123)
 - IPC-CSN(28-11-84-05 ITEM 045) O-RING (124) or IPC-CSN(28-11-04-05 ITEM 040) O-RING (124)
 - IPC-CSN(28-11-84-05 ITEM 045) O-RING (129) or IPC-CSN(28-11-04-05 ITEM 040) O-RING (129)
 - IPC-CSN(28-11-84-05 ITEM 065) O-RING (133) or IPC-CSN(28-11-04-05 ITEM 060) O-RING (133)
 - IPC-CSN(28-11-84-05 ITEM 045) O-RING (134) or IPC-CSN(28-11-04-05 ITEM 040) O-RING (134) .
 - (b) Put the O-rings (123), (124) and the inner blanking flange (130) on the end of the ACT vent line.
 - (c) Install the nuts (125) on the studs (122).
 - (d) TORQUE the nuts (125) opposite to one another **to between 0.82 and 1.06 m.daN (72.57 and 93.81 lbf.in)**.
 - (e) Make sure that the pressure relief screw (126) is installed on the inner blanking flange (130).
 - (f) Safety the pressure relief screw (126) with Wire-Locking Dia: 0.8 mm CRES Nickel Alloy - (Material No. **14QFB1**) .

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

- (g) Put the O-ring (129) and the outer blanking flange (128) on the inner blanking flange (130).
 - (h) Install the nuts (127) on the studs (121).
 - (i) TORQUE the nuts (127) opposite to one another **to between 0.82 and 1.06 m.daN (72.57 and 93.81 lbf.in)**.
 - (j) Put the O-rings (133), (134) and the blanking flange (135) on the end of the ACT fuel line.
 - (k) Install the nuts (136) on the studs (137).
 - (l) TORQUE the nuts (136) opposite to one another **to between 0.82 and 1.06 m.daN (72.57 and 93.81 lbf.in)**.
- (3) In the aft cargo compartment, put the **COVER, FUEL VENT-ACT** (98D28108563000) on the vent and fuel pipe ends.

NOTE : This makes sure that no fuel vapor can enter the cargo compartment.


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

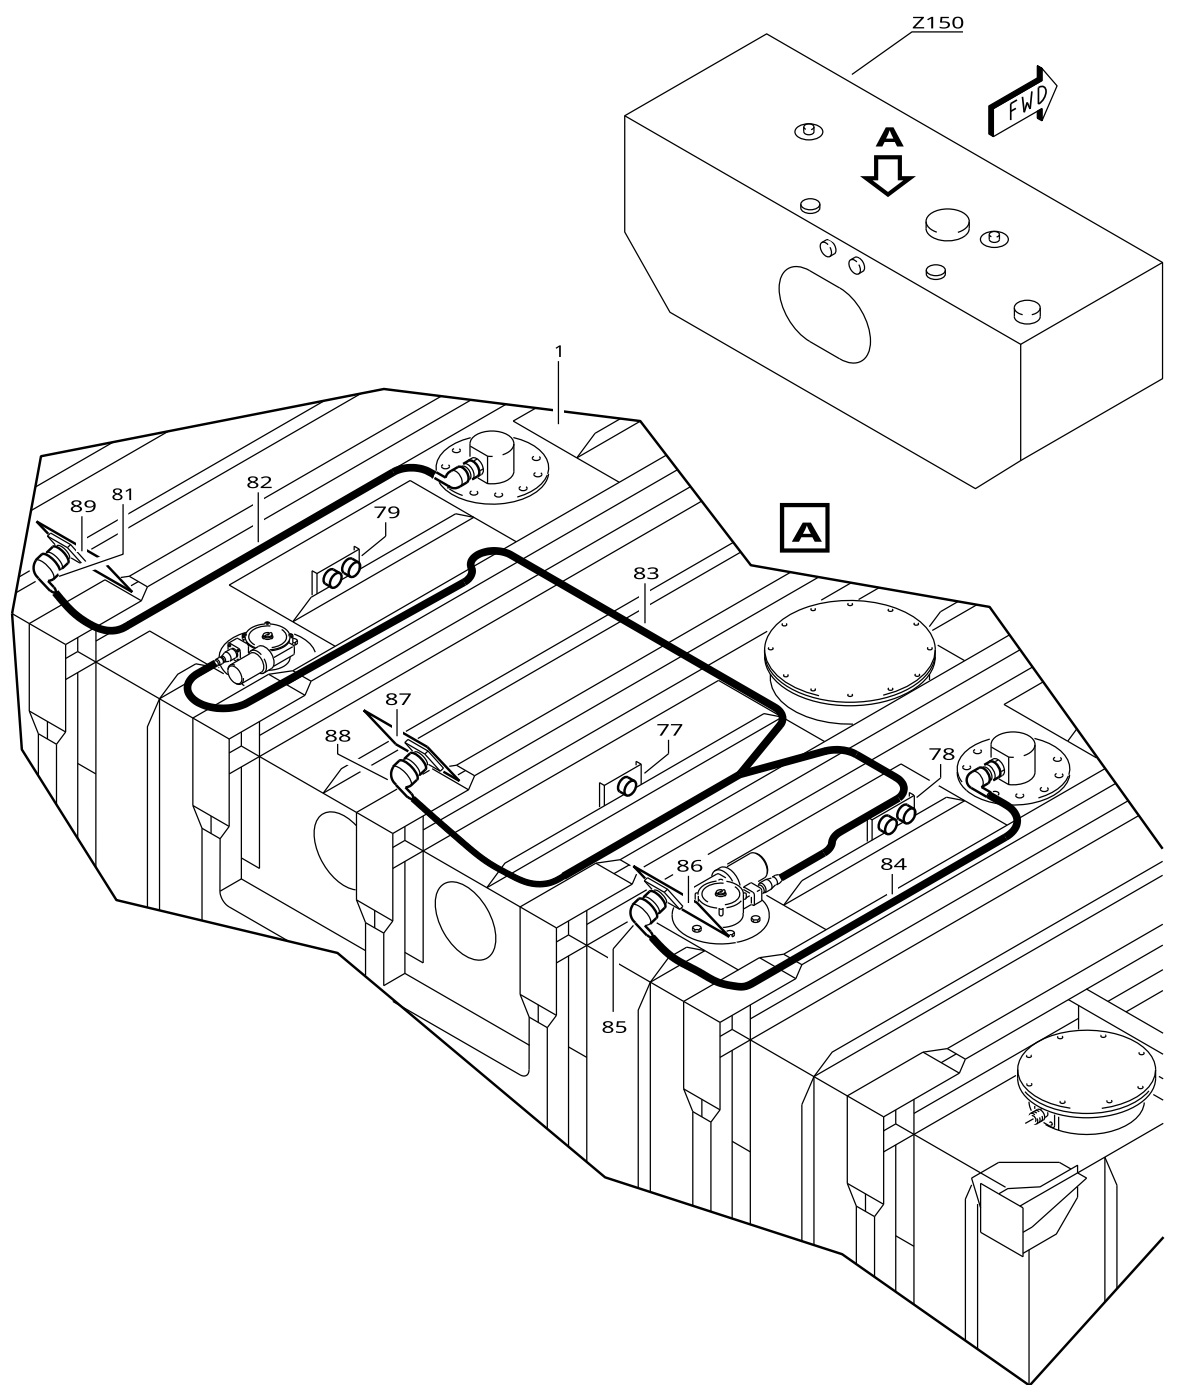

N_MM_281127_4_ANM0_01_00

Electrical Connections
Figure 1 / Graphic 28-11-27 -991-00700


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

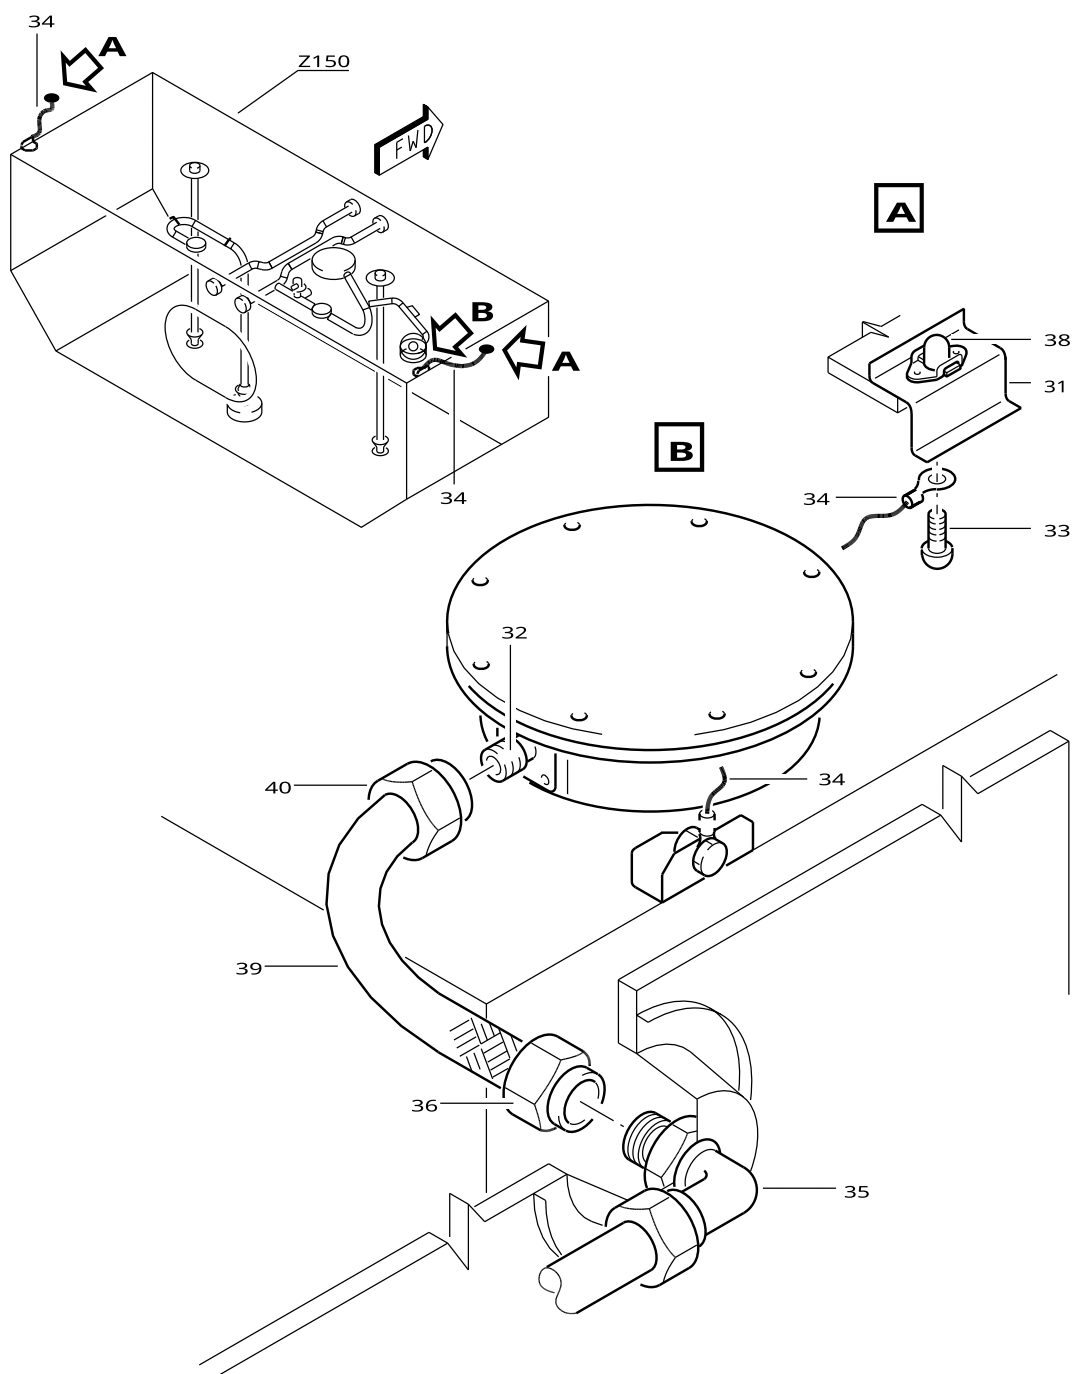

N_MM_281127_4_AGM0_01_00

Pressure Hose and Bonding Assembly
Figure 1 / Graphic 28-11-27 -991-00400


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

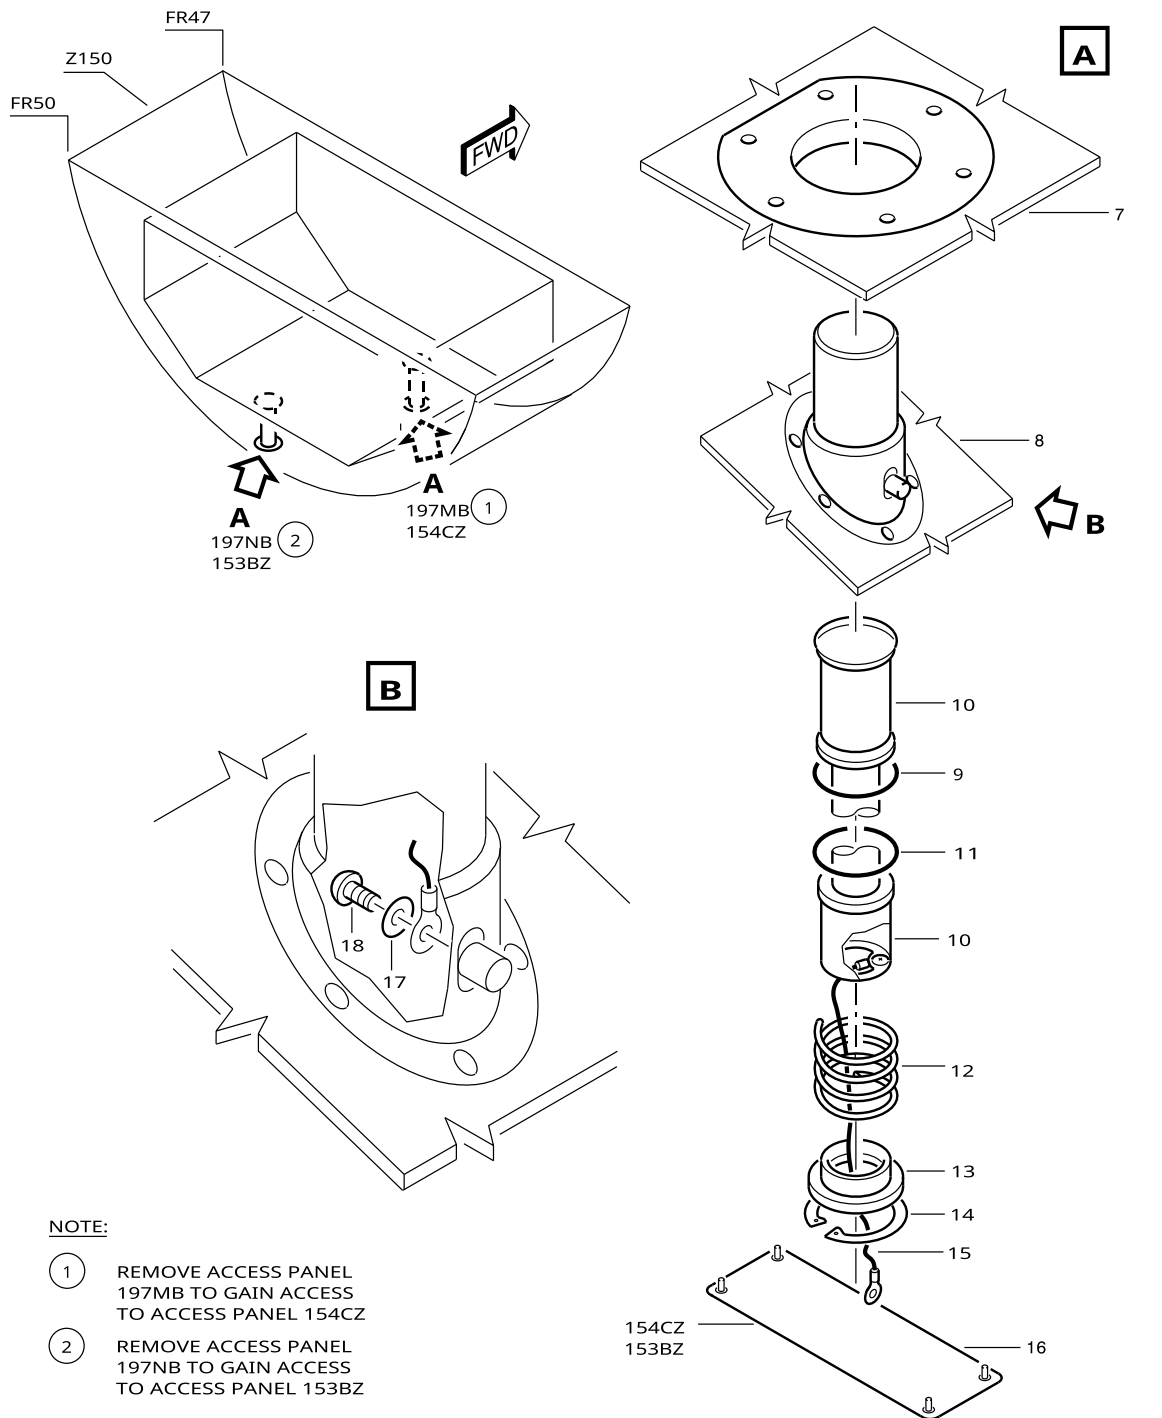

N_MM_281127_4_CHM0_01_00

Water Drain of the ACT
Figure 1 / Graphic 28-11-27 -991-01500


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

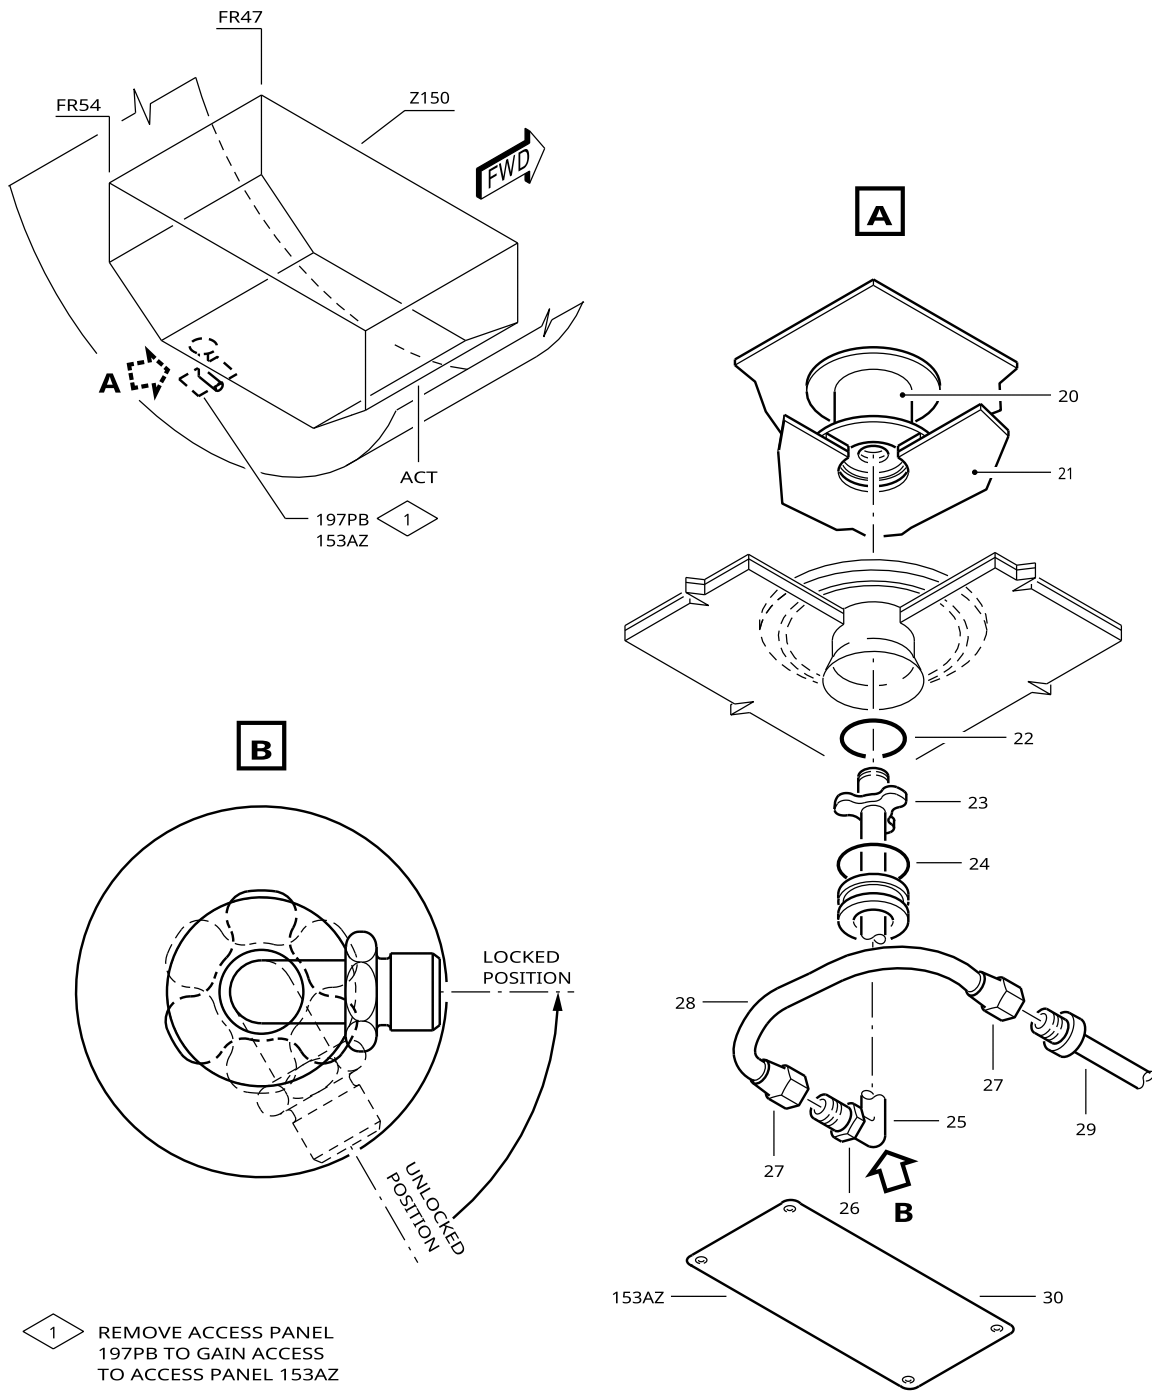

N_MM_281127_4_CKM0_01_00

Cavity Drain
Figure 1 / Graphic 28-11-27 -991-01600


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

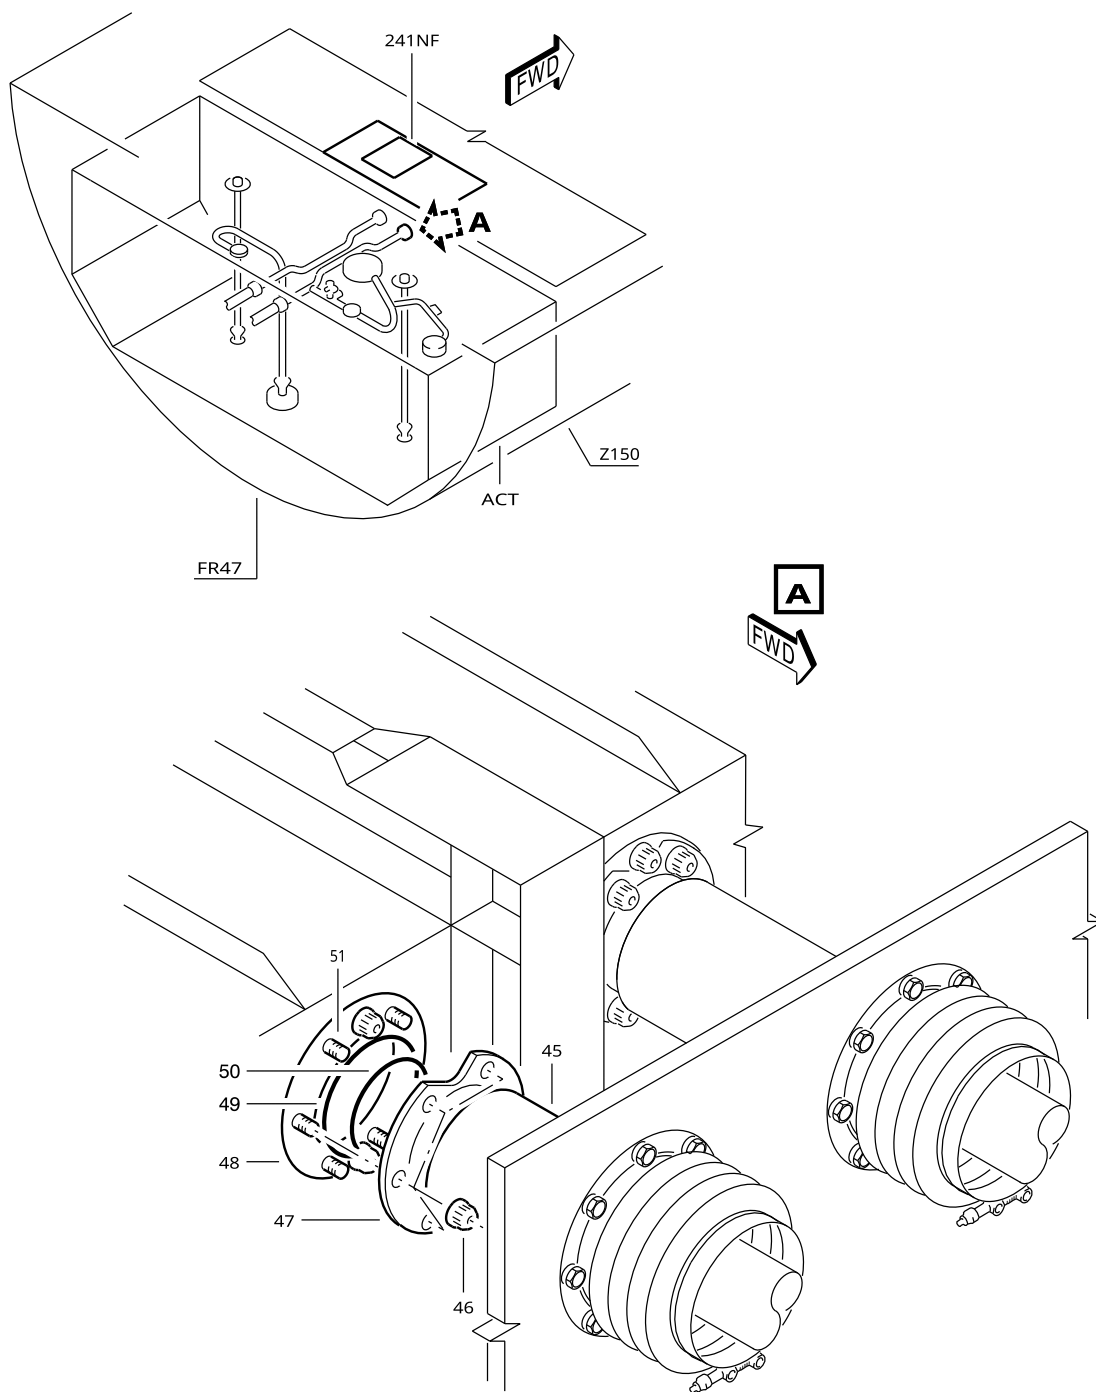

N_MM_281127_4_CQM0_01_00

Vent Pipe ACT 1
Figure 1 / Graphic 28-11-27 -991-02000


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

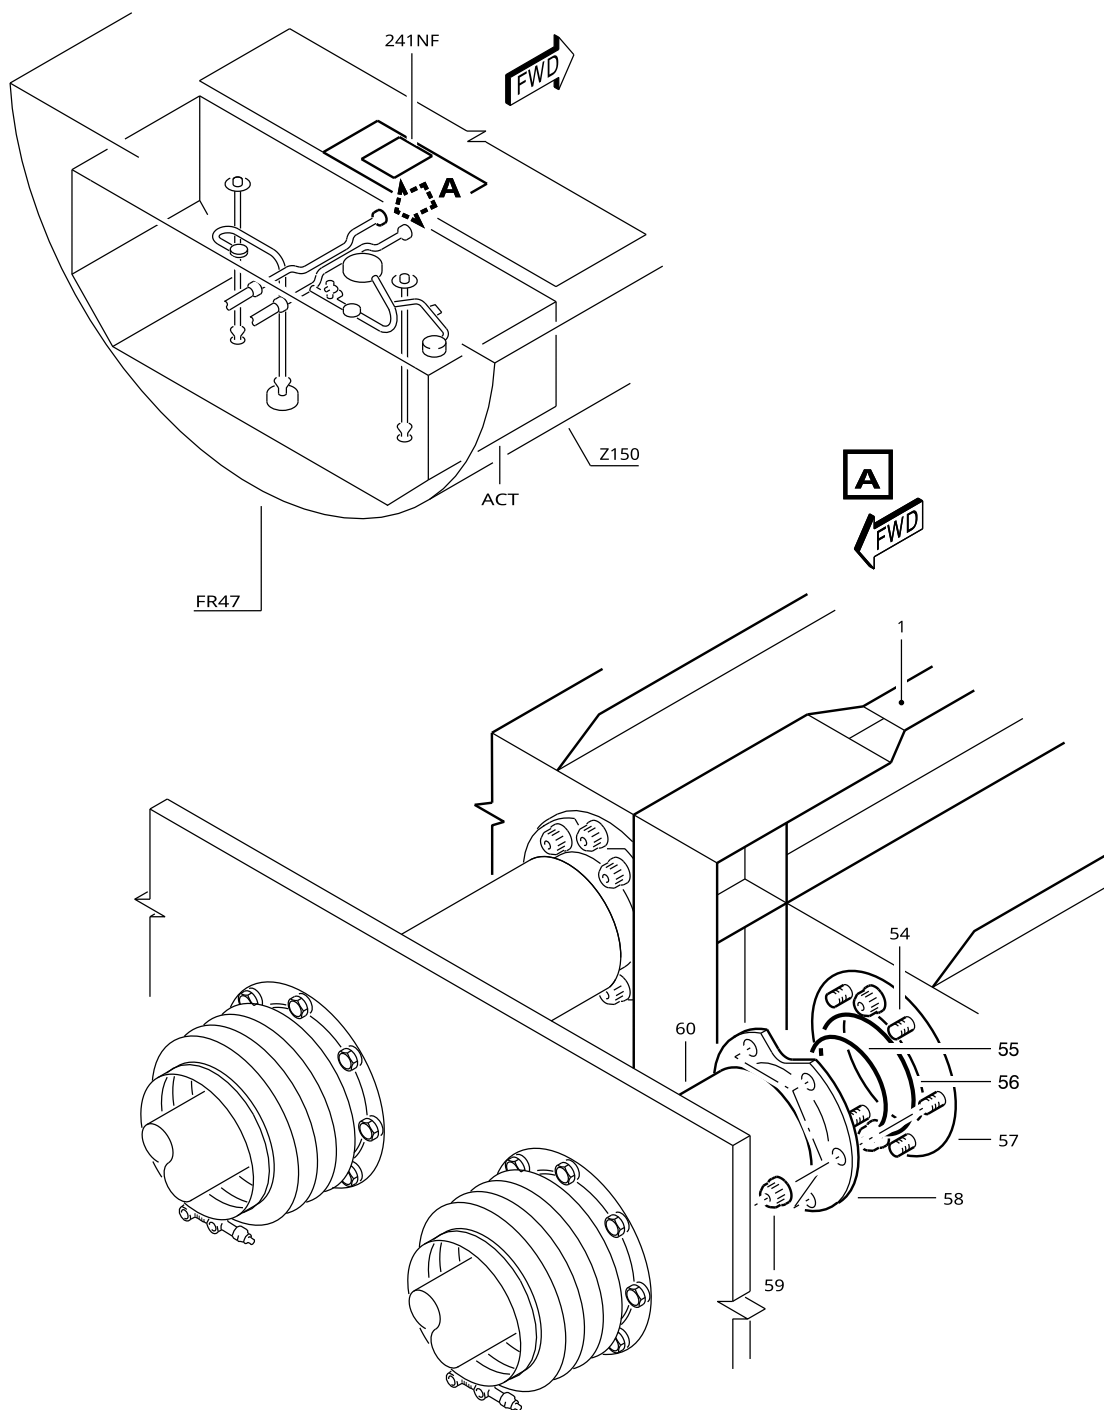

N_MM_281127_4_CMM0_01_00

Fuel Pipe ACT 1
Figure 1 / Graphic 28-11-27 -991-01900


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

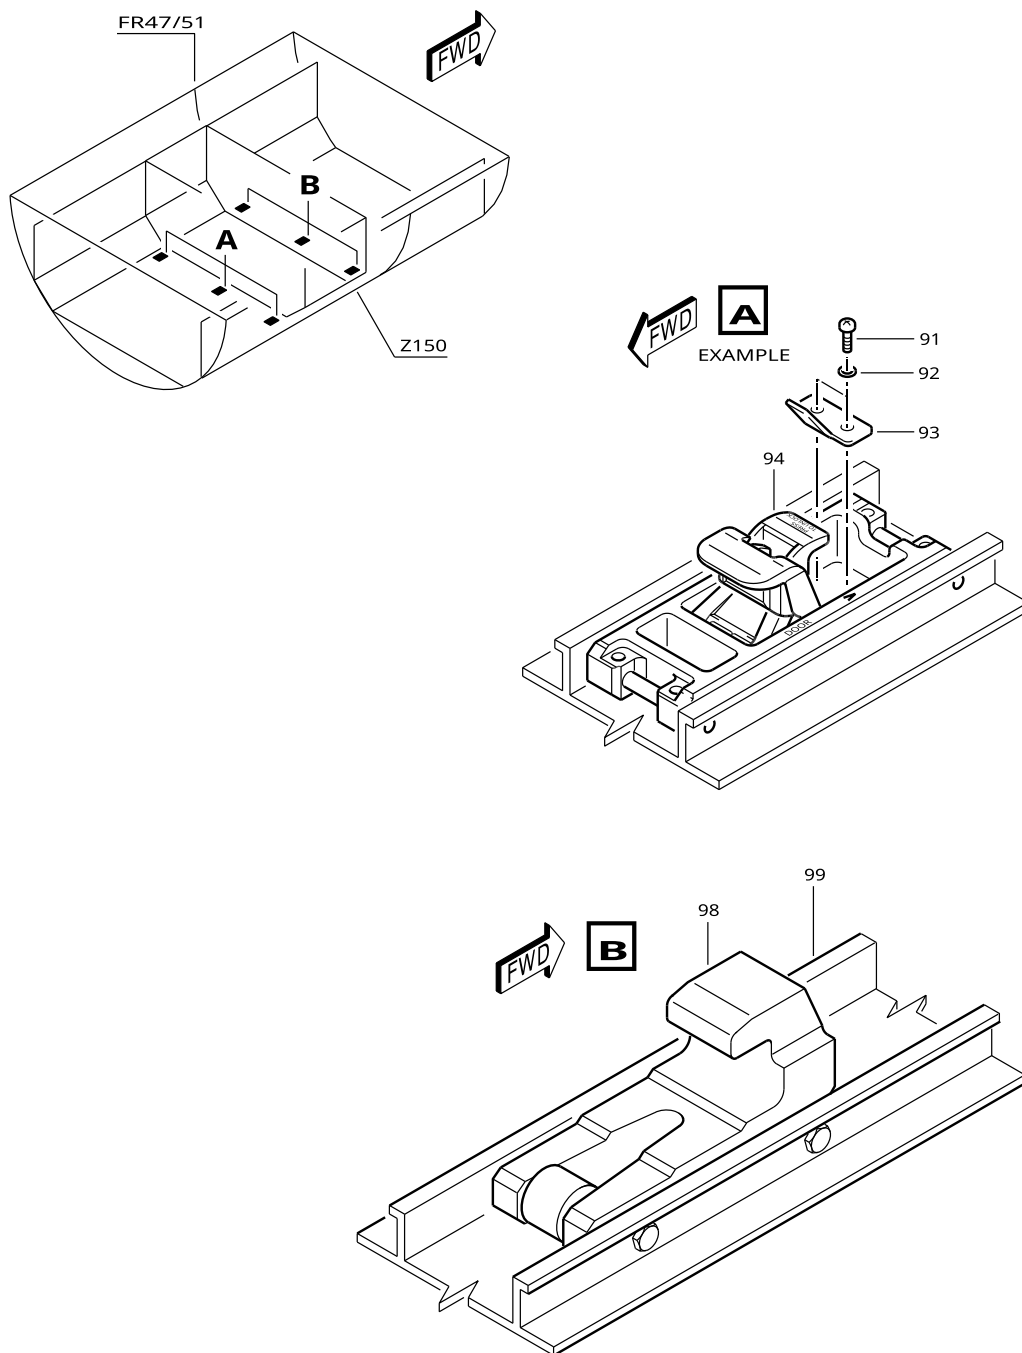

N_MM_281127_4-APN0_01_00

Attachment of the ACT
Figure 1 / Graphic 28-11-27 -991-00800


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

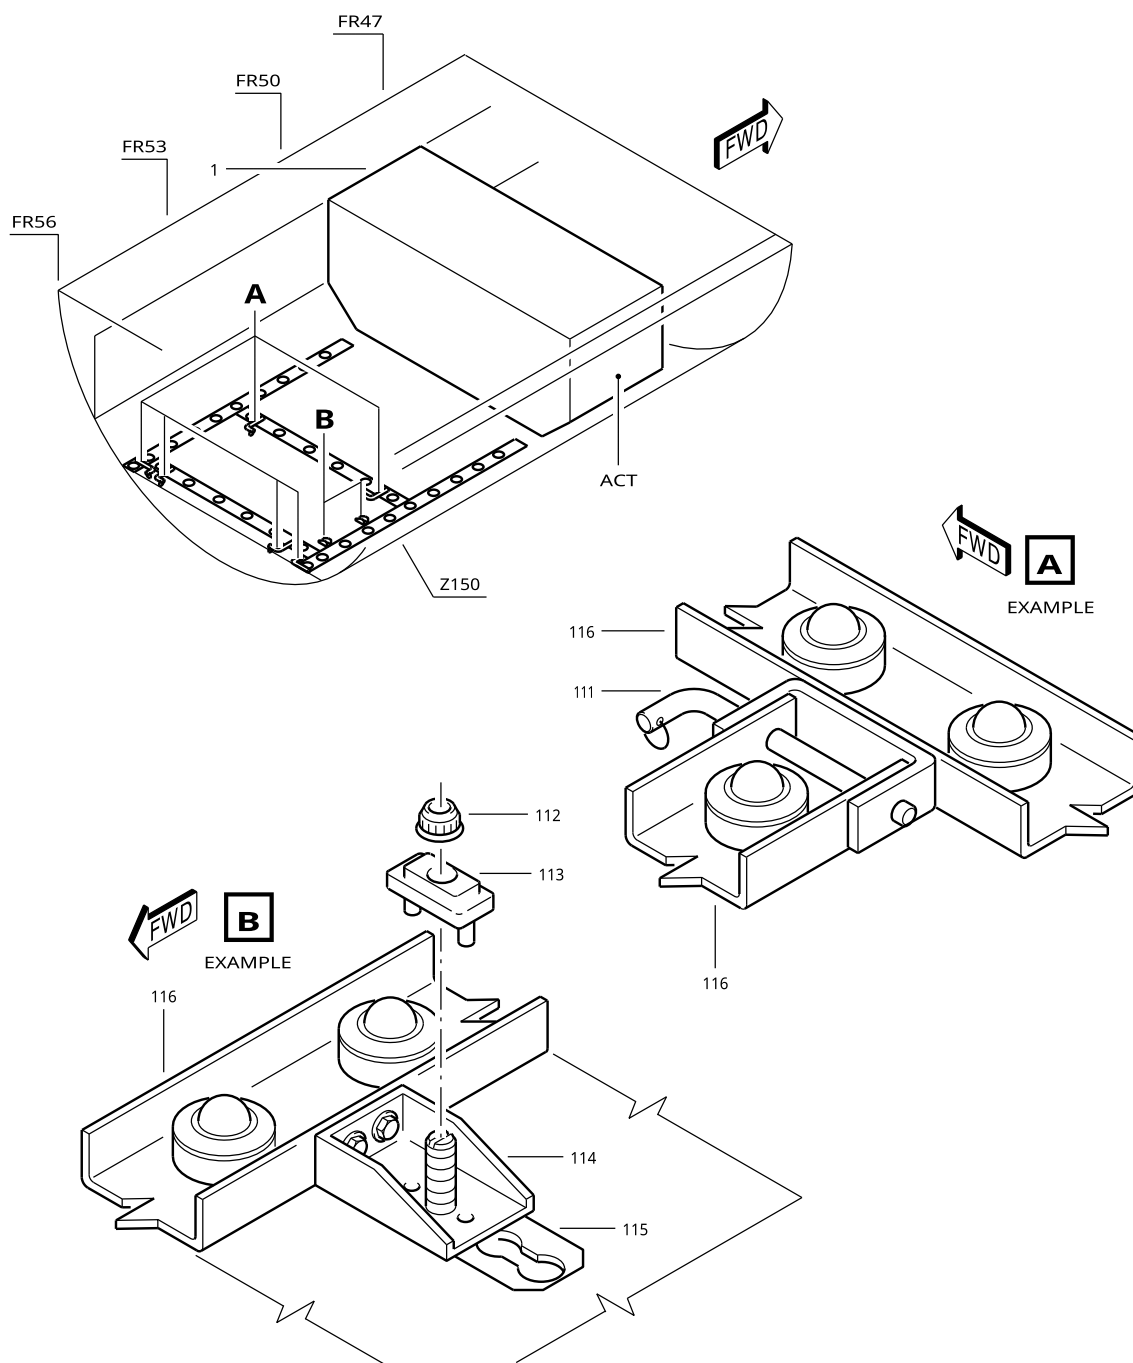

N_MM_281127_4_CSM0_01_00

ACT Guide - Removal/Installation
Figure 1 / Graphic 28-11-27 -991-02100


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

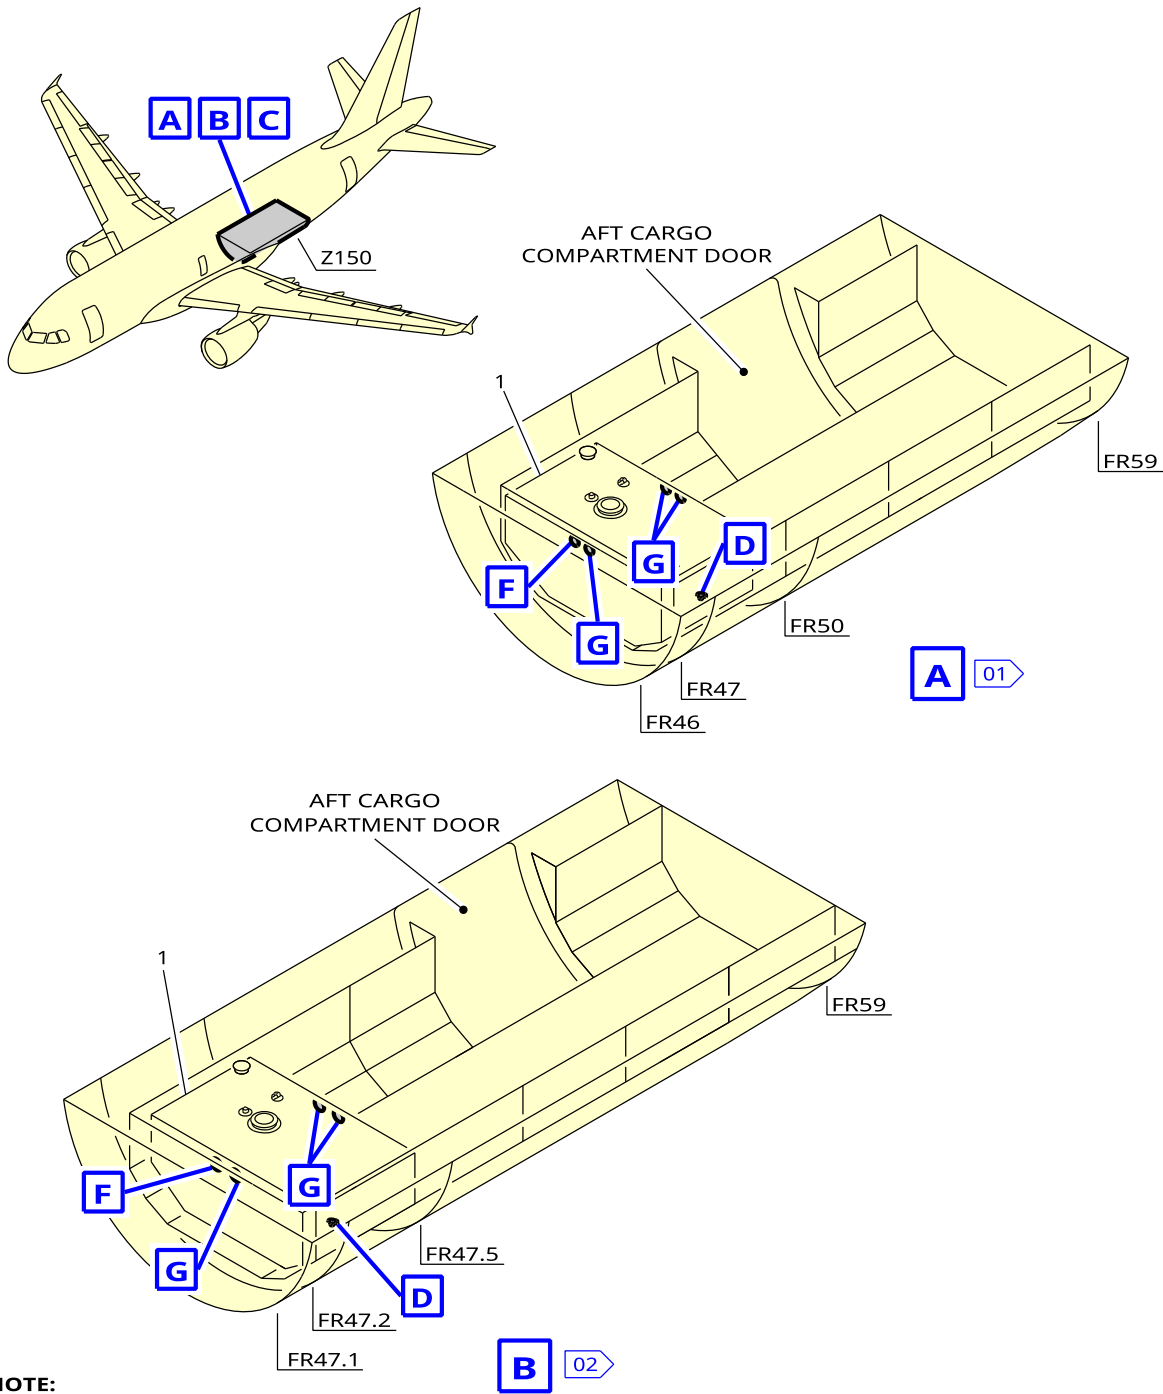

N_MM_281127_4_ATM0_01_01

Blanking Flange Caps of the ACT
Figure 1 / Graphic 28-11-27 -991-01100

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

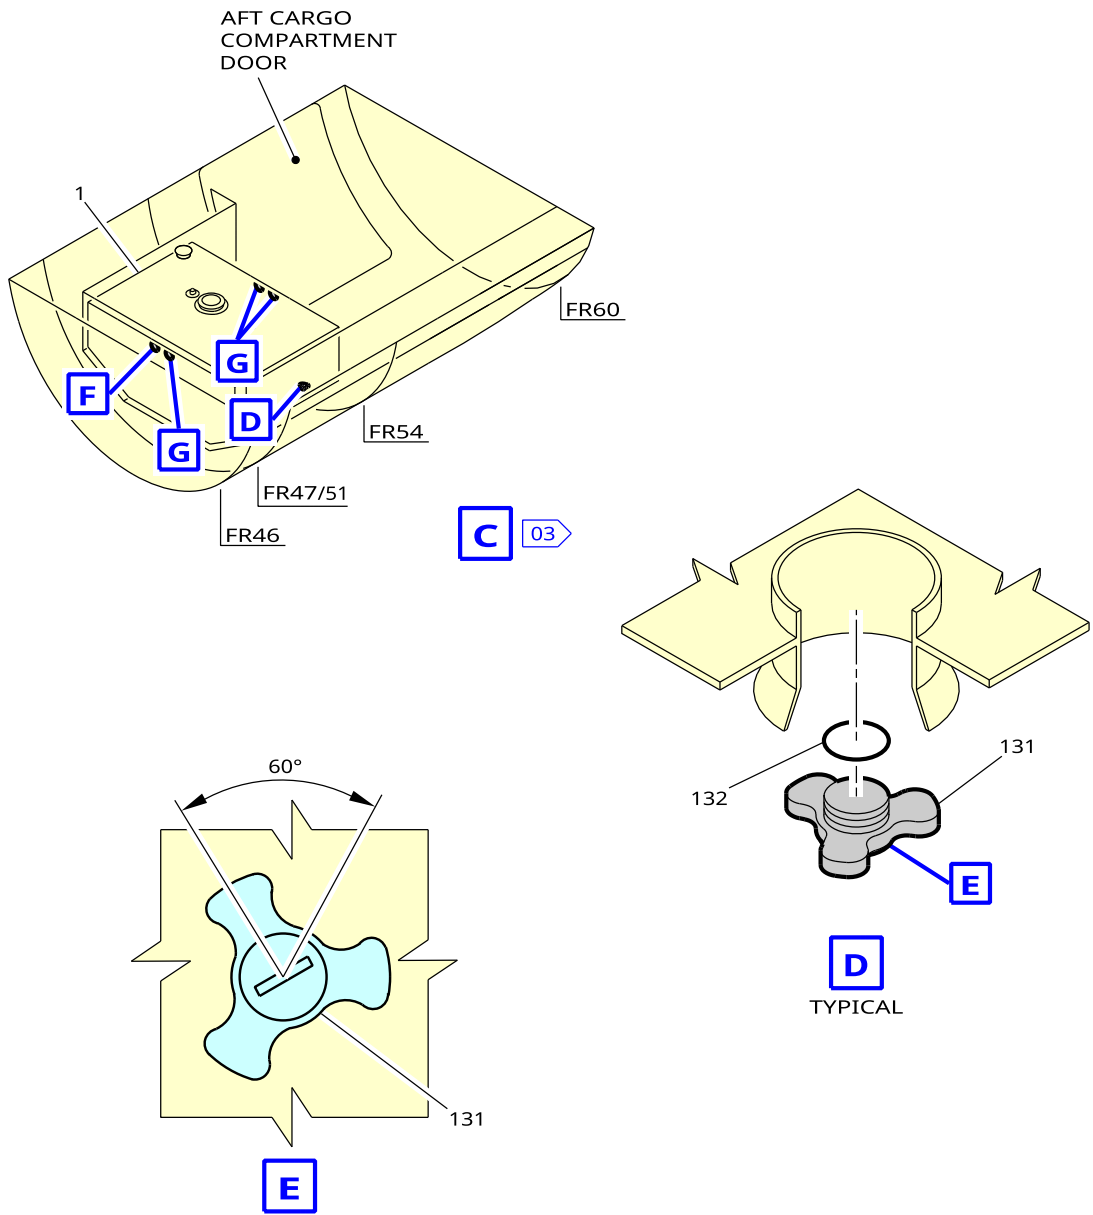


NOTE:
03 VALID FOR ST3.

N_MM_281127_4_ATM0_02_00

Blanking Flange Caps of the ACT
Figure 2 / Graphic 28-11-27 -991-01100

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

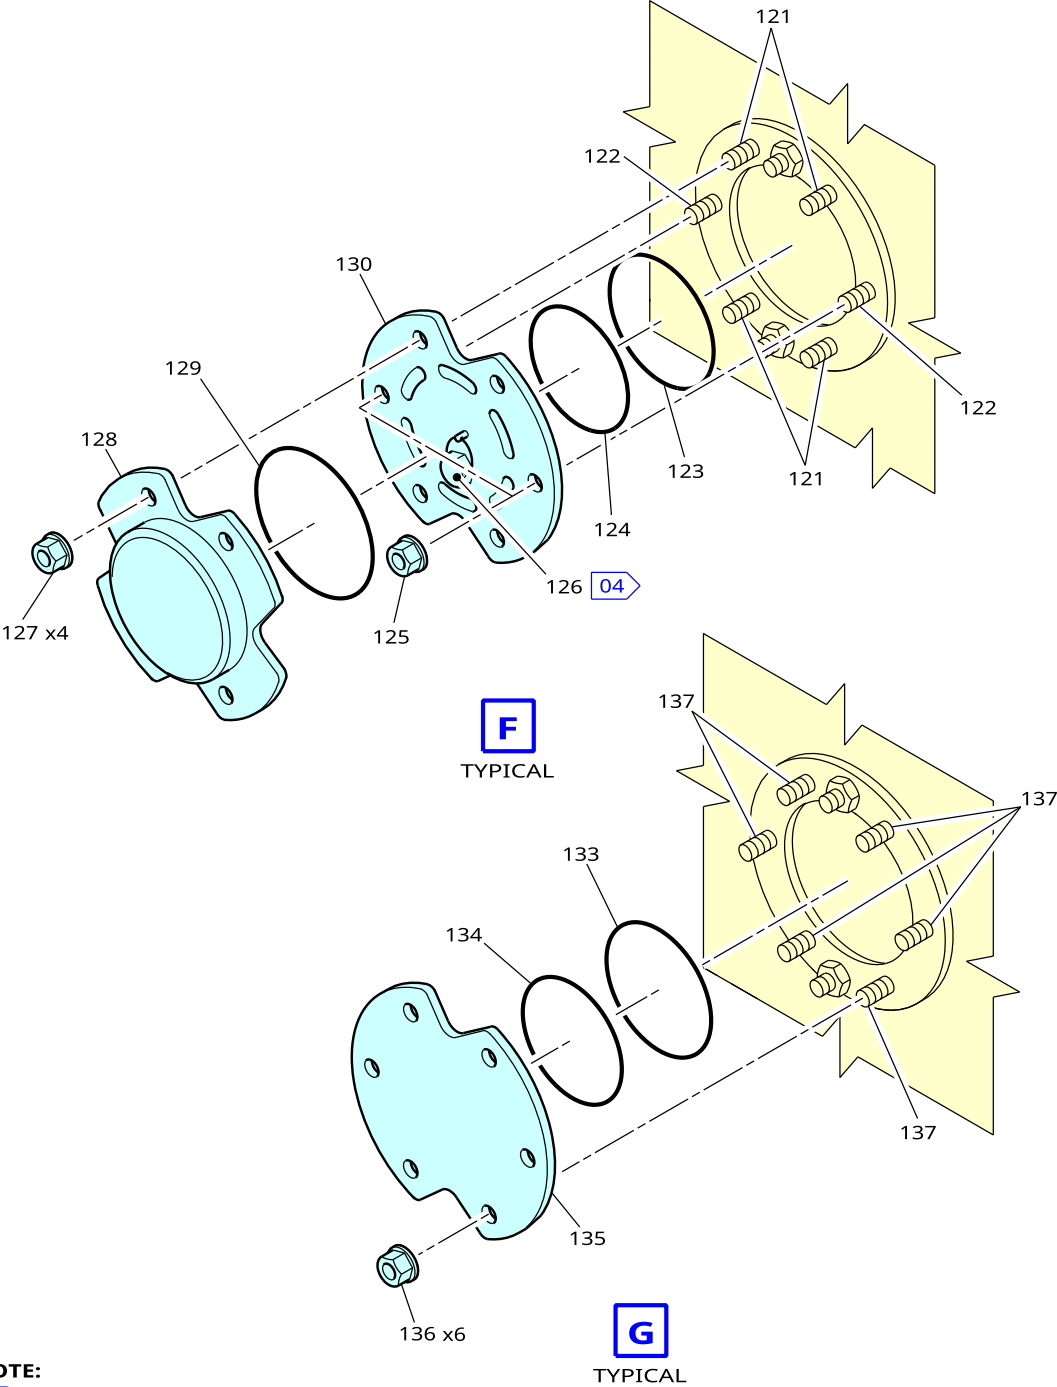

N_MM_281127_4_ATM0_03_00

Blanking Flange Caps of the ACT
Figure 3 / Graphic 28-11-27 -991-01100

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

TASK 28-11-27-400-001 -A

On A/C 003-100

Installation of the Additional Center Tank (ACT)

WARNING: MAKE SURE THE AREA AROUND THE AIRCRAFT IS SAFE BEFORE YOU START THE REFUEL/DEFUEL PROCEDURE. IN THE SAFETY AREA, DO NOT:

- SMOKE
- MAKE SPARKS OR FIRE
- USE ANY EQUIPMENT WHICH IS NOT APPROVED FOR REFUEL/DEFUEL PROCEDURES.

AIRCRAFT FUEL IS FLAMMABLE.

WARNING: BE CAREFUL NOT TO GET AIRCRAFT FUEL IN YOUR MOUTH OR IN YOUR EYES. IF YOU GET FUEL ON YOUR SKIN OR ON YOUR CLOTHES, FLUSH IT IMMEDIATELY WITH WATER.

IF NECESSARY, GET MEDICAL HELP.

AIRCRAFT FUEL IS POISONOUS.

WARNING: DO NOT GET YOUR CLOTHES SOAKED WITH FUEL.

WARNING: MAKE SURE THAT YOU HAVE THE CORRECT FIRE FIGHTING EQUIPMENT AVAILABLE.

WARNING: BE CAREFUL WHEN YOU REMOVE OR INSTALL THIS EQUIPMENT. THIS EQUIPMENT IS HEAVY (MORE THAN 12 KG (26.5 lb)) AND CAN CAUSE INJURY AND/OR DAMAGE.

WARNING: HEAVY WEIGHT. MINIMUM 2 PERSONS OR ASSISTED HANDLING REQUIRED.

1. Reason for the Job

Self explanatory

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 2M (6 FT)
No specific	1	PLIERS - THIN NOSE
No specific	AR	PLUG - BLANKING
No specific	AR	SAFETY CLIP - CIRCUIT BREAKER
No specific	1	WARNING NOTICE(S)
No specific		Torque wrench: range to between 4 and 5 m.N (35.40 and 44.25 lbf.in)
No specific		Torque wrench: range to between 30 and 37 m.N (22.12 and 27.29 lbf.ft)
No specific		Torque wrench: range to between 39 and 48 m.N (28.76 and 35.40 lbf.ft)
No specific		Torque wrench: range to between 0.37 and 0.48 m.daN (32.74 and 42.48 lbf.in)
98D28108293001	1	ADAPTER-WATER DRAIN, ADDITIONAL CENTER TANK
98D28108298001	1	STOWAGE - CONTAINER FUEL, ACT
98D28108366001	1	GUIDE-R I, AIRCRAFT CENTER TANK 1

B. Consumable Materials

REFERENCE	DESIGNATION
03FAB1	Mineral Oil base Grease-- Vaseline or Petrolatum -

C. Work Zones and Access Panels

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

ZONE/ACCESS	ZONE DESCRIPTION
153AZ , 153BZ , 154CZ , 197MB , 197NB , 197PB , 241JF , 241NF	

D. Expendable Parts

FIG.ITEM	DESIGNATION	IPC-CSN
24	O-RING	IPC-CSN(28-11-04-14 ITEM 090)
22	O-RING	IPC-CSN(28-11-04-14 ITEM 100)
49	O-RING	IPC-CSN(28-11-04-14 ITEM 140)
55	O-RING	IPC-CSN(28-11-04-14 ITEM 140)
50	O-RING	IPC-CSN(28-11-04-14 ITEM 150)
56	O-RING	IPC-CSN(28-11-04-14 ITEM 150)
14	RETAINING RING	IPC-CSN(28-11-04-15 ITEM 060)
11	O-RING	IPC-CSN(28-11-04-15 ITEM 100)
9	O-RING	IPC-CSN(28-11-04-15 ITEM 100)
103	SHIM PLATES	IPC-CSN(28-11-27-01 ITEM 030)

E. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 20-28-00-912-802-A	Electrical Bonding - General Maintenance Procedure
Ref. AMM 20-28-00-912-803-A	Bonding Surface Preparation
Ref. AMM 24-42-00-861-001-A	Energize the Ground Service Network from the External Power
Ref. AMM 24-42-00-862-001-A	De-energize the Ground Service Network Supplied from the External Power
Ref. AMM 25-52-54-400-001-A	Installation of the Protection Cover
Ref. AMM 28-00-00-910-001-A	Fuel Safety Procedures
Ref. AMM 28-11-49-400-001-A	Installation of the ACT Integrated Impact Wall
Ref. AMM 28-25-00-650-005-A	Procedure to Drain the Remaining Fuel From the Additional Center Tank (ACT)
Ref. AMM 28-28-00-200-003-A	Operational Check of Leak Monitor for Evidence of Fuel Leakage
Ref. AMM 28-28-00-710-001-A	Operational Check of the ACT Manual Transfer System
Ref. AMM 28-28-00-710-004-A	Operational Test of the Additional Center Tank (ACT) Automatic Transfer-System
Ref. AMM 28-28-00-790-004-A	Functional Check of the Vent/Transfer Pipe Shrouds and ACT Drain Pipe Connectors
Ref. AMM 28-28-00-790-005-A	Leak Test of Additional Center Tank (ACT) Vent/Transfer Pipe-Shrouds and Cavity Drain Lines
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 53-32-12-000-002-A	Removal of the Cabin Floor Panels
Ref. AMM 53-32-12-400-002-A	Installation of the Cabin Floor Panels
Ref. Fig. (1 / 28-11-27-991-02100)	
Ref. Fig. (1 / 28-11-27-991-01100)	
Ref. Fig. (1 / 28-11-27-991-00400)	
Ref. Fig. (1 / 28-11-27-991-00800)	
Ref. Fig. (1 / 28-11-27-991-02300)	
Ref. Fig. (1 / 28-11-27-991-01300)	
Ref. Fig. (1 / 28-11-27-991-00700)	
Ref. Fig. (1 / 28-11-27-991-01500)	
Ref. Fig. (1 / 28-11-27-991-01600)	

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

REFERENCE	DESIGNATION
Ref. Fig. (1 / 28-11-27-991-02000)	
Ref. Fig. (1 / 28-11-27-991-01900)	

3. Job Set-up

Subtask 28-11-27-869-050-A

On A/C 003-100

A. Safety Precautions

- (1) You must obey the safety procedures when you work on a fuel tank
[Ref. AMM 28-00-00-910-001-A.](#)
- (2) Make sure that the ACT is completely drained [Ref. AMM 28-25-00-650-005-A.](#)
- (3) Make sure that the WARNING NOTICE(S) are in position on:
 - the refuel/defuel panel 800VU/801VU,
 - the fueling panel 40VU,
 to tell persons not to operate the refuel/defuel system.
- (4) Make sure that on the control panel 800VU:
 - the refuel valve switch is in the OPEN position,
 - the MODE SELECT switch is in the REFUEL position.

Subtask 28-11-27-860-051-D

On A/C 003-100

B. Aircraft Maintenance Configuration

NOTE : Use the [STOWAGE - CONTAINER FUEL, ACT](#) (98D28108298001) for this procedure.

- (1) Make sure that the ground service network is energized [Ref. AMM 24-42-00-861-001-A.](#)
- (2) On the lower center fuselage, make sure that access panels 197MB, 197NB, 154CZ, 153BZ, 197PB, 153AZ are removed, for access to the water drain and cavity drain of the ACT.
- (3) In the cabin compartment, make sure that the access panel 241NF is removed from the cabin floor panel 241JF [Ref. AMM 53-32-12-000-002-A.](#)
 - (a) Make sure that the applicable access panel is removed from the cargo-ceiling.
- (4) Make sure the aft cargo-compartment door is open [Ref. AMM 52-30-00-860-001-A.](#)
- (5) Make sure that the ACCESS PLATFORM 2M (6 FT) is in position at the opening of the aft cargo-compartment door.
- (6) In the aft cargo-compartment:
 - (a) Remove the protective blank flange caps from the vent and fuel-pipe ends.
 - (b) Make sure that the [GUIDE-R I, AIRCRAFT CENTER TANK 1](#) (98D28108366001) is installed on the cargo floor.
[Ref. Fig. \(1 / 28-11-27-991-02100\)](#)
- (7) Make sure that all bolts and nuts of the vent and fuel-pipe flanges of the ACT are in a good condition.

Subtask 28-11-27-865-051-A

On A/C 003-100

- C. Make sure that the circuit breaker(s) that follow(s) is (are) open, safetied and tagged. Use the SAFETY CLIP - CIRCUIT BREAKER as necessary.

PANEL	DESIGNATION	FIN	LOCATION
121VU	ACT/RFL/VALVE	33QU	L29
121VU	FUEL/HI/LVL/SPLY	1QJ	L25
121VU	FUEL/RFL/DFL/SPLY	2QU	L24

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

PANEL	DESIGNATION	FIN	LOCATION
121VU	FUEL/RFL/DFL/XFR/ DEFUEL/VALVE	1QU	L23
121VU	ACT XFR VALVE MAN CTL	30QH	N29
121VU	ACT/XFR VALVE/AUTO CTL	9QH	P29
121VU	ACT PUMP SUPPLY	25QH	Q29

4. Procedure

Subtask 28-11-27-410-050-A

On A/C 003-100

A. Preparation for Installation

- (1) If ACT1 and ACT2 are removed, do the leak test of the ACT vent/transfer pipe-shrouds and cavity drain lines [Ref. AMM 28-28-00-790-005-A](#).

NOTE : The leak test will make sure that the pipe-shrouds and cavity drain lines have no leaks before the installation of the ACT.

- (2) Clean the component interfaces and the adjacent area.
- (3) Do an inspection of the component interfaces and the adjacent area.

NOTE : A new ACT or a replacement ACT has blanking plates installed on all openings.

- (4) Remove the protective blank flange caps from the fuel-line and vent-line ends of the ACT: [Ref. Fig. \(1 / 28-11-27-991-01100\)](#)
 - (a) Remove the nuts (127) from the studs (121).
 - (b) Remove the outer blanking flange (128) and the O-ring (129) from the inner blanking flange (130).
 - (c) Discard the O-ring (129).
 - (d) Remove and discard the lockwire from the pressure relief screw (126).
 - (e) Loosen the pressure relief screw (126) to release the air pressure from the ACT (1).
 - (f) Remove the nuts (125) from the studs (122).
 - (g) Remove the inner blanking flange (130) and the O-rings (124), (123) from the ACT (1).
 - (h) Discard the O-rings (124), (123).
 - (i) Remove the nuts (136) from the studs (137).
 - (j) Remove the blanking flange (135) and the O-rings (134), (133) from the ACT
 - (k) Discard the O-rings (134), (133).
- (5) Remove the blanking plug from the cavity drain port of the ACT:
 - (a) Turn the cavity-drain plug (131) 60 deg. clockwise and remove it from the ACT (1).
 - (b) Discard the O-ring (132).
- (6) Connect the air hose assembly to the check valve of the ACT. [Ref. Fig. \(1 / 28-11-27-991-00400\)](#)
 - (a) Remove the PLUG - BLANKING from each disconnected line end.
 - (b) Make sure that the parts retained from the removed component are clean and in the correct condition.
 - (c) Connect the union nut (40) of the air hose (39) to the check valve (32)
 - (d) Do not fully tighten the union nut (40) at this time.
- (7) In the aft cargo-compartment, make sure that all the floor-latches are lowered.
 - (a) Make sure that the components that follow are in correct condition:
 - Check valves,
 - Shut-off valve,

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

- Pressure reducing valve,
 - Air filter,
 - Self-sealing couplings T1 and T2.
- (b) Remove the blanking caps from the vent-pipe and the fuel-pipe ends, if installed.
- (c) Examine the vent-pipe and fuel-pipe for corrosion, damage or signs of leakage.
- (d) Make sure that all the components of the ACT system are correctly attached to the aircraft structure.

Subtask 28-11-27-820-051-F

On A/C 003-100

B. Adjustment of the ACT

Ref. Fig. (1 / 28-11-27-991-00800)

- (1) Do the adjustment of the crash stoppers as follows:

Ref. Fig. (1 / 28-11-27-991-02300)

NOTE : Airbus recommends you to do the subsequent procedure to get the dimension of the gap "a":

- If the initial ACT is to be installed in the aft cargo compartment
- If a new ACT is to be installed in the aft cargo compartment
- If new crash rods are installed in the aft cargo compartment.

NOTE : The gap "c" is the distance between the forward directed surface of the crash rods (102) and the crash stoppers (101) without the shim plates (103).

- (a) Remove the shim plates (103) from the ACT (1) and apply a piece of putty to the surface of the crash stoppers (101).
- (b) Move the ACT (1) into the aft cargo compartment.
- (c) Move the ACT (1) to the forward position in the aft cargo compartment, until the ACT (1) has contact with the end stops (98).
- (d) Make sure that the flexible pipes are correctly attached to the vent and fuel line ends of the ACT (1) to prevent damage on the pipes.

NOTE : You can use the openings in the cabin floor and the cargo ceiling, to get access to the flexible pipes.

- (e) Make sure that the ACT has contact with a minimum of two end stops (98).
- (f) Raise the latch elements (94) to lock the ACT (1) in position.

NOTE : This makes an imprint on the putty.

- (g) Lower the latch elements (94) to release the ACT (1).
- (h) Move the ACT (1) away from the end stops (98) until you can measure the thickness of the putty imprint to get the dimension of the gap "c".
- (i) Subtract the thickness of the shim plates "b" from the thickness of the putty "c" to get the result of the gap "a".
- (j) Make sure that the dimension of the gap "a" is 4.5 +0.5 mm or -0.5 mm (0.1772 +0.0197 in. or -0.0197 in.).
- (k) Replace the IPC-CSN(28-11-27-01 ITEM 030) SHIM PLATES (103) and do the measurement again until the dimension of the gap "a" is correct.
- (2) Do the adjustment of the latch elements as follows:
- Ref. Fig. (1 / 28-11-27-991-01300)

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

- (a) Move the ACT (1) to the forward position until the ACT (1) has contact with the end stops (98).
- (b) Raise the latch elements (94) to lock the ACT (1) in position.
- (c) Measure the dimension of the gap "x". Make sure that the ACT (1) has contact with a minimum of two end stops (98) when you do the measurement.
- (d) Make sure that dimension of the gap "x" is 2.3 +1 mm or -1 mm (0.0906 +0.0394 in. or -0.0394 in.).
- (e) If necessary, remove the ACT from the cargo compartment and adjust the gap with the adjustment bolt of the end stops (98).
- (3) Make sure that all the latch elements (94) are correctly locked.
- (4) Put the locking plates (93) in position on the latch elements (94).
- (5) Install the washers (92) and the screws (91) on the locking plates (93).

Subtask 28-11-27-420-052-D

On A/C 003-100

C. Installation of the ACT

- (1) Connect the air hose (39) to the ACT pressure line as follows:
Ref. Fig. (1 / 28-11-27-991-00400)
 - (a) Remove the PLUG - BLANKING from each disconnected line end.
 - (b) Do an inspection of the component interfaces and the adjacent area.
 - (c) Make sure that the connection of the elbow union (35) is tight.
 - (d) Connect the union nut (36) of the air hose (39) to the elbow union (35).
 - (e) TORQUE the union nuts (36) and (40) **to between 39 and 48 m.N (28.76 and 35.40 lbf.ft)**.
 - (f) Make sure that the air hose (39) is not twisted when you torque the nuts (36) and (40).

NOTE : The fuel transfer from the ACT to the center tank will not work if the air hose is not correctly connected to the ACT pressurization system.

- (2) Connect the bonding straps (34) of the ACT to the aircraft structure (31) as follows:
Ref. Fig. (1 / 28-11-27-991-00400)
 - (a) Remove the adhesive tape from the bonding straps (34).
 - (b) Prepare the surface of the bonding point(s)
[Ref. AMM 20-28-00-912-803-A](#).
 - (c) Make sure that the bonding straps (34) are correctly installed at the left and right side of the ACT.
 - (d) Connect the bonding straps (34) to the aircraft structure (31).
 - (e) Install the screws (33) on the anchor nuts (38).
 - (f) TORQUE the screws (33) **to between 0.37 and 0.48 m.daN (32.74 and 42.48 lbf.in)**.
 - (g) Do the electrical resistance measurement and the final protection of the bonding point(s)
[Ref. AMM 20-28-00-912-802-A](#).
- (3) Connect the electrical harness of the ACT as follows:
Ref. Fig. (1 / 28-11-27-991-00700)
 - (a) Remove the dummy plugs from the electrical ports (86), (87) and (89) on the cargo ceiling.
 - (b) Disconnect the electrical connector (88) from the stowage port (77) on the ACT.
 - (c) Make sure that the electrical harness 7619VC (83) is not damaged and correctly connected to the actuators of the ACT vent valve and ACT fuel inlet-valve.
 - (d) Connect the electrical connector (88) to the port (87) on the cargo ceiling.

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

- (e) Disconnect the electrical connectors (81) and (85) from the stowage ports (78), and (79) on the ACT.
- (f) Make sure that the electrical harnesses 7617VC (82) and 7618VC (84) are not damaged and correctly connected to the ACT probes.
- (g) Connect the electrical connectors (81) and (85) of the ACT probes to the ports (86) and (89) on the cargo ceiling.
- (4) Install the water drain tube (10) on the ACT as follows:
Ref. Fig. (1 / 28-11-27-991-01500)
 - (a) Do an inspection of the component interfaces and the adjacent area.
 - (b) Make sure that the area around the drain opening has no corrosion and is not damaged.
 - (c) Apply a thin layer of the Mineral Oil base Grease-- Vaseline or Petrolatum - (Material No. **03FAB1**) on the new IPC-CSN(28-11-04-15 ITEM 100) O-RING (9) and the new IPC-CSN(28-11-04-15 ITEM 100) O-RING (11) .
 - (d) Put the O-rings (9) and (11) in position on the water drain tube (10).
 - (e) Push the water drain tube (10) into the access hole (8) of the ACT water drain-valve.
 - (f) Make sure the water drain tube (10) is correctly attached to the ACT water drain-port (7).
 - (g) Put the compression spring (12) and the flange (13) in position on the water drain tube (10).
 - (h) Install the IPC-CSN(28-11-04-15 ITEM 060) RETAINING RING (14) on the flange (13).

NOTE : You can use the PLIERS - THIN NOSE to install the retaining ring (14) .

- (i) Prepare the surface of the bonding point(s)
[Ref. AMM 20-28-00-912-803-A.](#)
- (j) Connect the bonding strap (15) to the aircraft structure.
- (k) Install the washer (17) and the screw (18) on the bonding strap (15).
- (l) TORQUE the screw (18) **to between 0.37 and 0.48 m.daN (32.74 and 42.48 lbf.in).**
- (m) Do the electrical resistance measurement and the final protection of the bonding point(s)
[Ref. AMM 20-28-00-912-802-A.](#)
- (5) Do an operational check on the ACT water drain-valves (174QM and 175QM) as follows:
 - (a) Put the [ADAPTER-WATER DRAIN, ADDITIONAL CENTER TANK](#) (98D28108293001) on the ACT water-drain port.
 - (b) Push the ACT water drain-valve with the rod.
 - (c) Make sure that the ACT water drain-valve moves smoothly.
 - (d) Remove the [ADAPTER-WATER DRAIN, ADDITIONAL CENTER TANK](#) (98D28108293001) from the ACT water-drain port.
 - (e) Make sure that the ACT water drain-valve is fully closed.
 - (f) Do the same work step on the other ACT water-drain valve.
- (6) Install the cavity drain assembly (25) on the ACT as follows:
Ref. Fig. (1 / 28-11-27-991-01600)
 - (a) Apply a thin layer of the Mineral Oil base Grease-- Vaseline or Petrolatum - (Material No. **03FAB1**) on the new IPC-CSN(28-11-04-14 ITEM 100) O-RING (22) and the new IPC-CSN(28-11-04-14 ITEM 090) O-RING (24) .
 - (b) Put the O-rings (22) and (24) in position on the cavity drain assembly (25).
 - (c) Put the cavity drain assembly (25) in the cavity drain port.
 - (d) Push and turn the cavity drain assembly (25) counter clockwise approximately 60 deg (60 deg).
 - (e) Make sure that the locking plate (23) of the cavity drain assembly (25) is fully engaged in the ACT.

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

- (f) Connect the union nuts (27) of the hose (28) to the drain fitting (26) and pipe fitting (29).
 - (g) TORQUE the union nuts (27) **to between 30 and 37 m.N (22.12 and 27.29 lbf.ft)**.
 - (h) Make sure that the hose (28) is not twisted when you torque the union nuts (27).
- (7) Connect the flexible vent pipe (45) to the ACT as follows:
Ref. Fig. (1 / 28-11-27-991-02000)

NOTE : To connect the vent and fuel pipe to the ACT, you can use the access openings in the cabin floor and cargo ceiling.

NOTE : Airbus recommends you to safety your tools with a strip at your hand, to make sure that the tool can not fall into the cargo compartment.

- (a) Apply a thin layer of the Mineral Oil base Grease-- Vaseline or Petrolatum - (Material No. **03FAB1**) on the new IPC-CSN([28-11-04-14 ITEM 140](#)) O-RING (49) and the new IPC-CSN([28-11-04-14 ITEM 150](#)) O-RING (50) .
 - (b) Put the O-rings (49) and (50) in position on the flange (47) of the flexible vent pipe (45).
 - (c) Align the holes of the vent pipe flange (47) with the studs (51).
 - (d) Connect the vent pipe flange (47) to the ACT flange (48).
 - (e) Install the nuts (46) on the studs (51).
 - (f) Torque the nuts (46) opposite to one another **to between 4 and 5 m.N (35.40 and 44.25 lbf.in)**.
- (8) Connect the flexible fuel pipe (60) to the ACT as follows:
Ref. Fig. (1 / 28-11-27-991-01900)
- (a) Apply a thin layer of the Mineral Oil base Grease-- Vaseline or Petrolatum - (Material No. **03FAB1**) on the new IPC-CSN([28-11-04-14 ITEM 140](#)) O-RING (55) and the new IPC-CSN([28-11-04-14 ITEM 150](#)) O-RING (56) .
 - (b) Put the O-rings (55) and (56) in position on the flange (58) of the flexible fuel pipe (60).
 - (c) Align the holes of the fuel pipe flange (58) with the studs (54).
 - (d) Connect the fuel pipe flange (58) to the ACT flange (57).
 - (e) Install the nuts (59) on the studs (54).
 - (f) Torque the nuts (59) opposite to one another **to between 4 and 5 m.N (35.40 and 44.25 lbf.in)**.

Subtask 28-11-27-710-050-A

On A/C 003-100

D. Test

- (1) Do the Functional Check of the Vent/Transfer Pipe Shrouds and ACT Drain Pipe Connectors
[Ref. AMM 28-28-00-790-004-A](#).
- (2) Do the Operational Test of the ACT Manual Transfer System [Ref. AMM 28-28-00-710-001-A](#).
- (3) Do the Operational Test of the ACT Automatic Transfer System
[Ref. AMM 28-28-00-710-004-A](#).
- (4) Do a visual inspection on the ACT Fuel/Vent-Line connections.
 - (a) Make sure that there are no leaks.

NOTE : Leaks are not permitted.

- (5) Do the Leak Check of the Leak Monitor for Evidence of Fuel Leakage
[Ref. AMM 28-28-00-200-003-A](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

NOTE : After the leak check, it is possible that small signs of fuel still can remain in the cavity drain line of the ACT.

5. Close-up

Subtask 28-11-27-410-051-D

On A/C 003-100

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Remove the [GUIDE-R I,AIRCRAFT CENTER TANK 1](#) (98D28108366001) from the cargo floor:
Ref. Fig. (1 / 28-11-27-991-02100)
 - (a) Remove the fasteners (112) and (113) from the mounting bracket (114).
 - (b) Remove the rigging pins (111) from the guide (116).
 - (c) Remove the [GUIDE-R I,AIRCRAFT CENTER TANK 1](#) (98D28108366001) (116) from the aft cargo compartment.
- (3) Install the integrated impact wall in the aft cargo compartment [Ref. AMM 28-11-49-400-001-A](#).
- (4) If removed, install the protection covers on the roller tracks [Ref. AMM 25-52-54-400-001-A](#).
- (5) Close the aft cargo-compartment door [Ref. AMM 52-30-00-860-002-A](#).
- (6) On the lower center fuselage, install access panels 197MB , 197NB , 154CZ , 153BZ , 197PB and 153AZ .
- (7) In the cabin compartment:
 - (a) Install the applicable access panel on the cargo ceiling.
 - (b) Install access panel 241NF on cabin floor panel 241JF [Ref. AMM 53-32-12-400-002-A](#).

Subtask 28-11-27-865-052-A

On A/C 003-100

- B. Remove the SAFETY CLIP - CIRCUIT BREAKER and the tag(s) and close this (these) circuit breaker(s):

PANEL	DESIGNATION	FIN	LOCATION
121VU	ACT/RFL/VALVE	33QU	L29
121VU	FUEL/HI/LVL/SPLY	1QJ	L25
121VU	FUEL/RFL/DFL/SPLY	2QU	L24
121VU	FUEL/RFL/DFL/XFR/DEFUEL/VALVE	1QU	L23
121VU	ACT XFR VALVE MAN CTL	30QH	N29
121VU	ACT/XFR VALVE/AUTO CTL	9QH	P29
121VU	ACT PUMP SUPPLY	25QH	Q29

Subtask 28-11-27-942-050-A

On A/C 003-100


C. Close up

- (1) Remove the WARNING NOTICE(S).
- (2) Remove the access platform(s).
- (3) De-energize the ground service network
[Ref. AMM 24-42-00-862-001-A](#).
- (4) Remove the ground support and maintenance equipment, the special and standard tools and all other items.

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

- (5) Put the aircraft back to the serviceable condition.


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

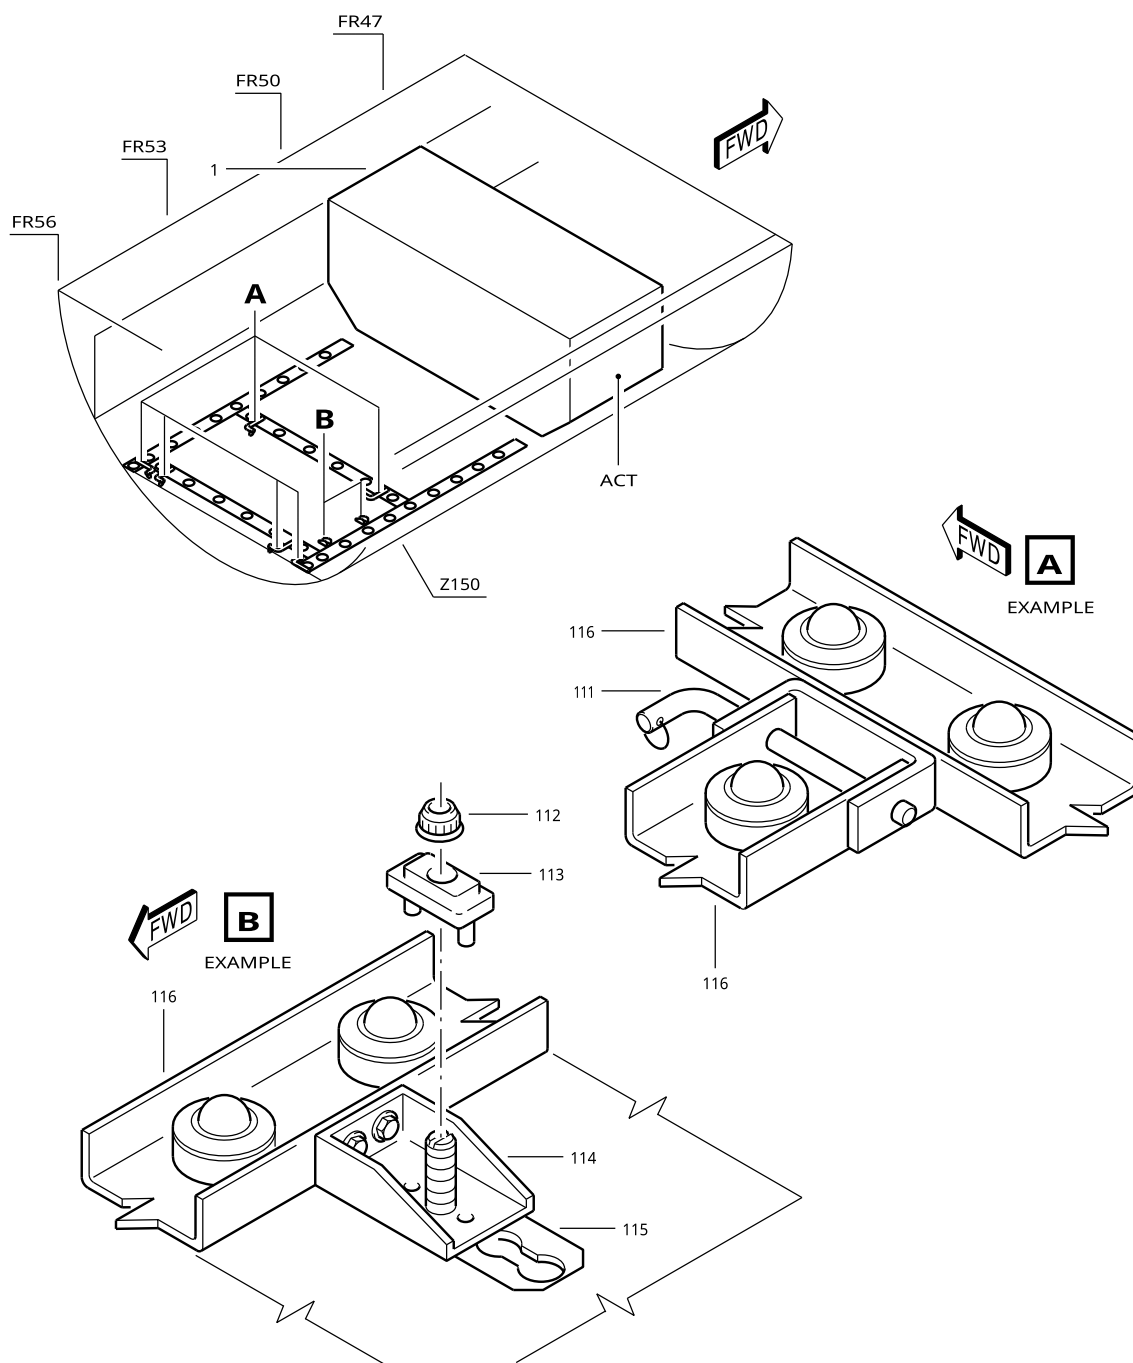

N_MM_281127_4_CSM0_01_00

ACT Guide - Removal/Installation
Figure 1 / Graphic 28-11-27 -991-02100


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

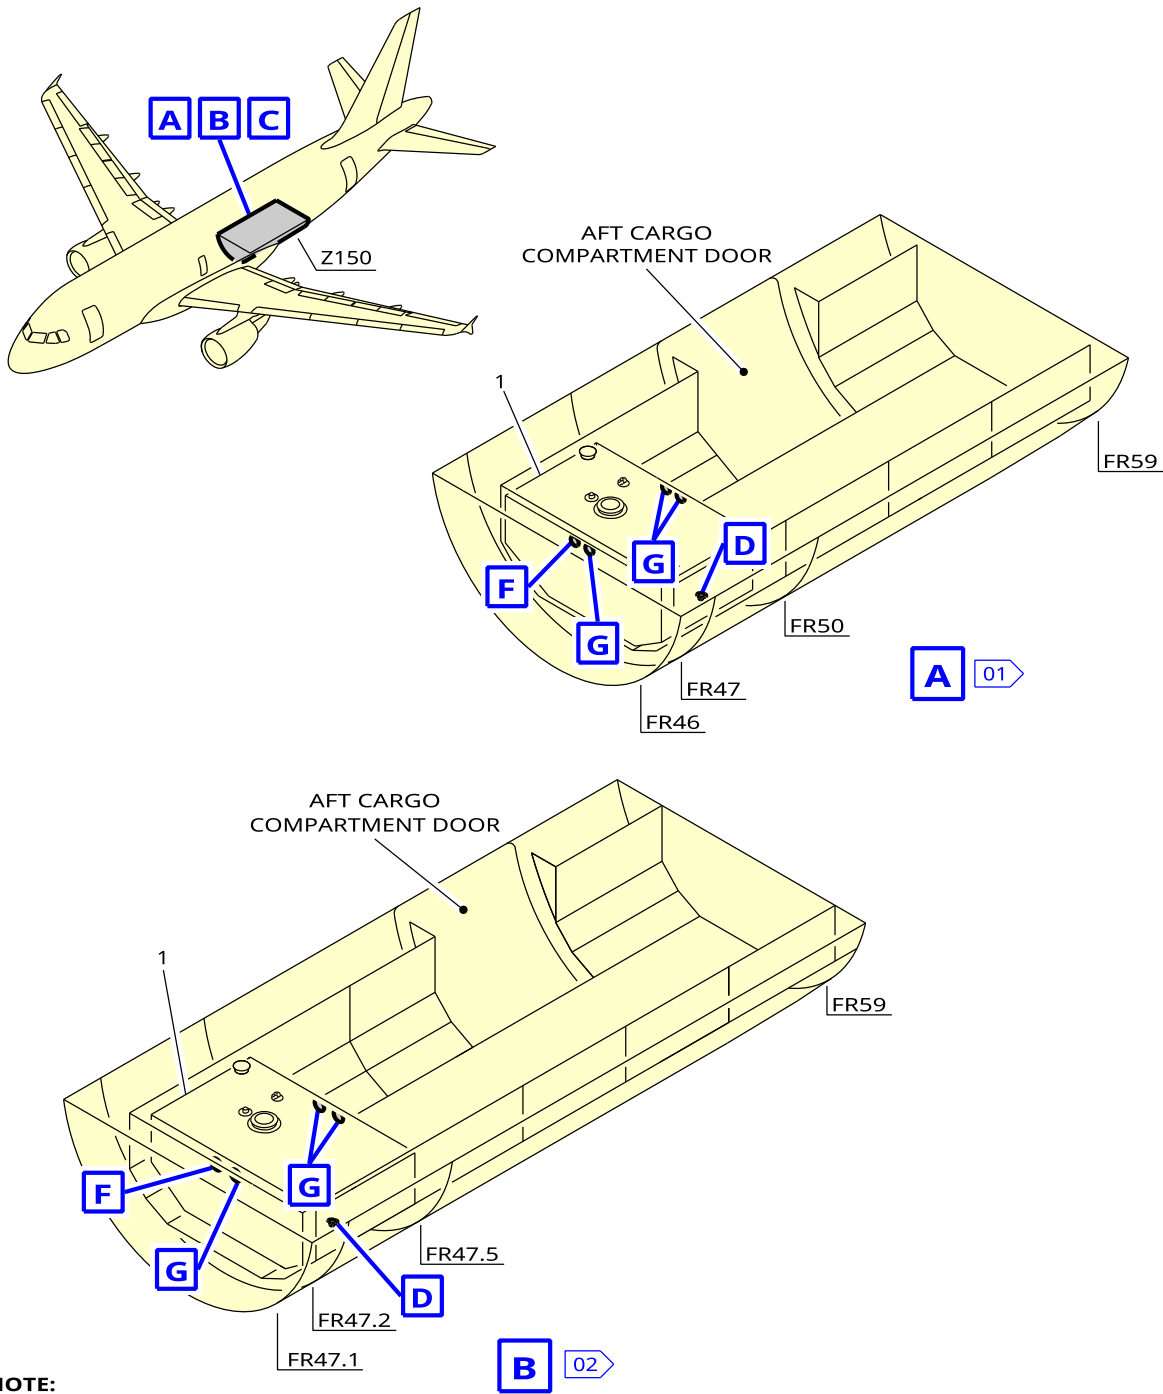

N_MM_281127_4_ATM0_01_01

Blanking Flange Caps of the ACT
Figure 1 / Graphic 28-11-27 -991-01100

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

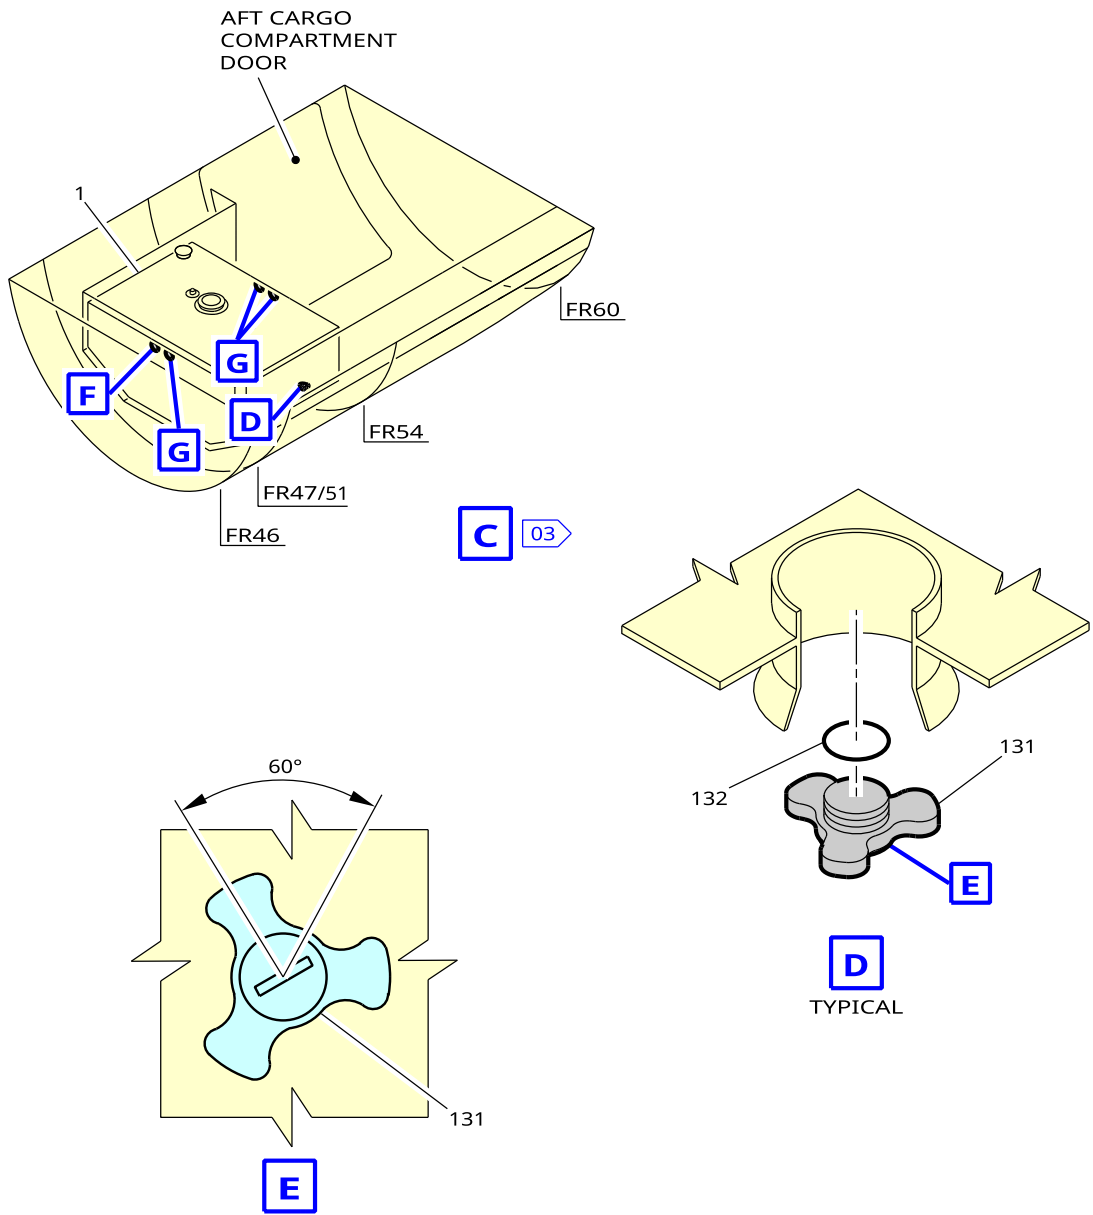


NOTE:
03 VALID FOR ST3.

N_MM_281127_4_ATM0_02_00

Blanking Flange Caps of the ACT
Figure 2 / Graphic 28-11-27 -991-01100

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

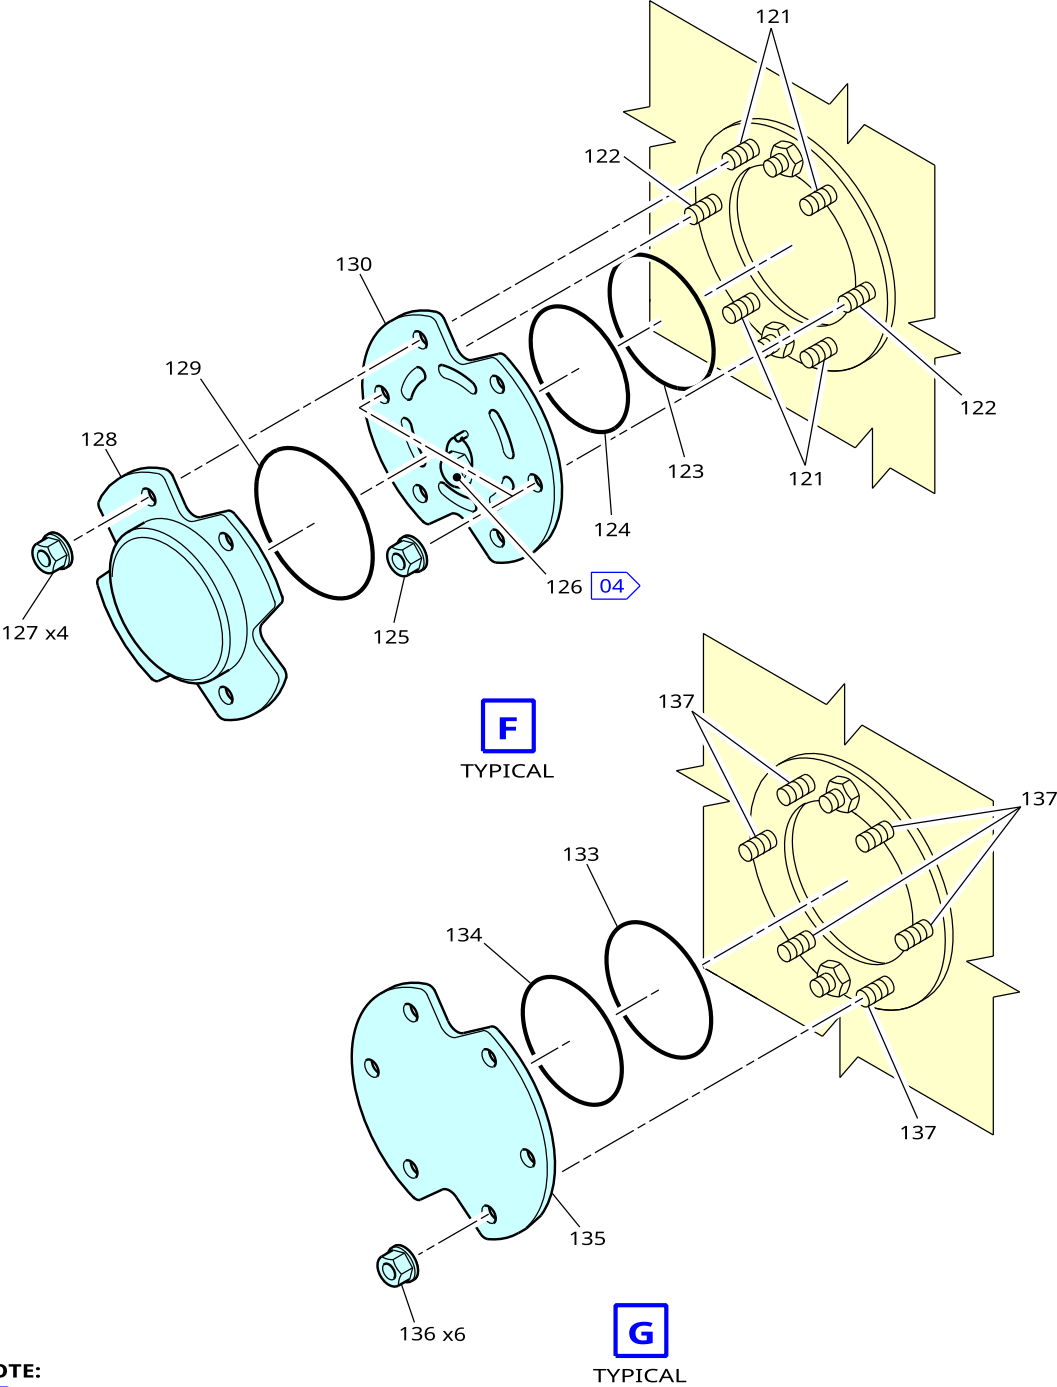


NOTE:
04 PRESSURE RELIEF SCREW.

N_MM_281127_4_ATM0_03_00

Blanking Flange Caps of the ACT
Figure 3 / Graphic 28-11-27 -991-01100


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

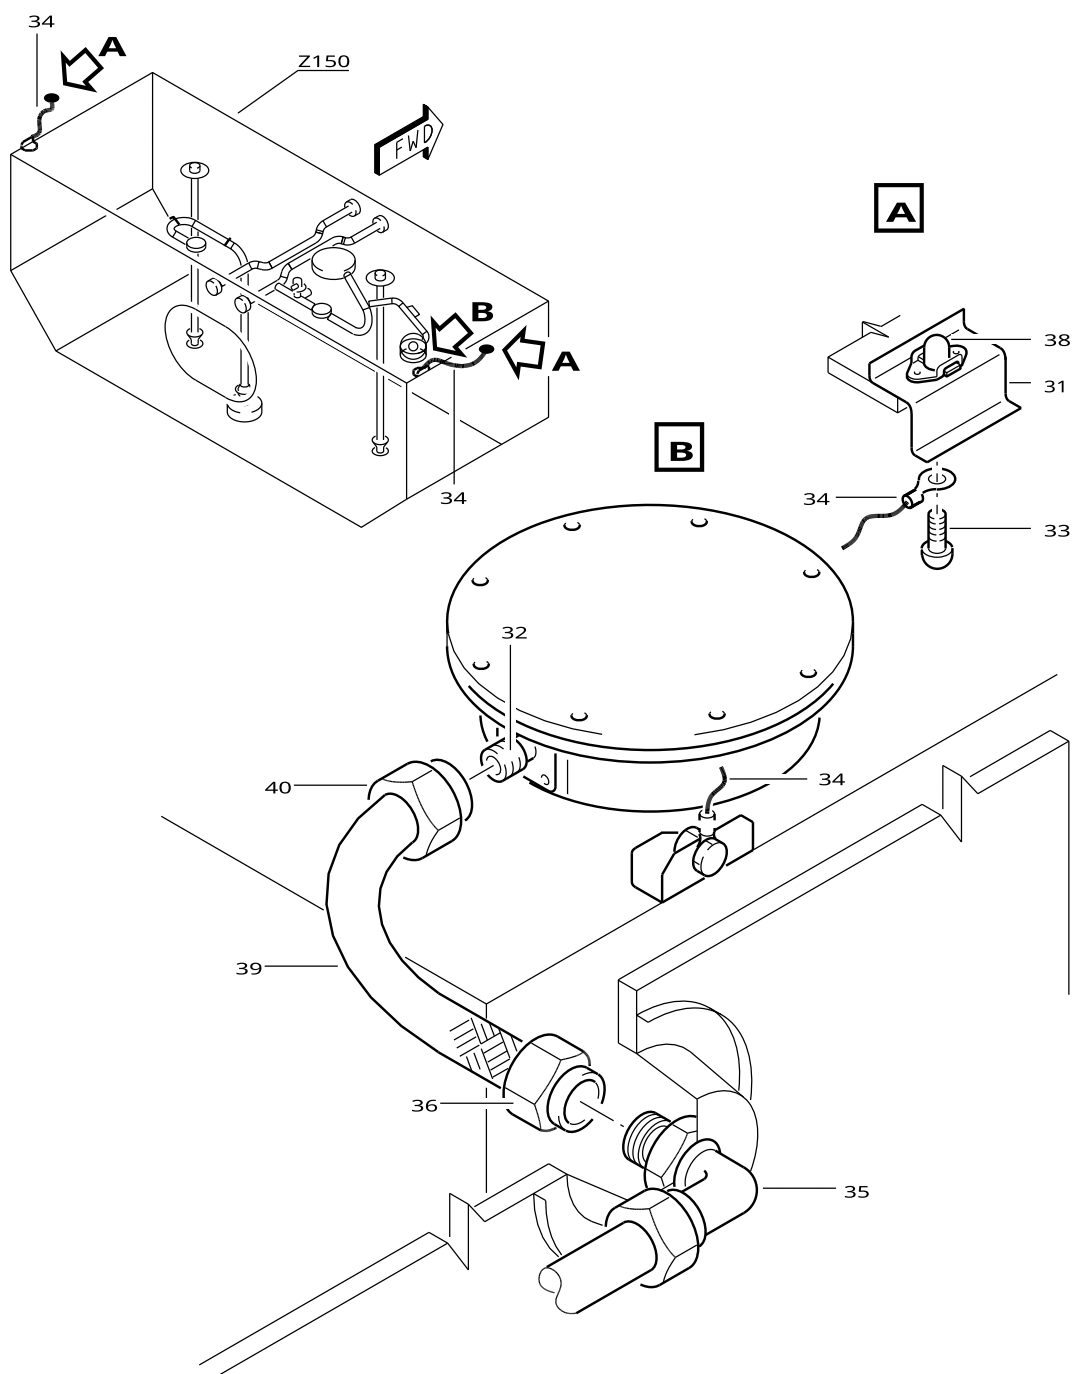

N_MM_281127_4_AGM0_01_00

Pressure Hose and Bonding Assembly
Figure 1 / Graphic 28-11-27 -991-00400


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

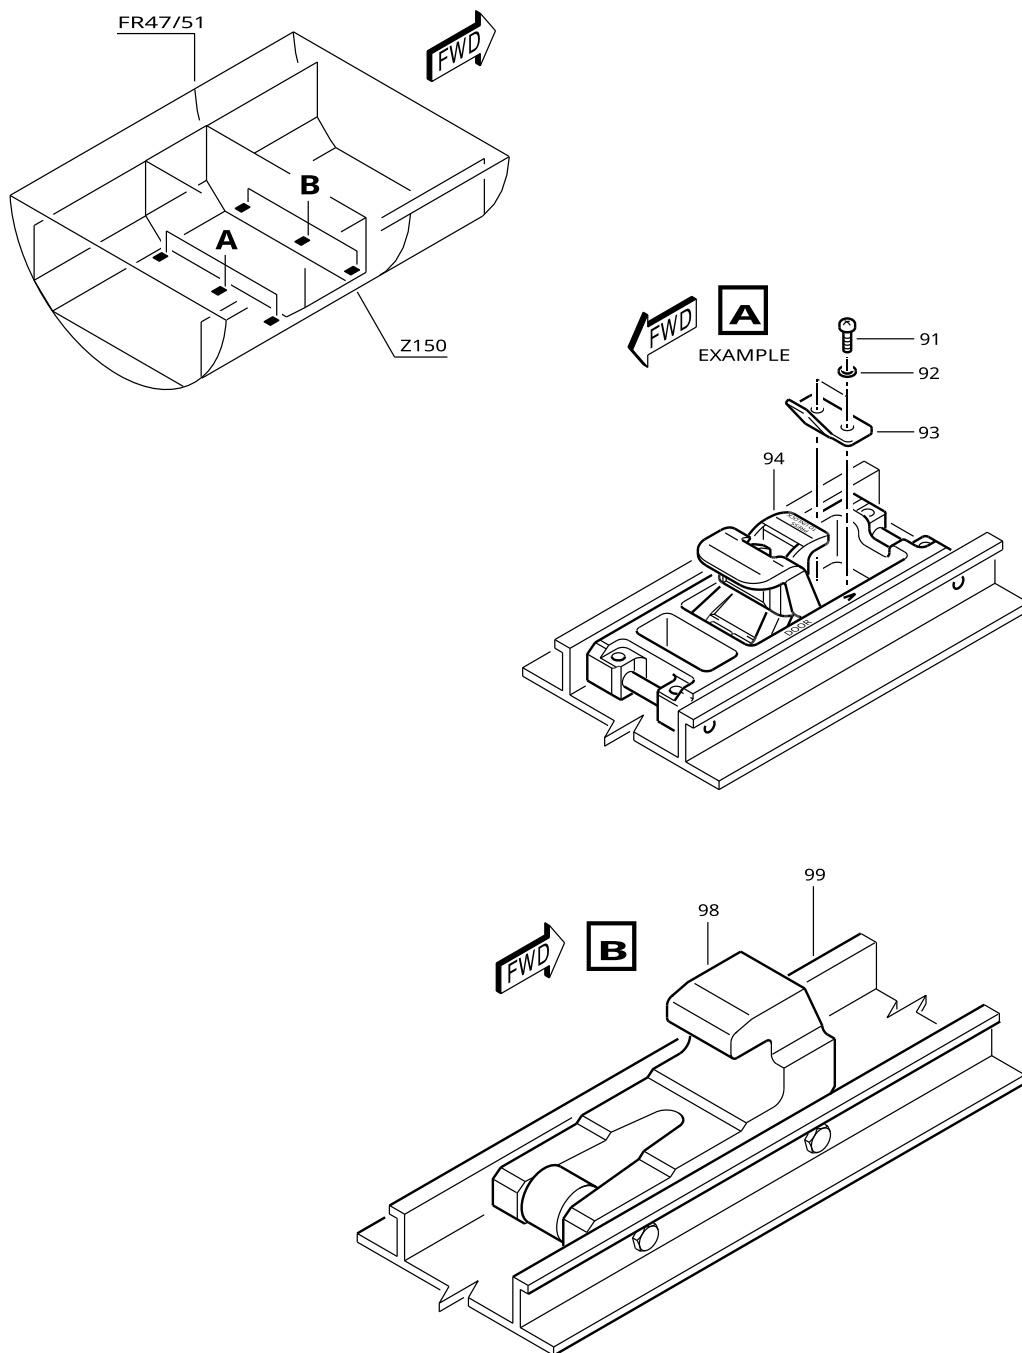

N_MM_281127_4_APNO_01_00

Attachment of the ACT
Figure 1 / Graphic 28-11-27 -991-00800


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

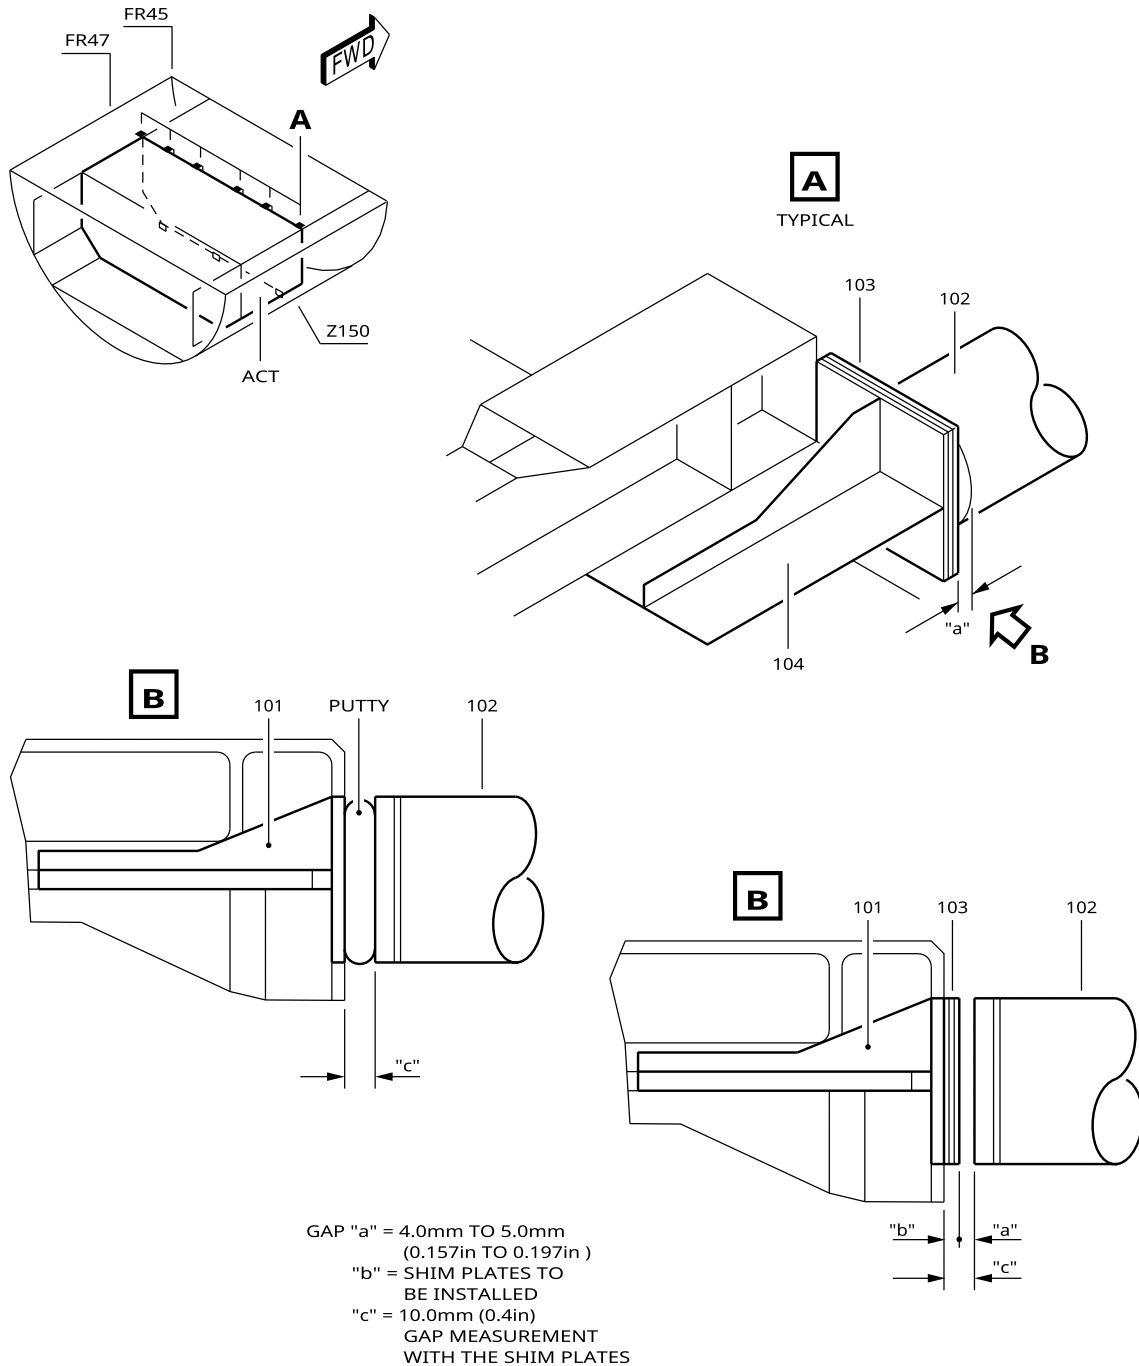

N_MM_281127_4_CWM0_01_00

ACT 1 Adjustment
Figure 1 / Graphic 28-11-27 -991-02300

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

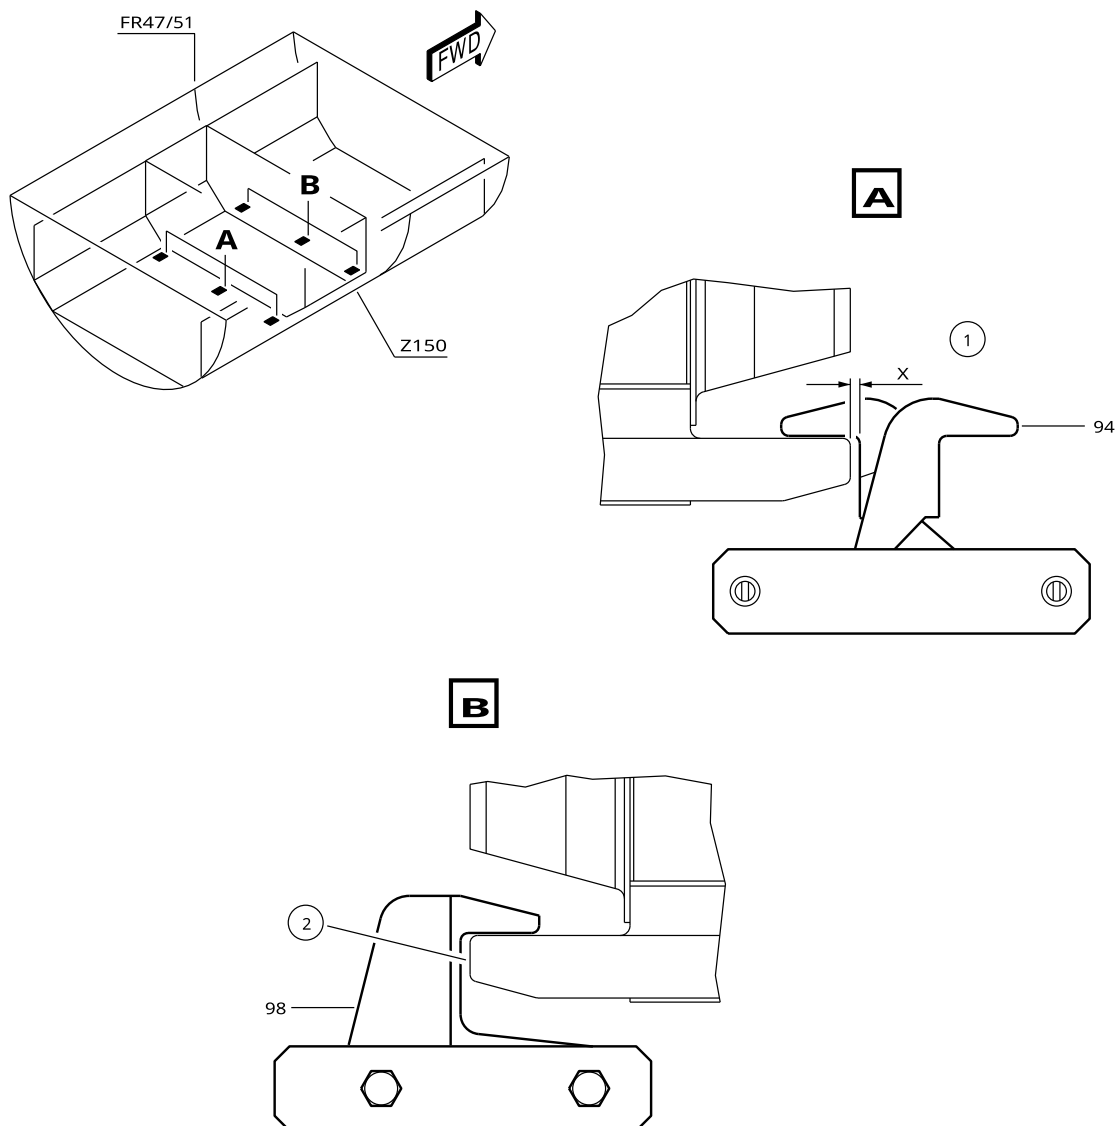


NOTE:

- ① THE GAP 'X' MUST BE BETWEEN 2.3mm AND 3.3mm (0.09in. AND 0.13in.) WITH ACT CONTACT AT THE END-STOPS (98)
- ② THE ACT MUST HAVE CONTACT WITH A MINIMUM OF TWO END-STOPS (98)

N_MM_281127_4_AYM0_01_00

ACT Latch Adjustment
Figure 1 / Graphic 28-11-27 -991-01300


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

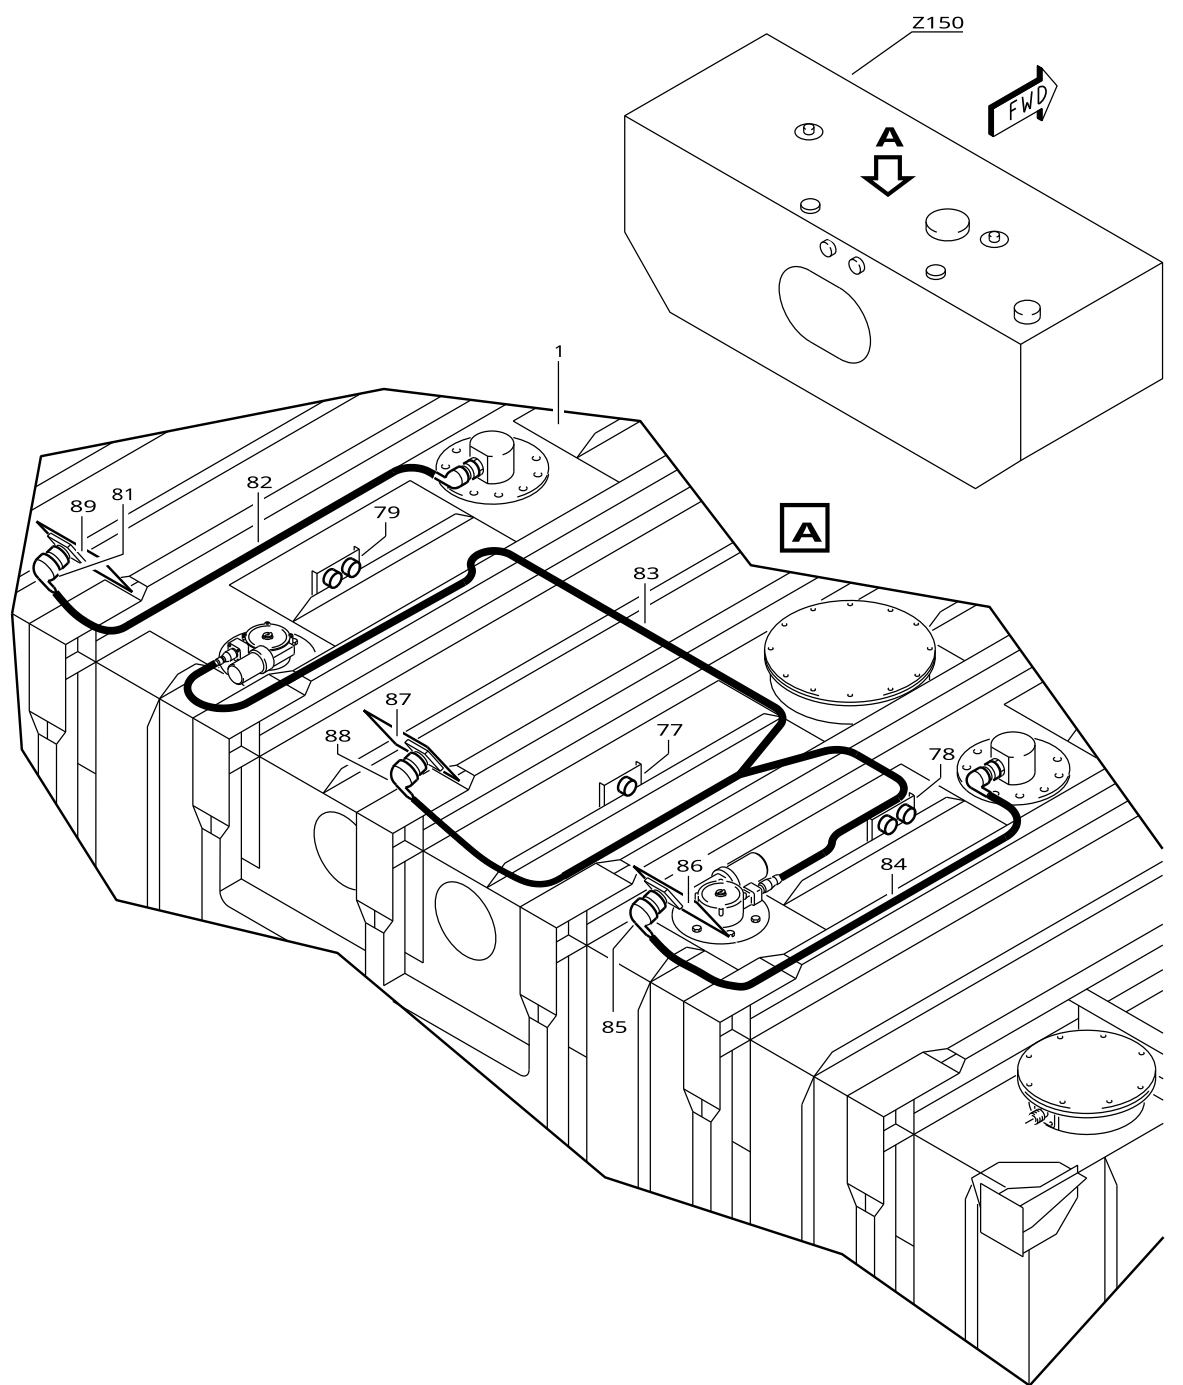

N_MM_281127_4_ANM0_01_00


Electrical Connections
Figure 1 / Graphic 28-11-27 -991-00700

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

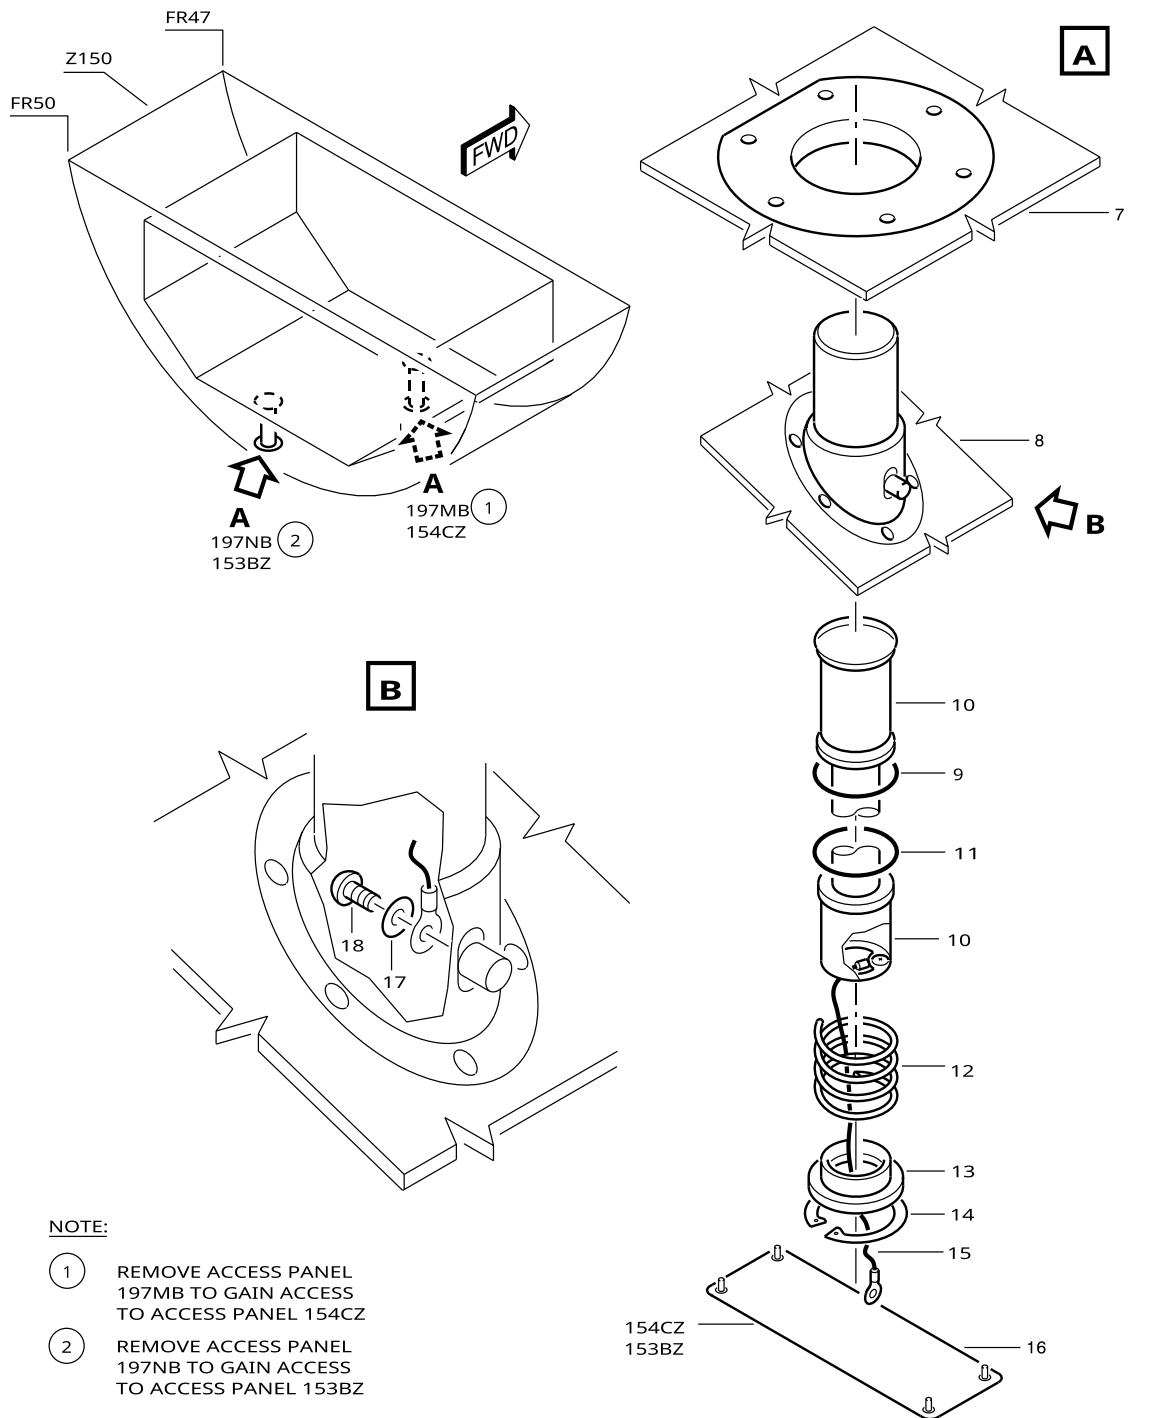

Water Drain of the ACT
Figure 1 / Graphic 28-11-27 -991-01500

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

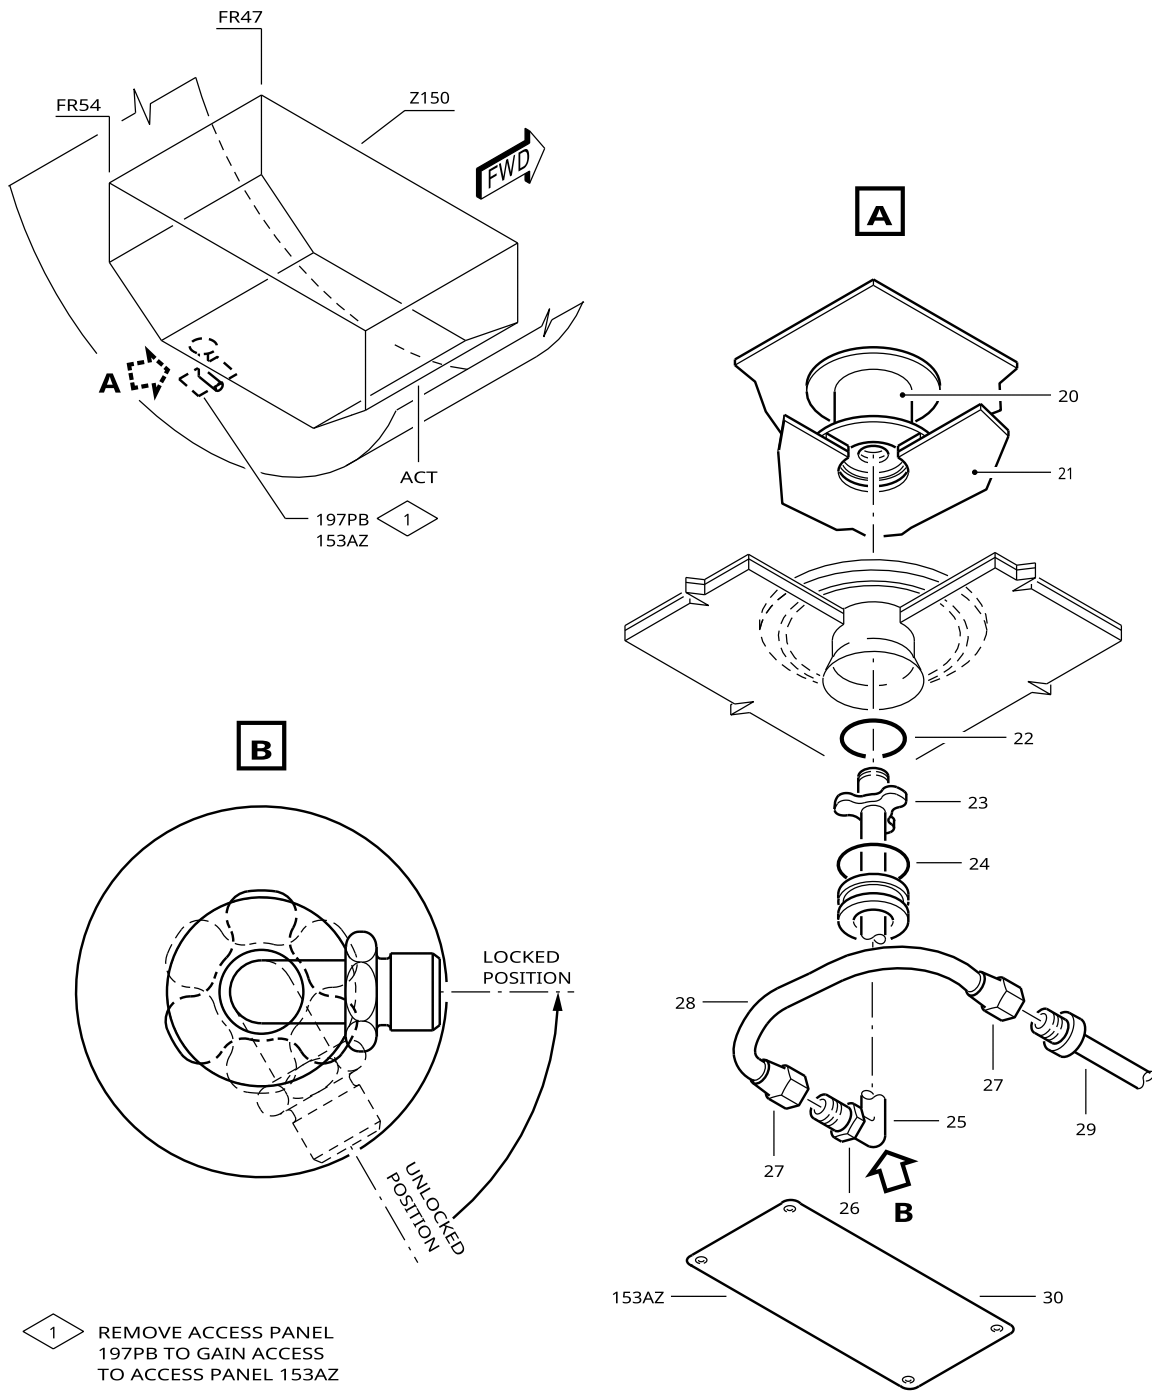


N_MM_281127_4_CKM0_01_00

Cavity Drain

Figure 1 / Graphic 28-11-27 -991-01600


TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

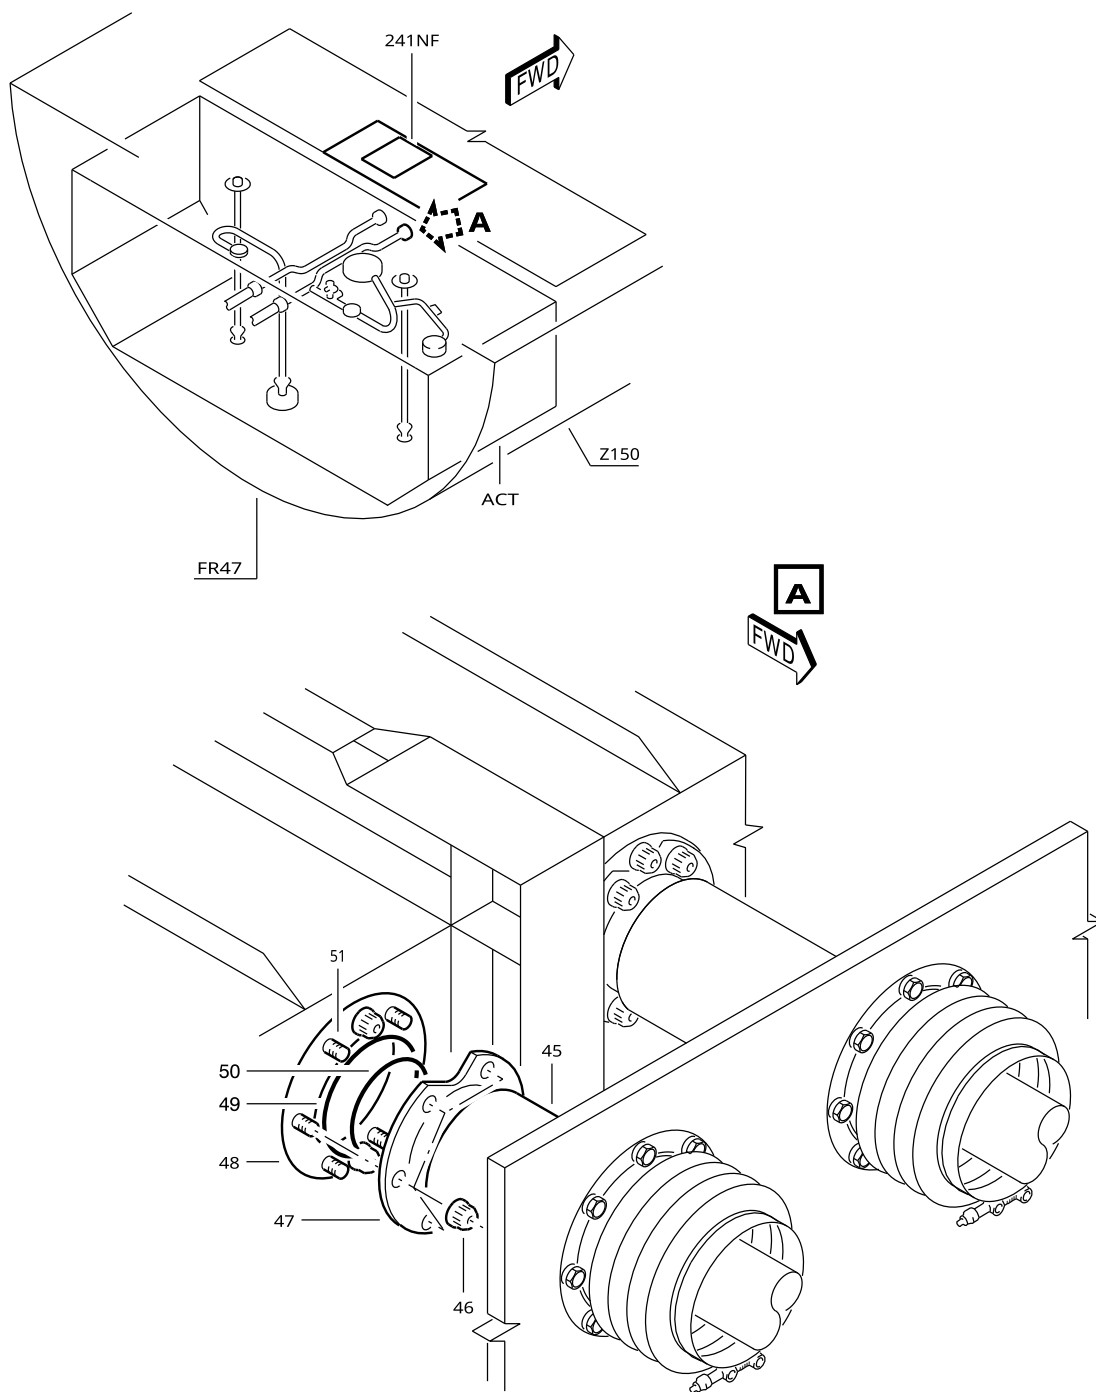

N_MM_281127_4_CQM0_01_00

Vent Pipe ACT 1
Figure 1 / Graphic 28-11-27 -991-02000

TF-N
AIRCRAFT MAINTENANCE MANUAL
TANK - CENTER, ADDITIONAL (ACT) - REMOVAL/INSTALLATION

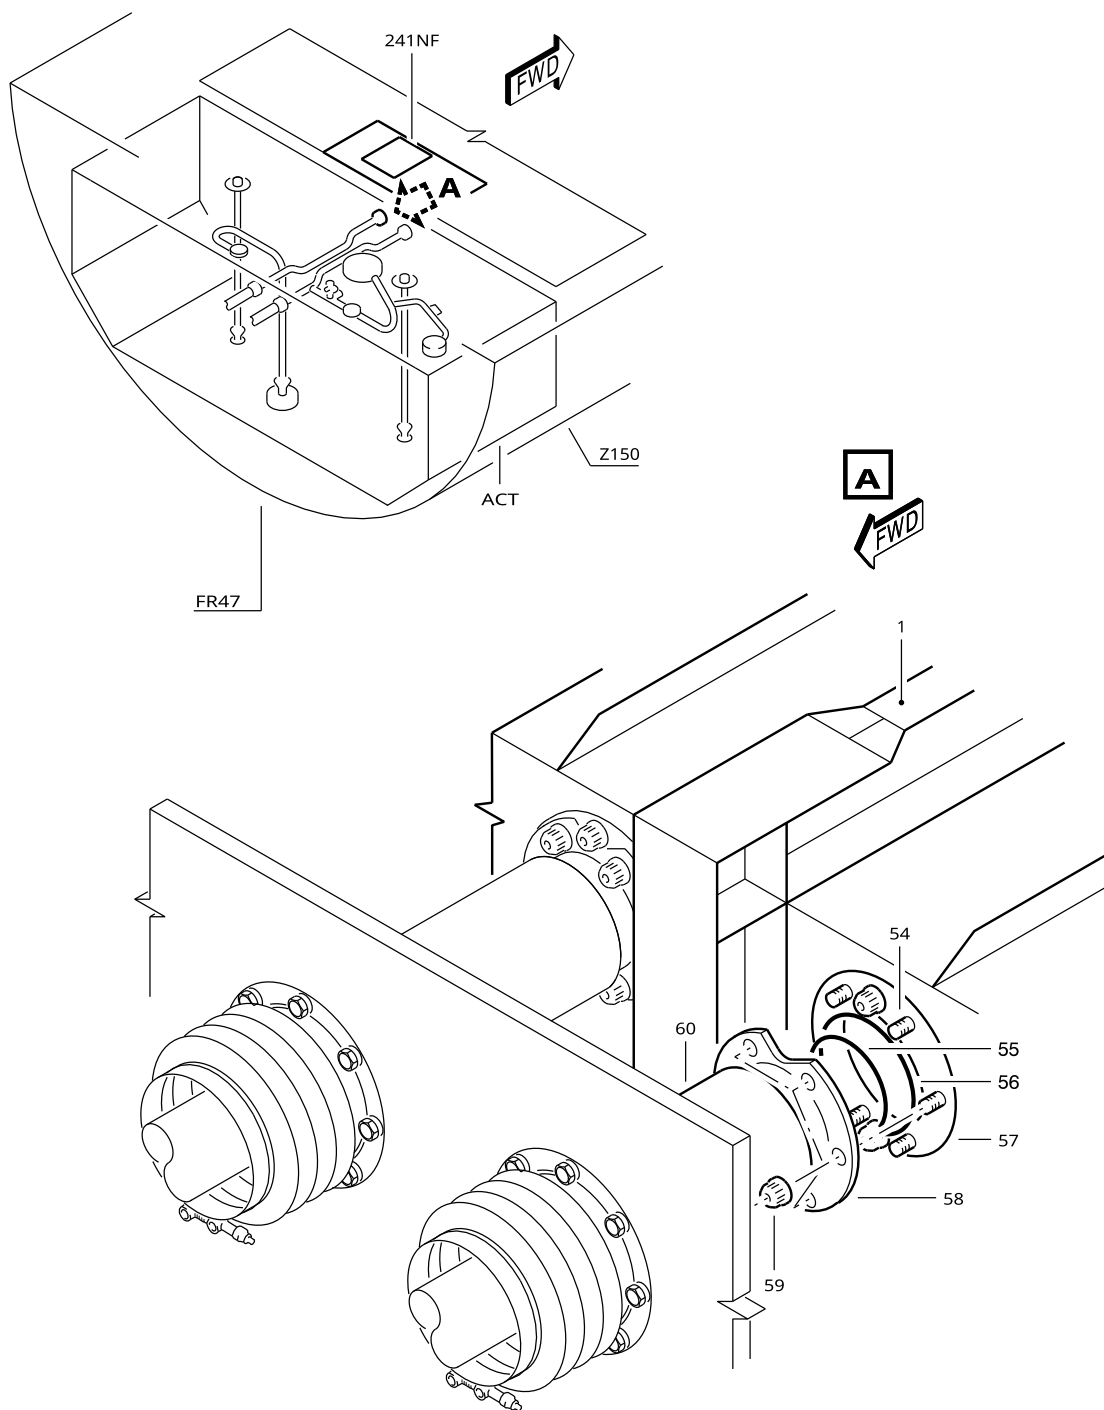

N_MM_281127_4_CMM0_01_00

Fuel Pipe ACT 1
Figure 1 / Graphic 28-11-27 -991-01900

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

TASK 28-28-00-710-001 -A

On A/C 003-100

Operational Check of the ACT Manual Transfer System

WARNING: BEFORE YOU DO WORK IN OR NEAR A FUEL TANK, MAKE SURE THAT YOU OBEY ALL THE SAFETY PROCEDURES. THIS WILL PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE AIRCRAFT.

WARNING: MAKE SURE THAT THE SAFETY DEVICES AND THE WARNING NOTICES ARE IN POSITION BEFORE YOU START A TASK ON OR NEAR:

- THE FLIGHT CONTROLS
- THE FLIGHT CONTROL SURFACES
- THE LANDING GEAR AND RELATED DOORS
- THE CARGO DOORS
- OTHER COMPONENTS THAT MOVE.

MOVEMENT OF COMPONENTS CAN KILL OR CAUSE INJURY TO PERSONS AND/OR DAMAGE TO EQUIPMENT.

1. Reason for the Job

Refer to the MPD TASK: 282800-05

OPERATIONAL CHECK OF THE ACT MANUAL TRANSFER SYSTEM

NOTE : Two persons are necessary for this procedure.

NOTE : For the New Engine Option (NEO) aircraft with an ACT installed in the forward cargo compartment, the term ACT FWD can also be described as ACT 4.1.

NOTE : When you use the ACT transfer pump(s) to transfer the fuel from the ACT(s) to the center tank in the manual control (not with the cabin pressure), a small quantity of fuel can be there in the ACT(s) at the end of the fuel transfer.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 1M (3 FT)-ADJUSTABLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
147	MAIN GEAR WELL AND HYDRAULIC COMPARTMENT
210	CKPT,FWD COMPT BHD TO FLT COMPT BULKHEAD
734	MAIN DOOR
192MB , 522KB , 622KB	

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-861-002-A	Energize the Aircraft Electrical Circuits from the External Power
Ref. AMM 24-41-00-861-002-A-01	Energize the Aircraft Electrical Circuits from the APU
Ref. AMM 24-41-00-861-002-A-02	Energize the Aircraft Electrical Circuits from Engine 1(2)
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 28-00-00-910-001-A	Fuel Safety Procedures

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

REFERENCE	DESIGNATION
Ref. AMM 28-25-00-869-002-A	To Prime the ACT Transfer Pump
Ref. AMM 28-46-00-710-001-A	Test of the Tank High-Level Sensing-System
Ref. AMM 31-60-00-860-001-A	EIS Start Procedure
Ref. AMM 31-60-00-860-002-A	EIS Stop Procedure
Ref. AMM 32-12-00-010-001-A	Open the Main Gear Doors for Access
Ref. AMM 32-12-00-410-001-A	Close the Main Gear Doors after Access

3. Job Set-up

Subtask 28-28-00-860-190-A

On A/C 003-100

A. Aircraft Maintenance Configuration

WARNING: BEFORE YOU DO WORK IN OR NEAR A FUEL TANK, MAKE SURE THAT YOU OBEY ALL THE SAFETY PROCEDURES. THIS WILL PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE AIRCRAFT.

- (1) Obey the fuel safety procedures [Ref. AMM 28-00-00-910-001-A](#).
- (2) Energize the aircraft electrical circuits
[Ref. AMM 24-41-00-861-002-A](#) [Ref. AMM 24-41-00-861-002-A-01](#)
[Ref. AMM 24-41-00-861-002-A-02](#).
- (3) Do the EIS start procedure (upper ECAM DU and lower ECAM DU only)
[Ref. AMM 31-60-00-860-001-A](#).
- (4) On the ECAM control panel, push the FUEL pushbutton switch:
 - (a) On the lower ECAM Display Unit (DU), the FUEL page comes into view.
 - (b) Make sure that the minimum fuel quantity in the ACT is 250 kg (551 lb).
 - (c) Make sure that the fuel quantity in the center tank is less than 5000 kg (11023 lb).
- (5) Open the left MLG door for access [Ref. AMM 32-12-00-010-001-A](#).
- (6) Put the ACCESS PLATFORM 1M (3 FT)-ADJUSTABLE in position below the left MLG bay.
- (7) Open applicable access door 192MB or 522KB or 622KB to get access to refuel control-panel 800VU.
- (8) If applicable, in the cockpit, on refuel control-panel 51VU:
 - (a) Push the pushbutton switch PWR (23QU) to ON (cockpit refuel select).
 - (b) Make sure that the ON legend in the pushbutton switch comes on.
 - (c) Make sure that the FAULT legend on the pushbutton switch goes off.
- (9) Do the test of the tank high-level sensing-system [Ref. AMM 28-46-00-710-001-A](#).

Subtask 28-28-00-865-123-A

On A/C 003-100

B. Make sure that this (these) circuit breaker(s) is (are) closed:

PANEL	DESIGNATION	FIN	LOCATION
121VU	ACT/RFL/VALVE	33QU	L29
121VU	FUEL/HI/LVL/SPLY	1QJ	L25
121VU	FUEL/RFL/DPL/SPLY	2QU	L24
121VU	FUEL/RFL/DPL/XFR/ DEFUEL/VALVE	1QU	L23
121VU	ACT LOW LVL R	51QJ	M29
121VU	ACT LOW LVL L	52QJ	M28
121VU	ACT XFR VALVE MAN CTL	30QH	N29
121VU	ACT/XFR VALVE/AUTO CTL	9QH	P29

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

PANEL	DESIGNATION	FIN	LOCATION
121VU	ACT PUMP SUPPLY	25QH	Q29

4. Procedure

Subtask 28-28-00-710-077-A

On A/C 003-100

A. Test

NOTE : If the ACT transfer pump does not work correctly during this test, do the priming of the ACT transfer pump [Ref. AMM 28-25-00-869-002-A](#) and do this test again.

ACTION	RESULT
1. On the overhead FUEL panel 40VU: • push the ACT pushbutton switch.	On the overhead FUEL panel 40VU: • the FWD light in the ACT pushbutton switch is on, • the FAULT light in the ACT pushbutton switch is on for a moment and goes off.
	On the lower ECAM DU: • the full green triangle comes into view (ACT PUMP PRESS), <u>NOTE</u> : If two ACT(s) are installed, the fuel transfer starts with ACT2. When a low level is sensed in the ACT2, the fuel transfer from ACT1 to the center tank starts automatically. • the fuel quantity in ACT2 (if installed) or ACT1 decreases, • the fuel quantity in the center tank increases, • the fuel transfer rate of the ACT fuel pump must be between 64 kg (141.10 lb) and 84 kg (185.19 lb). • make sure that the fuel flows correctly to the center tank from all installed ACT(s).
	On the left side of the main landing gear compartment, at the center tank access door: • you can hear that the ACT Fuel Transfer Pump (1QH) is on, • the position indicator of the ACT Fuel Transfer-Valve Actuator (6QH) shows the open position (in-line).
2. On the overhead FUEL panel 40VU: • push to release the ACT pushbutton switch.	On the overhead FUEL panel 40VU: • the FWD legend in the ACT pushbutton switch goes off.
	On the lower ECAM DU: • the fuel transfer from the ACT to the center tank stops, • the green triangle goes out of view.
	On the left side of the main landing gear compartment, at the center tank access door: • you hear that the ACT fuel transfer pump is off, • the position indicator of the ACT Fuel Transfer-Valve Actuator (6QH) shows the closed position (cross-line).

5. Close-up

Subtask 28-28-00-860-191-A

On A/C 003-100

A. Put the aircraft back to its initial configuration.

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) If applicable, in the cockpit, on refuel control-panel 51VU:
 - (a) Push and release the pushbutton switch PWR (23QU).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

- (b) Make sure that the ON legend in the pushbutton switch goes off.
- (3) Close applicable access door 192MB or 522KB or 622KB .
- (4) Remove the access platform(s).
- (5) Close the left MLG door after access [Ref. AMM 32-12-00-410-001-A](#).
- (6) On the ECAM control panel, set the UPPER DISPLAY and LOWER DISPLAY potentiometers to OFF.
- (7) Do the EIS stop procedure
[Ref. AMM 31-60-00-860-002-A](#).
- (8) De-energize the aircraft electrical circuits
[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#)
[Ref. AMM 24-41-00-862-002-A-02](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

TASK 28-28-00-710-004 -A

On A/C 003-100

Operational Test of the Additional Center Tank (ACT) Automatic Transfer-System

WARNING: BEFORE YOU DO WORK IN OR NEAR A FUEL TANK, MAKE SURE THAT YOU OBEY ALL THE SAFETY PROCEDURES. THIS WILL PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE AIRCRAFT.

1. Reason for the Job

Self explanatory

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY
No specific	1	GAGE 5 BAR (75 PSI) - PRESSURE
98D28108658000	1	TOOL-PRESSURE TEST,ACT

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
151CC	

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-861-002-A	Energize the Aircraft Electrical Circuits from the External Power
Ref. AMM 24-41-00-861-002-A-01	Energize the Aircraft Electrical Circuits from the APU
Ref. AMM 24-41-00-861-002-A-02	Energize the Aircraft Electrical Circuits from Engine 1(2)
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 25-55-11-000-002-A	Removal of the Ceiling Panels From the Aft Cargo Compartment - Frame 47/ Frame 59
Ref. AMM 25-55-11-400-002-A	Installation of the Ceiling Panels in the Aft Cargo Compartment - Frame 47/Frame 59
Ref. AMM 27-80-00-866-005-A	Retracting the Slats on the Ground
Ref. AMM 28-00-00-910-001-A	Fuel Safety Procedures
Ref. AMM 28-46-00-710-001-A	Test of the Tank High-Level Sensing-System
Ref. AMM 31-60-00-860-001-A	EIS Start Procedure
Ref. AMM 31-60-00-860-002-A	EIS Stop Procedure
Ref. AMM 32-00-00-860-001-A	Flight Configuration Precautions With Electrical Power
Ref. AMM 32-00-00-860-001-A-01	Flight Configuration Precautions without Electrical Power
Ref. AMM 32-00-00-860-002-A	Ground Configuration After Flight Configuration With Electrical Power
Ref. AMM 32-00-00-860-002-A-01	Ground Configuration after Flight Configuration without Electrical Power
Ref. AMM 32-69-00-860-802-A	Simulation of Flight With False Targets or Simulation Plates (With Aircraft on Ground) for the Automatic Fuel-Transfer Test
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. TSM 28-42-00-810-836	FOB Shows XX
Ref. Fig. (1 / 28-28-00-991-03300)	
Ref. Fig. (1 / 28-28-00-991-02700)	
Ref. Fig. (1 / 28-28-00-991-02100)	

3. Job Set-up

Subtask 28-28-00-860-060-A

On A/C 003-100

A. Aircraft Maintenance Configuration

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

- (1) Obey the fuel safety procedures [Ref. AMM 28-00-00-910-001-A](#).
- (2) Energize the aircraft electrical circuits
[Ref. AMM 24-41-00-861-002-A](#) [Ref. AMM 24-41-00-861-002-A-01](#)
[Ref. AMM 24-41-00-861-002-A-02](#).
- (3) Do the EIS start procedure (upper ECAM DU and lower ECAM DU only)
[Ref. AMM 31-60-00-860-001-A](#).
- (4) On the ECAM control panel, push the FUEL pushbutton switch.
(a) On the lower ECAM DU the FUEL page comes into view.
- (5) On the lower ECAM DU, make sure there is 300 -0 kg or +100 kg (661.39 -0 lb or +220.46 lb) fuel in each installed ACT.
- (6) On the lower ECAM DU, make sure that the fuel quantity:
 - of the center tank is 3300 -100 kg or +100 kg (7275.25 -220.46 lb or +220.46 lb).
 - of the wing tanks on each side is 1400 -100 kg or +100 kg (3086.47 -220.46 lb or +220.46 lb).

NOTE : A fuel failure message can come into view on ECAM display, if the necessary fuel quantity in the Wing Tanks and in the Center Tank is too much out of the necessary limits for the test.

- (7) Open the aft cargo-compartment door [Ref. AMM 52-30-00-860-001-A](#).
- (8) Do the High Level Sensing Test [Ref. AMM 28-46-00-710-001-A](#).
- (9) On refuel/defuel control panel 800/801VU, make sure that the door is closed.

Subtask 28-28-00-865-055-A

[On A/C 003-100](#)

B. Make sure that this (these) circuit breaker(s) is (are) closed:

PANEL	DESIGNATION	FIN	LOCATION
49VU	FUEL/FQI/CHAN/1	1QT	A13
121VU	ACT/RFL/VALVE	33QU	L29
121VU	FUEL/FQI/CHANNEL/1 AND 2	8QT	L26
121VU	ACT LOW LVL R	51QJ	M29
121VU	ACT LOW LVL L	52QJ	M28
121VU	FUEL/FQI/CHAN/2	2QT	M27
121VU	ACT XFR VALVE MAN CTL	30QH	N29
121VU	ACT/XFR VALVE/AUTO CTL	9QH	P29
121VU	ACT PUMP SUPPLY	25QH	Q29

4. Procedure

Subtask 28-28-00-860-062-B

[On A/C 003-100](#)

A. Preparation for the Test

Ref. Fig. (1 / 28-28-00-991-03300)

Ref. Fig. (1 / 28-28-00-991-02700)

Ref. Fig. (1 / 28-28-00-991-02100)

- (1) In the aft cargo compartment, remove the access panel from ceiling panel 151CC , to get access to the test ports of the ACT pressurization system [Ref. AMM 25-55-11-000-002-A](#).
- (2) Connect an AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY pressure maximum to test port T1.

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

- (3) Connect a GAGE 5 BAR (75 PSI) - PRESSURE maximum to test port T2.

NOTE : You can use a pressure gauge of the smaller scale with the steps of 0.01 bar (0.1 psi).

NOTE : You can use the **TOOL-PRESSURE TEST,ACT** (98D28108658000) as an alternative tool and connect it to the T1 and T2 test ports.

- (4) Make sure that the slats are fully retracted [Ref. AMM 27-80-00-866-005-A](#).
(5) Do the flight-configuration precaution procedure [Ref. AMM 32-00-00-860-001-A](#)
[Ref. AMM 32-00-00-860-001-A-01](#).

Subtask 28-28-00-710-054-A

On A/C 003-100

WARNING: **WHEN YOU USE COMPRESSED AIR:**
 - **USE THE CORRECT PROTECTION (FACE SHIELD OR GOGGLES)**
 - **DO NOT POINT THE AIRFLOW AT YOURSELF OR OTHER PERSONS.**
 LOOSE PARTICLES AND/OR HIGH PRESSURE AIR CAN CAUSE INJURY.

B. Test(s)

NOTE : During this test, the fuel transfer rate is approximately between 30 l/min and 100 l/min with the ACT pressurization of 220 mbar (3.19 psi) and the aircraft pitch of 2 degrees. The fuel transfer rate (between 30 l/min and 100 l/min) is for reference.

NOTE : During this test, the aircraft can stay at ground attitude.

ACTION	RESULT
1. On the ground pressure generator: • Make sure that the air shutoff valves of the ground pressure generator are closed. • Start the air supply with 1 bar (14.50 psi) at test port T1. <u>NOTE</u> : The pressurization of the ACT bladder tank pushes the air out of the drain mast.	
2. Do the simulation of the flight with the false targets (with the aircraft on ground) Ref. AMM 32-69-00-860-802-A .	
3. If XXXX comes into view as an alternative to the numbers on the ECAM FUEL page: Do a reset of the Fuel Quantity Indication Computer (FQIC). Open and close these circuit breakers at the same time: • FUEL/FQI/CHAN/1 (1QT) • FUEL/FQI/CHAN/2 (2QT) • FUEL/FQI/CHANNEL/1 AND 2 (8QT). Make sure that the XXXX does not come into view in less than five minutes after the FQIC reset. If the XXXX comes into view in less than five minutes after the FQIC reset: • Do the troubleshooting procedure Ref. TSM 28-42-00-810-836 to find the possible cause.	
4. In the cockpit, on the ECAM Control Panel (ECP): • Push the FUEL pushbutton switch.	In the cockpit, on the ECAM Display Unit (DU): • The FUEL page comes into view.

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

ACTION	RESULT
	After approximately 10 minutes, the green triangle indication on the FUEL page comes into view.
	On the pressure gage at test port T2: The air pressure increases to 0.22 bar (3.19 psi).
	In the cockpit, on the ECAM DU FUEL page: After some minutes, the fuel quantity in the ACT decreases and the fuel quantity in the center tank increases.
5.If the pressure at test port T2 is more than 0.35 bar (5.076 psi), stop the air supply immediately.	
6.Stop the simulation of the flight with the false targets (with the aircraft on ground) Ref. AMM 32-69-00-860-802-A .	In the cockpit, on the ECAM DU FUEL page: - The fuel transfer from the ACT to the center tank stops. - The green triangle indication goes out of view.
7.On the ground pressure generator: - Stop the air supply at test port T1. - Open the air shutoff valves of the ground pressure generator.	On the pressure gage at test ports T1 and T2: The pressure decreases to 0 bar (0 psi).

5. Close-up


Subtask 28-28-00-860-061-B

On A/C 003-100

A. Put the aircraft back to its initial configuration.


- (1) Remove the ground support and maintenance equipment, the special and standard tools and all other items.
- (2) Put the aircraft back to ground configuration [Ref. AMM 32-00-00-860-002-A](#)
[Ref. AMM 32-00-00-860-002-A-01](#).
- (3) Make sure that the work area is clean and clear of tools and other items.
- (4) Install the access panel on the ceiling panel 151CC [Ref. AMM 25-55-11-400-002-A](#).
- (5) Do the EIS stop procedure
[Ref. AMM 31-60-00-860-002-A](#).
- (6) Close the aft cargo-compartment door [Ref. AMM 52-30-00-860-002-A](#).
- (7) De-energize the aircraft electrical circuits
[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#)
[Ref. AMM 24-41-00-862-002-A-02](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

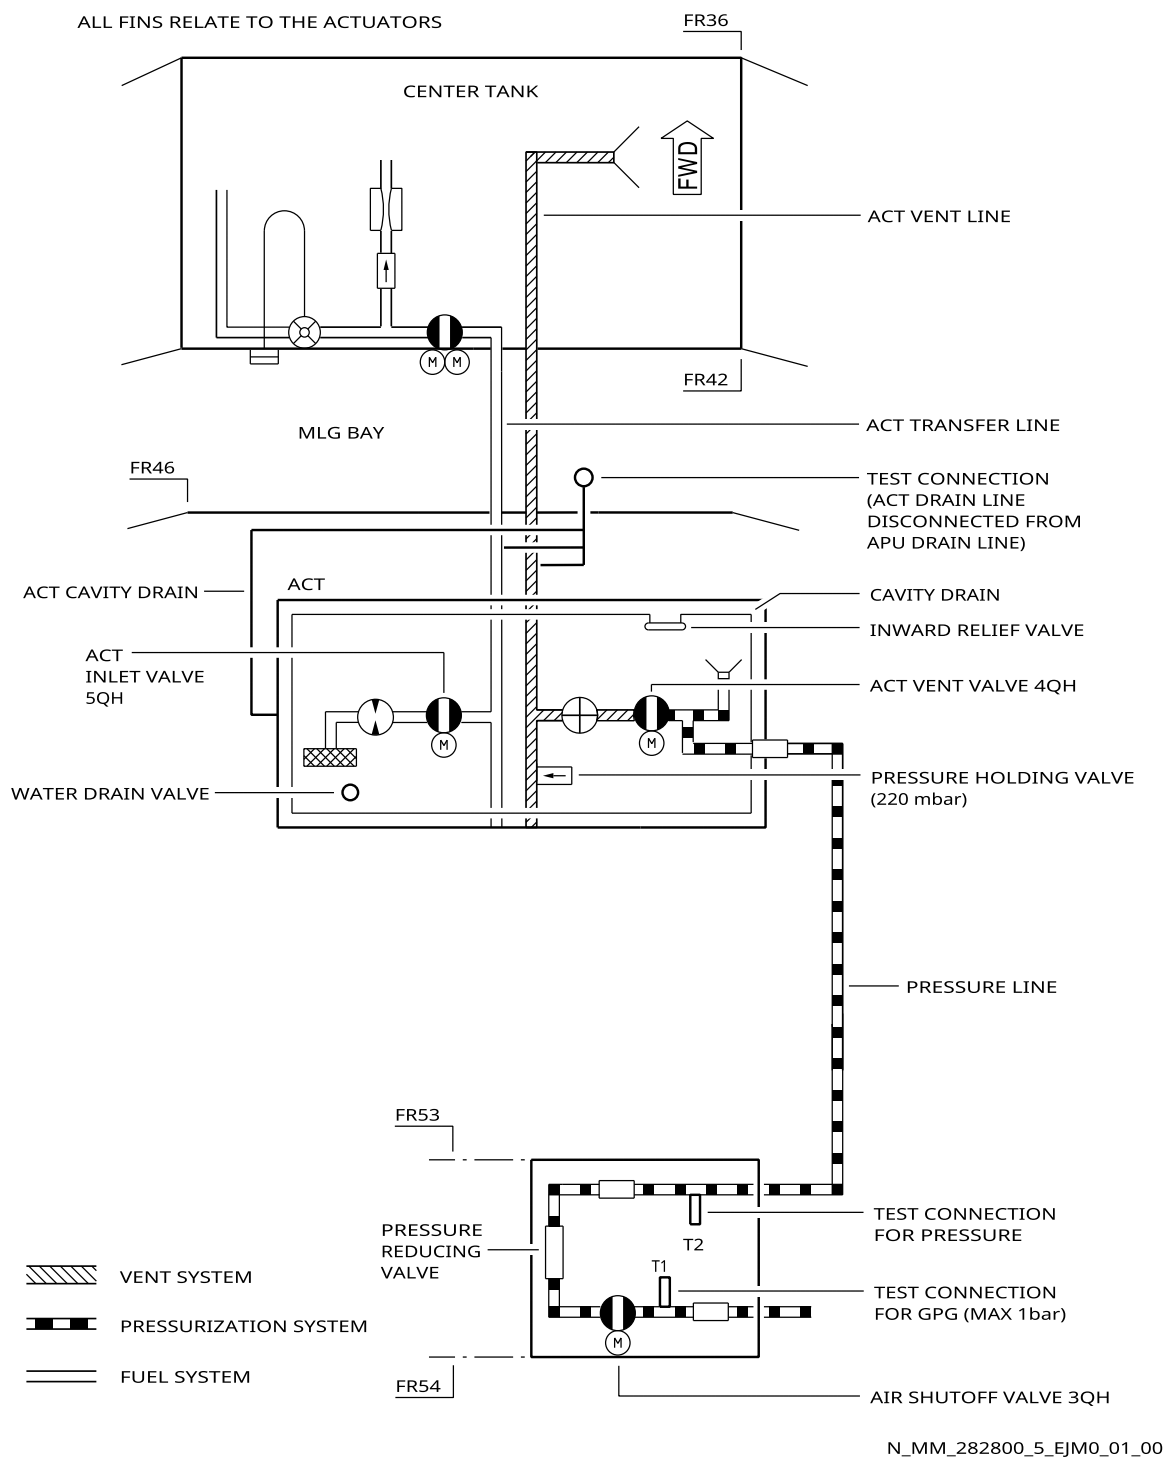


ACT Principle Diagram
Figure 1 / Graphic 28-28-00 -991-03300

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

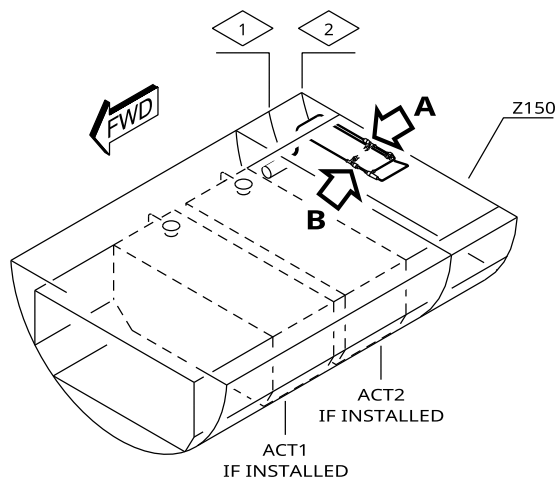

		← FWD	
FRAME	1	2	APPLICABLE ACCESS PANEL FOR T1 AND T2
A319	57	58	151GC
A320	53	54	151CC
A321	51	52	151BC

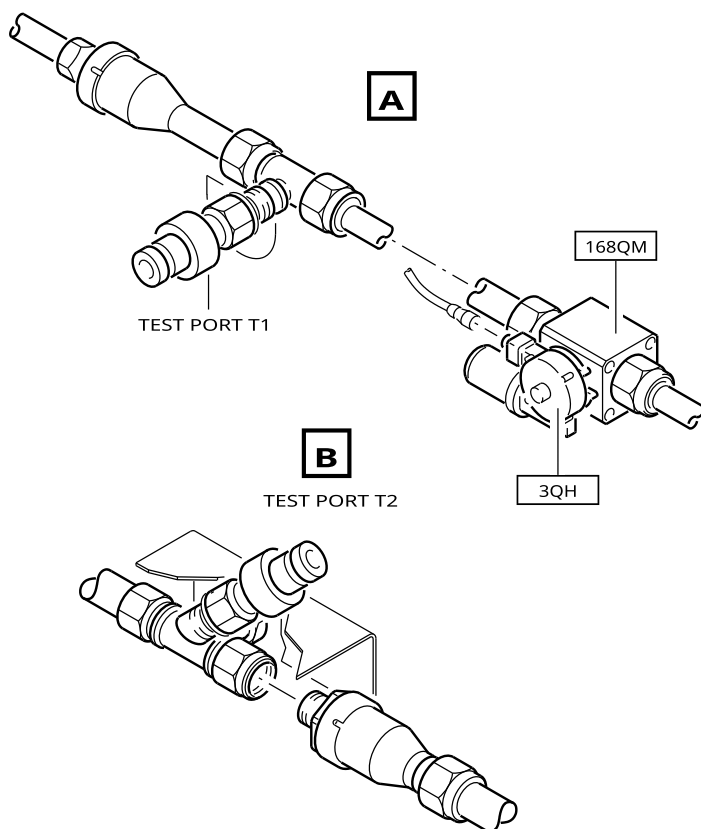


N_MM_282800_5_LTM0_01_00

Access to Test Points T1 and T2
Figure 1 / Graphic 28-28-00 -991-02700


TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

AFT CARGO
T1 AND T2 TEST TOOL

SOLUTION 1
SELF-MADE TOOL

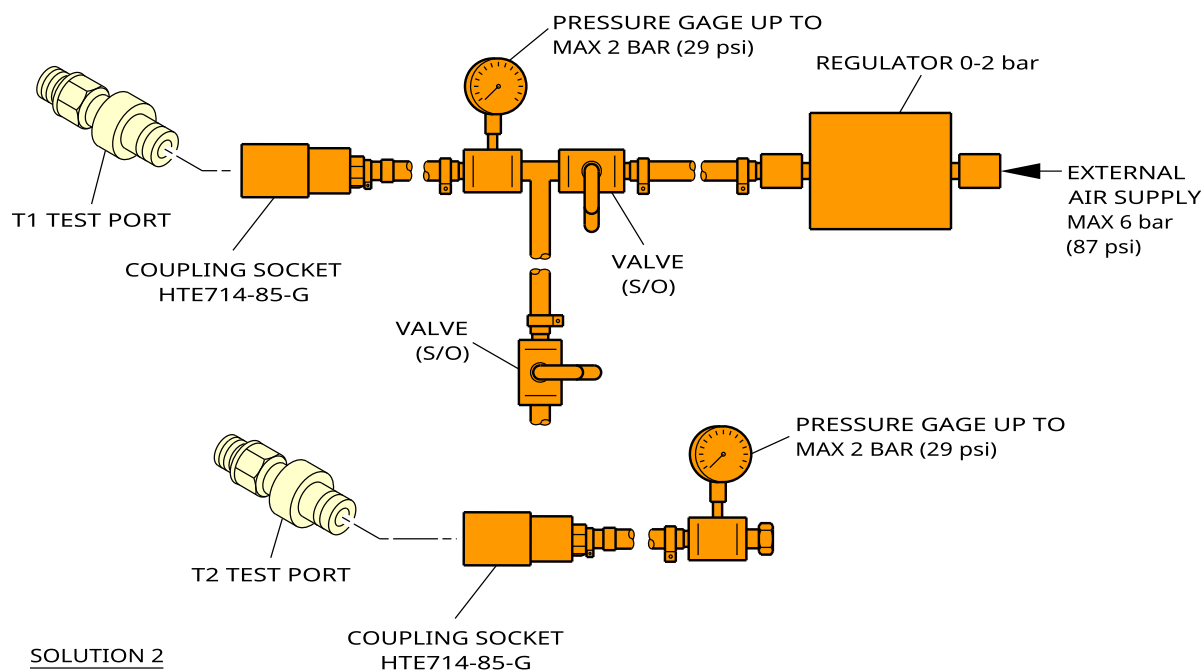

SOLUTION 2
AIRBUS TOOL

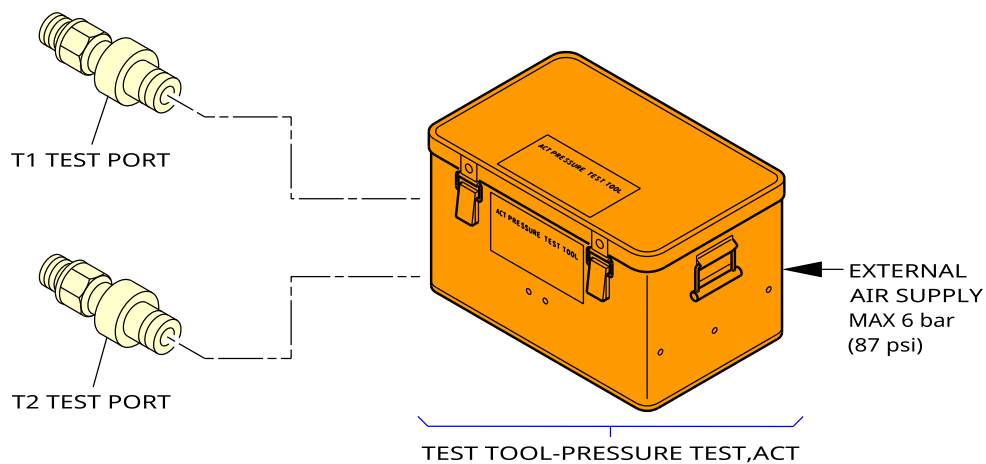

N_MM_282800_5_LEM0_01_05

Test Tool Arrangement ACT
Figure 1 / Graphic 28-28-00 -991-02100

 MET.32712951		Task Card Title: CENTER PASSENGER COMPARTMENT INSP					
Task Card NO: 200241-04-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: INSP,II,CAB,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 25	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: GVI		Special Code: CAB		MSG Code: MRB, EWIS, GACA		Request: JOB SETUP, INSPECTION, JOB-CLOSEUP	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRIED OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 241,242							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		24-92-00-210-037-A					
AMM		249200-210-037					
ACCESS PANELS:							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
No parts assigned to this Task Item							
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
PREPARATION							
Job Description							
A. PERFORM JOB SET UP AS PER AMM TASK 24-92-00-210-037-A AND REMOVE THE SEAT COVERS IN ZONES 241 AND 242, IF NECESSARY.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
				HRS		Day	Month
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.				HRS			
TASK INSTRUCTION							
Job Description							
A. PERFORM GENERAL VISUAL INSPECTION OF ALL WIRING CONNECTORS BETWEEN SEAT AND A/C INSTALLED IN THE FORWARD PASSENGER COMPARTMENT PER AMM TASK 24-92-00-210-037-A. NOTE: THIS IS AN EWIS (ELECTRICAL WIRING INTERCONNECTION SYSTEM) PROCEDURE. EWIS IS DEFINED IN ESPM 20-33-11.							



Task Card Title:

CENTER PASSENGER COMPARTMENT INSP

Task Card NO:

200241-04-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s				HRS			
Insp.	INSP/II			HRS			

CLOSE UP**Job Description**

A. PERFORM JOB CLOSE UP AS PER AMM TASK 24-92-00-210-037-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.				HRS			

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____



MET.32712951

Task Card Title:

CENTER PASSENGER COMPARTMENT INSP

Task Card NO:

200241-04-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

TASK 24-92-00-210-037 -A

On A/C 001-999

General Visual Inspection of EWIS Connections, Attachment Points and Electrical Connectors Between Seats and A/C Installed in the Center Passenger Compartment (EWIS)

1. Reason for the Job

Refer to the MPD TASK: 200241-04

GENERAL VISUAL INSPECTION OF EWIS CONNECTIONS, ATTACHMENT POINTS AND ELECTRICAL CONNECTORS BETWEEN SEATS AND A/C INSTALLED IN THE CENTER PASSENGER COMPARTMENT (EWIS)

NOTE : This is an EWIS (Electrical Wiring Interconnection System) procedure. EWIS is defined in ESPM 20-33-11.

NOTE : This task is applicable only for aircraft with seats and with wiring connections between seats and aircraft.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
241	CENTER PASSENGER COMPARTMENT
242	CENTER PASSENGER COMPARTMENT

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 52-10-00-010-001-A	Opening of the Passenger/Crew Door
Ref. AMM 52-10-00-410-001-A	Closing of the Passenger/Crew Door
Ref. ESPM 20-52-11	
On A/C 003-100; 201-250	
Ref. Fig. (1 / 24-92-00-991-08400)	

3. Job Set-up

Subtask 24-92-00-010-114-A

On A/C 001-999

A. Get Access

- (1) Put an ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE in position.
- (2) Open the aft passenger/crew door 832 (842) [Ref. AMM 52-10-00-010-001-A](#).
- (3) Remove the seat covers in zones 241 and 242, if necessary.

Subtask 24-92-00-862-102-A

On A/C 001-999

B. Make sure that the aircraft electrical circuits are de-energized

[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#) [Ref. AMM 24-41-00-862-002-A-02](#).

4. Procedure

On A/C 003-100; 201-250

Ref. Fig. 1 / 24-92-00-991-08400

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

Subtask 24-92-00-210-087-A

On A/C 001-999

A. General Visual Inspection of Wiring Connections Between Seats and Aircraft Installed in the Center Passenger Compartment

(1) Do a visual inspection of the wiring to make sure that there is no signs of ageing, alteration, overheating, scaling and deformation

Ref. ESPM 20-52-11.

(2) Make sure that there is no dust or lint contamination.

5. Close-up

Subtask 24-92-00-410-112-A

On A/C 001-999

A. Close Access



(1) Make sure that the work area is clean and clear of tools and other items.

(2) Install the seat covers in zones 241 and 242, if necessary.

(3) Close the aft passenger/crew door 832 (842) [Ref. AMM 52-10-00-410-001-A](#).

(4) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

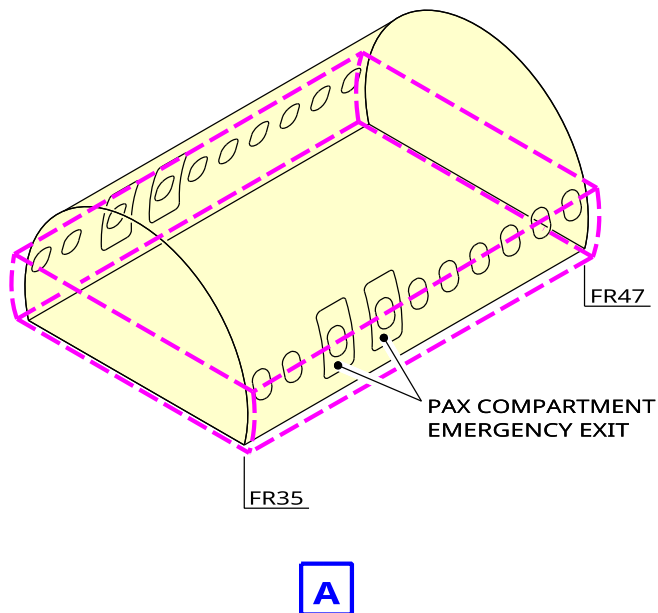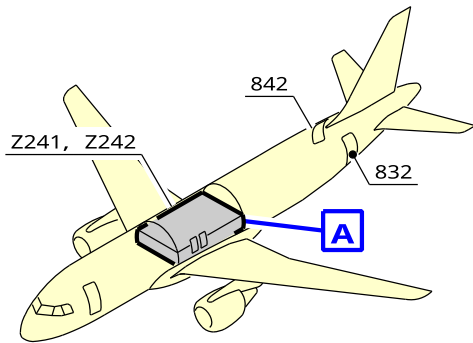

NOTE:

 INSPECTION AREA

N_MM_249200_6_JMM0_01_01

Center Passenger Compartment - Inspection Area - Zones 241-242

Figure 1 / Graphic 24-92-00 -991-08400

On A/C 003-100; 201-250

 MET.32712968		Task Card Title: AFT PASSENGER COMPARTMENT INSPECTION							
Task Card NO: 200251-03-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD					
A/C Type: 320		Block Taskcard		Main Skill: INSP,II,CAB,ACFT_TECH		PROD Final Acceptance:			
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05					
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 26			
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐									
Type Code: GVI		Special Code: CAB		MSG Code: MRB, EWIS, GACA		Request: Phase: JOB-SETUP,INSPECTION, JOB-CLOSEUP			
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.									
Zones: 251,252									
DOCUMENT REFERENCES:									
Doc Typ		Reference							
AMM		24-92-00-210-039-A							
AMM		249200-210-039							
ACCESS PANELS:									
MATERIAL REQUIREMENTS:									
Part Number		Description				Qty.			
No parts assigned to this Task Item									
TOOLING REQUIREMENTS:									
Part Number		Description				Qty.			
No tools assigned to this Task Item									
Job Description									
AFT PASSENGER COMPARTMENT (EWIS) WIRINS CONNECTION BETWEEN SEAT AND AIRCRAFT INSPECTION									
A. REMOVE THE SEAT COVERS IN ZONES 251 AND 252, IF NECESSARY.									
STEP COMPLETION SIGN OFF:									
		Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
							Day	Month	Year
Mechanic/s		CAB/ACFT_TECH		HRS					



Task Card Title:

AFT PASSENGER COMPARTMENT INSPECTION

Task Card NO:

200251-03-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Insp.

HRS

Job Description

B. PERFORM GENERAL VISUAL INSPECTION OF ALL WIRING CONNECTORS BETWEEN SEAT AND A/C INSTALLED IN THE AFT PASSENGER COMPARTMENT PER AMM TASK 24-92-00-210-039-A.

NOTE: THIS IS AN EWIS (ELECTRICAL WIRING INTERCONNECTION SYSTEM) PROCEDURE. EWIS IS DEFINED IN ESPM 20-33-11.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

Job Description

C. RETURN AIRCRAFT TO NORMAL PER AMM TASK 24-92-00-210-039-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.			HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____



Task Card Title:

AFT PASSENGER COMPARTMENT INSPECTION

Task Card NO:

200251-03-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following accordingly (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

TASK 24-92-00-210-039 -A

On A/C 001-999

General Visual Inspection of EWIS connections Between Seats and A/C Installed in the Aft Passenger Compartment (EWIS)

1. Reason for the Job

Refer to the MPD TASK: 200251-03

GENERAL VISUAL INSPECTION OF EWIS CONNECTIONS, ATTACHMENT POINTS AND ELECTRICAL CONNECTORS BETWEEN SEATS AND A/C INSTALLED IN THE AFT PASSENGER COMPARTMENT (EWIS)

NOTE : This is an EWIS (Electrical Wiring Interconnection System) procedure. EWIS is defined in ESPM 20-33-11.

NOTE : This task is applicable only for aircraft with seats and with wiring connections between seats and aircraft.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
251	AFT PASSENGER COMPARTMENT
252	AFT PASSENGER COMPARTMENT

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 52-10-00-010-001-A	Opening of the Passenger/Crew Door
Ref. AMM 52-10-00-410-001-A	Closing of the Passenger/Crew Door
Ref. ESPM 20-52-11	
Ref. Fig. (1 / 24-92-00-991-09300)	

3. Job Set-up

Subtask 24-92-00-010-120-A

On A/C 001-999

A. Get Access

- (1) Put an ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE in position.
- (2) Open the aft passenger/crew door 832 (842) [Ref. AMM 52-10-00-010-001-A](#).
- (3) Remove the seat covers in zones 251 and 252, if necessary.

Subtask 24-92-00-862-108-A

On A/C 001-999

B. Make sure that the aircraft electrical circuits are de-energized

[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#) [Ref. AMM 24-41-00-862-002-A-02](#).

4. Procedure

Ref. Fig. 1 / 24-92-00-991-09300

Subtask 24-92-00-210-089-A

On A/C 001-999

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

- A. General Visual Inspection of Wiring Connections Between Seats and Aircraft Installed in the Aft Passenger Compartment
- (1) Do a visual inspection of the wiring to make sure that there is no signs of ageing, alteration, overheating, scaling and deformation
Ref. ESPM 20-52-11.
 - (2) Make sure that there is no dust or lint contamination.


5. Close-up

Subtask 24-92-00-410-118-A


On A/C 001-999

- A. Close Access
- (1) Make sure that the work area is clean and clear of tools and other items.
 - (2) Install the seat covers in zones 251 and 252, if necessary.
 - (3) Close the aft passenger/crew door 832 (842) [Ref. AMM 52-10-00-410-001-A](#).
 - (4) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ELECTRICAL ROUTING - INSPECTION/CHECK

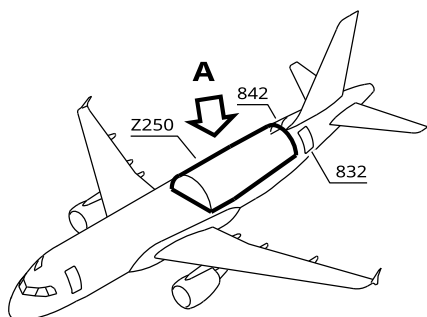

A

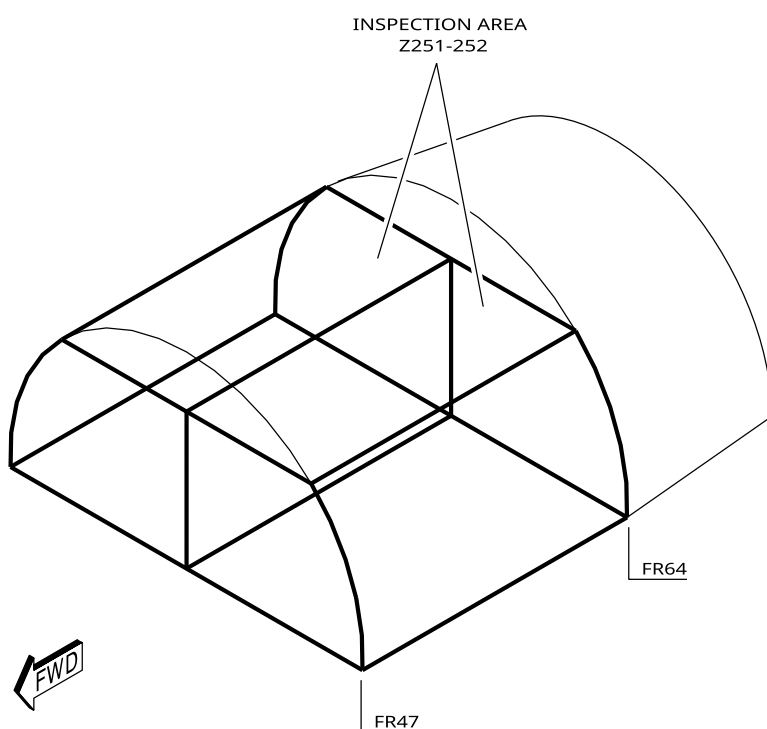

N_MM_249200_6_LMM0_01_00

Aft Passenger Compartment - Inspection Area - Zones 251-252
Figure 1 / Graphic 24-92-00 -991-09300

 MET.32712773		Task Card Title: FOURTH OCCUPANT SEAT COVERS REPLCMNT					
Task Card NO: 25-11-00-18-0-SVA-001		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: CAB,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 06			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 32	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: R/R		Special Code: CAB		MSG Code: 4, 7		Request: Phase: TC/P	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 210							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		25-11-42					
DO		CAP#S25-11007					
ACCESS PANELS:							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
2510154832-0100		COVER SEAT BOTTOM				1.0	
2510154931-0000		COVER HEAD REST				1.0	
2510154853-0001		COVER FLB				1.0	
2510154852-0000		FOAM SEAT BACK REST				1.0	
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
TASK INSTRUCTIONS							
Job Description							
A. REPLACE THE FOURTH OCCUPANT SEAT HEAD REST, BOTTOM AND BACK REST COVERS AS APPLICABLE PER AMM 25-11-42 .							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
						Day Month Year	
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.			HRS				



Task Card Title:

FOURTH OCCUPANT SEAT COVERS REPLCMNT

Task Card NO:

25-11-00-18-0-SVA-001

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

- Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different persons updates the system and update the following accordingly (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 2 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 3 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 4 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 5 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

**Task Completion Close Up And
System Update****Station****Date****Signature**

 MET.28325765		Task Card Title: CABIN ATTENDANT SEAT COVERS R&R					
Task Card NO: 25-22-00-03-0-SVA-002		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: CAB,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 34	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: R/R		Special Code: CAB		MSG Code: 4, 7		Request: 	
Phase: TC/P							
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 200							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
DO		CAP#S25-11008					
DO		IPC 25-22-09/41/42/43					
ACCESS PANELS:							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
2E7000-1APX		CUSHION-COVER ASSY UPPER BACK				4.0	
2E7002-3APX		CUSHION-COVER ASSY LOWER BACK				1.0	
2E7004-29APX		CUSHION-COVER ASSY HEADREST				2.0	
2E7020-1APX		CUSHION-COVER ASSY SEAT PAN				4.0	
2E7002-11APX		COVER ASSY-BACK				3.0	
2E7003-1		CUSHION-BACK				3.0	
2E7004-5APX		CUSHION-COVER ASSY HEADREST				1.0	
2E7004-4APX		CUSHION-COVER ASSY HEADREST				1.0	
2E7024-1APX		CUSHION-COVER ASSY UPPER BACK				1.0	
2E7007-1APX		CUSHION-COVER ASSY LOWER BACK				1.0	
2E5010-1APX		HEADREST-ASSY				2.0	
2E7012-1APX		CUSHION & COVER ASSY SEAT PAN				1.0	
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
Job Description							
A. REPLACE ALL CABIN ATTENDANT SEAT COVERS.							
STEP COMPLETION SIGN OFF:							
Qualification / Skill		Number of employees		Duration		Number./Signature	
Date							
Day Month Year							
Mechanic/s		CAB/ACFT_TECH		HRS			



MET.28325765

Task Card Title:

CABIN ATTENDANT SEAT COVERS R&R

Task Card NO:

25-22-00-03-0-SVA-002

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Insp.

HRS

- Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different persons updates the system and update the following accordingly (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
- Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
- Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
- Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
- Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
- Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
- Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
- Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
- Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
- Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
- Remark's: _____

**Task Completion Close Up And
System Update**

Station

Date

Signature

 MET.32712949		Task Card Title: GALLEY ATTACHMENT POINTS INSPECTION							
Task Card NO: 253000-01-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD					
A/C Type: 320		Block Taskcard		Main Skill: INSP,II,CAB,ACFT_TECH		PROD Final Acceptance:			
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05					
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 35			
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐									
Type Code: DET		Special Code: INSP		MSG Code: 9, MRB		Request: Phase:			
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRIED OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.									
Zones: 200									
DOCUMENT REFERENCES:									
Doc Typ		Reference							
AMM		25-30-00-210-001-A							
AMM		253000-210-001							
ACCESS PANELS:									
MATERIAL REQUIREMENTS:									
Part Number		Description				Qty.			
No parts assigned to this Task Item									
TOOLING REQUIREMENTS:									
Part Number		Description				Qty.			
No tools assigned to this Task Item									
TASK PREPARATION									
Job Description									
A. PERFORM OPEN UP ACCESS FOR GALLEY ATTACHMENT POINTS INSPECTION AS PER AMM TASK 25-30-00-210-001-A.									
STEP COMPLETION SIGN OFF:									
		Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
							Day	Month	Year
Mechanic/s		CAB/ACFT_TECH		HRS					
Insp.				HRS					
TASK INSTRUCTIONS									
Job Description									
A.									
1. PERFORM DETAILED VISUAL INSPECTION OF THE FWD GALLEY ATTACHMENT POINTS AS PER AMM TASK 25-30-00-210-001-A.									



Task Card Title:

GALLEY ATTACHMENT POINTS INSPECTION

Task Card NO:

253000-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

TASK INSTRUCTIONS**Job Description**

- A.
2. PERFORM DETAILED VISUAL INSPECTION OF THE AFT GALLEY ATTACHMENT POINTS AS PER AMM TASK 25-30-00-210-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	II/INSP		HRS				

CLOSE UP**Job Description**

- A.
3. OK TO CLOSE ACCESS PANELS OPENED AS PER AMM TASK 25-30-00-210-001-A. (FWD GALLY)

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

CLOSE UP**Job Description**

- A.
4. OK TO CLOSE ACCESS PANELS OPENED AS PER AMM TASK 25-30-00-210-001-A. (AFT GALLEY).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	II/INSP		HRS				

CLOSE UP**Job Description**



Task Card Title:

GALLEY ATTACHMENT POINTS INSPECTION

Task Card NO:

253000-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

B. CLOSE ACCESS PANELS OPEN AS PER AMM TASK 25-30-00-210-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.	INSP/II		HRS				

CLOSE UP**Job Description**

C. RETURN THE AIRCRAFT BACK TO NORMAL CONFIGURATION AS PER AMM TASK 25-30-00-210-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.			HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____



MET.32712949

Task Card Title:

GALLEY ATTACHMENT POINTS INSPECTION

Task Card NO:

253000-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following accordingly (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
BUFFET AND GALLEY - INSPECTION/CHECK

TASK 25-30-00-210-001 -A

On A/C 001-999

Detailed Inspection of Attachment Points

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 253000-01

DETAILED INSPECTION OF ATTACHMENT POINTS

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	MIRROR - INSPECTION, FLEXIBLE

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
200	UPPER HALF FUSELAGE

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 23-73-22-000-001-A	Removal of the Attendant Indication Panel
Ref. AMM 23-73-22-400-001-A	Installation of the Attendant Indication Panel
Ref. AMM 23-73-63-000-802-A	Removal of the No Smoking/No PED/No Mobile/Fasten Seat Belt sign
Ref. AMM 23-73-63-400-802-A	Installation of the No Smoking/No PED/No Mobile/Fasten Seat Belt sign
Ref. AMM 24-42-00-861-001-A	Energize the Ground Service Network from the External Power
Ref. AMM 24-42-00-862-001-A	De-energize the Ground Service Network Supplied from the External Power

On A/C 003-250

Ref. AMM 25-23-41-000-001-A	Removal of the Ceiling Panels
Ref. AMM 25-23-41-400-001-A	Installation of the Ceiling Panels
Ref. AMM 25-23-42-000-001-A	Removal of the Ceiling Panels - Forward Utility Area
Ref. AMM 25-23-42-000-002-A	Removal of the Ceiling Panels - Aft Utility Area
Ref. AMM 25-23-42-400-001-A	Installation of the Ceiling Panels - Forward Utility Area
Ref. AMM 25-23-42-400-002-A	Installation of the Ceiling Panels - Aft Utility Area
Ref. AMM 25-23-45-000-002-A	Removal of the Door Frame Linings From the Right Forward Passenger/Crew Door
Ref. AMM 25-23-45-400-007-A	Installation of the Door Frame Linings on the Right Forward Passenger/Crew Door
Ref. AMM 25-31-42-000-001-A	Removal of the Forward Galley Unit
Ref. AMM 25-31-42-400-001-A	Installation of the Forward Galley Unit
Ref. AMM 25-31-44-000-001-A	Removal of the Forward Galley Unit
Ref. AMM 25-31-44-400-001-A	Installation of the Forward Galley Unit
Ref. AMM 25-33-45-000-001-A	Removal of the Aft Galley Unit
Ref. AMM 25-33-45-400-001-A	Installation of the Aft Galley Unit

On A/C 001-999

Ref. AMM 25-35-34-000-001-A	Removal of the Galley Control Panel
Ref. AMM 25-35-34-400-001-A	Installation of the Galley Control Panel
Ref. AMM 53-46-04-000-801-A	Removal of the Handgrip Support Assembly
Ref. AMM 53-46-04-400-801-A	Installation of the Handgrip Support Assembly
Ref. Fig. (1 / 25-30-00-991-02300)	

3. Job Set-up

Subtask 25-30-00-861-051-A

On A/C 001-999

TF-N
AIRCRAFT MAINTENANCE MANUAL
BUFFET AND GALLEY - INSPECTION/CHECK

A. Energization of the Electrical Network

- (1) Energize the ground service network

[Ref. AMM 24-42-00-861-001-A.](#)

Subtask 25-30-00-010-093-A

On A/C 001-999

B. Get Access

- (1) Open all applicable doors to get access to the parts that you must remove/disconnect.
- (2) If necessary, remove the galley trolleys.
- (3) If necessary, remove the galley control panel(s) [Ref. AMM 25-35-34-000-001-A.](#)
- (4) If necessary, remove the Attendant Indication Panel (AIP) [Ref. AMM 23-73-22-000-001-A.](#)
- (5) If necessary, remove the No Smoking/Fasten Seat Belt (NS/FSB) sign(s)
[Ref. AMM 23-73-63-000-802-A.](#)
- (6) If necessary, remove the ceiling panels in the area of the galley(s)

On A/C 003-250

[Ref. AMM 25-23-41-000-001-A](#)

On A/C 251-350

[Ref. AMM 25-23-41-000-001-B.](#)

- (7) If necessary, remove the door frame linings in the area of the galley(s)

On A/C 003-250

[Ref. AMM 25-23-45-000-002-A](#)

On A/C 251-350

[Ref. AMM 25-23-45-000-002-B.](#)

- (8) If necessary, remove the handgrip support assembly

On A/C 001-999

[Ref. AMM 53-46-04-000-801-A.](#)

- (9) If necessary, remove the forward utility-area ceiling-panels

On A/C 003-250

[Ref. AMM 25-23-42-000-001-A](#)

On A/C 251-350

[Ref. AMM 25-23-42-000-001-B.](#)

- (10) If necessary, remove the aft utility-area ceiling-panels

On A/C 003-250

[Ref. AMM 25-23-42-000-002-A](#)

On A/C 251-350

[Ref. AMM 25-23-42-000-002-B.](#)

Subtask 25-30-00-010-098-A

On A/C 003-250

C. Get Access

- (1) Get access to the attachment points of the forward galley unit [Ref. AMM 25-31-42-000-001-A.](#)

NOTE : It is not necessary to remove the forward galley unit fully to get access to the attachment points.

Subtask 25-30-00-010-100-A

On A/C 003-250

D. Get Access

- (1) Get access to the attachment points of the forward galley unit [Ref. AMM 25-31-44-000-001-A.](#)

TF-N
AIRCRAFT MAINTENANCE MANUAL
BUFFET AND GALLEY - INSPECTION/CHECK

NOTE : It is not necessary to remove the forward galley unit fully to get access to the attachment points.

Subtask 25-30-00-010-121-A

On A/C 003-250

E. Get Access

- (1) Get access to the attachment points of the aft galley unit [Ref. AMM 25-33-45-000-001-A](#).

NOTE : It is not necessary to remove the aft galley unit fully to get access to the attachment points.

4. Procedure

Subtask 25-30-00-210-050-A

On A/C 001-999

A. Detailed Inspection of Attachment Points

Ref. Fig. (1 / 25-30-00-991-02300)

- (1) Examine the upper attachment points. If necessary, use the MIRROR - INSPECTION, FLEXIBLE.
 - (a) Make sure that the rods and the fittings are in the correct condition.
 - (b) Make sure that the supports, the bolts and the nuts are in the correct condition.
 - (c) Make sure that the quick-release pins are in the correct condition.
 - (d) Make sure that the bolts, nuts, supports, rods and fittings are correctly installed.
- (2) Examine the lower attachment points.
 - (a) Make sure that the supports, the bolts and the nuts are in the correct condition.
 - (b) Make sure that the mounting points are in the correct condition.
 - (c) Make sure that the supports, the bolts and the nuts are correctly installed.

5. Close-up

Subtask 25-30-00-410-100-A

On A/C 003-250

A. Close Access

- (1) Close the access to the attachment points of the forward galley unit
[Ref. AMM 25-31-42-400-001-A](#).

NOTE : To close the access to the attachment points, it is necessary to install all the components which were removed before.

Subtask 25-30-00-410-102-A

On A/C 003-250

B. Close Access

- (1) Close the access to the attachment points of the forward galley unit
[Ref. AMM 25-31-44-400-001-A](#).

NOTE : To close the access to the attachment points, it is necessary to install all the components which were removed before.

Subtask 25-30-00-410-123-A

On A/C 003-250

C. Close Access

- (1) Close the access to the attachment points of the aft galley unit [Ref. AMM 25-33-45-400-001-A](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
BUFFET AND GALLEY - INSPECTION/CHECK

NOTE : To close the access to the attachment points, it is necessary to install all the components which were removed before.

Subtask 25-30-00-410-130-A

On A/C 001-999

D. Close Access

- (1) If the aft utility-area ceiling-panels are removed, install them

On A/C 003-250

Ref. AMM 25-23-42-400-002-A

On A/C 251-350

Ref. AMM 25-23-42-400-002-B.

- (2) If the forward utility-area ceiling-panels are removed, install them

On A/C 003-250

Ref. AMM 25-23-42-400-001-A

On A/C 251-350

Ref. AMM 25-23-42-400-001-B.

- (3) If the handgrip support assembly is removed, install it

On A/C 001-999

Ref. AMM 53-46-04-400-801-A.

- (4) If the door frame linings in the area of the galley(s) are removed, install them

On A/C 003-250

Ref. AMM 25-23-45-400-007-A

On A/C 251-350

Ref. AMM 25-23-45-400-007-B.

- (5) If the ceiling panels in the area of the galley(s) are removed, install them

On A/C 003-250

Ref. AMM 25-23-41-400-001-A

On A/C 251-350

Ref. AMM 25-23-41-400-001-B.

- (6) If the NS/FSB sign(s) is (are) removed, install it (them)

On A/C 001-999

Ref. AMM 23-73-63-400-802-A.

- (7) If the AIP is removed, install it Ref. AMM 23-73-22-400-001-A.

- (8) If the galley control panel(s) is (are) removed, install it (them) Ref. AMM 25-35-34-400-001-A.

- (9) If the galley trolleys are removed, move them into the galley(s) and lock them in position.

- (10) Close all doors.

- (11) Make sure that the work area is clean and clear of tools and other items.

Subtask 25-30-00-862-051-A


On A/C 001-999

E. De-Energization of the Electrical Network

- (1) De-energize the ground service network

Ref. AMM 24-42-00-862-001-A.



TF-N
AIRCRAFT MAINTENANCE MANUAL
BUFFET AND GALLEY - INSPECTION/CHECK

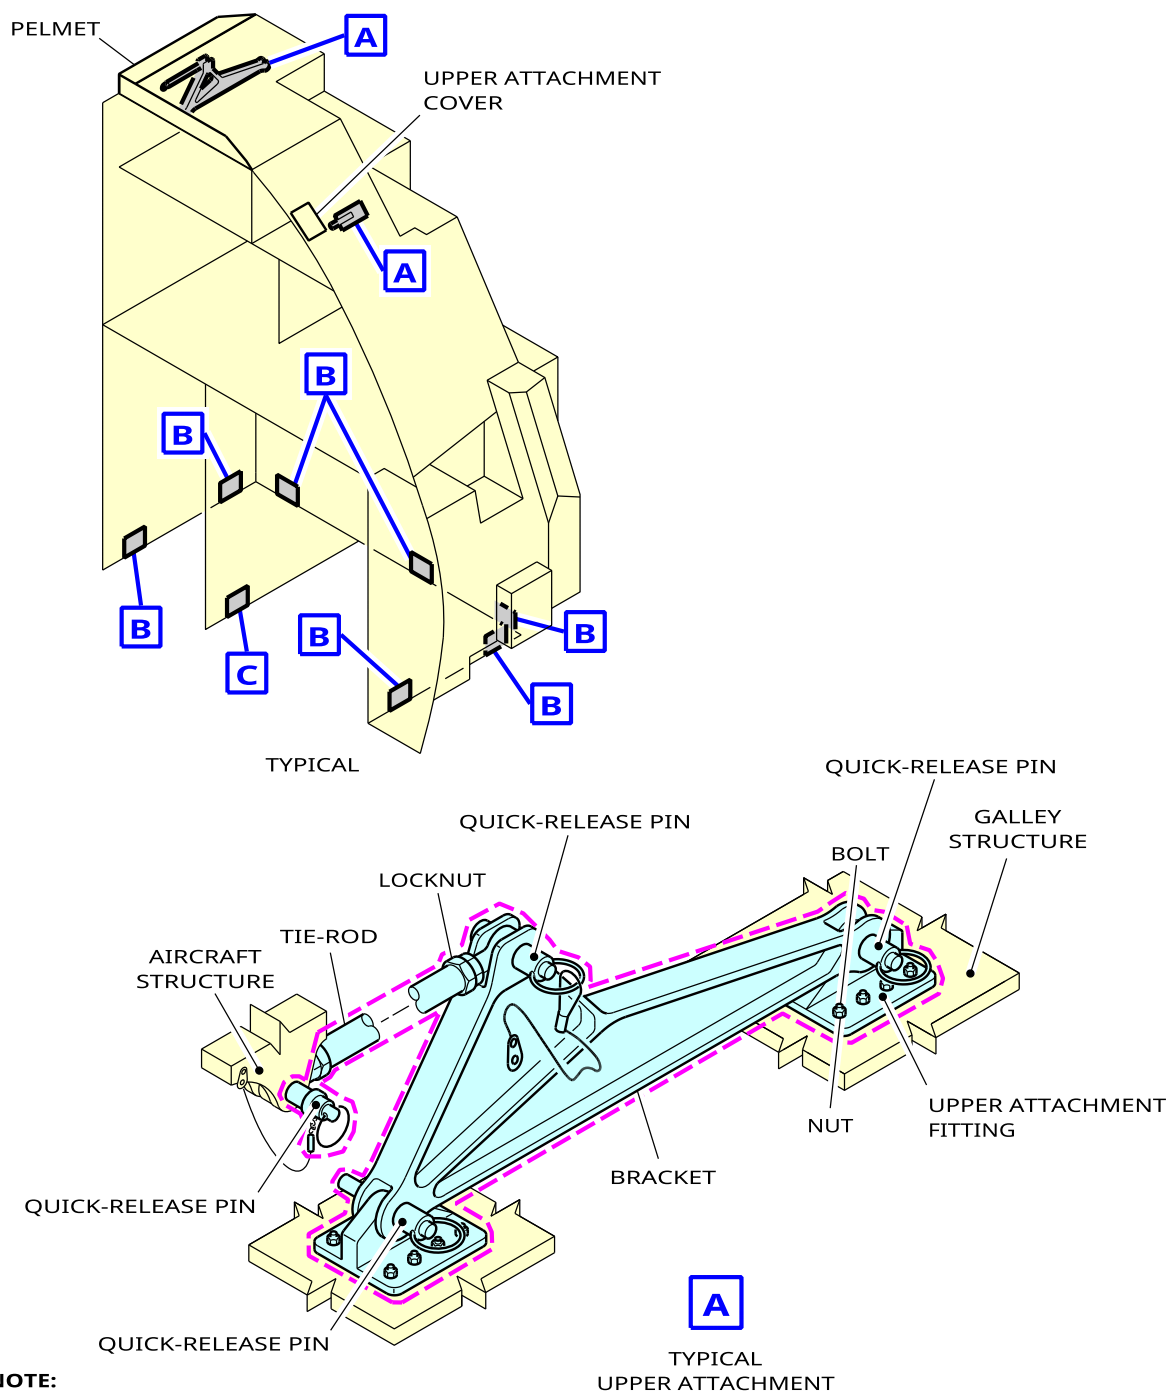

N_MM_253000_6_AAAA_01_00

Attachment Points of the Galley
Figure 1 / Graphic 25-30-00 -991-02300

TF-N
AIRCRAFT MAINTENANCE MANUAL
BUFFET AND GALLEY - INSPECTION/CHECK

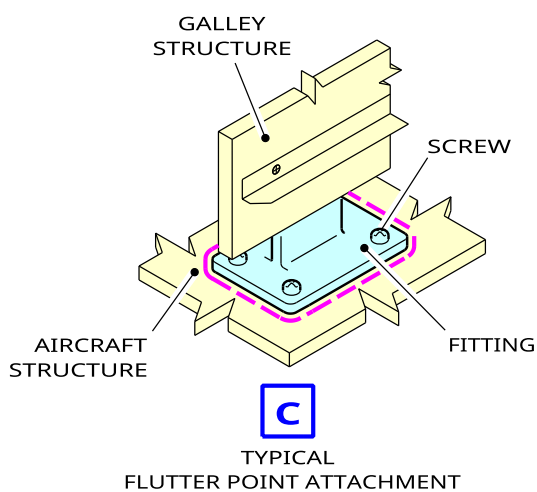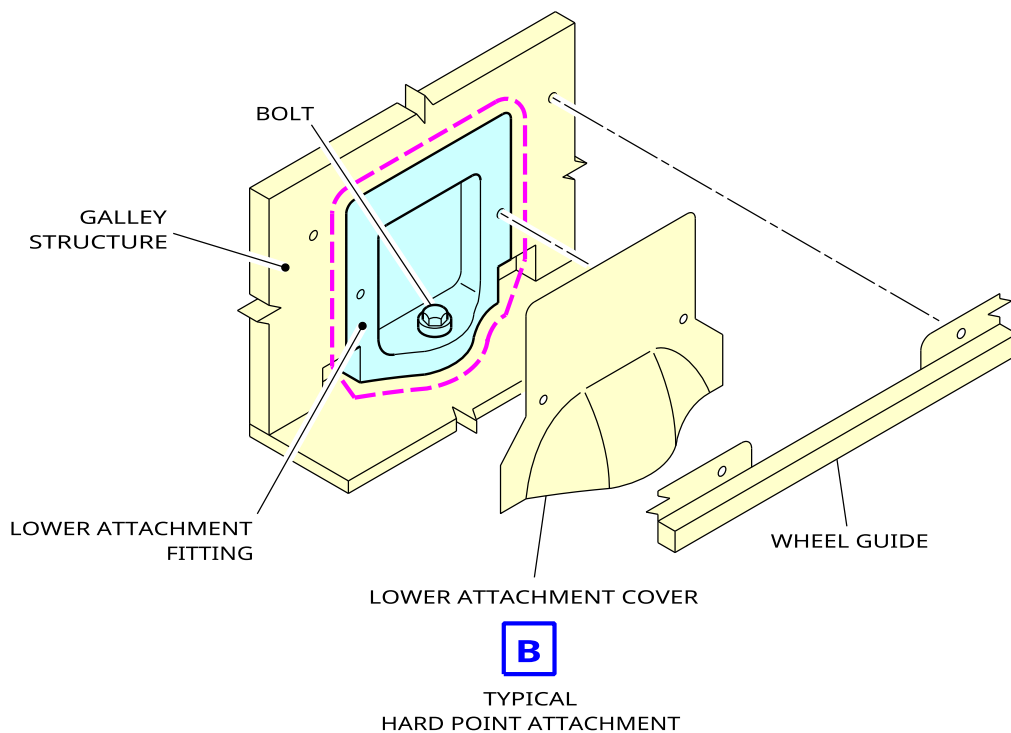

NOTE:
INSPECTION AREA

N_MM_253000_6_AAAA_02_00

Attachment Points of the Galley
Figure 2 / Graphic 25-30-00 -991-02300

 MET.32712983		Task Card Title: LAVATORIE'S ATTACHMENT POINTS INSP					
Task Card NO: 254000-02-2		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: INSP,II,CAB,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 36	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: DET		Special Code: INSP		MSG Code: 9, MRB		Request: Phase: JOB SETUP,INSPECTIO N,JOB-CLOSEUP	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 200							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		25-40-00-210-002-A					
AMM		254000-210-002					
ACCESS PANELS:							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
NAS1611-209A		PACKING				4.0	
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
TASK INSTRUCTIONS							
Job Description							
A. PERFORM JOB SET UP PER AMM TASK 25-40-00-210-002-A.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
				HRS		Day Month Year	
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.				HRS			
TASK INSTRUCTIONS							
Job Description							
B. PERFORM A DETAILED VISUAL INSPECTION OF THE FOLLOWING LAVATORIES PER AMM TASK 25-40-00-210-002-A.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
				HRS		Day Month Year	
Mechanic/s				HRS			

 MET.32712983	Task Card Title: LAVATORIE'S ATTACHMENT POINTS INSP						
Task Card NO: 254000-02-2		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
Insp.	INSP/II			HRS			
TASK INSTRUCTIONS							
Job Description							
C. RETURN THE AIRCRAFT TO NORMAL CONFIGURATION AS PER AMM TASK 35-32-42-210-002-A.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.				HRS			
-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____. Task card finding (Tick Applicable Box) [☐] Yes [☐] No. If yes update the system and list Task card finding WO below Work order No: _____ _____ Note: Make sure to creat the finding Work Order on task card level. Remark's: _____ _____							



MET.32712983

Task Card Title:

LAVATORIE'S ATTACHMENT POINTS INSP**Task Card NO:****254000-02-2****Work Package:****ASD/H-26 C2+6Y CHK****A/C Registration:****HZ-ASD**

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
LAVATORIES - INSPECTION/CHECK

TASK 25-40-00-210-002 -A

On A/C 001-999

Detailed Inspection of Upper and Lower Lavatory Attachment Points

1. Reason for the Job

Refer to the MPD TASK: 254000-02

DETAILED INSPECTION OF UPPER AND LOWER LAVATORY ATTACHMENT POINTS.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	LIGHT SOURCE - INSPECTION
No specific	1	MIRROR - INSPECTION

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
200	UPPER HALF FUSELAGE
221AC , 221EW , 261BC , 261CC	

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-42-00-861-001-A	Energize the Ground Service Network from the External Power
Ref. AMM 24-42-00-862-001-A	De-energize the Ground Service Network Supplied from the External Power
On A/C 003-250	
Ref. AMM 25-23-42-000-001-A	Removal of the Ceiling Panels - Forward Utility Area
Ref. AMM 25-23-42-000-002-A	Removal of the Ceiling Panels - Aft Utility Area
Ref. AMM 25-23-42-400-001-A	Installation of the Ceiling Panels - Forward Utility Area
Ref. AMM 25-23-42-400-002-A	Installation of the Ceiling Panels - Aft Utility Area
Ref. AMM 25-23-45-000-005-A	Removal of the Door Frame Linings From the Left Forward Passenger/Crew Door
Ref. AMM 25-23-45-400-006-A	Installation of the Door Frame Linings on the Left Forward Passenger/Crew Door
On A/C 001-999	
Ref. AMM 35-21-41-000-001-A	Removal of the Emergency Oxygen Containers
Ref. AMM 35-21-41-400-001-A	Installation of the Emergency Oxygen Containers
Ref. AMM 51-76-11-300-001-A	Repair of the Sealing
Ref. Fig. (1 / 25-40-00-991-00200)	

3. Job Set-up

Subtask 25-40-00-861-054-A

On A/C 001-999

A. Energize the ground service network

[Ref. AMM 24-42-00-861-001-A.](#)

Subtask 25-40-00-010-052-A

On A/C 001-999

B. Get Access

(1) For the FWD lavatory.

(a) Remove ceiling panel 221AC in the forward utility area

On A/C 003-250

[Ref. AMM 25-23-42-000-001-A](#)

On A/C 251-350

[Ref. AMM 25-23-42-000-001-B.](#)

(b) Remove door-frame lining panel 221EW

On A/C 003-250

[Ref. AMM 25-23-45-000-005-A](#)

On A/C 251-350

[Ref. AMM 25-23-45-000-005-B.](#)

- (c) Open the oxygen service panel in the lavatory

On A/C 001-999

[Ref. AMM 35-21-41-000-001-A.](#)

- (d) Open the flap of the stowage of the Cabin Attendant Seat (CAS).
(e) If necessary, remove the emergency equipment from the stowage of the CAS.
(f) Remove the cover from the wall fitting on the lavatory passage wall.

Subtask 25-40-00-010-053-A

On A/C 001-999

C. Get Access

- (1) For the aft lavatories:
(a) Open the stowage flap of the Cabin Attendant Seat (CAS).
(b) Remove the emergency equipment from the stowage of the CAS as necessary.
(c) Remove ceiling panels 261CC and 261BC from the aft utility area

On A/C 003-250

[Ref. AMM 25-23-42-000-002-A](#)

On A/C 251-350

[Ref. AMM 25-23-42-000-002-B.](#)

- (d) If the covers are installed on the lower attachment points, remove them.
(e) If the space flex lavatory is installed, remove the floor pan assembly from the space flex lavatory 25-43-49-000-802.

4. Procedure

Subtask 25-40-00-210-051-A

On A/C 001-999

A. Detailed Inspection of Upper and Lower Lavatory Attachment Points

Ref. Fig. (1 / 25-40-00-991-00200)

- (1) If necessary, use the LIGHT SOURCE - INSPECTION to do the inspection.
(2) If necessary, use the MIRROR - INSPECTION for visual access to all the surfaces in the inspection area.
(3) Visually examine the upper attachment points and the brace assemblies for:
• correct installation,
• corrosion,
• cracks,
• contamination,
• installation of the quick release pins,
• safety of the locknuts.
(4) Visually examine the lower attachment points for:
• cracks,
• corrosion,
• correct installation,
• contamination.
(5) Make sure that the sealing is in a good condition.
(a) If necessary, do the repair of the sealing [Ref. AMM 51-76-11-300-001-A.](#)

5. Close-up

Subtask 25-40-00-410-051-A

On A/C 001-999

A. Close Access

- (1) For the FWD lavatory.

TF-N
AIRCRAFT MAINTENANCE MANUAL
LAVATORIES - INSPECTION/CHECK

- (a) Install the cover on the wall fitting on the lavatory passage wall.
- (b) If the emergency equipment in the stowage of the CAS is removed, install it.
- (c) Make sure that the work area is clean and clear of tools and other items.
- (d) Close the flap of the CAS stowage.
- (e) Close the oxygen service panel in the lavatory [Ref. AMM 35-21-41-400-001-A](#).
- (f) Install door-frame lining panel 221EW

On A/C 003-250

[Ref. AMM 25-23-45-400-006-A](#)

On A/C 251-350

[Ref. AMM 25-23-45-400-006-B](#).

- (g) Install ceiling panel 221AC

On A/C 003-250

[Ref. AMM 25-23-42-400-001-A](#)

On A/C 251-350

[Ref. AMM 25-23-42-400-001-B](#).

Subtask 25-40-00-410-052-A

On A/C 001-999

B. Close Access

- (1) For the aft lavatories:

- (a) If you removed the floor pan assembly from the space flex lavatory, install it 25-43-49-400-802.
- (b) If the covers are removed from the lower attachment points, install them.
- (c) Install ceiling panels 261CC and 261BC

On A/C 003-250

[Ref. AMM 25-23-42-400-002-A](#)

On A/C 251-350

[Ref. AMM 25-23-42-400-002-B](#).

- (d) Install the emergency equipment in the stowage of the CAS.
- (e) Make sure that the work area is clean and clear of tools and other items.
- (f) Close the stowage flap of the CAS.


Subtask 25-40-00-862-055-A

On A/C 001-999

C. De-energize the ground service network

[Ref. AMM 24-42-00-862-001-A](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
LAVATORIES - INSPECTION/CHECK

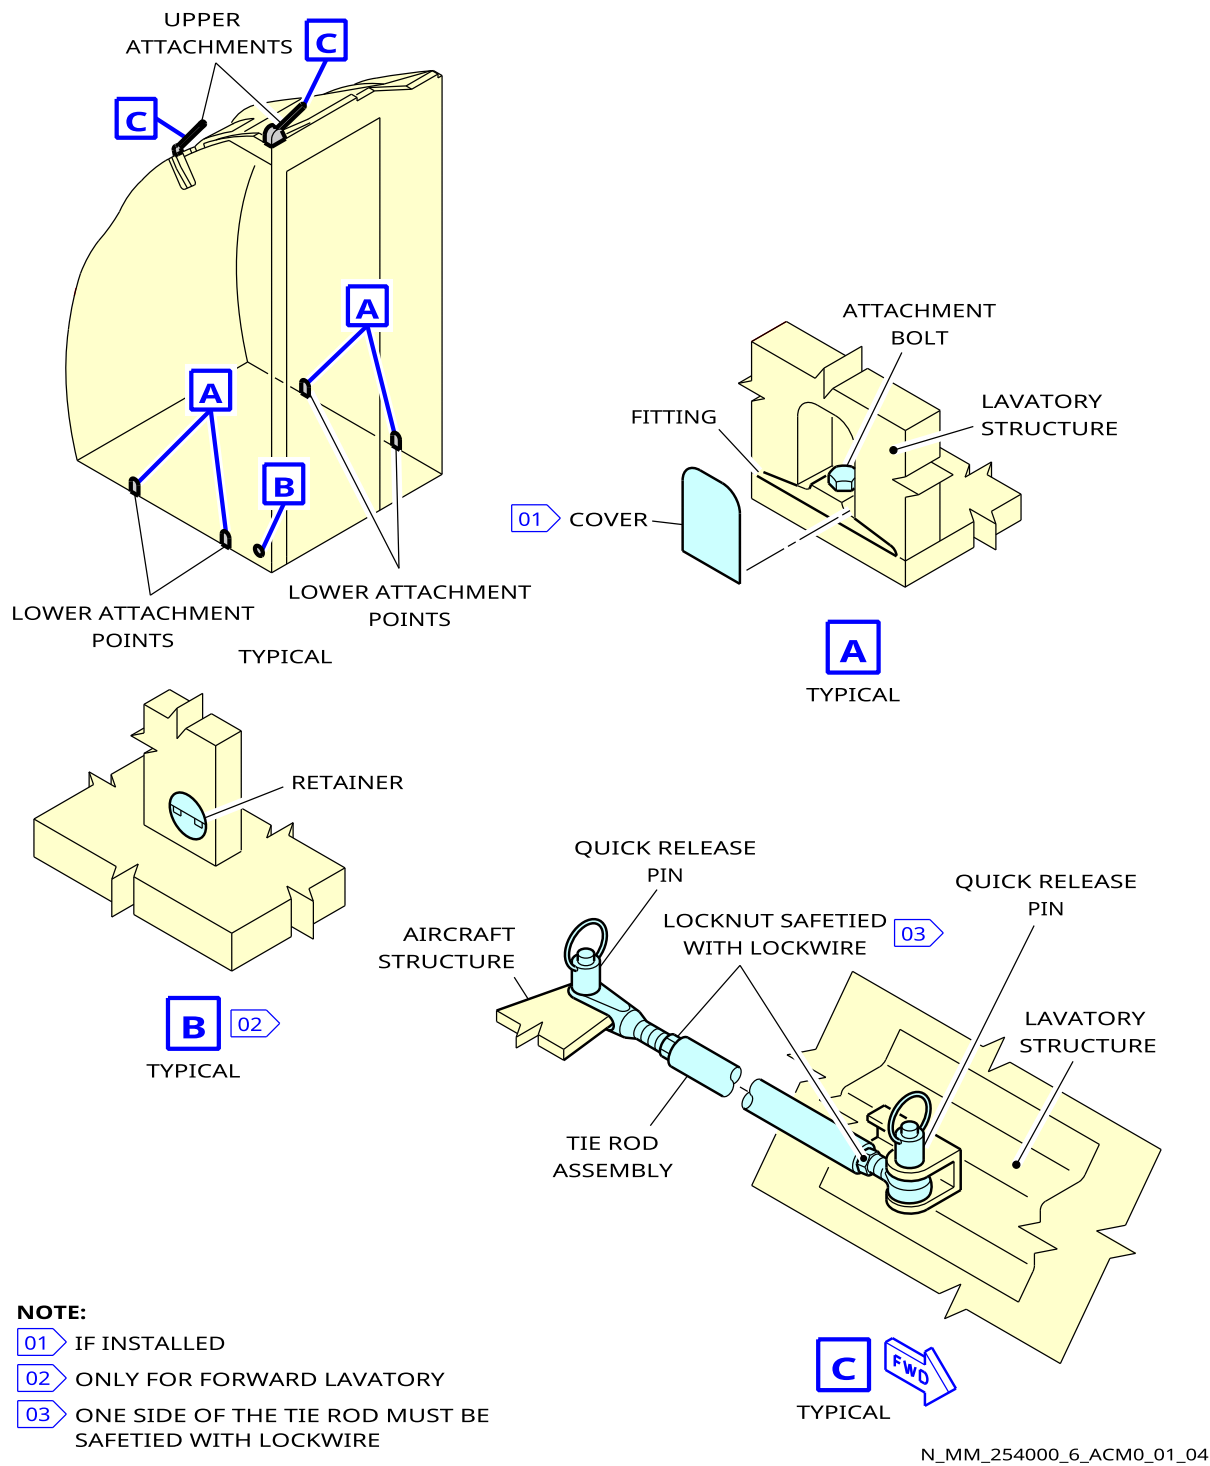

Lavatory Attachment Points
Figure 1 / Graphic 25-40-00 -991-00200

 MET.25336812		Task Card Title: ADDITIONAL CENTER TANK (ACT) OPC						
Task Card NO: 282800-08-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD				
A/C Type: 320		Block Taskcard		Main Skill: II,INSP,RII,AF,ACFT_TECH		PROD Final Acceptance:		
Project No: 01BASDC22606		Related Task Card:		A/C Area: 09				
Internal Check:		Check Type:		Work Order NO: 31574335, 32797253		Tally Sequence NO: 42		
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐								
Type Code: OPC		Special Code: AF		MSG Code: 9, MRB		Request: JOB SETUP, OPS/LK, JOB -CLOSEUP		
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.								
Zones: 150								
DOCUMENT REFERENCES:								
Doc Typ		Reference						
AMM		28-28-00-720-002-A						
AMM		282800-720-002						
ACCESS PANELS:								
153AZ, 197PB								
MATERIAL REQUIREMENTS:								
Part Number		Description				Qty.		
No parts assigned to this Task Item								
TOOLING REQUIREMENTS:								
Part Number		Description				Qty.		
No tools assigned to this Task Item								
ADDITIONAL CENTER TANK (ACT) INWARD RELIEF VALVE OPERATIONAL CHECK								
Job Description								
A. PREPARE FOR TASK ACCOMPLISHMENT PER AMM TASK 28-28-00-720-002-A .								
STEP COMPLETION SIGN OFF:								
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				



MET.25336812

Task Card Title:

ADDITIONAL CENTER TANK (ACT) OPC

Task Card NO:

282800-08-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Insp.

HRS

Job Description

B. PERFORM OPERATIONAL CHECK OF THE ACT INWARD RELIEF VALVE PER AMM TASK 28-28-00-720-002-A .

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	II/INSP		HRS				

Job Description

C. RETURN THE AIRCRAFT BACK TO NORMAL CONFIGURATION PER AMM TASK 28-28-00-720-002-A .

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	INSP/RII		HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____



MET.25336812

Task Card Title:

ADDITIONAL CENTER TANK (ACT) OPC

Task Card NO:

282800-08-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

TASK 28-28-00-720-002 -A

On A/C 003-100

Operational Check of ACT(S) Inward Relief Valve

WARNING: BEFORE YOU DO WORK IN OR NEAR A FUEL TANK, MAKE SURE THAT YOU OBEY ALL THE SAFETY PROCEDURES. THIS WILL PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE AIRCRAFT.

1. Reason for the Job

Refer to the MPD TASK: 282800-08

OPERATIONAL CHECK OF ACT(S) INWARD RELIEF VALVE

NOTE : For the New Engine Option (NEO) aircraft with an Additional Center Tank (ACT) installed in the forward cargo compartment, the term ACT FWD can also be described as ACT 4.1.

NOTE : There is an alternative method for the operational check of the ACT(s) inward relief valve. This task gives one of the methods. For the other method, refer to the other task of this pageblock.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 2M (6 FT)
No specific	1	AIR SOURCE 0.3 TO 0.7 BAR (5 TO 10 PSI)- FILTERED, DRY
No specific	1	CAP - BLANKING
No specific	1	GAGE 0,1 BAR (1,45 PSI) - PRESSURE, DIGITAL
No specific	1	LOCALLY MANUFACTURED - ADAPTER
No specific	AR	PLUG - BLANKING
No specific	AR	SAFETY CLIP - CIRCUIT BREAKER
No specific	AR	WARNING NOTICE(S)

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
130	FWD CARGO COMPT AFT BULKHEAD OF AVNCS COMPT TO FWD PRESSURE BULKHEAD OF WING CENTER BOX
150	AFT CARGO COMPARTMENT FWD PRESS BULKHEAD TO AFT BULKHEAD OF AFT CARGO COMPARTMENT
160	BULK CARGO COMPARTMENT AFT BULKHEAD OF AFT CARGO COMPARTMENT TO AFT BULKHEAD OF BULK CARGO COMPARTMENT
190	BELLY FAIRING, AIR CONDITIONING & HYD COMP
153AZ , 192MB , 197PB	

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-861-002-A	Energize the Aircraft Electrical Circuits from the External Power
Ref. AMM 24-41-00-861-002-A-01	Energize the Aircraft Electrical Circuits from the APU
Ref. AMM 24-41-00-861-002-A-02	Energize the Aircraft Electrical Circuits from Engine 1(2)
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 28-10-00-910-001-A	Safety Procedures When You Do Work in a Fuel Tank
Ref. AMM 28-11-49-000-001-A	Removal of the ACT Integrated Impact Wall
Ref. AMM 28-11-49-400-001-A	Installation of the ACT Integrated Impact Wall
Ref. AMM 28-25-00-650-001-A	Pressure Defuel

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

REFERENCE	DESIGNATION
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 53-35-13-000-002-A	Removal of the Quick-Release Access Panels From the Belly Fairing Structure
Ref. AMM 53-35-13-400-002-A	Installation of the Quick-Release Access Panels on the Belly Fairing Structure
Ref. Fig. (1 / 28-28-00-991-00200)	
Ref. Fig. (1 / 28-28-00-991-02200)	
Ref. Fig. (1 / 28-28-00-991-05000)	

3. Job Set-up

Subtask 28-28-00-860-063-A

On A/C 003-100

A. Aircraft Maintenance Configuration

- (1) Obey the fuel safety procedures when you do work in or near a fuel tank

[Ref. AMM 28-10-00-910-001-A.](#)

- (2) Energize the aircraft electrical circuits

[Ref. AMM 24-41-00-861-002-A](#) [Ref. AMM 24-41-00-861-002-A-01](#)

[Ref. AMM 24-41-00-861-002-A-02.](#)

WARNING: MAKE SURE THE AREA AROUND THE AIRCRAFT IS SAFE BEFORE YOU START THE REFUEL/DEFUEL PROCEDURE. IN THE SAFETY AREA, DO NOT:

- SMOKE
- MAKE SPARKS OR FIRE
- USE ANY EQUIPMENT WHICH IS NOT APPROVED FOR REFUEL/DEFUEL PROCEDURES.

AIRCRAFT FUEL IS FLAMMABLE.

- (3) Defuel all the ACT(s) [Ref. AMM 28-25-00-650-001-A.](#)

- (4) In the cockpit, put the WARNING NOTICE(S) in position on the panels that follow, to tell persons not to operate the refuel/defuel system:

- FUEL control panel 40VU
- ACT control panel 28VU.

- (5) On the belly fairing:

- (a) Put the WARNING NOTICE(S) on refuel/defuel panel door 192MB to tell persons not to operate the refuel/defuel system.

Subtask 28-28-00-865-056-A

On A/C 003-100

- B. Open, safety and tag the circuit breaker(s) that follow(s). Use the SAFETY CLIP - CIRCUIT BREAKER as necessary.

PANEL	DESIGNATION	FIN	LOCATION
121VU	FUEL/RFL/DPL/SPLY	2QU	L24
121VU	FUEL/RFL/DPL/XFR/DEFUEL/VALVE	1QU	L23
121VU	ACT PUMP SUPPLY	25QH	Q29

Subtask 28-28-00-010-050-A

On A/C 003-100

C. Get Access

- (1) Put an ACCESS PLATFORM 2M (6 FT) in position below the aft cargo-compartment door.
- (2) Get access to the aft cargo compartment [Ref. AMM 52-30-00-860-001-A.](#)

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

- (3) Remove the right side of the ACT integrated impact-wall [Ref. AMM 28-11-49-000-001-A](#), to get access to ACT1 vent-valve actuator (4QH1).
- (4) On the lower fuselage, get access to the ACT cavity-drain connection:
 - For ACT1, remove 197PB and 153AZ [Ref. AMM 53-35-13-000-002-A](#).

4. Procedure

Ref. Fig. 1 / 28-28-00-991-00200

Ref. Fig. 1 / 28-28-00-991-02200

Subtask 28-28-00-860-064-A

On A/C 003-100

A. Preparation for the Test

- (1) On the lower fuselage, connect the test tool equipment to the line end of the ACT cavity drain (2) as follows:
 - (a) Loosen the coupling nut (1) and disconnect the hose (6) from the ACT cavity drain (2).
 - (b) Put the CAP - BLANKING on the coupling nut (1).
 - (c) Connect the LOCALLY MANUFACTURED - ADAPTER together with the GAGE 0,1 BAR (1,45 PSI) - PRESSURE, DIGITAL (5) to the line end of the ACT cavity drain (2).

NOTE : The GAGE 0,1 BAR (1,45 PSI) - PRESSURE, DIGITAL (5) has a fine scale with steps of 0.001 bar (0.015 psi).

- (d) Connect the regulated AIR SOURCE 0.3 TO 0.7 BAR (5 TO 10 PSI)- FILTERED, DRY with the shut off valves to the coupling adapter of the GAGE 0,1 BAR (1,45 PSI) - PRESSURE, DIGITAL (5).

NOTE : The GAGE 0,1 BAR (1,45 PSI) - PRESSURE, DIGITAL (5) of the regulated air source has a scale with steps of 0.1 bar (1.45 psi).

- (2) In the aft cargo compartment, on ACT1 vent-valve actuator (4QH1):
 - (a) Make sure that the visual indicator of the actuator is in the open position.

Ref. Fig. (1 / 28-28-00-991-05000)

Subtask 28-28-00-720-051-A

On A/C 003-100

WARNING: WHEN YOU USE COMPRESSED AIR:

- USE THE CORRECT PROTECTION (FACE SHIELD OR GOGGLES)
- DO NOT POINT THE AIRFLOW AT YOURSELF OR OTHER PERSONS.

LOOSE PARTICLES AND/OR HIGH PRESSURE AIR CAN CAUSE INJURY.

B. Test

ACTION	RESULT
1. On the regulated air source: • Make sure that the regulator of the air source is set to 0 bar (0 psi) • Make sure that the air shut off valves of the air source are closed • Start the regulated air source • Carefully set the regulated air source to a maximum of 0.1 bar (1.45 psi) to get sufficient air flow for the test. NOTE : Be careful when you pressurize the ACT cavity drain. The rubber bladder of the ACT can be damage, if the air pressure becomes too high and the inward relief-valve does not work as specified.	

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

ACTION	RESULT
- Stop the pressurization. - On the pressure gage at the ACT cavity drain, check if the pressure is decreased to 0.01 bar (0.15 psi) After 10 seconds, do step again until the pressure stabilizes at 0.01 bar (0.15 psi).	On the pressure gage at the ACT cavity drain: The inward relief valve must open at approximately 0.01 bar (0.15 psi) to prevent damage on the bladder tank of the ACT.
2. On the regulated air source: Stop the regulated air source and open the air shut off valves of the air source.	On the pressure gage at the ACT cavity drain: The air pressure decreases to 0 bar (0 psi).

Subtask 28-28-00-860-125-A

On A/C 003-100

C. Put the system back to the serviceable condition.

- (1) On the lower fuselage, at the ACT cavity drain:
 - (a) Remove the ground support and maintenance equipment, the special and standard tools and all other items.
 - (b) Remove the PLUG - BLANKING from each disconnected line end.
 - (c) Clean the component interfaces and the adjacent area.
 - (d) Do an inspection of the component interfaces and the adjacent area.
 - (e) Connect the hose (6) to the ACT cavity drain (2) and tighten the coupling nut (1).

NOTE : Make sure that you do not twist the hose when you tighten coupling nut.

5. Close-up

Subtask 28-28-00-410-051-A

On A/C 003-100

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) On the lower fuselage, close the ACT cavity-drain connection:
 - For ACT1, install access panels 197PB and 153AZ [Ref. AMM 53-35-13-400-002-A](#).
- (3) In the aft cargo compartment:
 - (a) Install the ACT integrated impact-wall [Ref. AMM 28-11-49-400-001-A](#).
- (4) Close the aft cargo-compartment door [Ref. AMM 52-30-00-860-002-A](#).
- (5) Remove the access platform(s).

Subtask 28-28-00-865-057-A

On A/C 003-100

B. Remove the SAFETY CLIP - CIRCUIT BREAKER and the tag(s) and close this (these) circuit breaker(s):

PANEL	DESIGNATION	FIN	LOCATION
121VU	FUEL/RFL/DFL/SPLY	2QU	L24
121VU	FUEL/RFL/DFL/XFR/DEFUEL/VALVE	1QU	L23
121VU	ACT PUMP SUPPLY	25QH	Q29


Subtask 28-28-00-860-065-A

On A/C 003-100

C. Put the aircraft back to its initial configuration.

- (1) Remove the WARNING NOTICE(S).
- (2) De-energize the aircraft electrical circuits
[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#)
[Ref. AMM 24-41-00-862-002-A-02](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

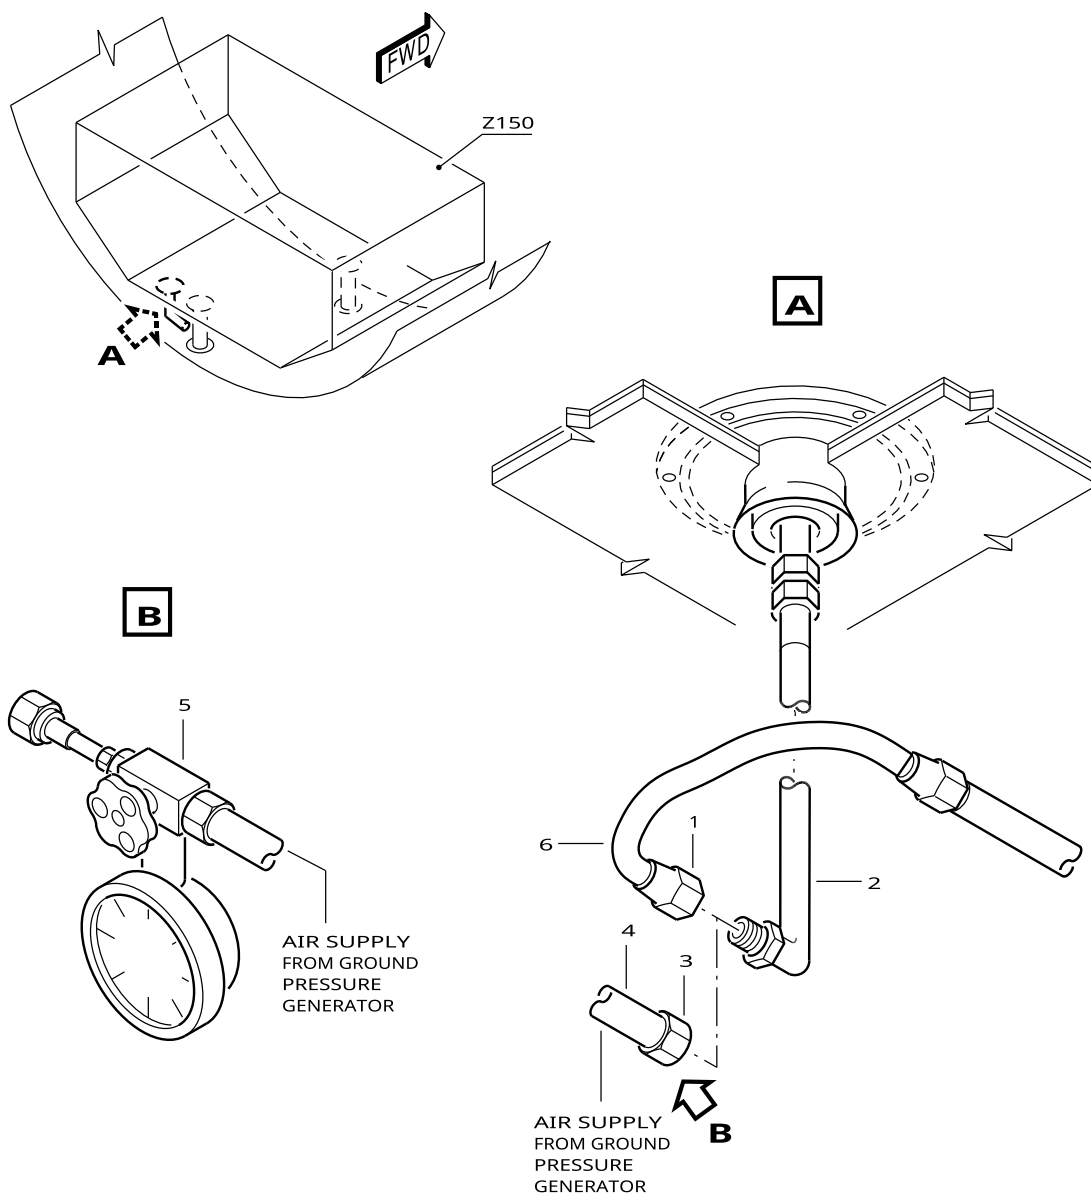


N_MM_282800_5_ACM0_01_00

Test Connection to the Cavity Drain Port of the ACT
Figure 1 / Graphic 28-28-00 -991-00200

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST



TEST TOOL EQUIPMENT

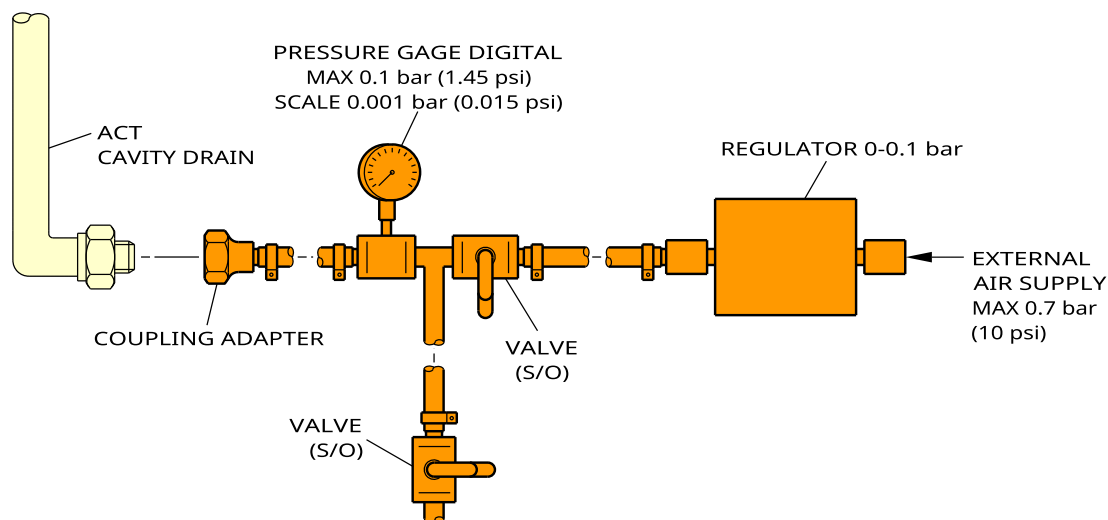

N_MM_282800_5_NCM0_01_01

Test Equipment Diagram
Figure 1 / Graphic 28-28-00 -991-02200

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

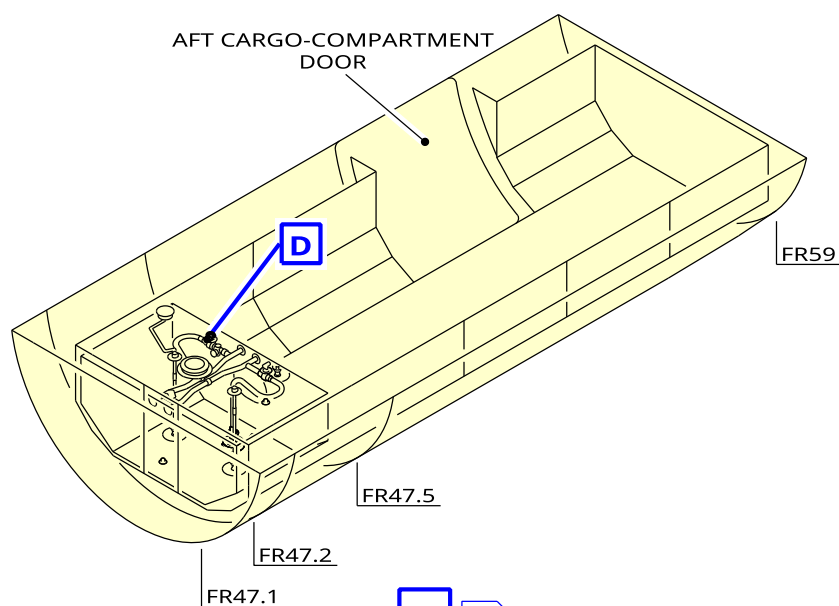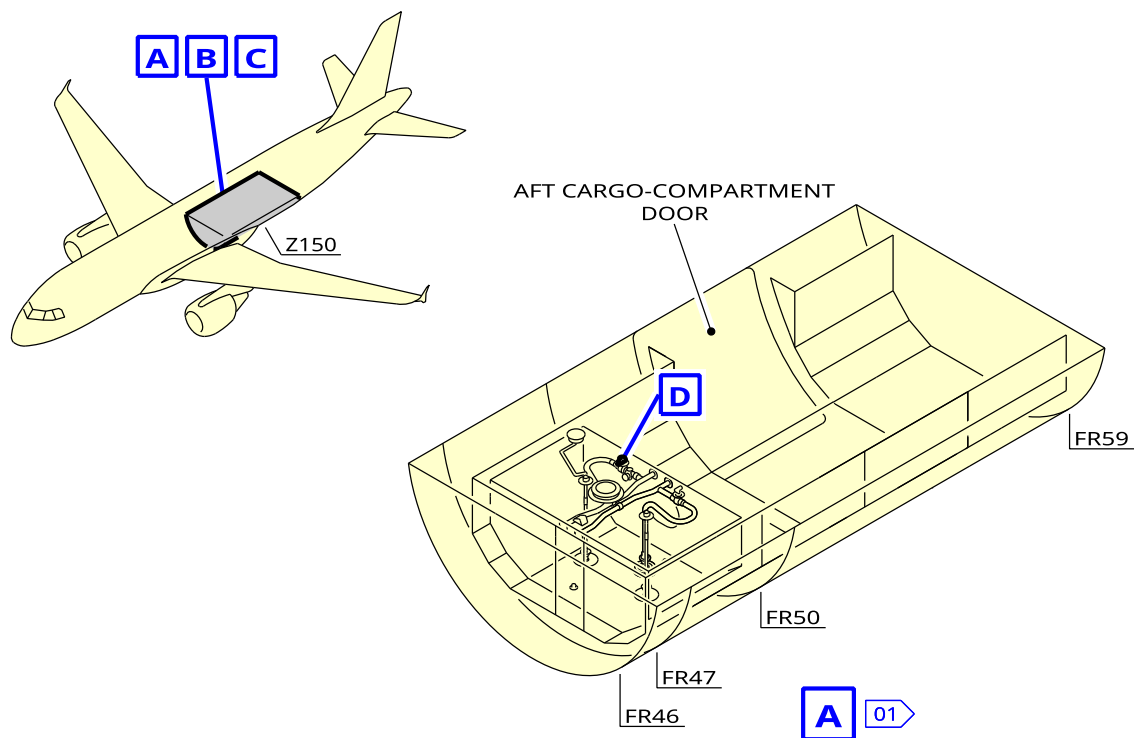

NOTE:


01 VALID FOR ST1.

02 VALID FOR ST2 AND ST6.

N_MM_282800_5_AAA0_01_01

Visual Indicator Position of ACT Vent-Valve
Figure 1 / Graphic 28-28-00 -991-05000

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

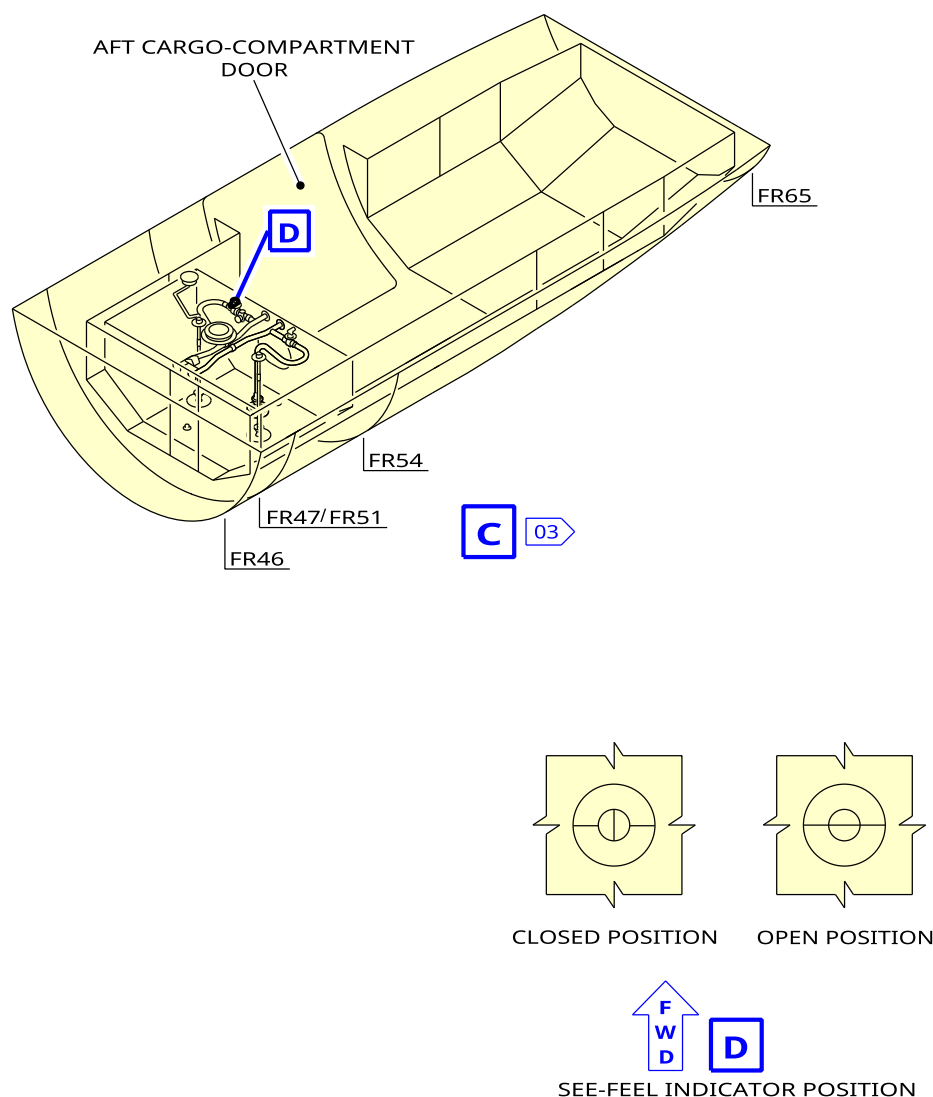

NOTE:

03 VALID FOR ST3.

N_MM_282800_5_AAA0_02_00

Visual Indicator Position of ACT Vent-Valve
Figure 2 / Graphic 28-28-00 -991-05000

 MET.31498211		Task Card Title: VENT/TRANSFER PIPE SHROUDS FNC					
Task Card NO: 282800-18-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: INSP,IL,AF,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 09			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 43	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: FNC		Special Code: AF		MSG Code: 8, MRB, SOEE		Request: JOB-SETUP,IC/P,IC/P,I Phase: INSPECTION,JOB-CLOS EUP,JOB-CLOSEUP	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRIED OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 150							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		28-28-00-790-004-A					
AMM		282800-790-004					
DO		SOEE TR SA00ME2302736					
MRB		28.28.00/12					
ACCESS PANELS:							
153AZ, 197PB, 241EF, 241JF							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
NO PARTS ASSIGNED TO THIS TASK CARD							
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
98D28108658000		TOOL-PRESSURE TEST,ACT				1.0	
98D28108562000		ADAPTER, PRESSURE DRAIN - ACT				1.0	
99D28108418000		BOX - ACT VALVES CONTROL				1.0	
Job Description							
A. PREPARE FOR VENT/TRANSFER PIPE SHROUDS AND ADDITIONAL CENTER TANK (ACT) DRAIN PIPE CONNECTORS FUNCTIONAL CHECK AS PER AMM TASK 28-28-00-790-004-A.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
				HRS		Day	Month
Mechanic/s	AF/ACFT_TECH			HRS			
Insp.				HRS			
Job Description							



Task Card Title:

VENT/TRANSFER PIPE SHROUDS FNC



Task Card NO:

282800-18-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

B. PERFORM FUNCTIONAL CHECK OF THE VENT/TRANSFER PIPE SHROUDS AND ADDITIONAL CENTER TANK (ACT) DRAIN PIPE CONNECTORS FUNCTIONAL CHECK AS PER AMM TASK 28-28-00-790-004-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	INSP/II		HRS				

Job Description

C. REMOVE THE TEST TOOL AND ASSEMBLE THE ACT CAVITY DRAIN-LINE AS AMM TASK 28-28-00-790-004-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	INSP/II		HRS				

Job Description

D. OK TO INSTALL CARGO CEILING PANEL.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	II/INSP		HRS				

Job Description

E. INSTALL CARGO CEILING PANEL REMOVED.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	INSP/II		HRS				

Job Description

F. RETURN THE AIRCRAFT BACK TO NORMAL CONFIGURATION AS PER AMM TASK 28-28-00-790-004-A.

STEP COMPLETION SIGN OFF:



Task Card Title:

VENT/TRANSFER PIPE SHROUDS FNC



Task Card NO:

282800-18-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.			HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 2 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 3 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 4 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 5 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

Task Completion Close Up And
System Update

Station

Date

Signature

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

TASK 28-28-00-790-004 -A

On A/C 003-100

Functional Check of the Vent/Transfer Pipe Shrouds and ACT Drain Pipe Connectors

WARNING: MAKE SURE THAT THE SAFETY DEVICES AND THE WARNING NOTICES ARE IN POSITION BEFORE YOU START A TASK ON OR NEAR:

- THE FLIGHT CONTROLS
- THE FLIGHT CONTROL SURFACES
- THE LANDING GEAR AND RELATED DOORS
- THE CARGO DOORS
- OTHER COMPONENTS THAT MOVE.

MOVEMENT OF COMPONENTS CAN KILL OR CAUSE INJURY TO PERSONS AND/OR DAMAGE TO EQUIPMENT.

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

WARNING: BEFORE YOU DO WORK IN OR NEAR A FUEL TANK, MAKE SURE THAT YOU OBEY ALL THE SAFETY PROCEDURES. THIS WILL PREVENT INJURY TO PERSONS AND/OR DAMAGE TO THE AIRCRAFT.

1. Reason for the Job

Refer to the MPD TASK: 282800-18

FUNCTIONAL CHECK OF THE VENT/TRANSFER PIPE SHROUDS AND ACT DRAIN PIPE CONNECTORS

NOTE : For the New Engine Option (NEO) aircraft with an Additional Center Tank (ACT) installed in the forward cargo compartment, the term ACT FWD can also be described as ACT 4.1.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 1M(3 FT)
No specific	1	ADAPTER - EXTENSION, FILLING SYSTEM, DRY AIR
No specific	1	AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY
No specific	4	CAP - BLANKING
No specific	1	GAGE 2 BAR (29 PSI) - PRESSURE
No specific	AR	PLUG - BLANKING
No specific	AR	SAFETY CLIP - CIRCUIT BREAKER
No specific	1	WARNING NOTICE(S)
No specific		Torque wrench: range to between 30 and 37 m.N (22.12 and 27.29 lbf.ft)
No specific		Torque wrench: range to between 3.0 and 3.3 m.daN (22.12 and 24.34 lbf.ft)
98D28108658000	2	TOOL-PRESSURE TEST,ACT
99D28108418000	1	ACT VALVE CONTROL BOX

B. Consumable Materials

REFERENCE	DESIGNATION
08GAA1	Liquid Soap-- - -
14CBB1	Testing Medium-Leak Detection Bubbles -

C. Work Zones and Access Panels

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

ZONE/ACCESS	ZONE DESCRIPTION
150	AFT CARGO COMPARTMENT FWD PRESS BULKHEAD TO AFT BULKHEAD OF AFT CARGO COMPARTMENT
151	AFT CARGO COMPARTMENT
152	AFT CARGO COMPARTMENT
190	BELLY FAIR, AIR CONDITIONING & HYD COMPT
210	CKPT,FWD COMPT BHD TO FLT COMPT BULKHEAD
620	RIGHT WING FIXED LEADING EDGE
151BC , 151CC , 151GC , 153AZ , 154AR , 192MB , 197PB , 241EF , 241JF , 251AF , 251AG , 251FF	

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-41-00-861-002-A	Energize the Aircraft Electrical Circuits from the External Power
Ref. AMM 24-41-00-861-002-A-01	Energize the Aircraft Electrical Circuits from the APU
Ref. AMM 24-41-00-861-002-A-02	Energize the Aircraft Electrical Circuits from Engine 1(2)
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 25-55-11-000-002-A	Removal of the Ceiling Panels From the Aft Cargo Compartment - Frame 47/ Frame 59
Ref. AMM 25-55-11-400-002-A	Installation of the Ceiling Panels in the Aft Cargo Compartment - Frame 47/Frame 59
Ref. AMM 28-10-00-910-001-A	Safety Procedures When You Do Work in a Fuel Tank
Ref. AMM 28-11-47-920-001-A	Replacement of the Outer Water Drain-Valve of the ACT
Ref. AMM 28-25-00-650-001-A	Pressure Defuel
Ref. AMM 28-25-00-650-005-A	Procedure to Drain the Remaining Fuel From the Additional Center Tank (ACT)
Ref. AMM 31-60-00-860-001-A	EIS Start Procedure
Ref. AMM 32-12-00-010-001-A	Open the Main Gear Doors for Access
Ref. AMM 32-12-00-410-001-A	Close the Main Gear Doors after Access
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 53-32-12-000-002-A	Removal of the Cabin Floor Panels
Ref. AMM 53-32-12-400-002-A	Installation of the Cabin Floor Panels
Ref. AMM 53-42-12-000-001-A	Removal of the Cabin Floor Panels from FR47 thru FR64
Ref. AMM 53-42-12-400-001-A	Installation of the Cabin Floor Panels from FR47 thru FR64
Ref. Fig. (1 / 28-28-00-991-02700)	
Ref. Fig. (1 / 28-28-00-991-04400)	
Ref. Fig. (1 / 28-28-00-991-04200)	
Ref. Fig. (1 / 28-28-00-991-02000)	
Ref. Fig. (1 / 28-28-00-991-02300)	
Ref. Fig. (1 / 28-28-00-991-04300)	
Ref. Fig. (1 / 28-28-00-991-02100)	

3. Job Set-up

Subtask 28-28-00-860-148-A

On A/C 003-100

A. Aircraft Maintenance Configuration

- (1) You must obey the fuel safety procedures when you do work on the fuel system
[Ref. AMM 28-10-00-910-001-A.](#)
- (2) Energize the aircraft electrical circuits
[Ref. AMM 24-41-00-861-002-A](#) [Ref. AMM 24-41-00-861-002-A-01](#)
[Ref. AMM 24-41-00-861-002-A-02.](#)
- (3) Do the EIS start procedure (upper ECAM DU and lower ECAM DU only)

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

Ref. AMM 31-60-00-860-001-A.

- (4) In the cockpit, on the ECAM control panel:
 - (a) Push the FUEL pushbutton switch:
 - The FUEL page comes into view on the lower ECAM DU.
 - (b) If the ACT(s) is (are) installed, make sure that the ACT indication is shown on the ECAM FUEL page.
- (5) If the ACT(s) is (are) installed, defuel all the ACT(s) Ref. AMM 28-25-00-650-001-A.
- (6) If the ACT(s) is (are) installed, drain the remaining fuel from the ACT(s)
Ref. AMM 28-25-00-650-005-A.
- (7) Open refuel/defuel control panel-door 192MB .
- (8) On refuel/defuel control-panels 800VU and 801VU:
 - (a) Make sure that:
 - The MODE SELECT switch is in the OFF position
 - All the REFUEL VALVE switches are in the NORM position.
 - (b) Put the WARNING NOTICE(S) in position, to tell persons not to operate the refuel/defuel system.
- (9) Close refuel/defuel control panel-door 192MB .
- (10) Put the WARNING NOTICE(S) in position on these panels to tell persons not to operate the refuel/defuel system:
 - FUEL panel 40VU
 - ACT control-panel 28VU.

Subtask 28-28-00-865-100-A

On A/C 003-100

- B. Open, safety and tag the circuit breaker(s) that follow(s). Use the SAFETY CLIP - CIRCUIT BREAKER as necessary.

PANEL	DESIGNATION	FIN	LOCATION
121VU	FUEL/RFL/DPL/SPLY	2QU	L24
121VU	FUEL/RFL/DPL/XFR/ DEFUEL/VALVE	1QU	L23
121VU	ACT PUMP SUPPLY	25QH	Q29

Subtask 28-28-00-010-095-A

On A/C 003-100

- C. Get Access

- (1) If the ACT(s) is (are) installed, open the aft cargo-compartment door
Ref. AMM 52-30-00-860-001-A:
 - (a) Get access to the ACT air shutoff-valve and ACT test ports T1 and T2
.
Ref. Fig. (1 / 28-28-00-991-02700)
 - (b) Remove the applicable ceiling panel 151GC or 151CC or 151BC
Ref. AMM 25-55-11-000-002-A.
- (2) Open the main gear doors to get access to: Ref. AMM 32-12-00-010-001-A
 - The ACT fuel transfer-pump (1QH)
 - The ACT transfer-valve actuator (6QH)
 - The ACT cavity drain-line in the Main Landing Gear (MLG) bay.
- (3) Put an ACCESS PLATFORM 1M(3 FT) on the left side of the MLG bay.

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

- (4) If the ACT(s) is (are) installed, on the lower fuselage, get access to the ACT cavity drain-line below the ACT(s):
 - (a) Remove the applicable access panels 154AR , 197PB and 153AZ from the lower fuselage.
- (5) If the first step of this leak check can find a possible leak on the pipe shroud connectors, remove the cabin floor panels:
 - (a) In the cabin, get access to the ACT vent/transfer pipe-shroud-connectors:
 - 1 Remove the applicable cabin floor panels and cargo ceiling panels:
 - 241EF and 241JF [Ref. AMM 53-32-12-000-002-A](#)
 - 251AG and/or 251AF and/or 251FF [Ref. AMM 53-42-12-000-001-A](#).

4. Procedure

Ref. Fig. 1 / 28-28-00-991-04400

Subtask 28-28-00-860-149-A

[On A/C 003-100](#)

A. Preparation for the Test

NOTE : The steps (1) and (2) are necessary only if the ACT(s) is (are) installed.

- (1) In the cockpit, on fuel control-panel 40VU:
 - (a) Push the ACT pushbutton switch to open the ACT transfer valve (165QM).
 - (b) Make sure that the FAULT light and the FWD light in the ACT pushbutton switch are on.
- (2) In the MLG bay:
 - (a) Make sure that the ACT fuel transfer-pump (1QH) is in the off position and you hear no noise from the pump.
 - (b) Make sure that the ACT transfer-valve actuator (6QH) is shown in the open position.
- (3) On the lower fuselage, close the applicable ACT cavity drain-lines on the ACT(s) as follows:
Ref. Fig. (1 / 28-28-00-991-04200)
 - (a) Loosen the nut (1).
 - (b) Disconnect the hose (3) from the drain fitting (2).
 - (c) Install a PLUG - BLANKING (4) on the disconnected hose end.
 - (d) Put a CAP - BLANKING on the drain fitting (2).

Subtask 28-28-00-480-050-A

[On A/C 003-100](#)

B. Installation of the Test Tool on AFT ACT

Ref. Fig. (1 / 28-28-00-991-02000)

Ref. Fig. (1 / 28-28-00-991-02300)

- (1) On the right side of the MLG bay, install the **TOOL-PRESSURE TEST,ACT** (98D28108658000) on the ACT cavity drain-line as follows:
 - (a) Loosen the nut (5) and disconnect the elbow (7) from the T-connection.
 - (b) Put the CAP - BLANKING on the T-connection.
 - (c) Loosen the nut (6) of the aft ACT cavity-drain-line and remove the elbow (7).
 - (d) Connect the **TOOL-PRESSURE TEST,ACT** (98D28108658000) to the ACT cavity drain-line.

NOTE : If the **TOOL-PRESSURE TEST,ACT** (98D28108658000) is not available, you can use the AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY as an alternative and the GAGE 2 BAR (29 PSI) - PRESSURE with the applicable ADAPTER - EXTENSION, FILLING SYSTEM, DRY AIR.

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

Subtask 28-28-00-790-053-A

On A/C 003-100

WARNING: WHEN YOU USE COMPRESSED AIR:

- USE THE CORRECT PROTECTION (FACE SHIELD OR GOGGLES)
- DO NOT POINT THE AIRFLOW AT YOURSELF OR OTHER PERSONS.

LOOSE PARTICLES AND/OR HIGH PRESSURE AIR CAN CAUSE INJURY.

C. Leak Test of the ACT Vent/Transfer Pipe-Shrouds and the Drain Pipe Connectors of the ACT(s) in the Aft Cargo Compartment

ACTION	RESULT
1. In the MLG bay, at the ACT cavity-drain-line connection: - Start the Ground Pressure Generator (GPG). - Carefully pressurize the ACT cavity drain-line to 1.4 bar (20 psi).	On the GPG pressure gage: The air pressure in the ACT cavity drain-line increases to 1.4 bar (20 psi).
2. In the MLG bay, at the ACT cavity-drain-line connection: - Close the GPG shutoff valve. - Stop the GPG.	On the GPG pressure gage: Make sure that an air pressure of 1.4 bar (20 psi) is stable for approximately 15 minutes.
3. If the air pressure is not stable, continue the test as follows: - Remove the applicable cabin floor panels to get access to the ACT vent/transfer pipe-shrouds. - Do a leak check on the ACT vent/transfer pipe-shrouds. - Do a leak check on the ACT cavity drain-lines. - Use a Liquid Soap-- - (Material No. 08GAA1) or a Testing Medium-Leak Detection Bubbles - (Material No. 14CBB1) to find leak(s).	On the ACT vent/transfer pipe-shrouds and the ACT cavity drain-lines: - Make sure that there are no leaks. - If you find leak(s), repair or replace the source of the leak, and do this test again.
4. In the MLG bay, at the ACT cavity-drain-line connection: Carefully release the air pressure from the ACT cavity drain-line.	On the GPG pressure gage: The air pressure decreases to 0 bar (0 psi).

Subtask 28-28-00-080-050-B

On A/C 003-100

D. Removal of the Test Tool

Ref. Fig. (1 / 28-28-00-991-02000)

- (1) In the MLG bay, remove the **TOOL-PRESSURE TEST,ACT** (98D28108658000) from the AFT ACT cavity drain-line:
 - (a) Remove the PLUG - BLANKING from each disconnected line end.
 - (b) Clean the component interfaces and the adjacent area.
 - (c) Do an inspection of the component interfaces and the adjacent area.
- (2) Assemble the AFT ACT cavity drain-line as follows:
 - (a) Connect the elbow (7) to the AFT ACT cavity drain-line.
 - (b) TORQUE the nut (6) **to between 30 and 37 m.N (22.12 and 27.29 lbf.ft).**
 - (c) Connect the elbow (7) to the T-connection.
 - (d) TORQUE the nut (5) **to between 30 and 37 m.N (22.12 and 27.29 lbf.ft).**

Subtask 28-28-00-480-051-A

On A/C 003-100

E. Installation of the Test Tool

- (1) In the aft cargo compartment:
 - (a) Install the **ACT VALVE CONTROL BOX** (99D28108418000) on the ACT air-shutoff-valve actuator (3QH) as follows:
Ref. Fig. (1 / 28-28-00-991-04300)

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

- 1 Disconnect connector 3QH-A from the ACT air-shutoff-valve actuator (3QH).
- 2 Connect the **ACT VALVE CONTROL BOX** (99D28108418000) to the ACT air-shutoff-valve actuator (3QH).
- 3 Connect the second connector of the **ACT VALVE CONTROL BOX** (99D28108418000) to connection plug 3QH-A.
- 4 Open the ACT air shutoff-valve (168QM) with the **ACT VALVE CONTROL BOX** (99D28108418000).
- 5 Make sure that the indication for the ACT air-shutoff-valve actuator (3QH) is in the OPEN position.
- 6 Close the ACT vent valve(s) (167QM1 and 167QM2) of the ACT(s) installed on the aircraft with the **ACT VALVE CONTROL BOX** (99D28108418000):

NOTE : The ACT vent valve(s) (167QM1 and 167QM2) is (are) installed on the ACT(s). You can see the position of the valves only on the indication for the applicable ACT vent-valve actuator (4QH):

- For the ACT vent-valve actuator (4QH1) in the cabin, when you remove the applicable cabin floor panel and the cargo ceiling panel above ACT1
 - For the ACT vent-valve actuator (4QH2) in the aft cargo compartment, when you remove the right impact wall.
- (b) Install the **TOOL-PRESSURE TEST,ACT** (98D28108658000) on test ports T1 and T2.
Ref. Fig. (1 / 28-28-00-991-02100)

(2) If the ACT(s) is (are) installed, do the steps that follow:

(a) Remove the outer ACT water-drain-valve(s) from the ACT(s)

Ref. AMM 28-11-47-920-001-A:

- 1 Install an **ADAPTER, PRESSURE DRAIN - ACT** (98D28108562000) on the ACT water-drain-valve interface.

NOTE : This is to monitor the air pressure in the ACT(s).

(3) On the right side of the MLG bay, install the **TOOL-PRESSURE TEST,ACT** (98D28108658000) on the ACT cavity drain-line as follows:

Ref. Fig. (1 / 28-28-00-991-02000)

Ref. Fig. (1 / 28-28-00-991-02300)

- (a) Loosen the nut (5) and disconnect the elbow (7) from the T-connection.
- (b) Put the CAP - BLANKING on the T-connection.
- (c) Loosen the nut (6) of the aft-ACT cavity drain-line and remove the elbow (7).
- (d) Connect the **TOOL-PRESSURE TEST,ACT** (98D28108658000) to the cavity drain line.

NOTE : If the **TOOL-PRESSURE TEST,ACT** (98D28108658000) is not available, you can use the AIR SOURCE 2 BAR (30 PSI) - REGULATED, FILTERED, DRY as an alternative with the GAGE 2 BAR (29 PSI) - PRESSURE and the applicable ADAPTER - EXTENSION, FILLING SYSTEM, DRY AIR.

Subtask 28-28-00-860-277-A

On A/C 003-100

F. Put the system back to the serviceable condition.

Ref. Fig. (1 / 28-28-00-991-04200)

- (1) If the ACT(s) is (are) installed, on the lower fuselage, at the ACT cavity drain:

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

- (a) Remove the PLUG - BLANKING from each disconnected line end.
- (b) Clean the component interfaces and the adjacent area.
- (c) Do an inspection of the component interfaces and the adjacent area.
- (d) Connect the ACT cavity drain-line to the ACT.
- (e) Install the hose (3) on the drain fitting (2).
- (f) Do not twist the hose (3) when you tighten the nut (1).

Subtask 28-28-00-790-054-A

On A/C 003-100

WARNING: WHEN YOU USE COMPRESSED AIR:

- USE THE CORRECT PROTECTION (FACE SHIELD OR GOGGLES)
- DO NOT POINT THE AIRFLOW AT YOURSELF OR OTHER PERSONS.

LOOSE PARTICLES AND/OR HIGH PRESSURE AIR CAN CAUSE INJURY.

G. Leak Test of the ACT Vent/Transfer Pipe-Shrouds between ACT1 and ACT2 or the Blank Flanges of ACT1

NOTE : The steps that follow are necessary only if the ACT(s) is(are) installed.

ACTION	RESULT
1. In the aft cargo compartment, on the TOOL-PRESSURE TEST, ACT (98D28108658000): Pressurize test port T1 to 1.00 bar (15 psi).	On the pressure gage at test port T2: - The air pressure indication increases to 0.195 bar (3 psi). On the pressure gage at the ACT water-drain-valve interface: - The air pressure indication increases to 0.195 bar (3 psi). <u>NOTE</u> : It takes approximately 15 minutes to pressurize all the ACT(s). <u>NOTE</u> : The ACT pressure holding-valve opens at approximately 0.20 bar (3 psi), if the air pressure in the ACT becomes too high. <u>NOTE</u> : The burst discs of the ACT vent system breaks at approximately 1.1 +0.0 bar or -0.1 bar (16 +0 psi or -1 psi), if the ACT pressure holding-valve does not open.
2. In the MLG bay, on the pressure gage at the ACT cavity drain-line: - Start the GPG. - Carefully pressurize the ACT cavity drain-line to 0.20 bar (3 psi). - Monitor the air pressure indication.	On the pressure gage at the ACT cavity drain-line: The air pressure indication increases to 0.20 bar (3 psi) and it is stable for the test.
3. If the air pressure does not increase, continue the test as follows: A. With ACT1 and ACT2 installed: - Remove the applicable cabin floor panels to get access to the ACT vent/transfer pipe-shrouds between ACT1 and ACT2. - Do a leak check on the pipe-shroud-connections between ACT1 and ACT2. - Do a leak check on the ACT cavity-drain-line connections.	- Make sure that there are no leaks. - If you find leak(s), repair or replace the source of the leak, and do this test again.

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

ACTION	RESULT
B. With ACT1 installed: - Remove the applicable cabin floor panels to get access to the vent/transfer pipe blank-flanges installed on ACT1. - Do a leak check on the blank flanges interfaces with ACT1. - Do a leak check on the ACT cavity-drain-line connections. - Use a Liquid Soap-- - (Material No. 08GAA1) or a Testing Medium-Leak Detection Bubbles - (Material No. 14CBB1) to find leak(s).	
4. In the MLG bay, on the GPG at the ACT cavity drain-line: Release the air pressure from the ACT cavity drain-line.	On the pressure gage at the ACT cavity drain-line: The air pressure indication decreases to 0 bar (0 psi).
5. In the aft cargo compartment: - On the TOOL-PRESSURE TEST,ACT (98D28108658000), release the air pressure from test port T1 - On the ACT VALVE CONTROL BOX (99D28108418000), open the ACT vent valves.	On the pressure gage at test port T2: - The air pressure indication decreases to 0 bar (0 psi). On the pressure gage at the ACT water-drain-valve interface: - The air pressure indication decreases to 0 bar (0 psi).

Subtask 28-28-00-080-051-A

On A/C 003-100

H. Removal of the Test Tool

- (1) On the right side of the MLG bay, remove the **TOOL-PRESSURE TEST,ACT** (98D28108658000) from the aft-ACT cavity drain-line:
Ref. Fig. (1 / 28-28-00-991-02000)
 - (a) Remove the CAP - BLANKING from the T-connection.
 - (b) Clean the component interfaces and the adjacent area.
 - (c) Do an inspection of the component interfaces and the adjacent area.
 - (d) Install the elbow (7) on the aft-ACT cavity drain-line.
 - (e) TORQUE the nut (6) **to between 30 and 37 m.N (22.12 and 27.29 lbf.ft)**.
 - (f) Connect the elbow (7) to the T-connection.
 - (g) TORQUE the nut (5) **to between 30 and 37 m.N (22.12 and 27.29 lbf.ft)**.
- (2) If the ACT(s) is (are) installed, do the steps that follow:
 - (a) On the lower fuselage:
 - 1 Remove the **ADAPTER, PRESSURE DRAIN - ACT** (98D28108562000) from the ACT water-drain-valve interface.
 - (b) Install the outer ACT water-drain-valves on the ACT(s) [Ref. AMM 28-11-47-920-001-A](#).
- (3) In the aft cargo compartment:
 - (a) Remove the **TOOL-PRESSURE TEST,ACT** (98D28108658000) from test ports T1 and T2.
 - (b) Disconnect the **ACT VALVE CONTROL BOX** (99D28108418000) from connector plug 3QH-A and the ACT air-shutoff-valve actuator (3QH).
 - (c) Connect connector 3QH-A to the ACT air-shutoff-valve actuator (3QH).

Subtask 28-28-00-860-185-A

On A/C 003-100

J. Put the system back to the serviceable condition.

Ref. Fig. (1 / 28-28-00-991-04200)

NOTE : The steps (2) and (3) are necessary only if the ACT(s) is (are) installed.

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

- (1) On the lower fuselage, at the ACT cavity drain:
 - (a) Remove the PLUG - BLANKING from each disconnected line end.
 - (b) Clean the component interfaces and the adjacent area.
 - (c) Do an inspection of the component interfaces and the adjacent area.
 - (d) Connect the ACT cavity drain-line to the ACT.
 - (e) Install the hose (3) on the drain fitting (2) with the nut (1).
CAUTION: MAKE SURE THAT THE FLEXIBLE HOSES ARE NOT TWISTED OR PULLED TIGHT. IF THE HOSES ARE TWISTED OR PULLED TIGHT, THE CONNECTIONS WILL BREAK AND CAUSE A LEAK.
 - (f) TORQUE the nut (1) **to between 3.0 and 3.3 m.daN (22.12 and 24.34 lbf.ft).**
- (2) In the cockpit, on fuel control-panel 40VU:
 - (a) Push and release the ACT pushbutton switch.
 - (b) Make sure that the FAULT light and the FWD light in the ACT pushbutton switch are off.
- (3) In the MLG bay:
 - (a) Make sure that the ACT transfer-valve actuator (6QH) is shown in the closed position.

5. Close-up

Subtask 28-28-00-410-075-A

On A/C 003-100

A. Close Access

- (1) In the aft cargo-compartment, install the applicable ceiling panels
[Ref. AMM 25-55-11-400-002-A.](#)
- (2) Remove the access platform(s).
- (3) Close the aft cargo-compartment door [Ref. AMM 52-30-00-860-002-A.](#)
- (4) Close the MLG doors after the access [Ref. AMM 32-12-00-410-001-A.](#)
- (5) If the ACT(s) is (are) installed, on the lower fuselage:
 - (a) Install the applicable access panels of the ACT cavity-drain.
- (6) In the cabin:
 - (a) Install the applicable cargo ceiling panels and the cabin floor panels
[Ref. AMM 53-32-12-400-002-A](#) [Ref. AMM 53-42-12-400-001-A.](#)

Subtask 28-28-00-865-122-A

On A/C 003-100

- B. Remove the SAFETY CLIP - CIRCUIT BREAKER and the tag(s) and close this (these) circuit breaker(s):

NOTE : This procedure is applicable only if the ACT(s) is (are) installed.

PANEL	DESIGNATION	FIN	LOCATION
121VU	FUEL/RFL/DPL/SPLY	2QU	L24
121VU	FUEL/RFL/DPL/XFR/ DEFUEL/VALVE	1QU	L23
121VU	ACT PUMP SUPPLY	25QH	Q29

Subtask 28-28-00-860-150-A


On A/C 003-100

- C. Put the aircraft back to its initial configuration.
- (1) Make sure that the work area is clean and clear of tools and other items.


TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

- (2) Remove the WARNING NOTICE(S).
- (3) Remove the ground support and maintenance equipment, the special and standard tools and all other items.
- (4) De-energize the aircraft electrical circuits
[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#)
[Ref. AMM 24-41-00-862-002-A-02](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

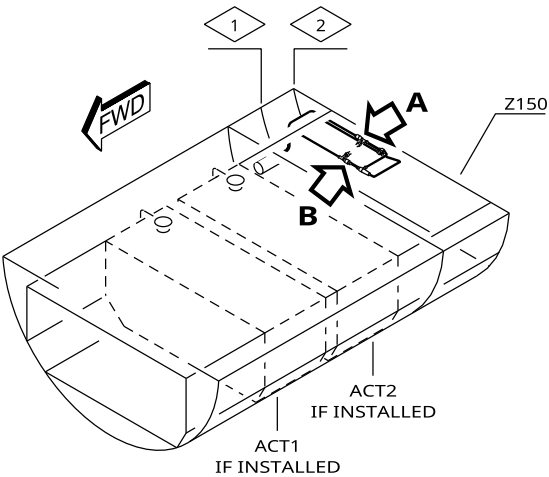


	FWD		
FRAME	1	2	APPLICABLE ACCESS PANEL FOR T1 AND T2
A319	57	58	151GC
A320	53	54	151CC
A321	51	52	151BC

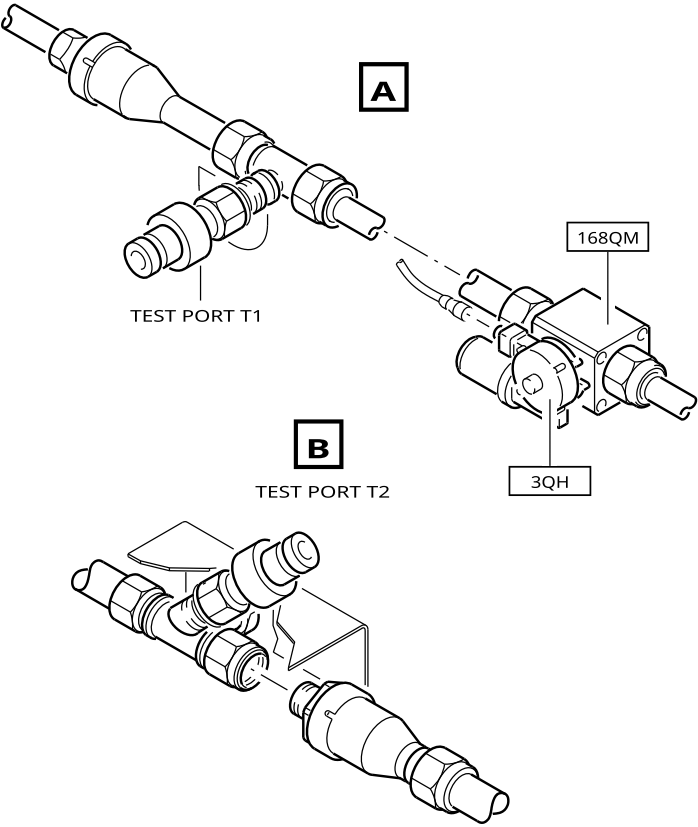

N_MM_282800_5_LTM0_01_00

Access to Test Points T1 and T2
Figure 1 / Graphic 28-28-00 -991-02700


TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

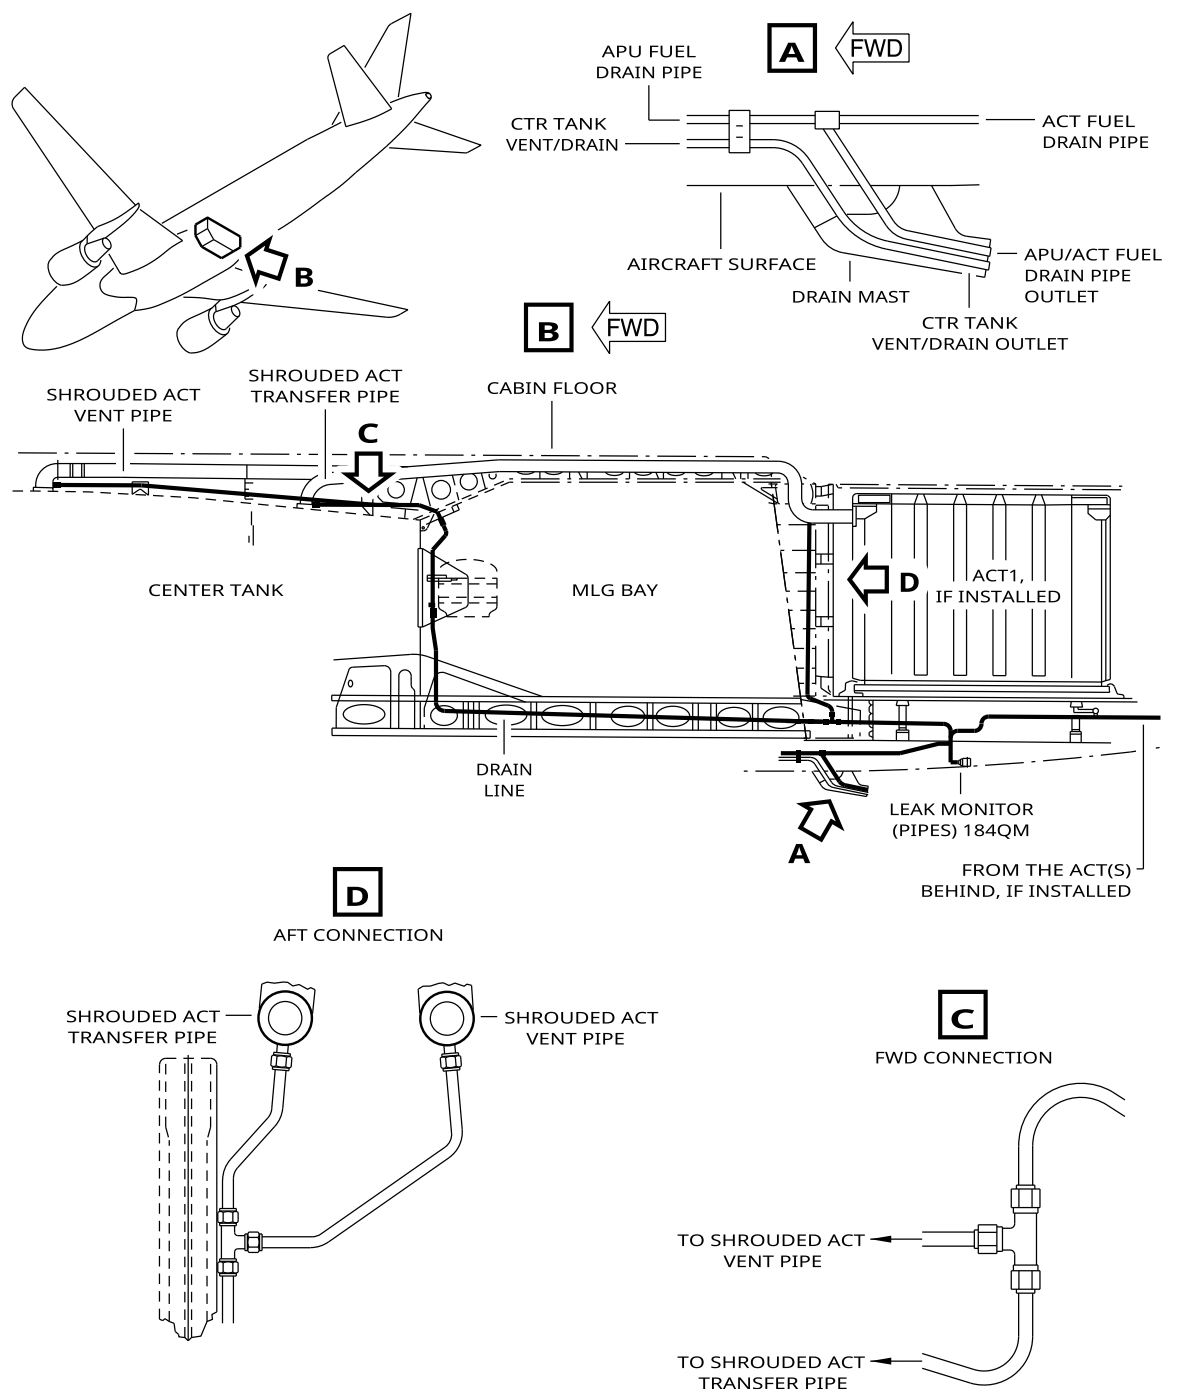

N_MM_282800_5_PAM0_01_00

ACT Drain Lines
Figure 1 / Graphic 28-28-00 -991-04400

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

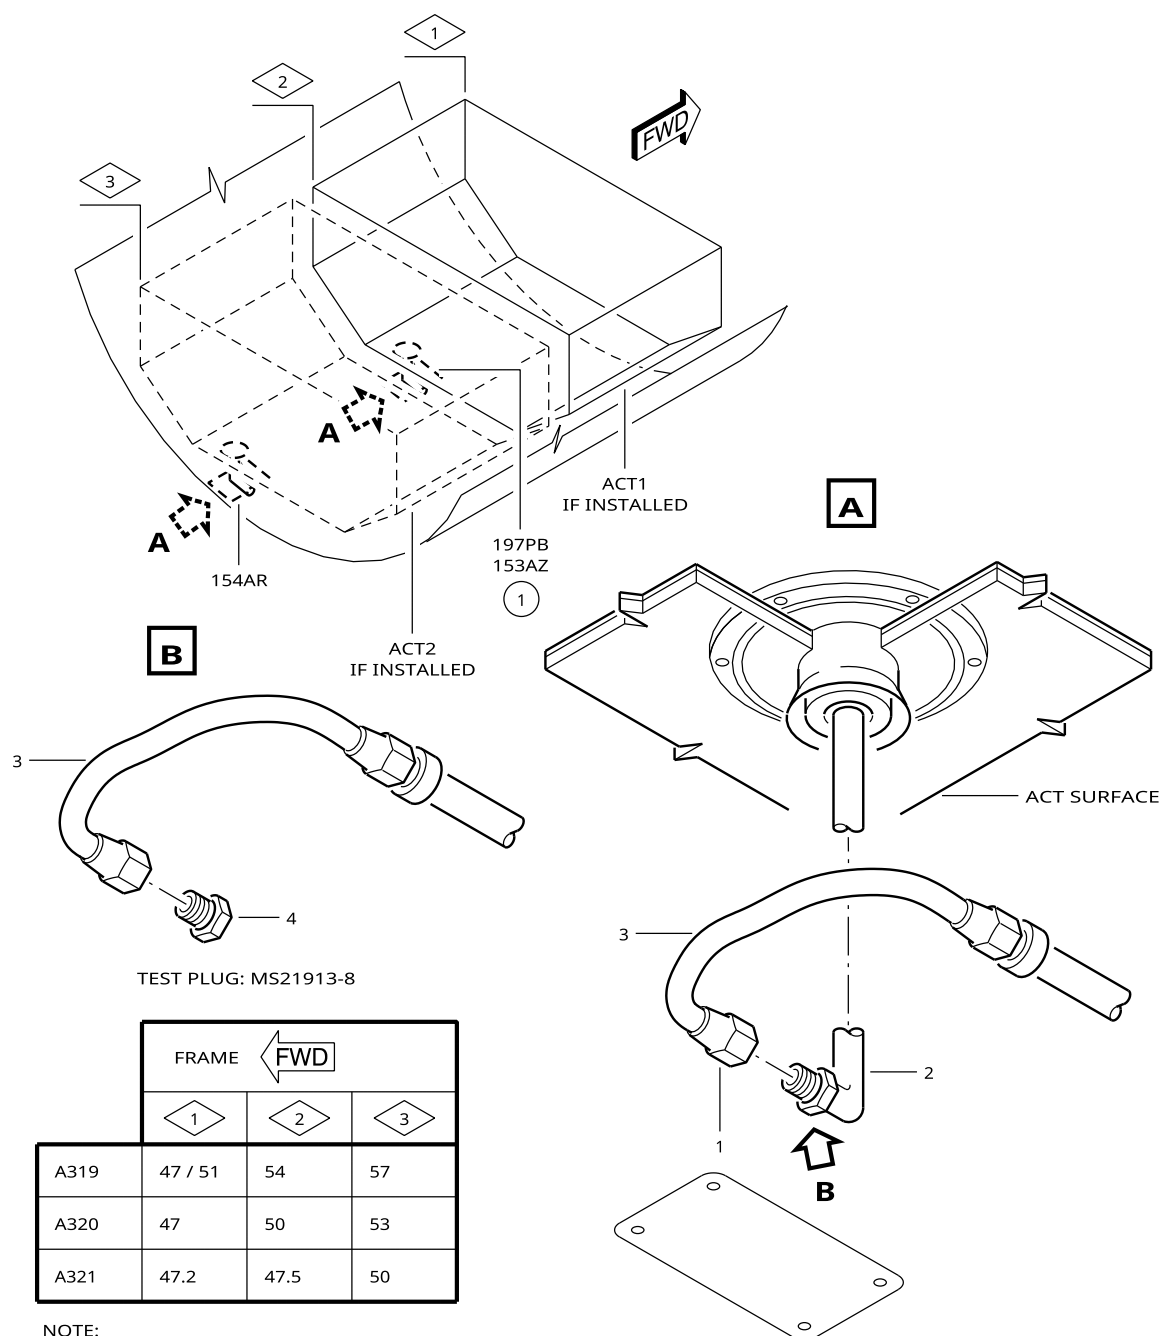


NOTE:

- ① REMOVE ACCESS PANEL 197PB TO GAIN ACCESS TO ACCESS PANEL 153AZ

N_MM_282800_5_ACN0_01_00

ACT Cavity Drain Connection
Figure 1 / Graphic 28-28-00 -991-04200

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

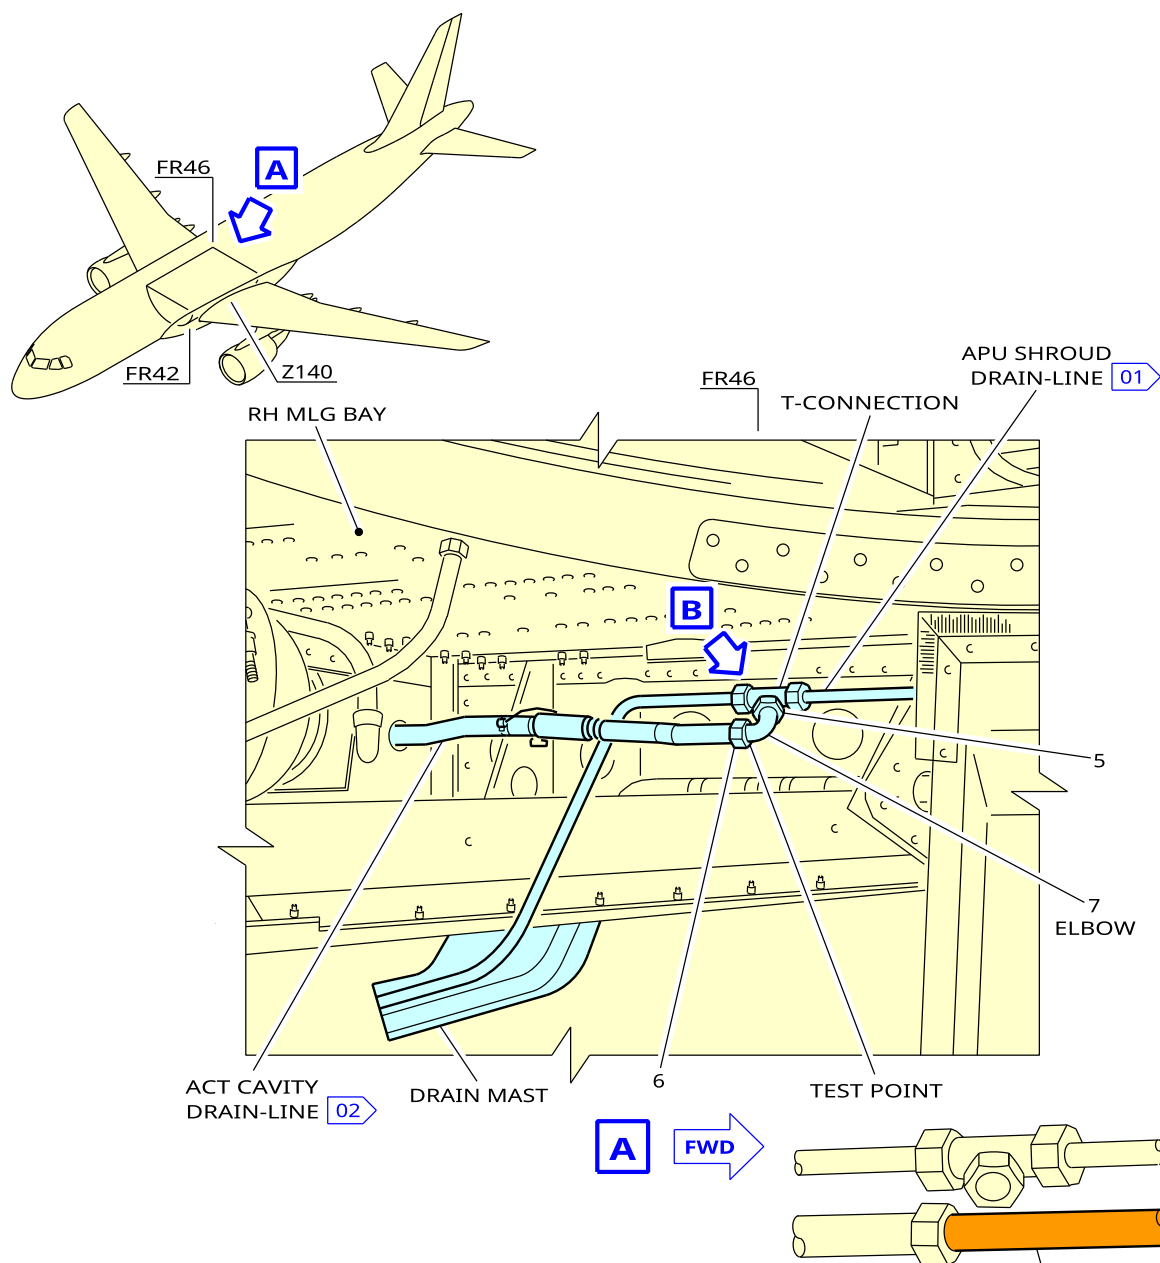

NOTE:

- 01** APU SHROUD DRAIN-LINE CONNECTS THE LINES THAT FOLLOW:
APU DRAIN LINE
FWD ACT VENT/TRANSFER-PIPE-SHROUD DRAIN-LINES
FWD ACT CAVITY DRAIN-LINE
- 02** ACT CAVITY DRAIN-LINE CONNECTS THE LINES THAT FOLLOW:
AFT ACT(S) CAVITY DRAIN-LINE(S)
AFT ACT(S) VENT/TRANSFER-PIPE-SHROUD DRAIN-LINE(S).

TEST TOOL 3
TEST TOOL CONNECTION POINT


N_MM_282800_5_LCN0_01_02

Access to the AFT ACT Cavity Drain-Line
Figure 1 / Graphic 28-28-00 -991-02000


TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

AFT AREA OF
RH-MAIN LANDING GEAR BAY

SOLUTION 1
SELF-MADE TOOL

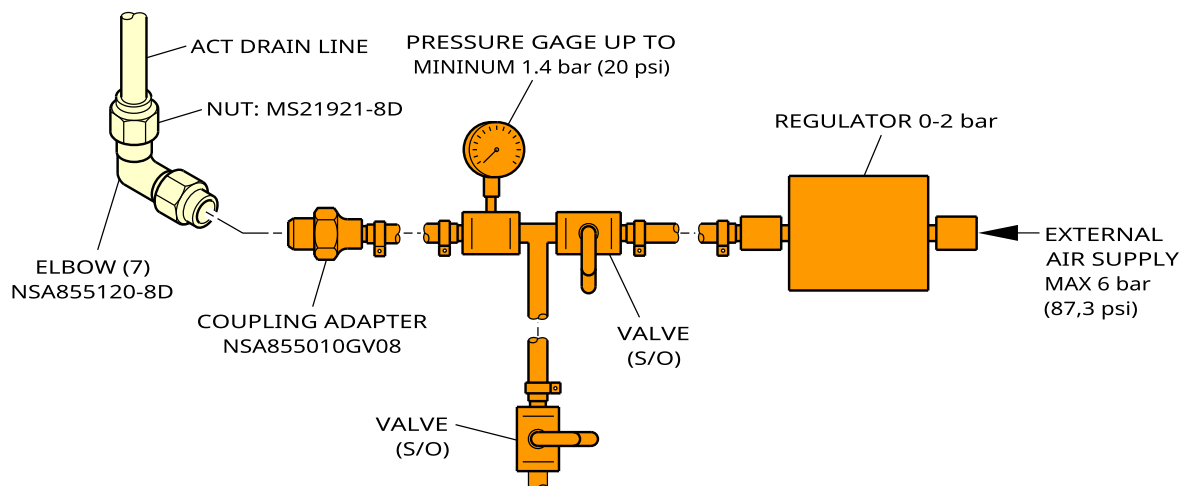


SOLUTION 2
AIRBUS TOOL

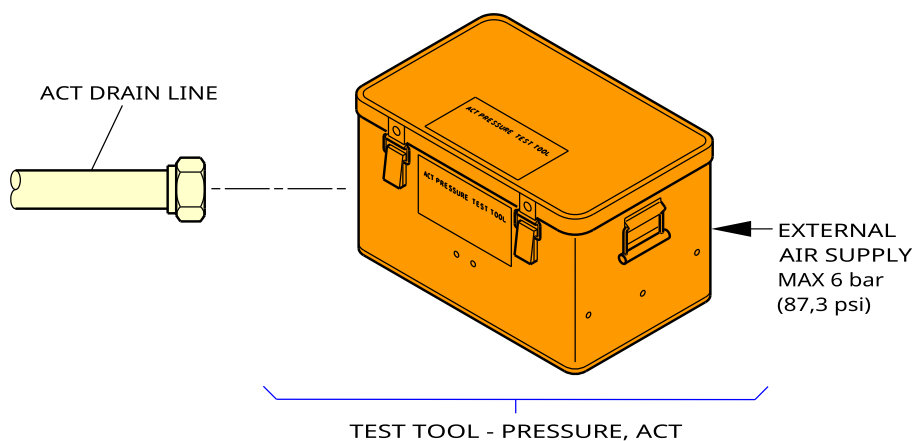


N_MM_282800_5_LJN0_01_03

Test Arrangement ACT
Figure 1 / Graphic 28-28-00 -991-02300

TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

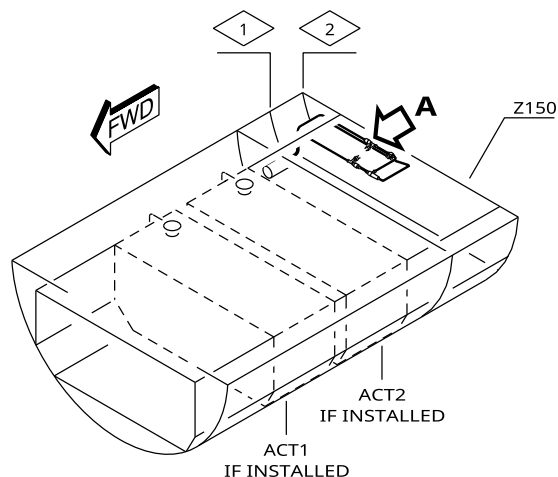

	FWD		
FRAME	1	2	APPLICABLE ACCESS PANEL FOR T1 AND T2
A319	57	58	151GC
A320	53	54	151CC
A321	51	52	151BC

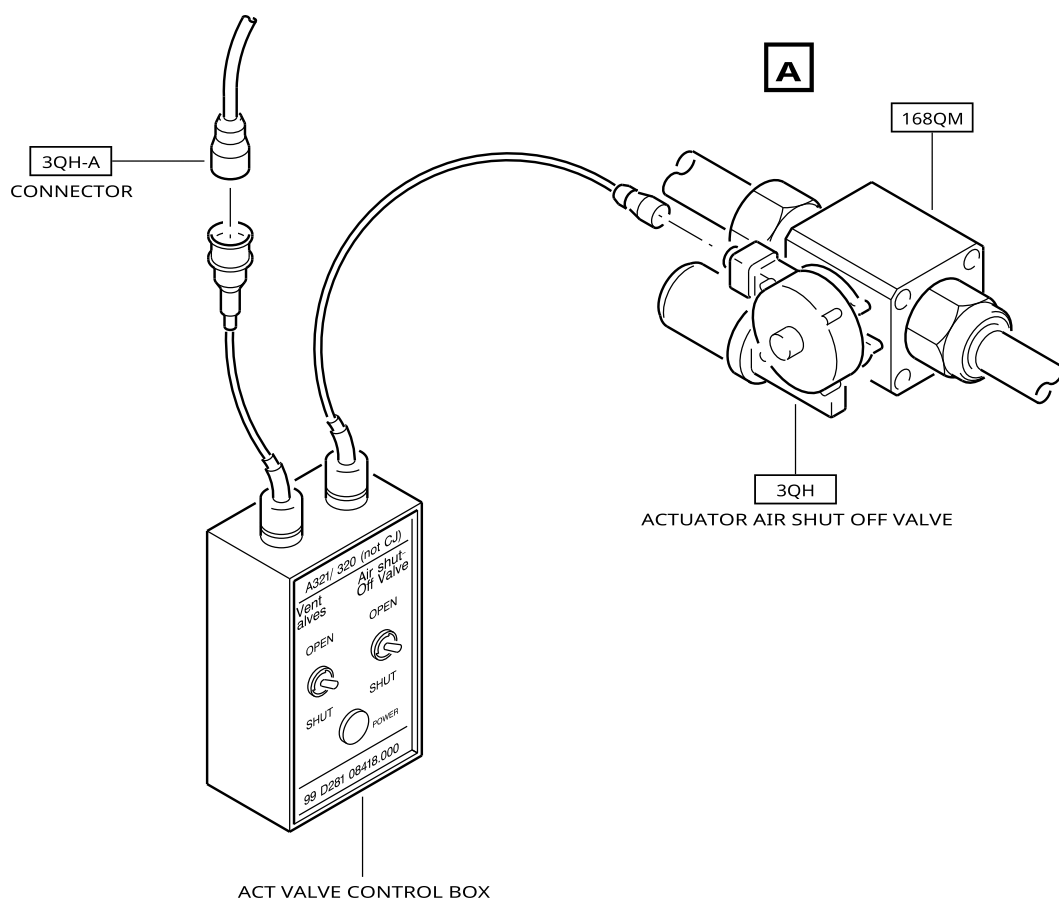


N_MM_282800_5_NAM0_01_00

ACT Valve Control Box
Figure 1 / Graphic 28-28-00 -991-04300


TF-N
AIRCRAFT MAINTENANCE MANUAL
ADDITIONAL CENTER TANK TRANSFER SYSTEM - ADJUSTMENT/TEST

AFT CARGO
T1 AND T2 TEST TOOL

SOLUTION 1
SELF-MADE TOOL

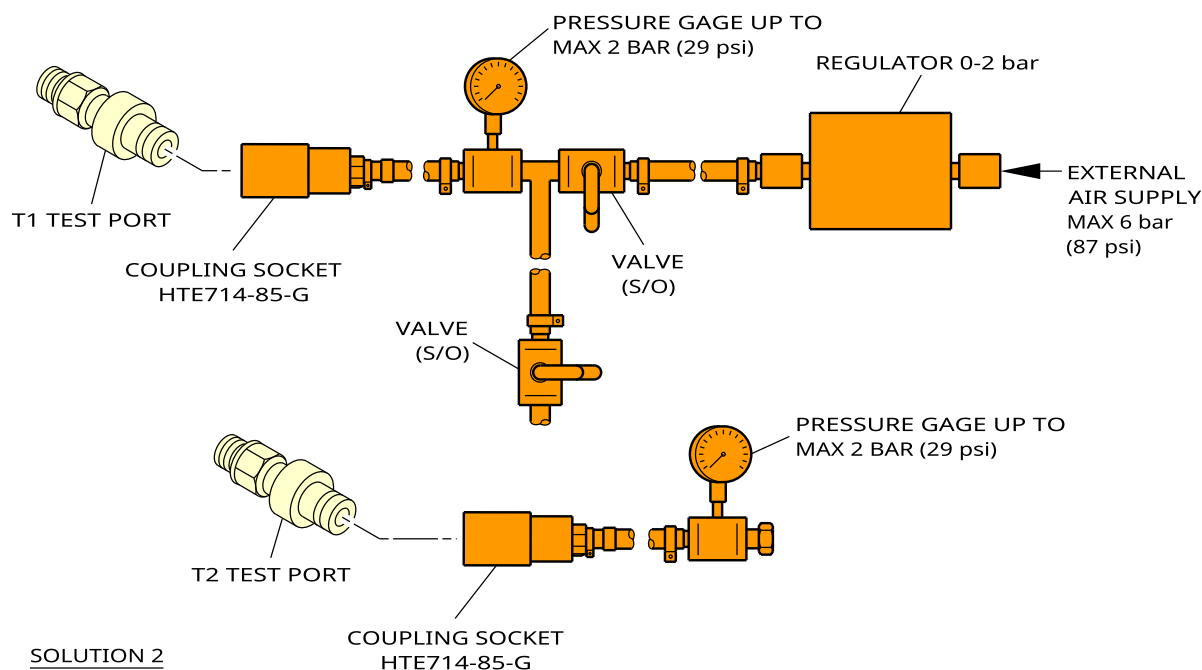

SOLUTION 2
AIRBUS TOOL

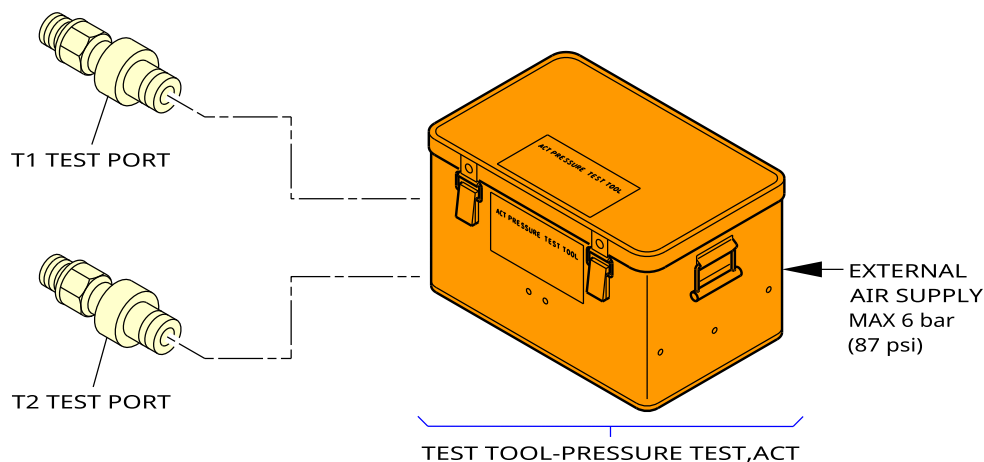

N_MM_282800_5_LEM0_01_05

Test Tool Arrangement ACT
Figure 1 / Graphic 28-28-00 -991-02100

 MET.32712960		Task Card Title: LG FREE FALL EXTN MECH&CABLE INSP				
Task Card NO: 323300-01-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD		
A/C Type: 320		Block Taskcard		Main Skill: INSP,RII,CAB,ACFT_TECH,AP		PROD Final Acceptance:
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05,09		
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 44
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐						
Type Code: DET		Special Code: AF		MSG Code: 8, MRB		Request: CTION,INSPECTION,IN SPECTION,JOB-CLOSE UP,JOB-CLOSEUP
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.						
Zones: 100,200,822,824,825						
DOCUMENT REFERENCES:						
Doc Typ		Reference				
AMM		32-33-00-200-002-A				
AMM		323300-200-002				
ACCESS PANELS:						
241EF, 241FF, 241JF, 241KF, 241LF, 241MF, 242FF, 242GF, 242KF, 242LF, 242MF						
MATERIAL REQUIREMENTS:						
Part Number		Description				Qty.
FR6/55		TOP COAT POLYURETHANE				1.0
08BAA9		NON AQUEOUS CLEANER - GENERAL				1.0
14SBA1		TEXTILE - LINT FREE COTTON AMS3819				4.0
TOOLING REQUIREMENTS:						
Part Number		Description				Qty.
98A27003001000		RIGGING PIN { 7318 29 00 }				1.0
98A27801001000		PIN-RIGGING,SLAT CONTROL (A-300)				1.0
98A27901002000		PIN,RIG RUD.CONT.CABLE TENSION REGUL				1.0
98DNSA20208040		RIGGING PIN (7318 29 00)				1.0
98A32301000000		PIN,RIG NG EMERGY.LOWER CONT.FRAME 1				3.0
98DNSA20208060		RIGGING PIN (7318 29 00)				9.0
TASK PREPARATION						
Job Description						
A. PERFORM JOB SET UP AS PER AMM TASK 32-33-00-200-002-A.						
STEP COMPLETION SIGN OFF:						
Qualification / Skill		Number of employees	Duration	Number./Signature	Date	
					Day	Month
					Year	

 MET.32712960		Task Card Title: LG FREE FALL EXTN MECH&CABLE INSP					
Task Card NO: 323300-01-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
Mechanic/s	CAB/ACFT_TECH/AP			HRS			
Insp.				HRS			
PROCEDURE							
Job Description							
A. PERFORM DETAILED VISUAL INSPECTION OF THE FREE FALL MECHANISM CABLES AS PER SUBTASK 32-33-00-210-059-C (ON A/C FSN 003-100, 201-250) - Do a check of the cables from FR7 thru FR12 Ref. AMM TASK 20-24-12-200-001. - Make sure that: - They are attached and connected correctly with the end fittings not pulled out. - They do not have kinks, broken wires or wear. - The two cable connectors at FR9 and FR10 are safetied and the turnbuckles are tight. - Do a check of the cables from FR12 thru FR16 Ref. AMM TASK 20-24-12-200-001. - Make sure that the cables have no kinks, broken wires or wear. - Make sure that the cable guides at FR14 are not damaged and do not have wear. - Do a check of the cables from FR14 thru FR24A (cabin floor panels) Ref. AMM TASK 20-24-12-200-001. - Make sure that they do not have kinks, broken wires or wear. - Do a check of the cables from FR24A thru FR34 (forward cargo compartment) Ref. AMM TASK 20-24-12-200-001 to make sure that: - The cables have no kinks, broken wires or wear - The cable guides at FR23, FR28 and FR33 are not damaged and do not have wear. - Do a check of the cables from FR34 thru FR46 (MLG bay) Ref. AMM TASK 20-24-12-200-001 - Make sure that the cable connectors between FR35 and FR37 are safetied and the turnbuckles are tight. - The cable routing is straight between FR35.5 and FR36 and the two cables are parallel. - If the cable routing is not straight between FR35 and FR37, do the steps that follow: - Adjust the turnbuckle between FR35 and FR37 to decrease the tension in the cable. - Align the cables between FR35 and FR37 until they are straight and parallel. - Adjust the cable tension Ref. AMM TASK 32-33-00-820-003 and record values. TASK 32-33-00-820-003-A While performing the Subtask please ensure to record all below values: # For Adjustment of the Cables (1) and (2)							



MET.32712960

Task Card Title:

LG FREE FALL EXTN MECH&CABLE INSP

Task Card NO:

323300-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

- Confirm that the CABLE TENSIO METER is attached at a minimum of 80 mm (3.1496 in.) away from the pulleys or the turnbuckles.

Record the distance value: _____

- Record the ambient temperature value _____,
- Record the temperature of the underfloor area _____
- Make a plot using MLG Table tension Graph (attach the plot with this Taskcard).
- Record the calculated correct Tension Value using this plot, _____
- Record 5 tension values indications, as measured with the CABLE TENSIO METER.

1. _____

2. _____

3. _____

4. _____

5. _____

- Confirm the correct value used _____

For Adjustment of the cables (3) and (4)

- Confirm that the CABLE TENSIO METER is attached a minimum of 80 mm (3.1496 in.) away from the pulleys or the turnbuckles.

Record the distance value: _____

- Record the ambient temperature value _____,
- Record the temperature of the underfloor area _____
- Make a plot using MLG Table tension Graph (attach the plot with this Taskcard).
- Record the calculated correct Tension Value using this plot, _____
- Record 5 tension values indications, as measured with the CABLE TENSIO METER.

1. _____

2. _____

3. _____

4. _____

5. _____



MET.32712960

Task Card Title:

LG FREE FALL EXTN MECH&CABLE INSP

Task Card NO:

323300-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

- Confirm the correct value used _____.

For Adjustment of the Cables (5) and (6)

- Confirm that the CABLE TENSIO METER is attached a minimum of 80 mm (3.1496 in.) away from the pulleys or the turnbuckles.

Record the distance value: _____

- Record the ambient temperature value _____,
- Make a plot using MLG Table tension Graph (attach the plot with this Taskcard).

NOTE: -for weight on Wheels MLG-Bay Cable-Tension Graph - Weight on Wheels
 -for weight on Jacks MLG-Bay Cable-Tension Graph - Weight on Jacks

- Confirm the correct value used _____.

#For Adjustment of the cables (7) and (8)

- Confirm that the CABLE TENSIO METER is attached a minimum of 80 mm (3.1496 in.) away from the pulleys or the turnbuckles.

Record the distance value: _____

- Record the ambient temperature value _____,
- Make a plot using MLG Table tension Graph (attach the plot with this Taskcard).

NOTE: -for weight on Wheels MLG-Bay Cable-Tension Graph - Weight on Wheels
 -for weight on Jacks MLG-Bay Cable-Tension Graph - Weight on Jacks

- Confirm the correct value used _____.

For Adjustment of the Cables (9) and (10)

- Confirm that the CABLE TENSIO METER is attached a minimum of 80 mm (3.1496 in.) away from the pulleys or the turnbuckles.

Record the distance value: _____

- Record the ambient temperature value _____,
- Make a plot using MLG Table tension Graph (attach the plot with this Taskcard).

NOTE: -for weight on Wheels MLG-Bay Cable-Tension Graph - Weight on Wheels
 -for weight on Jacks MLG-Bay Cable-Tension Graph - Weight on Jacks

- Confirm the correct value used _____.



Task Card Title:

LG FREE FALL EXTN MECH&CABLE INSP

Task Card NO:

323300-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

For Adjustment of the cables (11) and (12)

- Confirm that the CABLE TENSIO METER is attached a minimum of 80 mm (3.1496 in.) away from the pulleys or the turnbuckles.

Record the distance value: _____

- Record the ambient temperature value _____,
- Make a plot using MLG Table tension Graph (attach the plot with this Taskcard).

NOTE: -for weight on Wheels MLG-Bay Cable-Tension Graph - Weight on Wheels-for weight on Jacks MLG-Bay Cable-Tension Graph - Weight on Jacks

- Confirm the correct value used _____.

- Make sure that the cable pressure seals between FR42 and FR43 are attached correctly and are not worn.
- Make sure that the cable guides at FR34, FR36 and FR42 are not damaged and do not have wear.
- Make sure that the cable connectors between FR42 and FR43 are safetied and the turnbuckles are tight.
- Make sure that the cables have no kinks, broken wires or signs of wear.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/RII			HRS				

TASK INSTRUCTIONS**Job Description**

B. PERFORM AIRCRAFT MAINTENANCE CONFIGURATION AS PER AMM TASK 32-33-00-200-002-A
SUBTASK 32-33-00-860-077-A.

STEP COMPLETION SIGN OFF:



MET.32712960

Task Card Title:

LG FREE FALL EXTN MECH&CABLE INSP

Task Card NO:

323300-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.				HRS				

TASK INSTRUCTIONS**Job Description**

C. PERFORM DETAILED VISUAL INSPECTION OF THE FREE FALL MECHANISM CABLES AFTER THE FREE-FALL MECHANISM HAS BEEN MOVED AS PER AMM TASK 32-33-00-200-002-A.
SUBTASK 32-33-00-210-060-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/RII			HRS				

TASK INSTRUCTIONS**Job Description**

D. PERFORM AIRCRAFT MAINTENANCE CONFIGURATION AS PER AMM TASK 32-33-00-200-002-A
SUBTASK 32-33-00-860-078-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.				HRS				

TASK INSTRUCTIONS**Job Description**

E. INSTALL THE RIGGING PINS AS PER AMM TASK 32-33-00-200-002-A SUBTASK 32-33-00-480-052-A.

NOTE

It is important to install the rigging pins exactly as given in the procedure. This will make sure

 MET.32712960	Task Card Title: LG FREE FALL EXTN MECH&CABLE INSP						
Task Card NO: 323300-01-1	Work Package: ASD/H-26 C2+6Y CHK	A/C Registration: HZ-ASD					
that all the datum positions are correct							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS			
Insp.	INSP/RII			HRS			
TASK INSTRUCTIONS							
Job Description							
F. PERFORM DETAILED VISUAL INSPECTION FROM FR7 THRU FR12 AS PER AMM TASK 32-33-00-200-002-A SUBTASK 32-33-00-210-056-A.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s				HRS			
Insp.	INSP/RII			HRS			
TASK INSTRUCTIONS							
Job Description							
G. PERFORM DETAILED VISUAL INSPECTION FROM FR12 THRU FR16 AS PER AMM TASK 32-33-00-200-002-A SUBTASK 32-33-00-210-056-A.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s				HRS			
Insp.	INSP/RII			HRS			
TASK INSTRUCTIONS							
Job Description							



Task Card Title:

LG FREE FALL EXTN MECH&CABLE INSP

Task Card NO:

323300-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

H. INSTALL THE RIGGING PINS FROM FR13 THRU FR19 (NLG BAY) AS PER AMM
TASK 32-33-00-200-002-A SUBTASK 32-33-00-480-053-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.	INSP/RII			HRS				

TASK INSTRUCTIONS**Job Description**

I. PERFORM DETAILED VISUAL INSPECTION FROM FR13 THRU FR19 AS PER AMM TASK
32-33-00-200-002-A SUBTASK 32-33-00-210-058-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/RII			HRS				

TASK INSTRUCTIONS**Job Description**

J. INSTALL THE RIGGING PINS FROM FR34 THRU FR46 (MLG BAY) AS PER AMM TASK
32-33-00-200-002-A SUBTASK 32-33-00-480-054-B.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.	INSP/RII			HRS				

TASK INSTRUCTIONS**Job Description**



Task Card Title:

LG FREE FALL EXTN MECH&CABLE INSP

Task Card NO:

323300-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

K. PERFORM DETAILED VISUAL INSPECTION FROM FR34 THRU FR46 AS PER AMM TASK
32-33-00-200-002-A SUBTASK 32-33-00-210-062-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/RII			HRS				

TASK**Job Description**

L. Removal of the Rigging Pins as per AMM 32-33-00-200-002-A SUBTASK 32-33-00-080-051-B.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.				HRS				

TASK CLOSE UP**Job Description**

A. REMOVE THE RIGGING PINS AS PER AMM AMM TASK 32-33-00-200-002-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	ACFT_TECH/AP			HRS				
Insp.	INSP/RII			HRS				

TASK CLOSE UP**Job Description**

B. RETURN THE AIRCRAFT BACK TO NORMAL CONFIGURATION AS PER AMM TASK 32-33-00-200-002-A.



MET.32712960

Task Card Title:

LG FREE FALL EXTN MECH&CABLE INSP

Task Card NO:

323300-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH/AP			HRS			
Insp.	INSP/RII			HRS			

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 2 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 3 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 4 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 5 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

**Task Completion Close Up And
System Update****Station****Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

TASK 32-33-00-200-002 -A

On A/C 001-999

Detailed Inspection of Free-Fall Mechanism Including Cables

WARNING: MAKE SURE THAT THE SAFETY DEVICES AND THE WARNING NOTICES ARE IN POSITION BEFORE YOU START A TASK ON OR NEAR:

- THE FLIGHT CONTROLS
- THE FLIGHT CONTROL SURFACES
- THE LANDING GEAR AND RELATED DOORS
- THE CARGO DOORS
- OTHER COMPONENTS THAT MOVE.

MOVEMENT OF COMPONENTS CAN KILL OR CAUSE INJURY TO PERSONS AND/OR DAMAGE TO EQUIPMENT.

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 323300-01

DETAILED INSPECTION OF FREE-FALL MECHANISM INCLUDING CABLES

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	AR	SAFETY BARRIER(S)
No specific	1	VERNIER CALIPER
No specific	AR	WARNING NOTICE(S)
No specific	2	WEDGE - NON METALLIC
98A27003001000	1	RIGGING PIN
98A27801001000	1	RIGGING PIN
98A27901002000	1	PIN-RIGGING, RUDDER CONTROL
98A32301000000	3	RIGGING PIN
98DNSA20208040	1	RIGGING PIN
98DNSA20208060	9	RIGGING PIN

B. Consumable Materials

REFERENCE	DESIGNATION
04JMD9	Top Coat Polyurethane-- Decorative Furnishing
08BAA9	Non Aqueous Cleaner-General - -
14SBA1	Textile-Lint free Cotton -

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
100	LOWER HALF FUSELAGE INCLUDING RADOME
200	UPPER HALF FUSELAGE
822 , 824 , 825	

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 20-24-12-200-001-A	Check of the Control Cables
Ref. AMM 25-54-12-000-001-A	Removal of the Partition Panel From the Forward Cargo Compartment at Frame 34 or Frame 35.1 or Frame 35.5
Ref. AMM 25-54-12-000-002-A	Removal of the Ceiling Panel From the Forward Cargo Compartment
Ref. AMM 25-54-12-400-001-A	Installation of the Partition Panel in the Forward Cargo Compartment at Frame 34 or Frame 35.1 or Frame 35.5
Ref. AMM 25-54-12-400-002-A	Installation of the Ceiling Panel in the Forward Cargo Compartment

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

REFERENCE	DESIGNATION
Ref. AMM 32-00-00-481-001-A	Installation of the Safety Devices on the Landing Gears
Ref. AMM 32-00-00-481-002-A	Installation of the Safety Devices on the Landing Gear Doors
Ref. AMM 32-12-00-010-001-A	Open the Main Gear Doors for Access
Ref. AMM 32-12-00-410-001-A	Close the Main Gear Doors after Access
Ref. AMM 32-22-00-010-001-A	Nose Gear Doors - Ground Doors Opening
Ref. AMM 32-22-00-410-001-A	Nose Gear Doors - Ground Doors Closing
Ref. AMM 32-33-00-820-003-A	Adjustment of the MLG Free-Fall Extension Cable System
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 52-41-00-010-002-A	Open the Avionics Compartment Doors for Access
Ref. AMM 52-41-00-410-002-A	Close the Avionics Compartment Doors after Access
Ref. AMM 53-12-11-000-001-A	Removal of the Cockpit Floor Panels from FR1 thru FR12
Ref. AMM 53-12-11-400-001-A	Installation of the Cockpit Floor Panels from FR1 thru FR12
Ref. AMM 53-12-12-000-001-A	Removal of the Cabin Floor Panels from FR12 thru FR24
Ref. AMM 53-12-12-400-001-A	Installation of the Cabin Floor Panels from FR12 thru FR24
Ref. AMM 53-22-12-000-001-A	Removal of the Cabin Floor Panels
Ref. AMM 53-22-12-400-001-A	Installation of the Cabin Floor Panels
Ref. AMM 53-32-12-000-002-A	Removal of the Cabin Floor Panels
Ref. AMM 53-32-12-400-002-A	Installation of the Cabin Floor Panels
Ref. AMM 06-41-53-00	FUSELAGE-DESCRIPTION AND OPERATION
Ref. Fig. (1 / 32-33-00-991-02500)	
Ref. Fig. (1 / 32-33-00-991-00800)	
On A/C 003-100; 201-250	
Ref. Fig. (1 / 32-33-00-991-00700)	

3. Job Set-up

[On A/C 001-999](#)

Ref. Fig. 1 / 32-33-00-991-02500

Subtask 32-33-00-941-064-A

[On A/C 001-999](#)

A. Safety Precautions

- (1) As necessary, use the applicable SAFETY BARRIER(S), specified by the operator's instructions and your local regulations.
- (2) Make sure that the ground safety locks are on the landing gear
[Ref. AMM 32-00-00-481-001-A.](#)
- (3) On panel 400VU:
 - Make sure that the landing-gear control-lever 6GA is in the DOWN position
 - Put the WARNING NOTICE(S) in position to tell persons not to operate the landing gear.
- (4) On panel 11VU, make sure that the GRAVITY GEAR EXTN handle is folded into the center console.
- (5) Install a WEDGE - NON METALLIC on each side of the GRAVITY GEAR EXTN handle to lock the handle in position.
- (6) Make sure that the WARNING NOTICE(S) is (are) in position to tell persons not to operate the GRAVITY GEAR EXTN handle.

Subtask 32-33-00-010-051-A

[On A/C 001-999](#)

B. Get Access

- (1) Open the NLG doors [Ref. AMM 32-22-00-010-001-A.](#)

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

- (2) Make sure that the safety devices are installed on the NLG doors
[Ref. AMM 32-00-00-481-002-A.](#)
- (3) Open the MLG doors [Ref. AMM 32-12-00-010-001-A.](#)
- (4) Make sure that the safety devices are installed on the MLG doors
[Ref. AMM 32-00-00-481-002-A.](#)
- (5) Open lateral avionics-compartment door 822 and rear avionics-compartment door 824
[Ref. AMM 52-41-00-010-002-A.](#)
- (6) Open forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-001-A.](#)
- (7) Remove the access panels that follow:
 - (a) In zones 131 and 132:
 - 1 Remove the applicable ceiling panels in the forward cargo compartment between frame 24 and frame 34 or frame 35.1 or frame 35.5 [Ref. AMM 25-54-12-000-002-A:](#)
 - a For the locations of the ceiling panels, refer to the System Description
[Ref. AMM 06-41-53-00.](#)
 - 2 Remove the applicable forward cargo-compartment partition-panels at frame 34 or frame 35.1 or frame 35.5 [Ref. AMM 25-54-12-000-001-A:](#)
 - a For the locations of the partition panels, refer to the System Description
[Ref. AMM 06-41-53-00.](#)
 - (b) In zones 211 and 212:
 - 1 Remove the applicable cockpit floor panels between frame 7 and frame 12
[Ref. AMM 53-12-11-000-001-A:](#)
 - a For the locations of the cockpit floor panels, refer to the System Description
[Ref. AMM 06-41-53-00.](#)
 - (c) In zones 221 and 222:
 - 1 Remove the applicable cabin floor panels between frame 12 and frame 24
[Ref. AMM 53-12-12-000-001-A:](#)
 - a For the locations of the cabin floor panels, refer to the System Description
[Ref. AMM 06-41-53-00.](#)
 - (d) In zone 232:
 - 1 Remove the applicable cabin floor panels between frame 24 and frame 25
[Ref. AMM 53-22-12-000-001-A:](#)
 - a For the locations of the cabin floor panels, refer to the System Description
[Ref. AMM 06-41-53-00.](#)
 - (e) In zones 241 and 242:
 - 1 Remove the applicable cabin floor panels between frame 34 or frame 35.1 or frame 35.5 and frame 47 [Ref. AMM 53-32-12-000-002-A:](#)
 - a For the locations of the cabin floor panels, refer to the System Description
[Ref. AMM 06-41-53-00.](#)
- (8) Remove the lower cover assembly (5) as follows:
[Ref. Fig. \(1 / 32-33-00-991-02500\)](#)
 - (a) Remove the bolts (7) and the washers (6) from the casing (1).
 - (b) Remove the screws (10) and the washers (9) from the ventilation grill (8).
 - (c) Remove the screws (3) and the washers (4) from the ventilation gate (2).
 - (d) Remove the lower cover assembly (5).

4. Procedure

[Ref. Fig. 1 / 32-33-00-991-00800](#)

[On A/C 003-100; 201-250](#)

[Ref. Fig. 1 / 32-33-00-991-00700](#)

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

Subtask 32-33-00-210-059-C

On A/C 003-100; 201-250

A. Detailed Inspection of the Free-Fall Mechanism Cables

- (1) Do a check of the cables from FR7 thru FR12 [Ref. AMM 20-24-12-200-001-A](#).
 - (a) Make sure that:
 - 1 They are attached and connected correctly with the end fittings not pulled out.
 - 2 They do not have kinks, broken wires or wear.
 - 3 The two cable connectors at FR9 and FR10 are safetied and the turnbuckles are tight.
- (2) Do a check of the cables from FR12 thru FR16 [Ref. AMM 20-24-12-200-001-A](#).
 - (a) Make sure that:
 - 1 They do not have kinks, broken wires or wear.
 - 2 The cable guides at FR14 are not damaged and do not have wear.
- (3) Do a check of the cables from FR14 thru FR24A (cabin floor panels) [Ref. AMM 20-24-12-200-001-A](#).
 - (a) Make sure that they do not have kinks, broken wires or wear.
- (4) Do a check of the cables from FR24A thru FR34 (forward cargo compartment) [Ref. AMM 20-24-12-200-001-A](#).
 - (a) Make sure that the cables have no kinks, broken wires or wear.
 - (b) Make sure that the cable guides at FR23, FR28 and FR33 are not damaged and do not have wear.
- (5) Do a check of the cables from FR34 thru FR46 (MLG bay) [Ref. AMM 20-24-12-200-001-A](#).
 - (a) Make sure that the cable connectors between FR35 and FR37 are safetied and the turnbuckles are tight.
 - (b) The cable routing is straight between FR35 and FR37 and the two cables are parallel.
 - 1 If the cable routing is not straight between FR35 and FR37, do the steps that follow:
 - a Adjust the turnbuckle between FR35 and FR37 to decrease the tension in the cable.
 - b Align the cables between FR35 and FR37 until they are straight and parallel.
 - c Adjust the cable tension [Ref. AMM 32-33-00-820-003-A](#).
 - (c) Make sure that the cable pressure seals between FR42 and FR43 are attached correctly and are not worn.
 - (d) Make sure that the cable guides at FR34, FR36 and FR42 are not damaged and do not have wear.
 - (e) Make sure that the cable connectors between FR42 and FR43 are safetied and the turnbuckles are tight.
 - (f) Make sure that the cables have no kinks, broken wires or signs of wear.

Subtask 32-33-00-860-077-A

On A/C 001-999

B. Aircraft Maintenance Configuration

WARNING: MAKE SURE THAT THE WARNING NOTICES ARE IN POSITION WHEN YOU MOVE THE FREE-FALL MECHANISM CABLES. INJURY CAN OCCUR IF PERSONNEL OR LOOSE CLOTHING BECOME CAUGHT IN THE MECHANISM.

WARNING: MAKE SURE THERE ARE NO PERSONNEL NEAR THE FREE-FALL MECHANISM CABLES BEFORE YOU TURN THE GRAVITY GEAR EXTN

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

**HANDLE. INJURY CAN OCCUR IF PERSONNEL OR LOOSE CLOTHING
BECOME CAUGHT IN THE FREE-FALL MECHANISM.**

- (1) On panel 11VU, remove the WEDGE - NON METALLIC from the GRAVITY GEAR EXTN handle.
- (2) Move the GRAVITY GEAR EXTN handle away from the folded position.
- (3) Turn the GRAVITY GEAR EXTN handle clockwise three full turns.
- (4) Fold the GRAVITY GEAR EXTN handle into the center console.
- (5) Install a WEDGE - NON METALLIC on each side of the GRAVITY GEAR EXTN handle to lock the handle in the position.

Subtask 32-33-00-210-060-A

On A/C 001-999

C. Detailed Inspection of the Free-Fall Mechanism Cables after the Free-fall Mechanism has been Moved

- (1) Check the part of the cables that could not be seen before (from FR7 thru FR12)
[Ref. AMM 20-24-12-200-001-A](#) to make sure that:
 - they do not have kinks, broken wires or wear.
- (2) Check the part of the cables that could not be seen before (from FR12 thru FR16)
[Ref. AMM 20-24-12-200-001-A](#) to make sure that:
 - they do not have kinks, broken wires or wear.
- (3) Check the part of the cables that could not be seen before (from FR14 thru FR24A - Passenger Compartment) [Ref. AMM 20-24-12-200-001-A](#) to make sure that:
 - they do not have kinks, broken wires or wear.
- (4) Check the part of the cables that could not be seen before (from FR24A thru FR36 - Forward Compartment) [Ref. AMM 20-24-12-200-001-A](#) to make sure that:
 - they do not have kinks, broken wires or wear.
- (5) Check the part of the cables that could not be seen before (from FR34 thru FR46 - MLG Bay)
[Ref. AMM 20-24-12-200-001-A](#) to make sure that:
 - they have no kinks, broken wires or signs of wear.

Subtask 32-33-00-860-078-A

On A/C 001-999

D. Aircraft Maintenance Configuration

WARNING: MAKE SURE THAT THE WARNING NOTICES ARE IN POSITION WHEN YOU MOVE THE FREE-FALL MECHANISM CABLES. INJURY CAN OCCUR IF PERSONNEL OR LOOSE CLOTHING BECOME CAUGHT IN THE MECHANISM.

WARNING: MAKE SURE THERE ARE NO PERSONNEL NEAR THE FREE-FALL MECHANISM CABLES BEFORE YOU TURN THE GRAVITY GEAR EXTN HANDLE. INJURY CAN OCCUR IF PERSONNEL OR LOOSE CLOTHING BECOME CAUGHT IN THE FREE-FALL MECHANISM.

- (1) On panel 11VU, remove the WEDGE - NON METALLIC from the GRAVITY GEAR EXTN handle.
- (2) Move the GRAVITY GEAR EXTN handle away from the folded position.
- (3) Turn the GRAVITY GEAR EXTN handle counterclockwise three full turns.
- (4) Fold the GRAVITY GEAR EXTN handle into the center console.

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

- (5) Install a WEDGE - NON METALLIC on each side of the GRAVITY GEAR EXTN handle to lock the handle in the position.

Subtask 32-33-00-480-052-A

On A/C 001-999

E. Installation of the Rigging Pins

NOTE : It is important to install the rigging pins exactly as given in the procedure. This will make sure that all the datum positions are correct.

- (1) Install the **RIGGING PIN** (98A27801001000) at position Pin 1. Make sure that the rigging pin goes through the pulley frame and the pulley. Keep the rigging pin in position.

Subtask 32-33-00-210-056-A

On A/C 001-999

F. Detailed Inspection from FR7 thru FR12:

- (1) Examine the GEAR GRAVITY EXTN handle for damage.
- (2) At the reduction gearbox make sure that:
- it is attached correctly and the parts that attach the gearbox are tight
 - the driveshaft is free from damage, cracks and distortion
 - the driveshaft is attached correctly
 - the pulley stop screws are safetied and tight
 - the pulley shear pins are not damaged or loose
 - the pulley is not loose, damaged or cracked.
- (3) Make sure that the transmission rod between the reduction gearbox and the pulley at FR8 is not loose, damaged or cracked.
- (4) Make sure that the two pulleys at FR8 and FR12 are not loose, damaged or cracked.
- (5) Make sure that the cable retaining pins on the pulley at FR12 are not damaged or cracked and are attached correctly.

Subtask 32-33-00-210-057-A

On A/C 001-999

G. Detailed Inspection from FR12 thru FR16:

- (1) At the pulley (FR16) make sure that:
- it is not loose, damaged or cracked
 - the support bracket is attached correctly
 - the vertical shaft is not loose, damaged or cracked.

Subtask 32-33-00-480-053-A

On A/C 001-999

H. Installation of the Rigging Pins from FR13 thru FR19 (NLG-Bay)

- (1) **RIGGING PIN** (98A32301000000) at position Pin 13. Make sure that the rigging pin goes through the lever into the uplock. Keep the rigging pin in position.
- (2) **RIGGING PIN** (98A32301000000) at position Pin 14. Make sure that the rigging pin goes through the lever in the frame. Keep the rigging pin in position.
- (3) **PIN-RIGGING, RUDDER CONTROL** (98A27901002000) at position Pin 15. Make sure that the rigging pin goes through the lever and the support. Keep the rigging pin in position.
- (4) **RIGGING PIN** (98A32301000000) at position Pin 16. Make sure that the rigging pin goes through the lever into the uplock. Keep the rigging pin in position.

Subtask 32-33-00-210-058-A

On A/C 001-999

J. Detailed Inspection from FR13 thru FR19 (NLG Bay)

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

- (1) At the rods make sure that:
 - they are not loose, damaged or cracked
 - the rod end fittings are tight and safetied.

Subtask 32-33-00-480-054-B

On A/C 001-999

K. Installation of the Rigging Pins From Frame 34 Thru Frame 46 (MLG Bay)

- (1) Install the **RIGGING PIN** (98DNSA20208060) at the pin 2 and pin 11 positions. Make sure that the rigging pin goes through the frame and the pulley. Keep the rigging pins in position.
- (2) Install the **RIGGING PIN** (98DNSA20208060) at the pin 3 and pin 7 positions. Make sure that the rigging pin goes through the lever and the support. Keep the rigging pins in position.
- (3) Install the **RIGGING PIN** (98DNSA20208060) at the pin 4, pin 6, pin 8 and pin 9 positions. Make sure that the rigging pin goes through the lever into the uplock. Keep the rigging pins in position.
- (4) Install the **RIGGING PIN** (98DNSA20208040) at the pin 5 position. Make sure that the rigging pin goes through the lever into the cut-out valve. Keep the rigging pin in position.
- (5) Install the **RIGGING PIN** (98DNSA20208060) at the pin 10 position. Make sure that the rigging pin goes through the lever into the valve. Keep the rigging pin in position.
- (6) Install the **RIGGING PIN** (98A27003001000) at the pin 12 position. Make sure that the rigging pin goes through the frame and the pulley. Keep the rigging pin in position.

Subtask 32-33-00-210-062-A

On A/C 001-999

L. Detailed Inspection between FR34 and FR46 (MLG Bay)

- (1) At the pulleys, make sure that:
 - They are not loose, damaged or cracked
 - The pulley support brackets are attached correctly and are not cracked or damaged
 - The pulley shear pins (FR41) are not damaged or loose
 - The cable retaining pins are not damaged and are attached correctly.
- (2) At the rods, make sure that:
 - They are not loose, damaged or cracked
 - The rod end fittings are tight and safetied.
- (3) At the torque shafts (FR43), make sure that:
 - They are not damaged or cracked
 - The support brackets are not damaged and are attached correctly
 - The axial movement is less than 3.4 mm (0.134 in.).

NOTE : Permitted axial movement can include movement between the floating bearings and the support bracket.

- (a) Use a VERNIER CALIPER to measure the axial movement at the torque shafts.

Subtask 32-33-00-080-051-B

On A/C 001-999

M. Removal of the Rigging Pins

- (1) Remove the **RIGGING PIN** (98A27003001000) at the pin 12 position.
- (2) Remove the **RIGGING PIN** (98DNSA20208060) at the pin 10 position.
- (3) Remove the **RIGGING PIN** (98DNSA20208040) at the pin 5 position.
- (4) Remove the **RIGGING PIN** (98DNSA20208060) at the pin 2, pin 3, pin 4, pin 6, pin 7, pin 8, pin 9 and pin 11 positions.
- (5) Remove the **PIN-RIGGING, RUDDER CONTROL** (98A27901002000) at the pin 15 position.

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

- (6) Remove the **RIGGING PIN** (98A32301000000) at the pin 13, pin 14 and pin 16 positions.
- (7) Remove the **RIGGING PIN** (98A27801001000) at the pin 1 position.

5. Close-up

Subtask 32-33-00-410-051-A

On A/C 001-999

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the lower cover assembly (5) as follows:
Ref. Fig. (1 / 32-33-00-991-02500)
 - (a) Clean the component interfaces and the adjacent area with a clean Textile-Lint free Cotton - (Material No. **14SBA1**) made moist with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) .
 - (b) Do an inspection of the component interfaces and the adjacent area.
 - (c) Make sure that the parts retained from the removed component are clean and in the correct condition.
 - (d) Put the lower cover assembly (5) in position.
 - (e) Install the washers (4) and the screws (3) on the ventilation gate (2).
 - (f) Install the washers (9) and the screws (10) on the ventilation grill (8).
 - (g) Install the washers (6) and the bolts (7) on the casing (1).
 - (h) Tighten the screws (3) and (10) and the bolts (7).
 - (i) Apply the Top Coat Polyurethane-- Decorative Furnishing (Material No. **04JMD9**) on:
 - The heads of the screws (3) and (10)
 - The washers (4) and (9).
- (3) Install the access panels that follow:
 - (a) In zones 241 and 242:
 - 1 Install the removed cabin floor panels between frame 34 or frame 35.1 or frame 35.5 and frame 47 [Ref. AMM 53-32-12-400-002-A](#):
 - a For the locations of the cabin floor panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
 - (b) In zone 232:
 - 1 Install the removed cabin floor panels between frame 24 and frame 25 [Ref. AMM 53-22-12-400-001-A](#):
 - a For the locations of the cabin floor panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
 - (c) In zones 221 and 222:
 - 1 Install the removed cabin floor panels between frame 12 and frame 24 [Ref. AMM 53-12-12-400-001-A](#):
 - a For the locations of the cabin floor panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
 - (d) In zones 211 and 212:
 - 1 Install the removed cockpit floor panels between frame 7 and frame 12 [Ref. AMM 53-12-11-400-001-A](#):
 - a For the locations of the cockpit floor panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
 - (e) In zones 131 and 132:
 - 1 Install the removed forward cargo-compartment partition-panels at frame 34 or frame 35.1 or frame 35.5 [Ref. AMM 25-54-12-400-001-A](#):

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

- a For the locations of the partition panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
- 2 Install the removed ceiling panels in the forward cargo compartment between frame 24 and frame 34 or frame 35.1 or frame 35.5 [Ref. AMM 25-54-12-400-002-A](#):
 - a For the locations of the ceiling panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
- (4) Close forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-002-A](#).
- (5) Close lateral avionics-compartment door 822 and rear avionics-compartment door 824 [Ref. AMM 52-41-00-410-002-A](#).
- (6) Close the MLG doors [Ref. AMM 32-12-00-410-001-A](#).
- (7) Close the NLG doors [Ref. AMM 32-22-00-410-001-A](#).
- (8) On panel 11VU, remove the WEDGE - NON METALLIC from the GRAVITY GEAR EXTN handle.



Subtask 32-33-00-942-066-A

[On A/C 001-999](#)

B. Removal of Equipment

- (1) Remove the SAFETY BARRIER(S).
- (2) Remove the WARNING NOTICE(S).
- (3) Remove the ground support and maintenance equipment, the special and standard tools and all other items.


TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

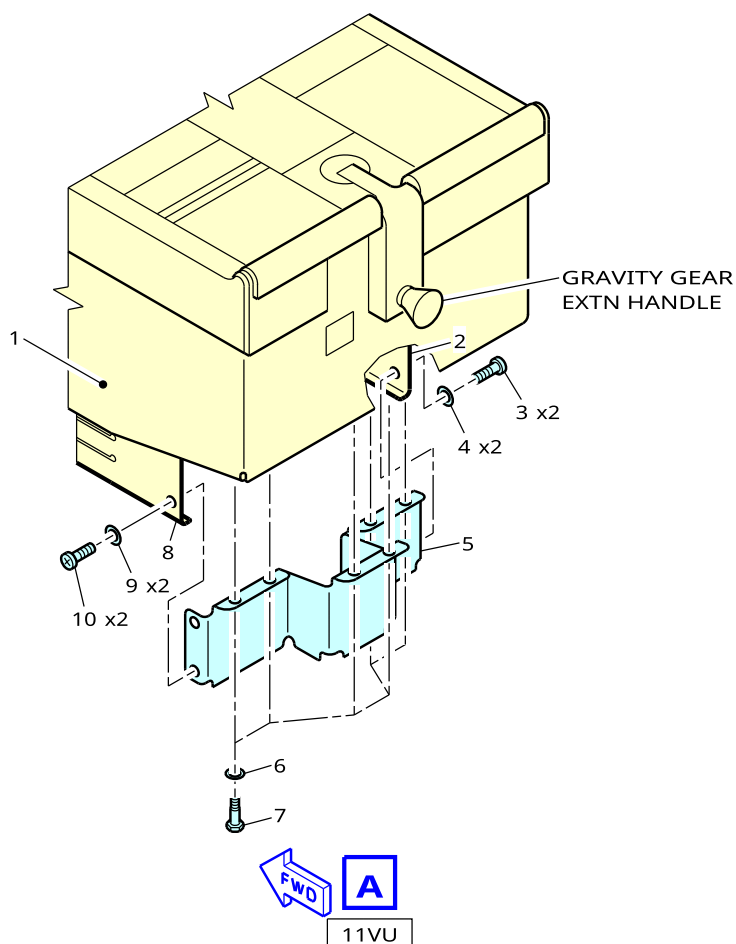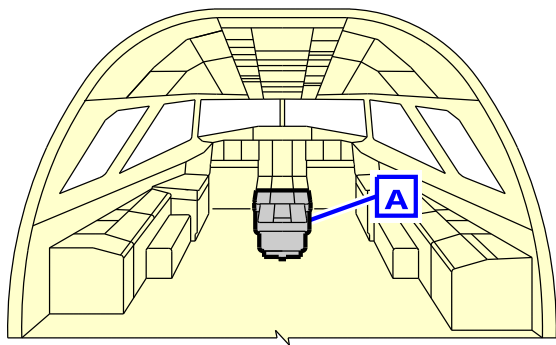

N_MM_323300_6_AEM0_01_01

Lower Cover Assembly
Figure 1 / Graphic 32-33-00 -991-02500


TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

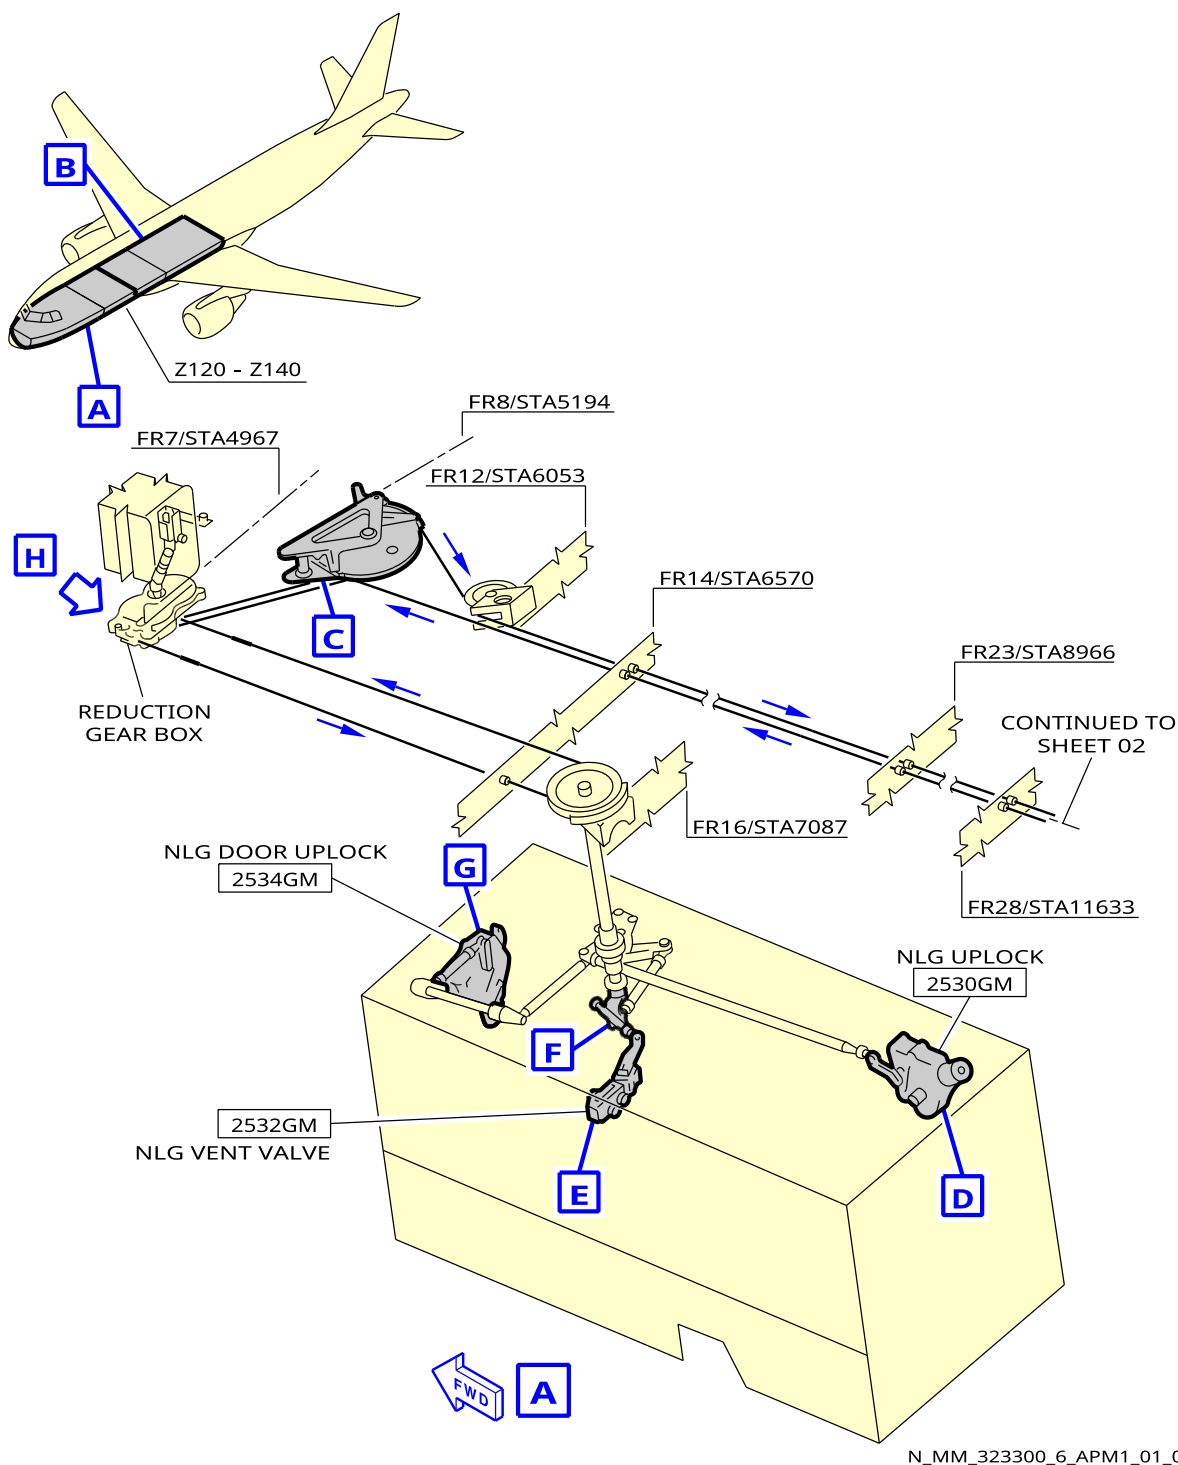

Free-Fall Extension System - Rigging Pins and Details
Figure 1 / Graphic 32-33-00 -991-00800

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK


CONTINUED FROM
SHEET 01

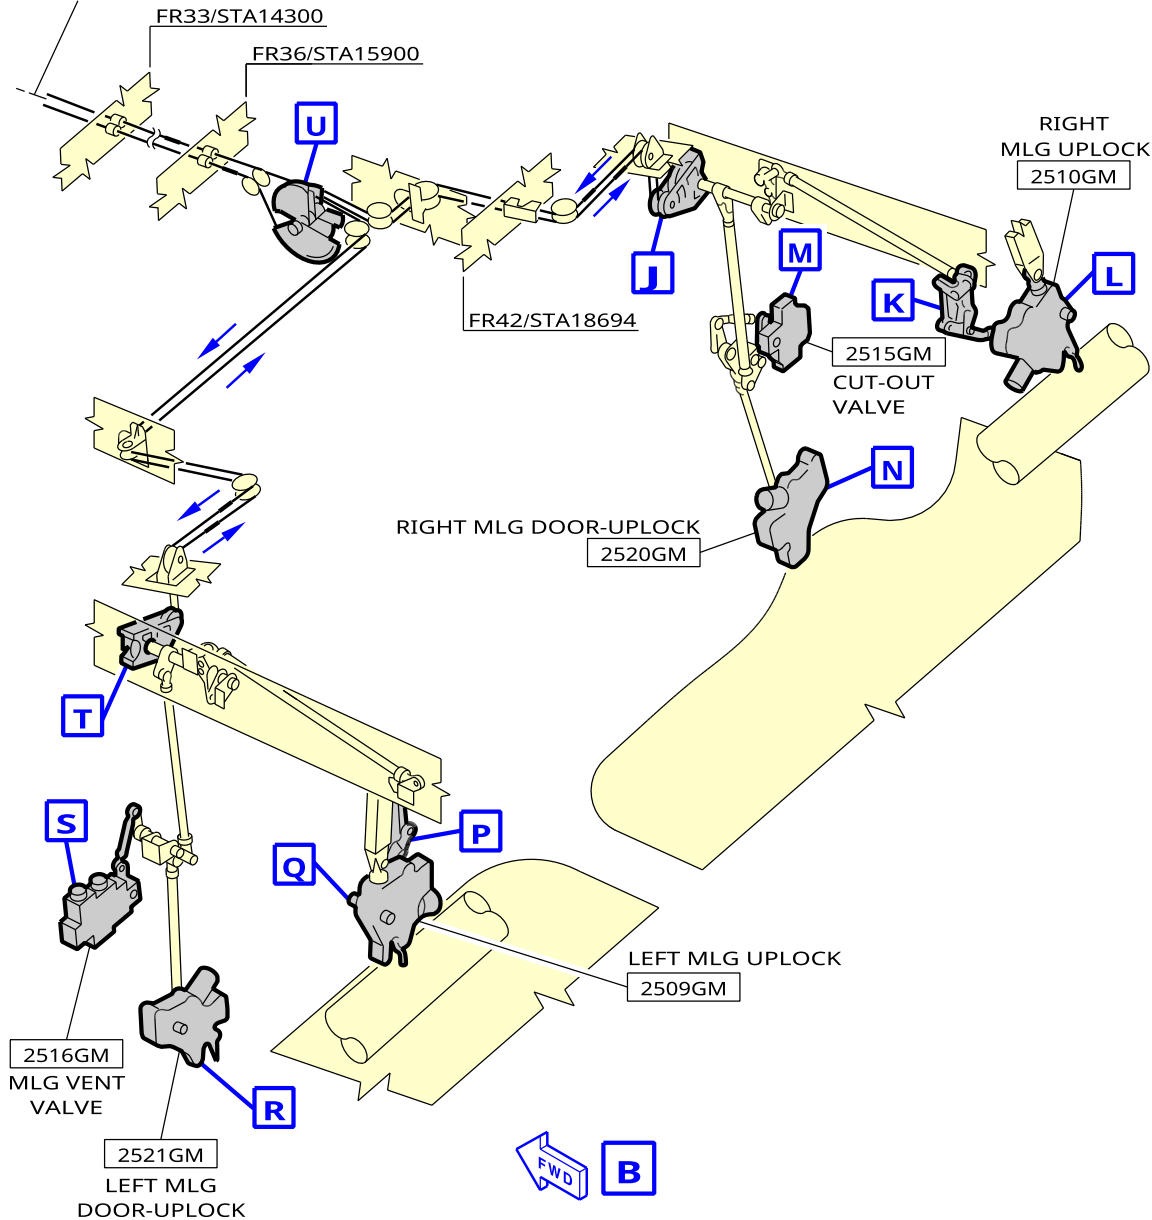

N_MM_323300_6_APM1_02_01

Free-Fall Extension System - Rigging Pins and Details
Figure 2 / Graphic 32-33-00 -991-00800


TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

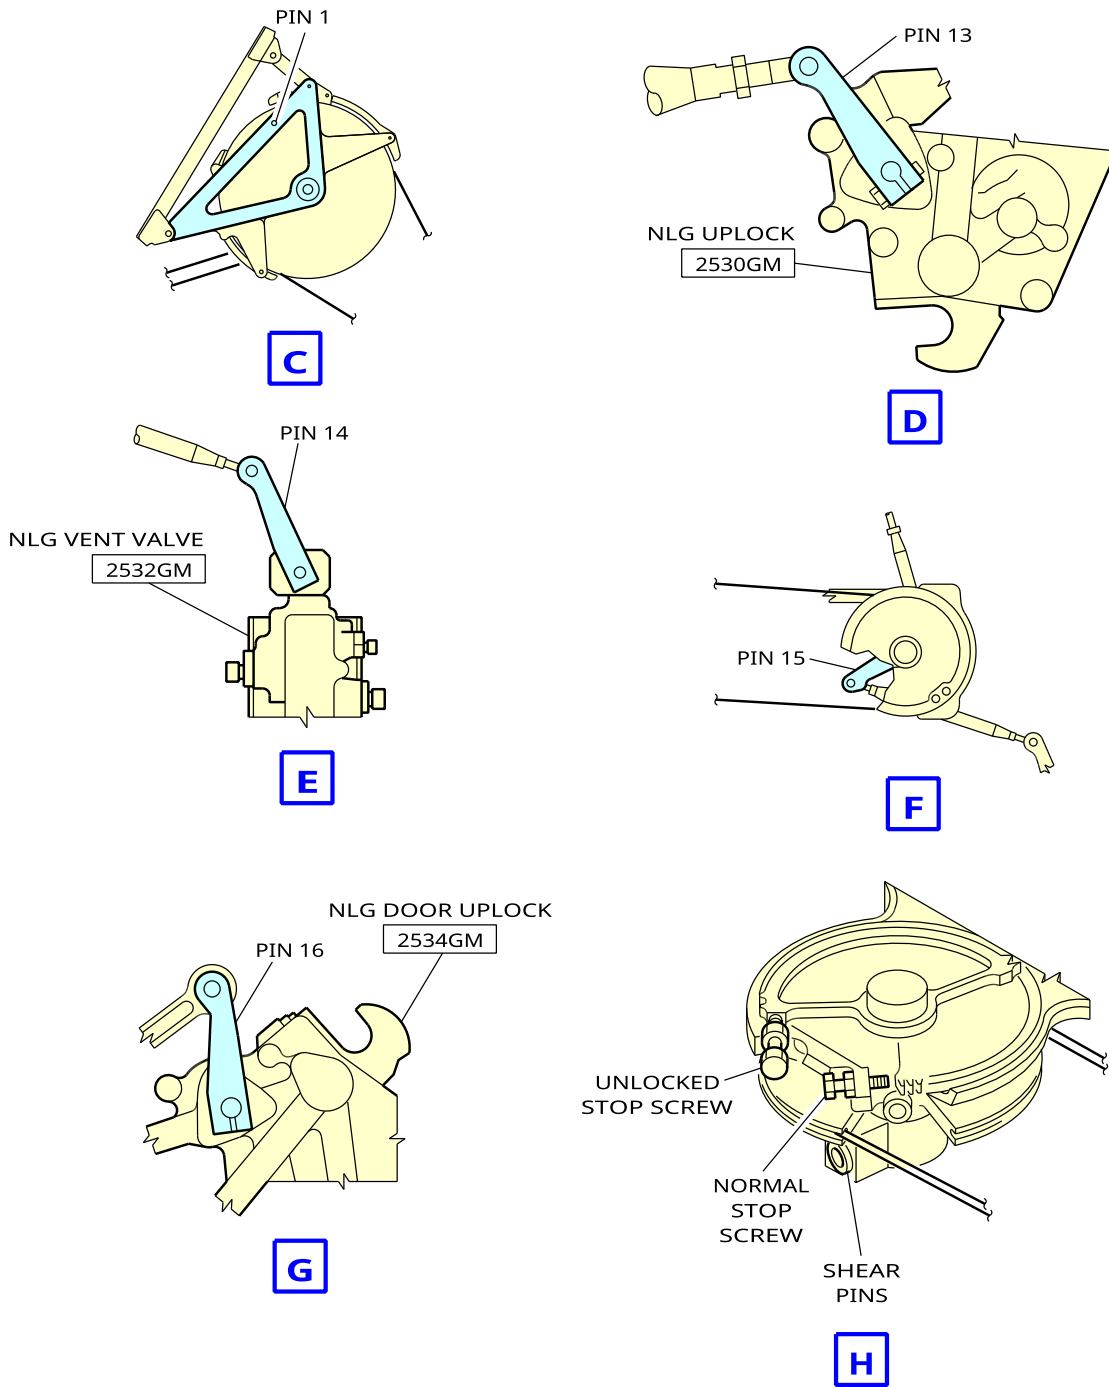

N_MM_323300_6_APM1_03_01

Free-Fall Extension System - Rigging Pins and Details
Figure 3 / Graphic 32-33-00 -991-00800


TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

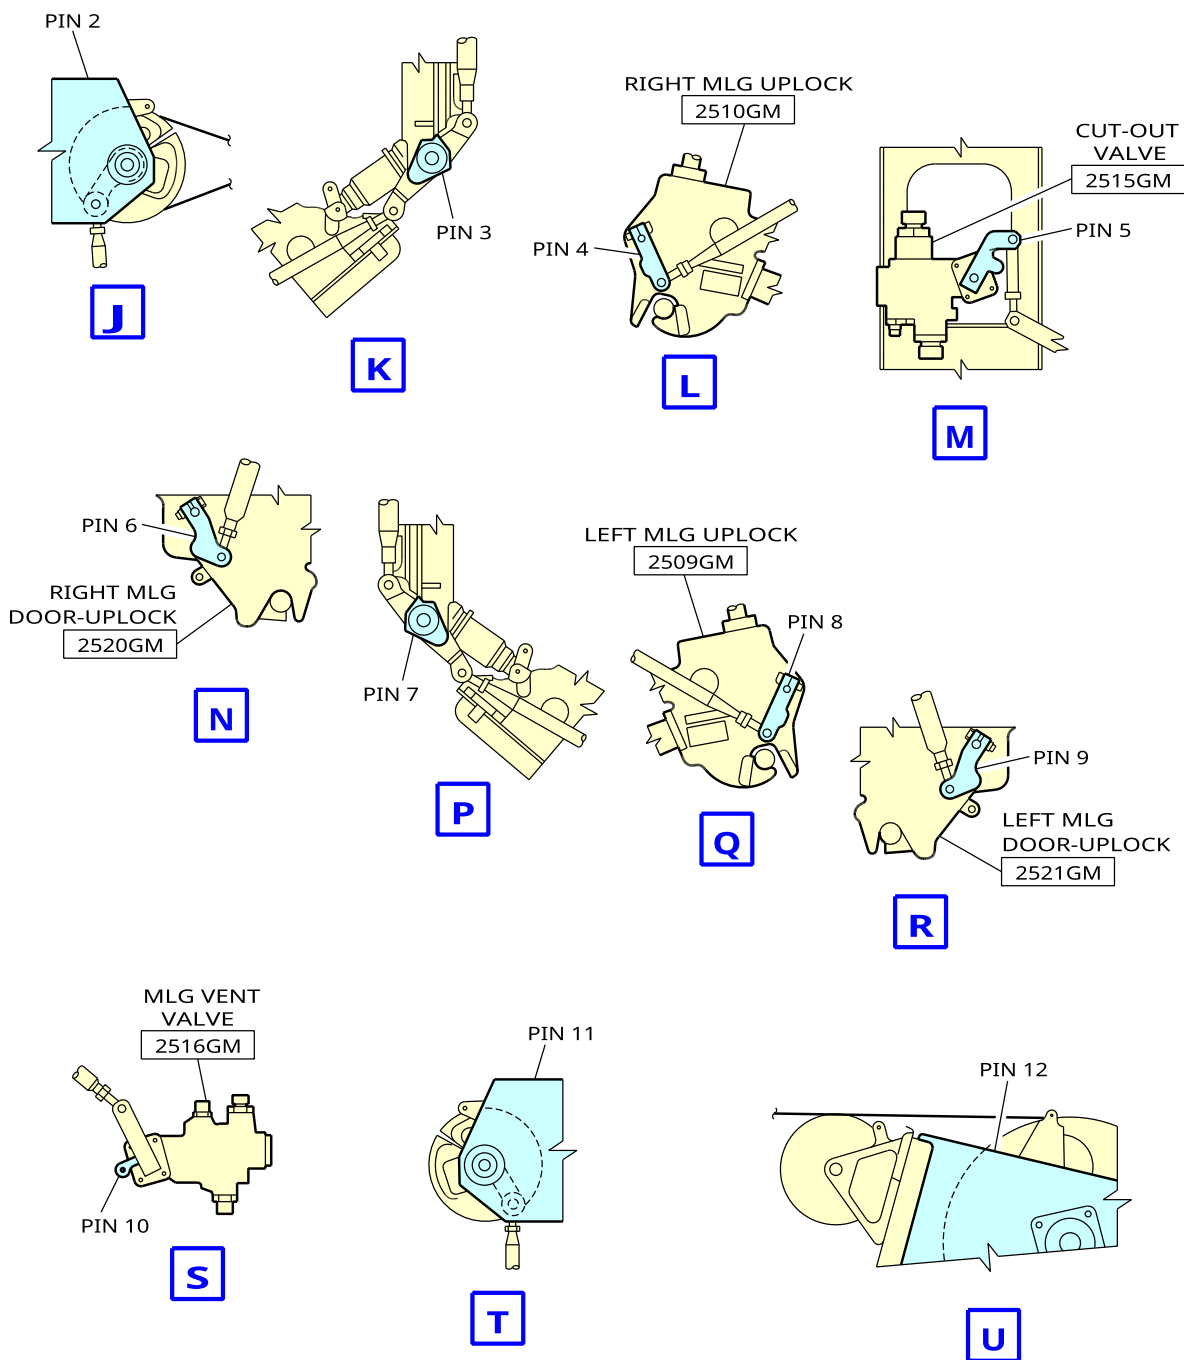

N_MM_323300_6_APM1_04_01

Free-Fall Extension System - Rigging Pins and Details
Figure 4 / Graphic 32-33-00 -991-00800

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

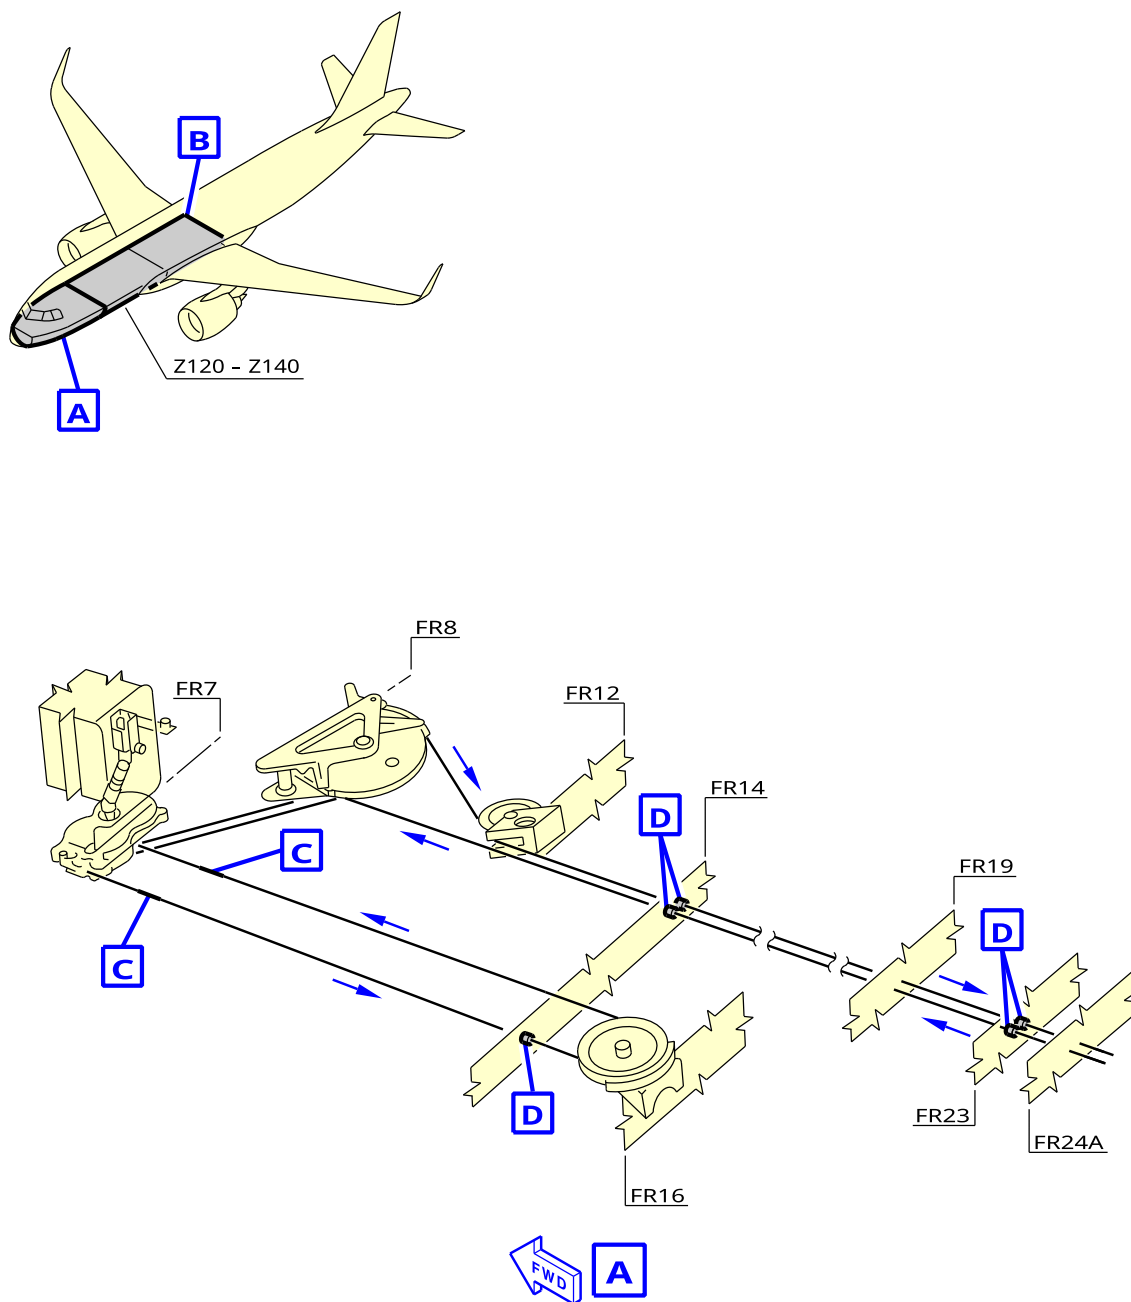


N_MM_323300_6_AKM1_01_02

Free-Fall Extension System - Inspection Areas and Details

Figure 1 / Graphic 32-33-00 -991-00700

On A/C 003-100; 201-250

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

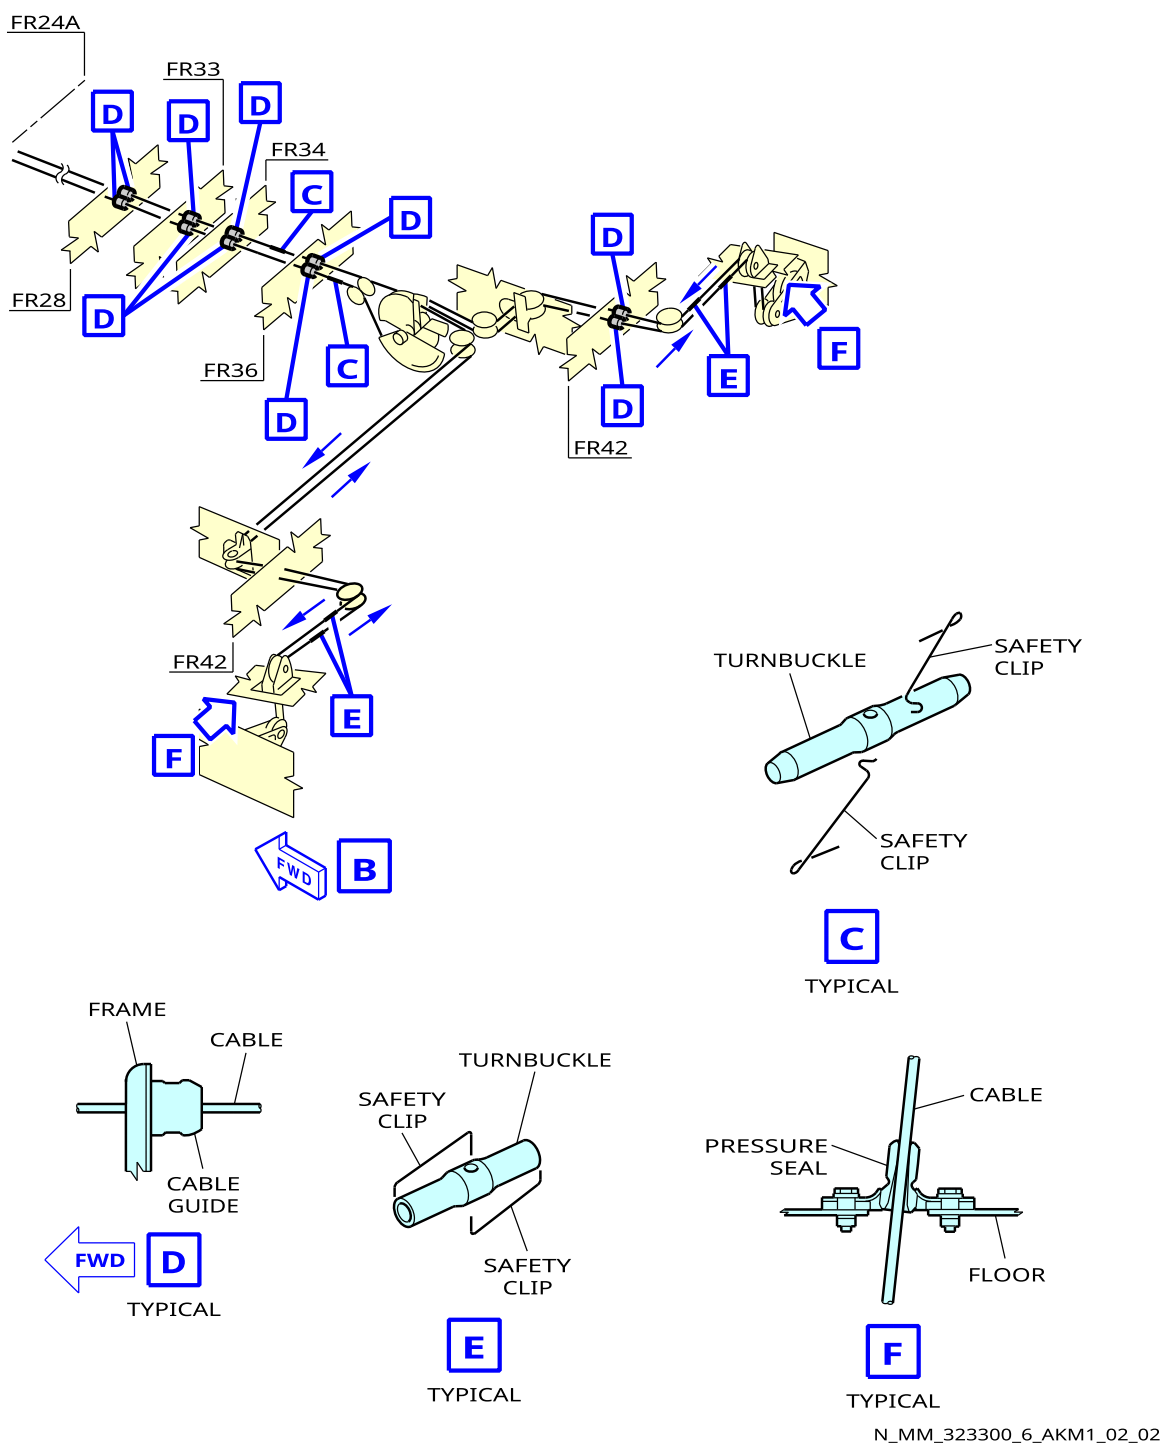

Free-Fall Extension System - Inspection Areas and Details
Figure 2 / Graphic 32-33-00 -991-00700

 MET.32712937		Task Card Title: LG FREE FALL MECH CABLE TENTION CHK					
Task Card NO: 323300-04-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: II,INSP,AF,CAB,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 09			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 45	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: FNC		Special Code: AF		MSG Code: 8, MRB		Request: JOB-SETUP, JOB-SETUP, OPS/LK, OPS/LK, JOB-CL OSEUP, JOB-CLOSEUP	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 100							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		32-33-00-200-001-A					
AMM		323300-200-001					
ACCESS PANELS:							
131BC, 131CC, 211FF, 212GF, 241EF, 241LF, 242FF, 242LF							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
NO PARTS ASSIGNED TO THIS TASK							
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
98A27003001000		RIGGING PIN { 7318 29 00 }				1.0	
98A27801001000		PIN-RIGGING,SLAT CONTROL (A-300)				1.0	
98A27901002000		PIN,RIG RUD.CONT.CABLE TENSION REGUL				1.0	
98DNSA20208060		RIGGING PIN (7318 29 00)				1.0	
TASK PREPARATION							
Job Description							
A. PERFORM JOB SET UP AS PER AMM TASK 32-33-00-200-001-A.							
STEP COMPLETION SIGN OFF:							
Qualification / Skill		Number of employees		Duration		Number./Signature	
Date							
Day Month Year							
Mechanic/s		AF/ACFT_TECH		HRS			
Insp.				HRS			
TASK PREPARATION							
Job Description							
B. PERFORM JOB SET UP AS PER AMM TASK 32-33-00-200-001-A.							
STEP COMPLETION SIGN OFF:							



MET.32712937

Task Card Title:

LG FREE FALL MECH CABLE TENTION CHK

Task Card NO:

323300-04-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS				
Insp.				HRS				

TASK INSTRUCTIONS**Job Description**

A. PERFORM NLG FREE-FALL MECHANISM CABLES TENSION CHECK AS PER AMM TASK 32-33-00-200-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				
Insp.	II/INSP			HRS				

TASK INSTRUCTIONS**Job Description**

B. PERFORM MLG FREE-FALL MECHANISM CABLES TENSION CHECK AS PER AMM TASK 32-33-00-200-001.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				
Insp.	INSP/II			HRS				

TASK CLOSE UP**Job Description**

A. RETURN THE AIRCRAFT BACK TO NORMAL CONFIGURATION AS PER AMM TASK 32-33-00-200-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS				
Insp.				HRS				

TASK CLOSE UP**Job Description**

B. RETURN THE AIRCRAFT BACK TO NORMAL CONFIGURATION AS PER AMM TASK 32-33-00-200-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				
Insp.				HRS				



MET.32712937

Task Card Title:

LG FREE FALL MECH CABLE TENTION CHK

Task Card NO:

323300-04-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 2 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 3 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 4 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 5 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

**Task Completion Close Up And
System Update****Station****Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

TASK 32-33-00-200-001 -A

On A/C 001-999

Functional Check of Free-Fall Mechanism Cable Tension

WARNING: MAKE SURE THAT THE SAFETY DEVICES AND THE WARNING NOTICES ARE IN POSITION BEFORE YOU START A TASK ON OR NEAR:

- THE FLIGHT CONTROLS
- THE FLIGHT CONTROL SURFACES
- THE LANDING GEAR AND RELATED DOORS
- THE CARGO DOORS
- OTHER COMPONENTS THAT MOVE.

MOVEMENT OF COMPONENTS CAN KILL OR CAUSE INJURY TO PERSONS AND/OR DAMAGE TO EQUIPMENT.

1. Reason for the Job

Refer to the MPD TASK: 323300-04

FUNCTIONAL CHECK OF FREE-FALL MECHANISM CABLE TENSION

NOTE : You can use the Cable Tension Tables in this task for the aircraft with Weight-on-Wheels or Aircraft-on-Jacks.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	AR	CABLE TENSIO METER
No specific	1	ROD - NON METALLIC
No specific	AR	SAFETY BARRIER(S)
No specific	AR	WARNING NOTICE(S)
No specific	2	WEDGE - NON METALLIC
98A27003001000	1	RIGGING PIN
98A27801001000	1	RIGGING PIN
98A27901002000	1	PIN-RIGGING, RUDDER CONTROL
98DNSA20208060	2	RIGGING PIN

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
100	LOWER HALF FUSELAGE INCLUDING RADOME
200	UPPER HALF FUSELAGE
822 , 825	

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 25-54-12-000-002-A	Removal of the Ceiling Panel From the Forward Cargo Compartment
Ref. AMM 25-54-12-400-002-A	Installation of the Ceiling Panel in the Forward Cargo Compartment
Ref. AMM 32-00-00-481-001-A	Installation of the Safety Devices on the Landing Gears
Ref. AMM 32-00-00-481-002-A	Installation of the Safety Devices on the Landing Gear Doors
Ref. AMM 32-12-00-010-001-A	Open the Main Gear Doors for Access
Ref. AMM 32-12-00-410-001-A	Close the Main Gear Doors after Access
Ref. AMM 32-22-00-010-001-A	Nose Gear Doors - Ground Doors Opening
Ref. AMM 32-22-00-410-001-A	Nose Gear Doors - Ground Doors Closing
Ref. AMM 32-33-00-820-001-A	Adjustment of the NLG Free-Fall-Extension Cable-System
Ref. AMM 32-33-00-820-003-A	Adjustment of the MLG Free-Fall Extension Cable System
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

REFERENCE	DESIGNATION
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 52-41-00-010-002-A	Open the Avionics Compartment Doors for Access
Ref. AMM 52-41-00-410-002-A	Close the Avionics Compartment Doors after Access
Ref. AMM 53-12-11-000-001-A	Removal of the Cockpit Floor Panels from FR1 thru FR12
Ref. AMM 53-12-11-400-001-A	Installation of the Cockpit Floor Panels from FR1 thru FR12
Ref. AMM 53-22-12-000-001-A	Removal of the Cabin Floor Panels
Ref. AMM 53-22-12-400-001-A	Installation of the Cabin Floor Panels
Ref. AMM 53-32-12-000-002-A	Removal of the Cabin Floor Panels
Ref. AMM 53-32-12-400-002-A	Installation of the Cabin Floor Panels
Ref. AMM 06-41-53-00	FUSELAGE-DESCRIPTION AND OPERATION
Ref. Fig. (1 / 32-33-00-991-00300)	
Ref. Fig. (1 / 32-33-00-991-00400)	
Ref. Fig. (1 / 32-33-00-991-00600)	
Ref. Fig. (1 / 32-33-00-991-02300)	

3. Job Set-up

Subtask 32-33-00-941-052-A

On A/C 001-999

A. Safety Precautions

- (1) As necessary, use the applicable SAFETY BARRIER(S), specified by the operator's instructions and your local regulations.
- (2) Make sure that the ground safety locks are on the landing gear
[Ref. AMM 32-00-00-481-001-A.](#)
- (3) On panel 400VU:
 - Make sure that landing-gear control-lever 6GA is in the DOWN position
 - Put the WARNING NOTICE(S) in position to tell persons not to operate the landing gear.
- (4) On panel 11VU, make sure that the GRAVITY GEAR EXTN handle is folded into the center console.
- (5) Install a WEDGE - NON METALLIC on each side of the GRAVITY GEAR EXTN handle to lock the handle in position.

Subtask 32-33-00-010-050-A

On A/C 001-999

B. Get Access

- (1) Open the NLG doors [Ref. AMM 32-22-00-010-001-A.](#)
- (2) Make sure that the safety devices are installed on the NLG doors
[Ref. AMM 32-00-00-481-002-A.](#)
- (3) Open the MLG doors [Ref. AMM 32-12-00-010-001-A.](#)
- (4) Make sure that the safety devices are installed on the MLG doors
[Ref. AMM 32-00-00-481-002-A.](#)
- (5) Open lateral avionics-compartment door 822 [Ref. AMM 52-41-00-010-002-A.](#)
- (6) Open forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-001-A.](#)
- (7) Remove the access panels that follow:
 - (a) In zones 131 and 132:
 - 1 Remove the applicable ceiling panels in the forward cargo compartment between frame 24 and frame 34 or frame 35.1 or frame 35.5 [Ref. AMM 25-54-12-000-002-A:](#)
 - a For the locations of the ceiling panels, refer to the System Description
[Ref. AMM 06-41-53-00.](#)
 - (b) In zones 211 and 212:
 - 1 Remove the applicable cockpit floor panels between frame 7 and frame 12
[Ref. AMM 53-12-11-000-001-A:](#)

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

- a For the locations of the cockpit floor panels, refer to the System Description
[Ref. AMM 06-41-53-00](#).
- (c) In zone 232:
 - 1 Remove the applicable cabin floor panels between frame 24 and frame 25
[Ref. AMM 53-22-12-000-001-A](#):
 - a For the locations of the cabin floor panels, refer to the System Description
[Ref. AMM 06-41-53-00](#).
- (d) In zones 241 and 242:
 - 1 Remove the applicable cabin floor panels between frame 34 or frame 35.1 or frame 35.5 and frame 47 [Ref. AMM 53-32-12-000-002-A](#):
 - a For the locations of the cabin floor panels, refer to the System Description
[Ref. AMM 06-41-53-00](#).

Subtask 32-33-00-480-051-A

[On A/C 001-999](#)

C. Installation of the Rigging Pins

Ref. Fig. (1 / 32-33-00-991-00300)

- (1) Put in the **RIGGING PIN** (98A27801001000) at position Pin 1.
- (2) Put in the **RIGGING PIN** (98A27003001000) at position Pin 2.
- (3) Put the **RIGGING PIN** (98DNSA20208060) at positions Pin 3 and Pin 4.
- (4) Put in the **PIN-RIGGING, RUDDER CONTROL** (98A27901002000) at position Pin 5.
- (5) Make sure that the pins lock the related pulley, cable quadrant or lever.

4. Procedure

CAUTION: MAKE SURE THAT THE FREE-FALL EXTENSION CABLES ARE ADJUSTED CORRECTLY.
INCORRECT ADJUSTMENT OF THE CABLES CAN CAUSE THE FREE-FALL EXTENSION SYSTEM TO BE UNSERVICEABLE.

Subtask 32-33-00-220-050-A

[On A/C 001-999](#)

A. Functional Check of the NLG Free-Fall-Mechanism Cable-Tension

- (1) Get the ambient temperature and the temperature of the underfloor areas.

NOTE : The ambient temperature is the air temperature external to the fuselage.

- (2) Make a plot of the ambient and underfloor temperature points on the graph and find the correct tension value.

Ref. Fig. (1 / 32-33-00-991-00400)

NOTE : Where the points of the ambient temperature and the underfloor temperature align (between the given lines of the tension), then the correct tension indication is calculated by the linear extrapolation (see the example on the graph).

Ref. Fig. (1 / 32-33-00-991-00400)

- (3) Attach the CABLE TENSIO METER to one of the cables at position A in the lateral avionics compartment, zones 127 and 128. Make sure that the tensiometer is attached a minimum of 80 mm (3.150 in.) away from the pulleys and the turnbuckles.

Ref. Fig. (1 / 32-33-00-991-00300)

NOTE : The free-fall extension cables have a diameter of 3.2 mm (0.126 in.).

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

- (4) Compare the tensiometer indication with the tension value on the graph for the known ambient and underfloor temperatures. The value must be in the adjustment range given on the graph.
Ref. Fig. (1 / 32-33-00-991-00400)
 - (a) For the measured tension of the pre-installed system (turnbuckle spring clips installed), a tolerance of + 8 daN (17.9847 lbf) on the nominal value measured from is permitted.
Ref. Fig. (1 / 32-33-00-991-00400)
- (5) If necessary, adjust the tension in the cable [Ref. AMM 32-33-00-820-001-A](#).
- (6) Remove the tensiometer from the cable.
- (7) Do steps (1) thru (6) again for the other NLG cable.

Subtask 32-33-00-220-051-A

On A/C 001-999

B. Functional Check of the MLG Free-Fall Mechanism Cable Tension

- (1) Do a check of the tension of the MLG free-fall extension cable at position B as follows:
 - (a) Get the ambient temperature and the temperature of the underfloor area.

NOTE : The ambient temperature is the air temperature external to the fuselage.

- (b) Make a plot of the ambient and the underfloor temperature points on the graph and find the correct tension value.

Ref. Fig. (1 / 32-33-00-991-00400)

NOTE : Where the points of the ambient temperature and the underfloor temperature align (between the given lines of the tension), then the correct tension indication is calculated by the linear extrapolation. (See the example on the graph).

Ref. Fig. (1 / 32-33-00-991-00400)

- (c) Attach the tensiometer to one of the cables at position B in the forward cargo compartment, zones 131 and 132. Make sure that the tensiometer is attached a minimum of 80 mm (3.150 in.) away from the pulleys and the turnbuckles.

Ref. Fig. (1 / 32-33-00-991-00300)

NOTE : The free-fall extension cables have a diameter of 3.2 mm (0.126 in.).

- (d) Get five tensiometer indications from the same position on the cable. Use the middle value indication for the procedure in step (1) (e). You can ignore the two lowest and the two highest indication values.
 - (e) Compare the tensiometer indication with the tension value on the graph for the known ambient and the underfloor temperatures. The value must be in the adjustment range given on the graph.
Ref. Fig. (1 / 32-33-00-991-00400)
 - (f) If necessary, adjust the tension in the cable [Ref. AMM 32-33-00-820-003-A](#).
 - (g) Remove the tensiometer from the cable.
- (2) Do step (1) again for the other MLG cable at position B.
- (3) Do a check of the tension of the MLG free-fall extension cable at position C as follows:
 - (a) Get the ambient temperature.

NOTE : The ambient temperature is the air temperature external to the fuselage.

- (b) Make a plot of the ambient temperature point on the graph and find the correct tension value:

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

- For weight on wheels
Ref. Fig. (1 / 32-33-00-991-00600)
 - For weight on jacks.
Ref. Fig. (1 / 32-33-00-991-02300)
- (c) Attach the tensiometer to one of the cables at position C in the wing center box, zone 241. Make sure that the tensiometer is attached a minimum of 80 mm (3.1496 in.) away from the pulleys and the turnbuckles.
Ref. Fig. (1 / 32-33-00-991-00300)
- NOTE : The free-fall extension cables have a diameter of 3.2 mm (0.1260 in.).
- (d) Compare the tensiometer indication with the tension value on the graph for the known ambient temperatures. The value must be in the adjustment range given on the graph.
- For weight on wheels
Ref. Fig. (1 / 32-33-00-991-00600)
 - For weight on jacks.
Ref. Fig. (1 / 32-33-00-991-02300)
- (e) If necessary, adjust the tension in the cable [Ref. AMM 32-33-00-820-003-A](#).
- (f) Remove the tensiometer from the cable.
- (4) Do step (3) again for the other MLG cable at position C.
- (5) Do a check of the tension of the MLG free-fall extension cable at position D as follows:
- (a) Get the ambient temperature.

NOTE : The ambient temperature is the air temperature external to the fuselage.

- (b) Make a plot of the ambient temperature point on the graph and find the correct tension value:
- For weight on wheels
Ref. Fig. (1 / 32-33-00-991-00600)
 - For weight on jacks.
Ref. Fig. (1 / 32-33-00-991-02300)
- (c) Attach the tensiometer to one of the cables at position D in the wing center box, zone 242. Make sure that the tensiometer is attached a minimum of 80 mm (3.150 in.) away from the pulleys and the turnbuckles.
Ref. Fig. (1 / 32-33-00-991-00300)

NOTE : The free-fall extension cables have a diameter of 3.2 mm (0.126 in.).

- (d) Compare the tensiometer indication with the tension value on the graph for the known ambient temperatures. The value must be in the adjustment range given on the graph.
- For weight on wheels
Ref. Fig. (1 / 32-33-00-991-00600)
 - For weight on jacks.
Ref. Fig. (1 / 32-33-00-991-02300)
- (e) If necessary, adjust the tension in the cable [Ref. AMM 32-33-00-820-003-A](#).
- (f) Remove the tensiometer from the cable.
- (6) Do step (5) again for the other MLG cable at position D.

Subtask 32-33-00-080-050-A

On A/C 001-999

- C. Removal of the Rigging Pins
Ref. Fig. (1 / 32-33-00-991-00300)

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

- (1) Remove the **RIGGING PIN** (98A27801001000) at position Pin 1.
- (2) Remove the **RIGGING PIN** (98A27003001000) at position Pin 2.
- (3) Remove the **RIGGING PIN** (98DNSA20208060) at positions Pin 3 and Pin 4.
- (4) Remove the **PIN-RIGGING, RUDDER CONTROL** (98A27901002000) at position Pin 5.
- (5) On panel 11VU, remove the WEDGE - NON METALLIC from the GRAVITY GEAR EXTN handle.

Subtask 32-33-00-710-051-A

On A/C 001-999

D. Operation of the Free-Fall Extension System

CAUTION: MAKE SURE THAT THE RIGGING PINS ARE REMOVED BEFORE OPERATION OF THE FREE FALL SYSTEM. DAMAGE WILL OCCUR IF THE RIGGING PINS ARE INSTALLED DURING SYSTEM OPERATION.

- (1) Operate the free-fall extension system ten full cycles to let the cables and linkages become stable:
 - (a) For one full cycle, on panel 11VU:
 - 1 Turn the GRAVITY GEAR EXTN handle clockwise three turns at a rate of one turn in five seconds
 - 2 Turn the GRAVITY GEAR EXTN handle counterclockwise three turns at a rate of one turn in five seconds.
- (2) Lock the GEAR GRAVITY EXTN handle:
 - (a) Put the handle in the stowed position.
 - (b) Install a WEDGE - NON METALLIC at each side of the GRAVITY GEAR EXTN handle to lock the handle in position.
- (3) Do a visual inspection of the uplock hooks to make sure that they are in the fully open position:
 - (a) If necessary, use a ROD - NON METALLIC (or an equivalent tool) to move the uplock hooks to the fully open position. Do not use force to put the uplock hooks in the fully open position.

Subtask 32-33-00-480-061-A

On A/C 001-999

E. Installation of the Rigging Pins

Ref. Fig. (1 / 32-33-00-991-00300)

- (1) Put in the **RIGGING PIN** (98A27801001000) at position Pin 1.
- (2) Put in the **RIGGING PIN** (98A27003001000) at position Pin 2.
- (3) Put the **RIGGING PIN** (98DNSA20208060) at positions Pin 3 and Pin 4.
- (4) Put in the **PIN-RIGGING, RUDDER CONTROL** (98A27901002000) at position Pin 5.
- (5) Make sure that the pins lock the related pulley, cable quadrant or lever.
- (6) Install a WEDGE - NON METALLIC on each side of the GRAVITY GEAR EXTN handle to lock the handle in position.

Subtask 32-33-00-220-053-A

On A/C 001-999

F. Functional Check of the NLG Free-Fall Mechanism Cable Tension

- (1) Do a check of the NLG free-fall extension cable tension again, as specified in paragraph 4 A.

Subtask 32-33-00-220-054-A

On A/C 001-999

G. Functional Check of the MLG Free-Fall Mechanism Cable Tension

- (1) Do a check of the MLG free-fall extension cable tension again, as specified in paragraph 4 B.

5. Close-up

Subtask 32-33-00-080-059-A

On A/C 001-999

A. Removal of the Rigging Pins

Ref. Fig. (1 / 32-33-00-991-00300)

- (1) Remove the **RIGGING PIN** (98A27801001000) at position Pin 1.
- (2) Remove the **RIGGING PIN** (98A27003001000) at position Pin 2.
- (3) Remove the **RIGGING PIN** (98DNSA20208060) at positions Pin 3 and Pin 4.
- (4) Remove the **PIN-RIGGING, RUDDER CONTROL** (98A27901002000) at position Pin 5.

Subtask 32-33-00-410-050-A

On A/C 001-999

B. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the access panels that follow:
 - (a) In zones 241 and 242:
 - 1 Install the removed cabin floor panels between frame 34 or frame 35.1 or frame 35.5 and frame 47 [Ref. AMM 53-32-12-400-002-A](#):
 - a For the locations of the cabin floor panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
 - (b) In zone 232:
 - 1 Install the removed cabin floor panels between frame 24 and frame 25 [Ref. AMM 53-22-12-400-001-A](#):
 - a For the locations of the cabin floor panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
 - (c) In zones 211 and 212:
 - 1 Install the removed cockpit floor panels between frame 7 and frame 12 [Ref. AMM 53-12-11-400-001-A](#):
 - a For the locations of the cockpit floor panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
 - (d) In zones 131 and 132:
 - 1 Install the removed ceiling panels in the forward cargo compartment between frame 24 and frame 34 or frame 35.1 or frame 35.5 [Ref. AMM 25-54-12-400-002-A](#):
 - a For the locations of the ceiling panels, refer to the System Description [Ref. AMM 06-41-53-00](#).
- (3) Close forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-002-A](#).
- (4) Close lateral avionics-compartment door 822 [Ref. AMM 52-41-00-410-002-A](#).
- (5) Close the MLG doors [Ref. AMM 32-12-00-410-001-A](#).
- (6) Close the NLG doors [Ref. AMM 32-22-00-410-001-A](#).
- (7) On panel 11VU, remove the WEDGE - NON METALLIC from the GRAVITY GEAR EXTN handle.


Subtask 32-33-00-942-051-A

On A/C 001-999

C. Removal of Equipment

- (1) Remove the SAFETY BARRIER(S).
- (2) Remove the WARNING NOTICE(S).
- (3) Remove the ground support and maintenance equipment, the special and standard tools and all other items.


TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

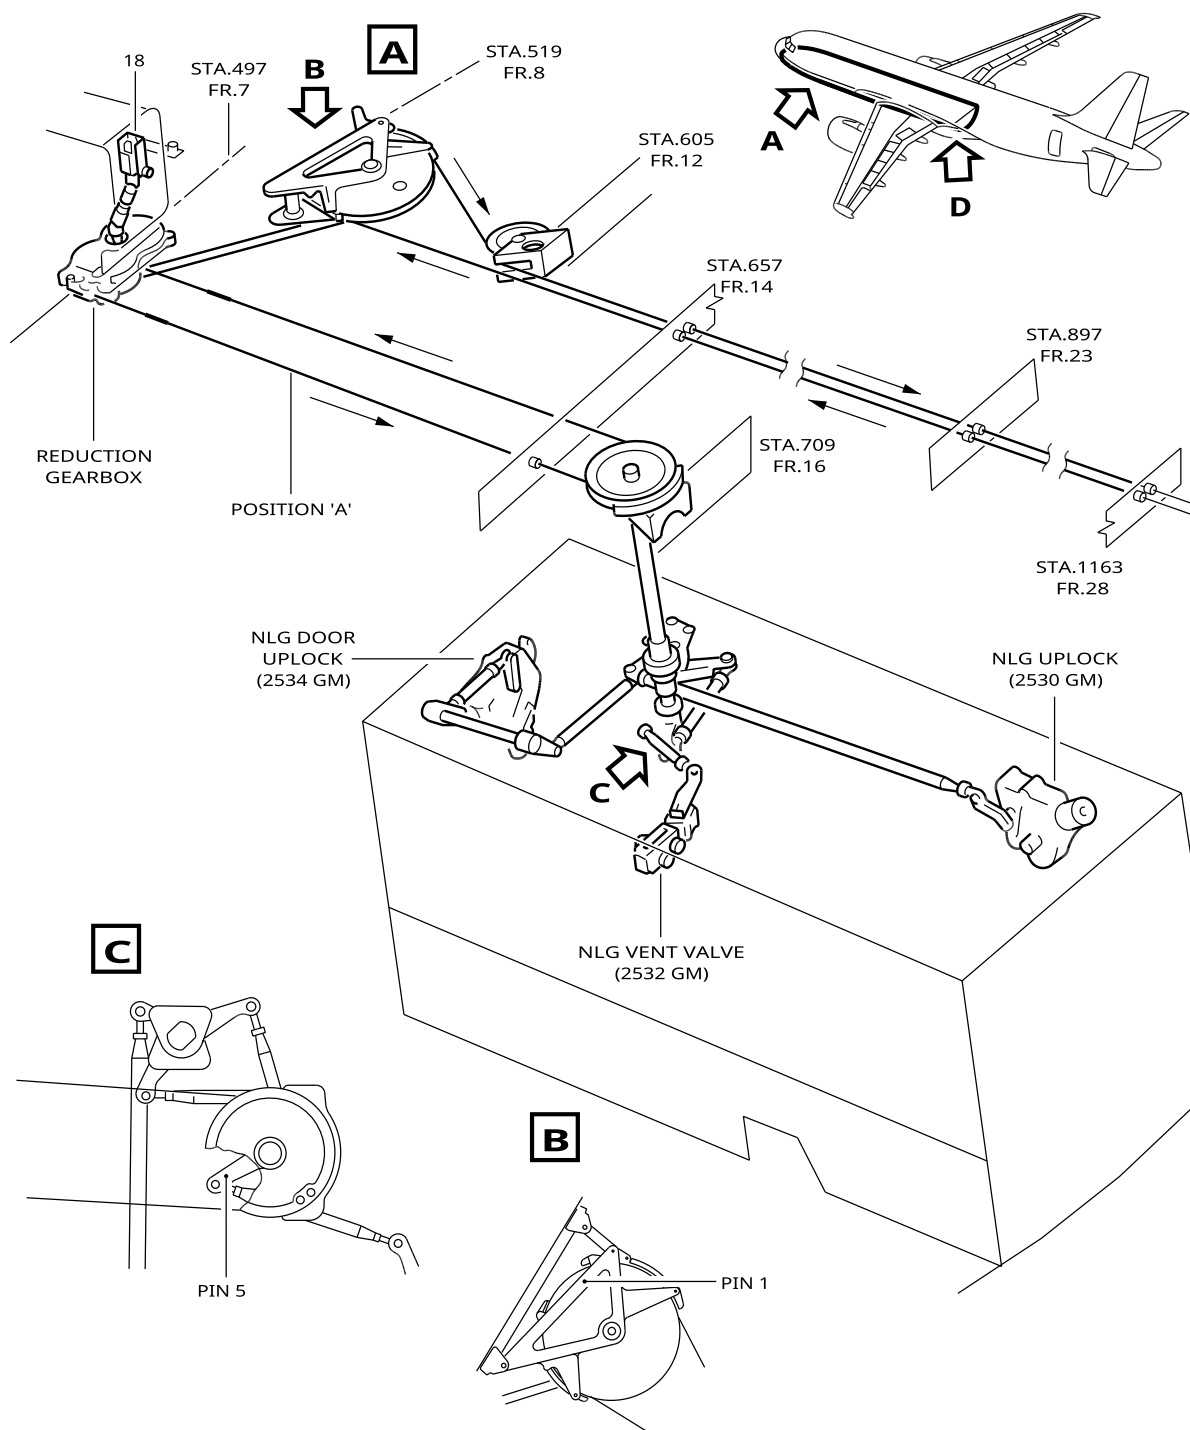

N_MM_323300_6_ABM1_01_01


Free-Fall Cable System
Figure 1 / Graphic 32-33-00 -991-00300

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

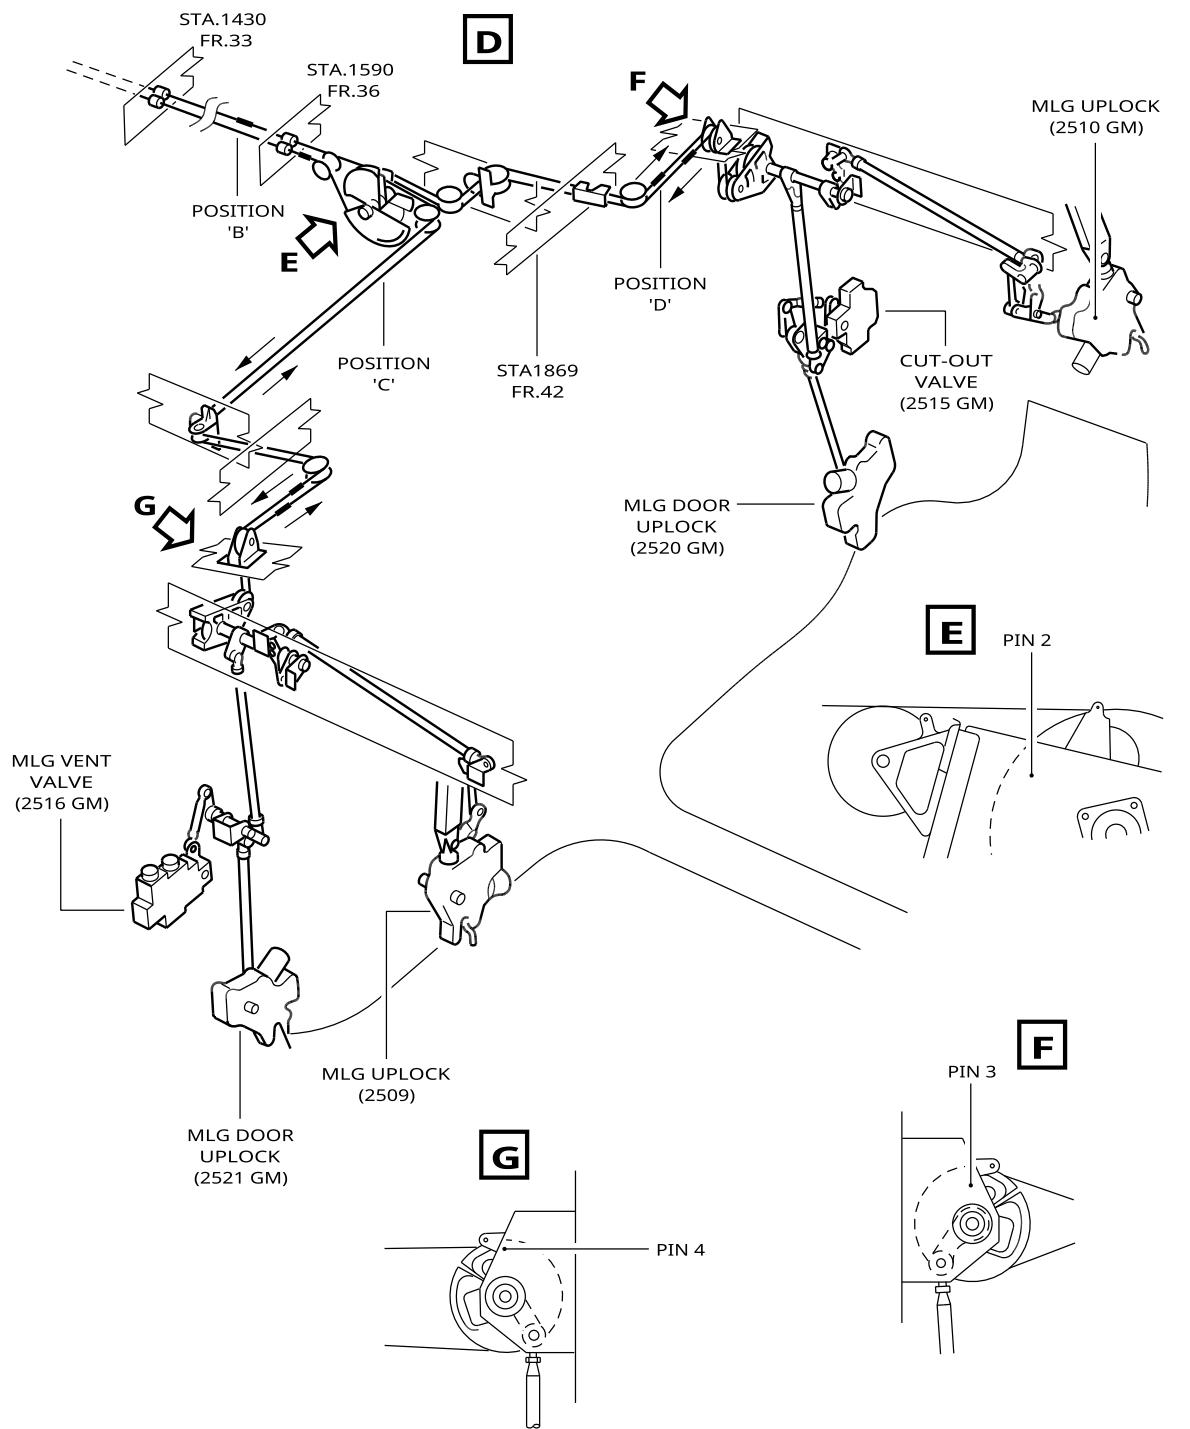

N_MM_323300_6_ABM1_02_01


Free-Fall Cable System
Figure 2 / Graphic 32-33-00 -991-00300



NLG and MLG Cable-Tension Graph

Figure 1 / Graphic 32-33-00 -991-00400


TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

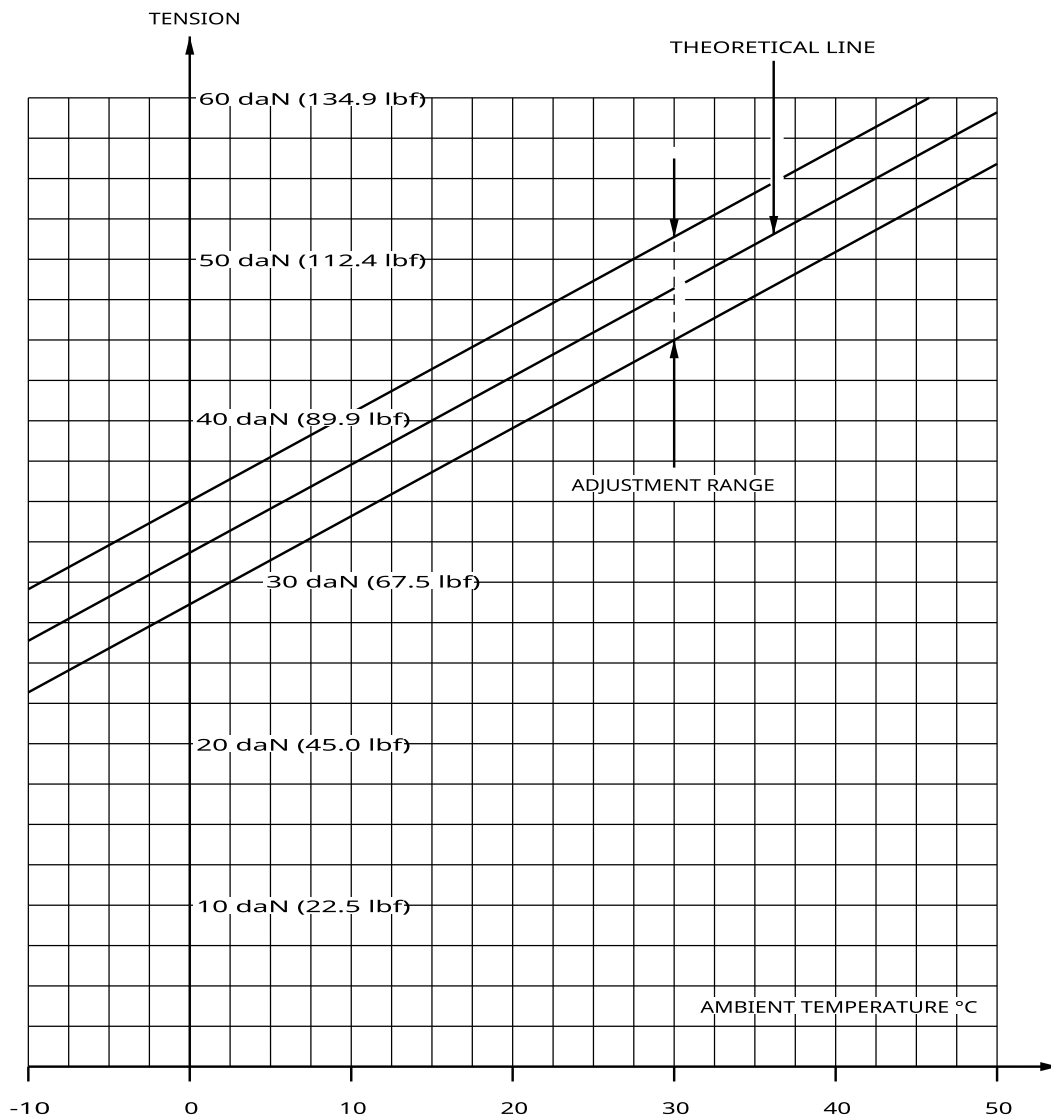

N_MM_323300_6_AGM0_01_00

MLG-Bay Cable-Tension Graph - Weight on Wheels
Figure 1 / Graphic 32-33-00 -991-00600

TF-N
AIRCRAFT MAINTENANCE MANUAL
FREE FALL EXTENSION - INSPECTION/CHECK

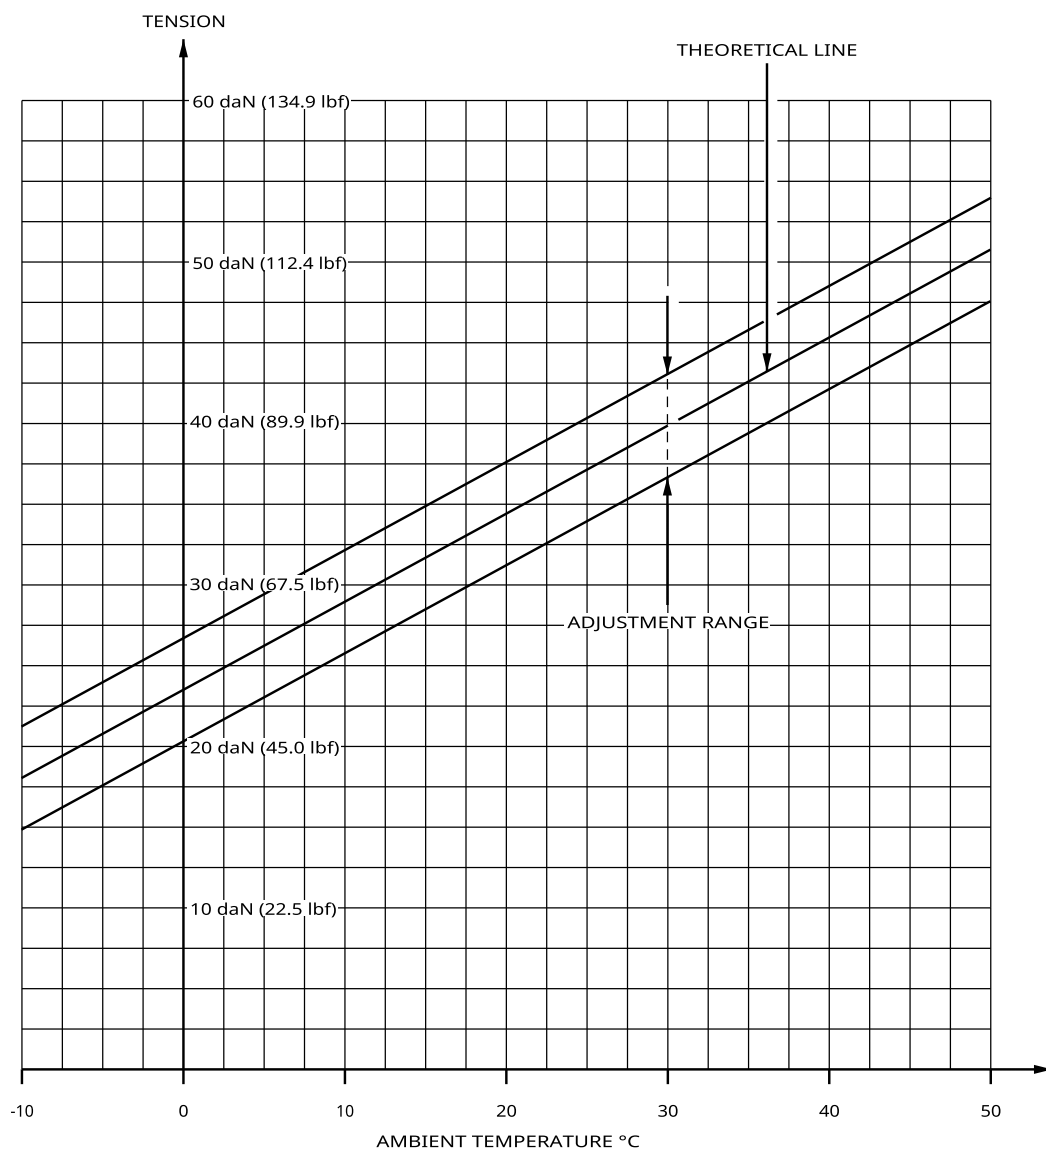

N_MM_323300_6_AYM0_01_00

MLG-Bay Cable-Tension Graph - Weight on Jacks
Figure 1 / Graphic 32-33-00 -991-02300

Copyright of Saudia Technic - Regeneration is not allowed without prior approval by Saudia Technic.



Task Card Title:

FUSELAGE FR 15-21 INSPECTION

Task Card NO:

531164-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.			HRS				

TASK INSTRUCTIONS**Job Description**

A. PERFORM DETAILED VISUAL INSPECTION OF THE FUSELAGE INTERNAL STRUCTURE BELOW THE FORWARD PASSENGER/CREW DOORS AND THE CABIN FLOOR LEVEL FROM FR15 TO FR21 AND BETWEEN THE STRINGERS 28 LEFT AND RIGHT SIDES AS FAR AS YOU CAN SEE PER AMM TASK 53-11-00-210-801-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

TASK INSTRUCTIONS**Job Description**

B. APPLY A LAYER OF TEMPORARY PROTECTION AV8 TO THE INSPECTION AREA.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	INSP/II		HRS				

TASK CLOSE UP**Job Description**

A. OK TO INSTALL THE INSULATION BLANKETS.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

TASK CLOSE UP**Job Description**

B. INSTALL THE INSULATION BLANKETS (REF.AMM TASK 25-80-00-400-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				



MET.32712605

Task Card Title:

FUSELAGE FR 15-21 INSPECTION

Task Card NO:

531164-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**Insp.**

II/INSP

HRS

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

TASK 53-11-00-210-801 -A

On A/C 001-999

Detailed Inspection of Fuselage Internal Structure, Below Forward Passenger/Crew Door and Cabin Floor Level, From FR 15 to FR 21 and Between Stringer 28 LH and Stringer 28 RH, Including NLGB Lateral Panels

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

CAUTION: BE VERY CAREFUL WHEN YOU DO WORK ON OR NEAR THE AIR-CONDITIONING DUCTS. THE DUCTS ARE MADE OF THIN MATERIAL AND YOU CAN EASILY BREAK THEM.

CAUTION: DO NOT PUT YOUR WEIGHT ON THE DUCTS. IT IS VERY EASY TO BREAK THEM.

1. Reason for the Job

Refer to the MPD TASK: 531164-01

DETAILED INSPECTION OF FUSELAGE INTERNAL STRUCTURE, BELOW FORWARD PASSENGER/CREW DOOR AND CABIN FLOOR LEVEL, FROM FR 15 TO FR 21 AND BETWEEN STRINGER 28 LH AND STRINGER 28 RH, INCLUDING NLGB LATERAL PANELS.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE
No specific	1	LIGHT SOURCE - INSPECTION
No specific	1	MIRROR - INSPECTION

B. Consumable Materials

REFERENCE	DESIGNATION
08BAA9	Non Aqueous Cleaner-General - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
14SBA1	Textile-Lint free Cotton -

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
125	LATERAL AVIONIC COMPARTMENT
126	LATERAL AVIONIC COMPARTMENT
812 , 824	

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 25-80-00-000-001-A	Removal of the Insulation Blankets
Ref. AMM 25-80-00-400-001-A	Installation of the Insulation Blankets
Ref. AMM 51-78-00-916-001-A	Application of Temporary Protection System (TPS)
Ref. AMM 52-41-00-010-002-A	Open the Avionics Compartment Doors for Access
Ref. AMM 52-41-00-410-002-A	Close the Avionics Compartment Doors after Access
Ref. SRM 51-11-00	(for corrective action)
Ref. SRM 51-22-00	(for corrective action)
Ref. Fig. (1 / 53-11-00-991-04500)	

3. Job Set-up

Subtask 53-11-00-010-093-C

On A/C 001-999

A. Get Access

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (1) Put the ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE in position below avionics compartment door 812 (824).
- (2) Open avionics compartment door 812 (824) [Ref. AMM 52-41-00-010-002-A](#).
- (3) Remove the applicable insulation blankets between frame 15 and frame 21 to get access to the inspection area [Ref. AMM 25-80-00-000-001-A](#).

Subtask 53-11-00-110-107-A

[On A/C 001-999](#)

B. Preparation of the Inspection Area

- (1) Make sure that the inspection area is sufficiently clean to do a satisfactory inspection of the area.
- (2) If the inspection area is not sufficiently clean, clean it with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (3) If there is a Temporary Protection System (TPS) layer and if it does not let you do a satisfactory inspection, remove the TPS layer
[Ref. AMM 51-78-00-916-001-A](#).
- (4) Use the LIGHT SOURCE - INSPECTION and the MIRROR - INSPECTION to do the inspection.

4. Procedure

Ref. Fig. 1 / 53-11-00-991-04500

Subtask 53-11-00-220-090-A

[On A/C 001-999](#)

A. Inspection

- (1) Do a detailed inspection of the fuselage internal structure below the forward passenger/crew door and the cabin floor level for damage or discontinuities. Do this inspection from frame 15 to frame 21 and between stringer 28 on the left side and stringer 28 on the right side. This inspection includes NLG bay lateral-panels.
- (2) Make sure that there is no:
 - (a) Corrosion (only applicable to metal parts):
 - If you find corrosion, refer to the Structural Repair Manual for the corrosion types, inspection, removal and subsequent corrosion protection
[Ref. SRM 51-22-00](#).
 - (b) Cracks, scratches, gouges, dents, creases or other damage:
 - If you find this type of damage, refer to the Structural Repair Manual for the damage types, classification and corrective action
[Ref. SRM 51-11-00](#).

Subtask 53-11-00-916-065-A

[On A/C 001-999](#)

B. Check and Application of the TPS Layer

- (1) If you removed the TPS layer at the "Preparation of the Inspection Area" paragraph, apply a new layer of the Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) or the Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)
[Ref. AMM 51-78-00-916-001-A](#).
- (2) If you did not remove the TPS layer at the "Preparation of the Inspection Area" paragraph, do a check of the condition and integrity of the TPS layer
[Ref. AMM 51-78-00-916-001-A](#).
- (3) If the TPS layer has local damage, remove the damaged TPS layer and apply a new layer of

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

the Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) or the Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)
[Ref. AMM 51-78-00-916-001-A.](#)

5. Close-up

Subtask 53-11-00-410-093-C

[On A/C 001-999](#)

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the removed insulation blankets between frame 15 and frame 21
[Ref. AMM 25-80-00-400-001-A.](#)
- (3) Close avionics compartment door 812 (824) [Ref. AMM 52-41-00-410-002-A.](#)


Subtask 53-11-00-860-102-A

[On A/C 001-999](#)

B. Put the aircraft back to its initial configuration.

- (1) Remove all the fixtures, tools, test and support equipment used during this procedure.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

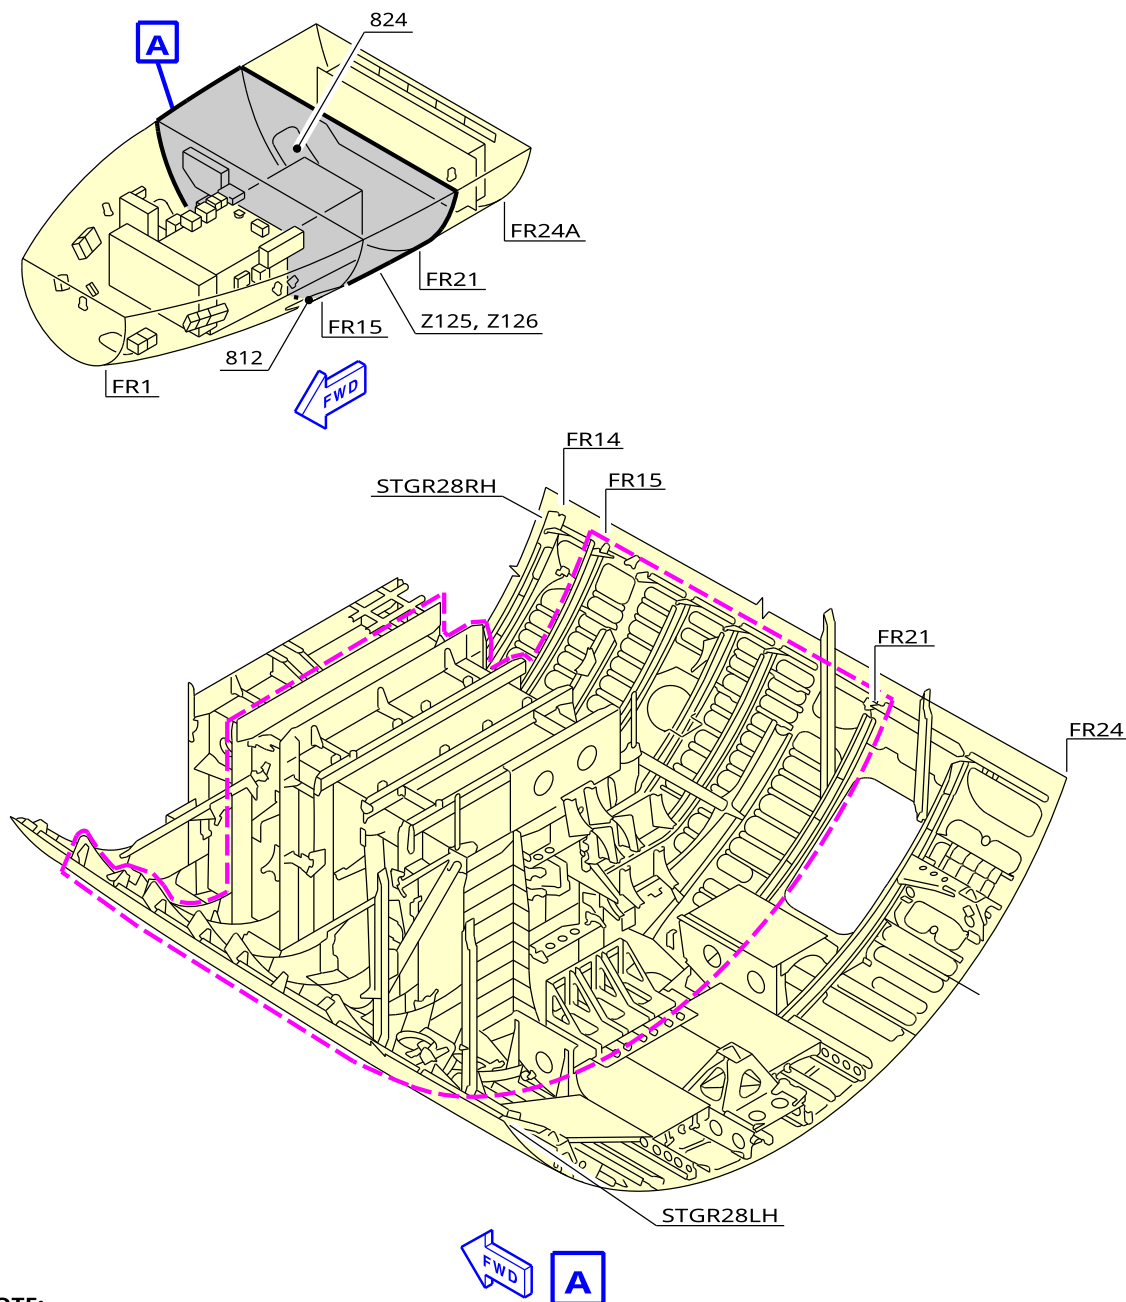

NOTE:
 INSPECTION AREA

N_MM_531100_6_CFM0_01_01

Fuselage Internal Structure Below the Forward Passenger/Crew Door and the Cabin Floor Level, From Frame 15 to Frame 21 and Between Stringer 28 on the Left Side and Stringer 28 on the Right Side, Including NLG Bay Lateral-Panels

Figure 1 / Graphic 53-11-00 -991-04500

TC: 531166-01-2531534 | Prepared by: 30000369 | Printed by 13010253, 16.Aug.2026 | Ref.: Maint. Prog. 32S (11-6/16.jul.2026) produced by **AMOS** www.swiss-as.com



MET.32712603

Task Card Title:

FUSELAGE FR 16-20 INSPECTION



Task Card NO:

531166-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Insp.

HRS

TASK INSTRUCTIONS

Job Description

! NOTE

Ensure to fill the attached TSV# 92-634 along with this task.

A. PERFORM DETAILED VISUAL INSPECTION OF THE FORWARD PASSENGER/CREW DOOR CUTOUT LOWER CORNERS ABOVE THE CABIN FLOOR LEVEL AT FR16 AND FR20 FROM STGR22 TO STGR23 AND AROUND THE GIRT BAR FITTINGS, LEFT AND RIGHT SIDES PER AMM TASK 53-11-00-220-006-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	II/INSP			HRS				

TASK INSTRUCTIONS

Job Description

B. APPLY A LAYER OF TEMPPROARY PROTECTION AV8 AND AV30 TO THE INSPECTION AREA.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS				
Insp.	INSP/II			HRS				

TASK CLOSE UP

Job Description

A. PERFORM AIRCRAFT CLOSE UP PER AMM TASK 53-11-00-220-006-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS				
Insp.	INSP/II			HRS				



MET.32712603

Task Card Title:

FUSELAGE FR 16-20 INSPECTION

Task Card NO:

531166-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different persons updates the system and update the following accordingly (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 2 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 3 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 4 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 5 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

**Task Completion Close Up And
System Update****Station****Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

TASK 53-11-00-220-006 -A

On A/C 001-999

Detailed Inspection of FWD Passenger/Crew Door Cutout Lower Corners Internal Structure above Cabin Floor Level, at FR 16 and FR 20 from Stringer 22 to

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 531166-01

DETAILED INSPECTION OF FWD PASSENGER/CREW DOOR CUTOUT LOWER CORNERS INTERNAL STRUCTURE ABOVE CABIN FLOOR LEVEL, AT FR 16 AND FR 20 FROM STRINGER 22 TO STRINGER 23 AND AROUND GIRT BAR FITTINGS, LH/RH.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	AR	ACCESS PLATFORM 5M (16 FT)- ADJUSTABLE

B. Consumable Materials

REFERENCE	DESIGNATION
08BAA9	Non Aqueous Cleaner-General - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
14SBA1	Textile-Lint free Cotton -

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
221	FWD CAB UTILITY AREA
222	FWD CAB UTILITY AREA
831 , 841	

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 51-78-00-916-001-A	Application of Temporary Protection System (TPS)
Ref. AMM 52-10-00-010-001-A	Opening of the Passenger/Crew Door
Ref. AMM 52-10-00-410-001-A	Closing of the Passenger/Crew Door
Ref. AMM 52-11-31-000-003-A	Removal of the Girt Bar Fittings
Ref. AMM 52-11-31-000-005-A	Removal of the Girt-Bar Fitting Blanking-Plates and Drain Pans
Ref. AMM 52-11-31-400-003-A	Installation of the Girt Bar Fittings
Ref. AMM 52-11-31-400-005-A	Installation of the Girt-Bar Fitting Blanking-Plates and Drain Pans
Ref. SRM 51-11-00	(for corrective action)
Ref. SRM 51-22-00	(for corrective action)
Ref. Fig. (1 / 53-11-00-991-09400)	

3. Job Set-up

Subtask 53-11-00-010-104-A

On A/C 001-999

A. Get Access

- (1) Put an ACCESS PLATFORM 5M (16 FT)- ADJUSTABLE in position at zone 831 (841).
- (2) Open the forward passenger/crew door 831 (841) [Ref. AMM 52-10-00-010-001-A](#).

Subtask 53-11-00-020-070-A

On A/C 001-999

B. Removal of the Component

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (1) Remove the girt bar fittings at the forward passenger/crew doors
[Ref. AMM 52-11-31-000-003-A.](#)
- (2) Remove the girt-bar fitting blanking-plates [Ref. AMM 52-11-31-000-005-A.](#)
- (3) Remove the following components [Ref. AMM 52-11-31-000-005-A:](#)
 - (a) The fitting assembly
 - (b) The plate assembly-nut
 - (c) The pan-drain.

Subtask 53-11-00-110-123-A

[On A/C 001-999](#)

C. Preparation of the Inspection Area

Ref. Fig. (1 / 53-11-00-991-09400)

- (1) Make sure that the inspection area is sufficiently clean to do a satisfactory inspection of the area.
- (2) If the inspection area is not sufficiently clean, clean it with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and the Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (3) If there is a Temporary Protection System (TPS) layer and if it does not let you do a satisfactory inspection, remove the TPS layer
[Ref. AMM 51-78-00-916-001-A.](#)

4. Procedure

Subtask 53-11-00-220-091-A

[On A/C 001-999](#)

A. Inspection

Ref. Fig. (1 / 53-11-00-991-09400)

- (1) Do a detailed inspection of the lower corners of the forward passenger/crew door-cutout (internal structure above the cabin floor level) for damage or discontinuities. Do this inspection at frames 16 and 20, from stringers 22 to 23, and around the girt bar fittings, on the right and left sides.
- (2) Make sure that there is no:
 - (a) Corrosion:
 - If you find corrosion, refer to the Structural Repair Manual for the corrosion types, inspection, removal and subsequent corrosion protection
[Ref. SRM 51-22-00.](#)
 - (b) Cracks, scratches, gouges, dents, creases or other damage:
 - If you find this type of damage, refer to the Structural Repair Manual for the damage types, classification and corrective action
[Ref. SRM 51-11-00.](#)

Subtask 53-11-00-916-073-A

[On A/C 001-999](#)

B. Check and Application of the TPS Layer

- (1) If you removed the TPS layer at the "Preparation of the Inspection Area" paragraph, apply a new layer of Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
[Ref. AMM 51-78-00-916-001-A.](#)

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (2) If you did not remove the TPS layer at the "Preparation of the Inspection Area" paragraph, do a check of the condition and integrity of the TPS layer
[Ref. AMM 51-78-00-916-001-A.](#)
- (3) If the TPS layer has local damage, remove the damaged TPS layer and apply a new layer of Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
[Ref. AMM 51-78-00-916-001-A.](#)

5. Close-up

Subtask 53-11-00-420-067-A

[On A/C 001-999](#)

A. Installation of the Component

- (1) Install the following components [Ref. AMM 52-11-31-400-005-A:](#)
 - (a) The pan-drain
 - (b) The plate assembly-nut
 - (c) The fitting assembly.
- (2) Install the girt-bar fitting blanking-plates [Ref. AMM 52-11-31-400-005-A.](#)
- (3) Install the girt bar fittings at the forward passenger/crew doors [Ref. AMM 52-11-31-400-003-A.](#)


Subtask 53-11-00-410-104-A

[On A/C 001-999](#)

B. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Close the forward passenger/crew door 831 (841) [Ref. AMM 52-10-00-410-001-A.](#)
- (3) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

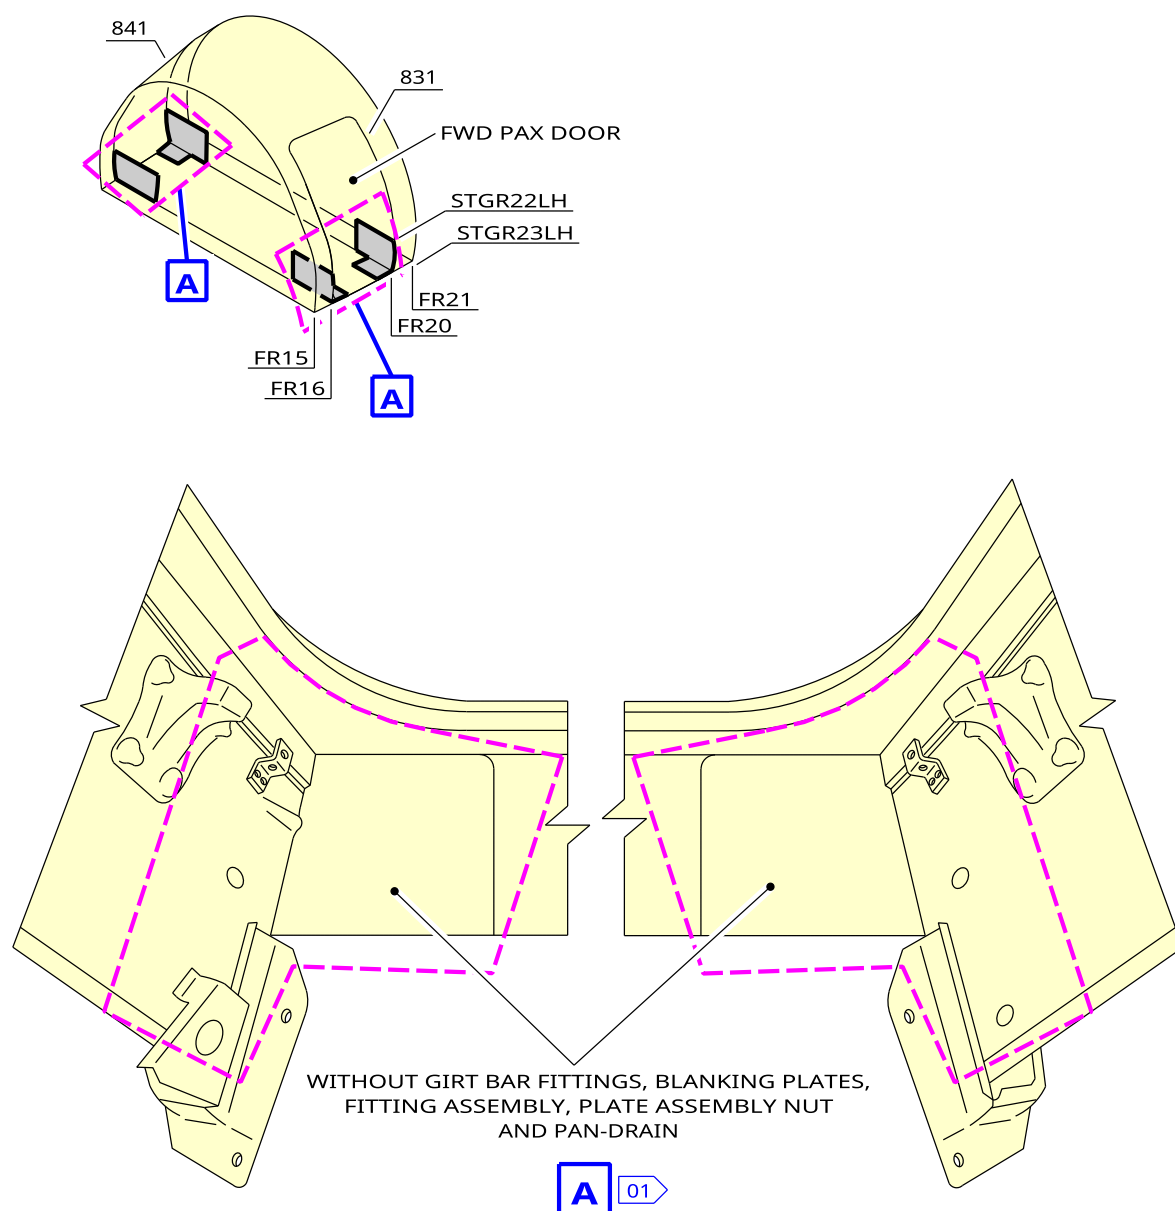

NOTE:

01 RH SHOWN, LH SYMMETRICAL

INSPECTION AREA

N_MM_531100_6_FBM0_01_01

Forward Passenger/Crew Door-Cutout Lower-Corners
Figure 1 / Graphic 53-11-00 -991-09400

 MET.32712608		Task Card Title: CABIN FLOOR STRUCT FR12 & FR21 INSP			
Task Card NO: 531189-01-2		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD	
A/C Type: 320		Block Taskcard		Main Skill: II,INSP,CAB,ACFT_TECH	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05	
Internal Check:		Check Type:		Work Order NO: 32797253	
Tally Sequence NO: 56		ENCLOSURE: ☒ CMR: ☐ CPCP: ☒ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐			
Type Code: DET		Special Code: INSP		MSG Code: CPCP, MRB	
Request: ON,INSPECTION,JOB-C LOSEUP,INSPECTION,J OB-CLOSEUP					
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.					
Zones: 211,212,221,222,231,232					
DOCUMENT REFERENCES:					
Doc Typ		Reference			
AMM		53-11-00-210-049-A			
ACCESS PANELS:					
MATERIAL REQUIREMENTS:					
Part Number		Description			Qty.
ARDROX AV30		PREVENTIVE - HEAVY DUTY HARD FILM			1.0
ARDROXAV8		PREVENTIVE- WATER DISPLACE HARD FILM			1.0
LINTFREECOTTONCLO*		LINT-FREE COTTON CLOTH			3.0
SKYFLEX GSC21-950XX-010		SEALING PROFILE - PTFE EXPANDED			1.0
LOTOXANE		NON-AQUEOUS CLEANER			1.0
EN6131-3C1		NUT-CLIP			100.0
ABS0376-3-25		SCREW,,FOR THE FLOOR PANELS,,			200.0
ABS0376-3-30		SCREW U/O A5327504000860			200.0
ABS5784AB3-3		SEAT RAIL SELF ADHESIVE - L SHAPE			0.0
ABS5784AB3-3		SEAT RAIL SELF ADHESIVE - L SHAPE			26.0
TOOLING REQUIREMENTS:					
Part Number		Description			Qty.
No tools assigned to this Task Item					
TASK PREPARATION					
Job Description					
A. PREPARE THE AREA FOR INSPECTION AS FOLLOWS :					
(1) GET ACCESS AS PER AMM 53-11-00-210-049-A, SUBTASK 53-11-00-010-083-A.					
(2) REMOVE THE LAVATORY " A " AND GALLEYS AS PER AMM TASK 25-41-00-00 (IF INSTALLED).					
(3) REMOVE THE FLOOR PANELS FROM FR 12 TO FR 21 AS PER AMM TASK 53-12-12-000-001-A.					



Task Card Title:

CABIN FLOOR STRUCT FR12 & FR21 INSP

Task Card NO:

531189-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.			HRS				

TASK PREPARATION**Job Description**

A. REMOVE THE ADHESIVE TAPES AS PER SUBTASK 53-11-00-020-099-A

B. CLEAN THE INSPECTION AREA AS REQUIRED WITH CLEANING AGENTS AND A LINT FREE COTTON CLOTH AS PER SUBTASK 53-11-00-110-097-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.			HRS				

TASK INSTRUCTIONS**Job Description****NOTE**

Ensure to fill the attached TSV# 92-634 along with this task.

A. PERFORM A DETAILED VISUAL INSPECTION OF THE STRUCTURE OF THE CABIN FLOOR BETWEEN FR 12 AND FR 21 AS PER AMM TASK 53-11-00-210-049-A.



MET.32712608

Task Card Title:

CABIN FLOOR STRUCT FR12 & FR21 INSP

Task Card NO:

531189-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	II/INSP		HRS				

TASK CLOSE UP**Job Description**

A. CHECK AND APPLICATION OF THE TPS LAYER AS PER SUBTASK 53-11-00-916-060-A



DO NOT APPLY TEMPORARY PROTECTION SYSTEM (TPS) TYPE 3 OR 1+2 ON THE MOVABLE COMPONENTS. USE ONLY TPS TYPE 1 GRADE 2. IF YOU DO NOT OBEY THIS INSTRUCTION, THE MECHANISMS WILL NOT OPERATE CORRECTLY.

B. INSTALLATION OF THE ADHESIVE TAPES AS PER SUBTASK 53-11-00-420-107-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.	II/INSP		HRS				

OK TO INSTALL**Job Description**

A. OK TO INSTALL FLOOR PANELS.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

TASK CLOSE UP**Job Description**



MET.32712608

Task Card Title:

CABIN FLOOR STRUCT FR12 & FR21 INSP

Task Card NO:

531189-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

A. INSTALL FLOOR PANELS FROM FR 12 TO FR 21 AS PER AMM TASK 53-12-12-400-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.	INSP/II			HRS			

OK TO INSTALL**Job Description**

A OK TO INSTALL LAVATORY " A " .

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s				HRS			
Insp.	INSP/II			HRS			

TASK CLOSE UP**Job Description**

A. INSTALL LAVATORY " A " AND GALLEYS AS PER AMM TASK 53-11-00-210-049-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.	INSP/II			HRS			

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____



MET.32712608

Task Card Title:

CABIN FLOOR STRUCT FR12 & FR21 INSP

Task Card NO:

531189-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

TASK 53-11-00-210-049 -A

On A/C 001-999

Detailed Inspection of Cabin Floor Structure Between FR 12 and FR 21

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 531189-01

DETAILED INSPECTION OF CABIN FLOOR STRUCTURE BETWEEN FR 12 AND FR 21

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	AR	ACCESS PLATFORM 5M (16 FT)- ADJUSTABLE
On A/C 051-350		
No specific	1	SCRAPER - NON METALLIC

B. Consumable Materials

REFERENCE	DESIGNATION
08BAA9	Non Aqueous Cleaner-General - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
14JAD1	Sealing Profile-- PTFE Expanded -
On A/C 001-999	
14SBA1	Textile-Lint free Cotton -

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
211	COCKPIT
212	COCKPIT
221	FWD CAB UTILITY AREA
222	FWD CAB UTILITY AREA
231	FWD PASSENGER COMPARTMENT
232	FWD PASSENGER COMPARTMENT
831 , 841	

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 51-78-00-916-001-A	Application of Temporary Protection System (TPS)
Ref. AMM 52-10-00-010-001-A	Opening of the Passenger/Crew Door
Ref. AMM 52-10-00-410-001-A	Closing of the Passenger/Crew Door
Ref. AMM 53-12-12-000-001-A	Removal of the Cabin Floor Panels from FR12 thru FR24
Ref. AMM 53-12-12-400-001-A	Installation of the Cabin Floor Panels from FR12 thru FR24
Ref. SRM 51-11-00	(for corrective action)
Ref. SRM 51-22-00	(for corrective action)
Ref. AMM 25-31-00-00	FORWARD GALLEY - DESCRIPTION AND OPERATION
Ref. AMM 25-41-00-00	FORWARD LAVATORIES - DESCRIPTION AND OPERATION
On A/C 051-350	
Ref. Fig. (1 / 53-11-00-991-19300)	
Ref. Fig. (1 / 53-11-00-991-06100)	

3. Job Set-up

Subtask 53-11-00-010-083-A

On A/C 001-999

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

A. Get Access

- (1) Put an ACCESS PLATFORM 5M (16 FT)- ADJUSTABLE in position at zone 831 (841).
- (2) Open the forward passenger/crew door 831 (841), [Ref. AMM 52-10-00-010-001-A](#).
- (3) Remove the galleys and lavatories, if installed
To do this, refer to the para. Component Location in the applicable ATA 25 Description/
Operation: for the galleys [Ref. AMM 25-31-00-00](#), for the lavatories [Ref. AMM 25-41-00-00](#).
In this paragraph, you will find the cross-references of the removal/installation tasks.
- (4) Remove the floor panels from FR12 to FR21 [Ref. AMM 53-12-12-000-001-A](#).

Subtask 53-11-00-020-099-A

[On A/C 051-350](#)

[EMB SB 53-1483 for A/C 051-055; 101-115; 201-230](#)

B. Removal of the Adhesive Tapes

[On A/C 051-350](#)

[EMB SB 53-1483 for A/C 051-055; 101-115; 201-230](#)

Ref. Fig. (1 / 53-11-00-991-19300)

- (1) Use the SCRAPER - NON METALLIC and remove the adhesive tapes (1) from the cabin floor structure between frame 12 and frame 21, and discard them.

Subtask 53-11-00-110-097-A

[On A/C 001-999](#)

C. Preparation of the Inspection Area

- (1) Make sure that the inspection area is sufficiently clean to do a satisfactory inspection of the area.
- (2) If the inspection area is not sufficiently clean, clean it with
Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a Textile-Lint free Cotton -
(Material No. **14SBA1**) .
- (3) If there is a Temporary Protection System (TPS) layer and if it does not let you do a
satisfactory inspection, remove the TPS layer
[Ref. AMM 51-78-00-916-001-A](#).

4. Procedure

Subtask 53-11-00-220-063-A

[On A/C 001-999](#)

A. Inspection

Ref. Fig. (1 / 53-11-00-991-06100)

- (1) Do a detailed inspection of the cabin floor structure for damage or discontinuities. Do this inspection between frame 12 and frame 21.
- (2) Make sure that there is (are) no:
 - (a) Corrosion (only applicable to metal parts):
 - If you find corrosion, refer to the Structural Repair Manual for the corrosion types, inspection, removal and subsequent corrosion protection
[Ref. SRM 51-22-00](#).
 - (b) Cracks, scratches, gouges, dents, creases or other damage:
 - If you find this type of damage, refer to the Structural Repair Manual for the damage types, classification and corrective action
[Ref. SRM 51-11-00](#).

Subtask 53-11-00-916-060-A

[On A/C 001-999](#)

B. Check and Application of the TPS Layer

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

CAUTION: DO NOT APPLY TEMPORARY PROTECTION SYSTEM (TPS) TYPE 3 OR 1+2 ON THE MOVABLE COMPONENTS. USE ONLY TPS TYPE 1 GRADE 2. IF YOU DO NOT OBEY THIS INSTRUCTION, THE MECHANISMS WILL NOT OPERATE CORRECTLY.

- (1) If you removed the TPS layer at the "Preparation of the Inspection Area" paragraph, apply a new layer of the TPSs that follow [Ref. AMM 51-78-00-916-001-A](#):
 - The Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and the Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) , or
 - The Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and the Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**) .
- (2) If you did not remove the TPS layer at the "Preparation of the Inspection Area" paragraph, do a check of the condition and integrity of the TPS layer
[Ref. AMM 51-78-00-916-001-A](#).
- (3) If the TPS layer has local damage, remove the damaged TPS layer and apply a new layer of the TPSs that follow [Ref. AMM 51-78-00-916-001-A](#):
 - The Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and the Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) , or
 - The Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and the Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**) .

5. Close-up

Subtask 53-11-00-420-107-A

[On A/C 051-350](#)

[EMB SB 53-1483 for A/C 051-055; 101-115; 201-230](#)

A. Installation of the Adhesive Tapes

[On A/C 051-350](#)

[EMB SB 53-1483 for A/C 051-055; 101-115; 201-230](#)

Ref. Fig. (1 / 53-11-00-991-19300)

- (1) Remove the remaining adhesive from the cabin floor structure between frame 12 and frame 21 with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a clean Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (2) Make sure that the clip nuts are clean and in the correct condition:
 - (a) If the clip nuts are damaged, replace them.
- (3) Install the adhesive tapes (1) on the cabin floor structure between frame 12 and frame 21 as follows:
 - (a) Cut the new Sealing Profile-- PTFE Expanded - (Material No. **14JAD1**) (1) to the same dimension as the removed adhesive tapes (1).
 - (b) Apply the Sealing Profile-- PTFE Expanded - (Material No. **14JAD1**) (1) on the full width of the beams:

NOTE : The Sealing Profile-- PTFE Expanded - (Material No. **14JAD1**) is available in different widths.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- 1 If one adhesive tape (1) is not sufficient for the width of the beam, use more adhesive tapes (1).
 - 2 Make sure that the adhesive tape (1) of larger width is put on top of the adhesive tape (1) of smaller width.
 - 3 Make sure that you do not make overlaps of more than three adhesive tapes (1).
- (c) Make sure that the adhesive tapes (1) extend 2 mm (0.0787 in.) more than the rail edges.
- (d) Make sure that the adhesive tapes (1) are flush with the plugs:
- 1 If the adhesive tapes (1) are not flush with the plugs, cut the adhesive tapes (1) to make them flush.
- (e) Make sure that there is no adhesive tape (1) on the hard points on the cabin floor structure.


Subtask 53-11-00-410-083-A

On A/C 001-999

B. Close Access

- (1) Install the floor panels from FR12 to FR21 [Ref. AMM 53-12-12-400-001-A](#).
- (2) Install the galleys and lavatories, if removed
To do this, refer to the para. Component Location in the applicable ATA 25 Description/ Operation: for the galleys [Ref. AMM 25-31-00-00](#), for the lavatories [Ref. AMM 25-41-00-00](#).
In this paragraph, you will find the cross-references of the removal/installation tasks.
- (3) Close the forward passenger/crew door 831 (841), [Ref. AMM 52-10-00-410-001-A](#).
- (4) Remove the access platform(s).

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

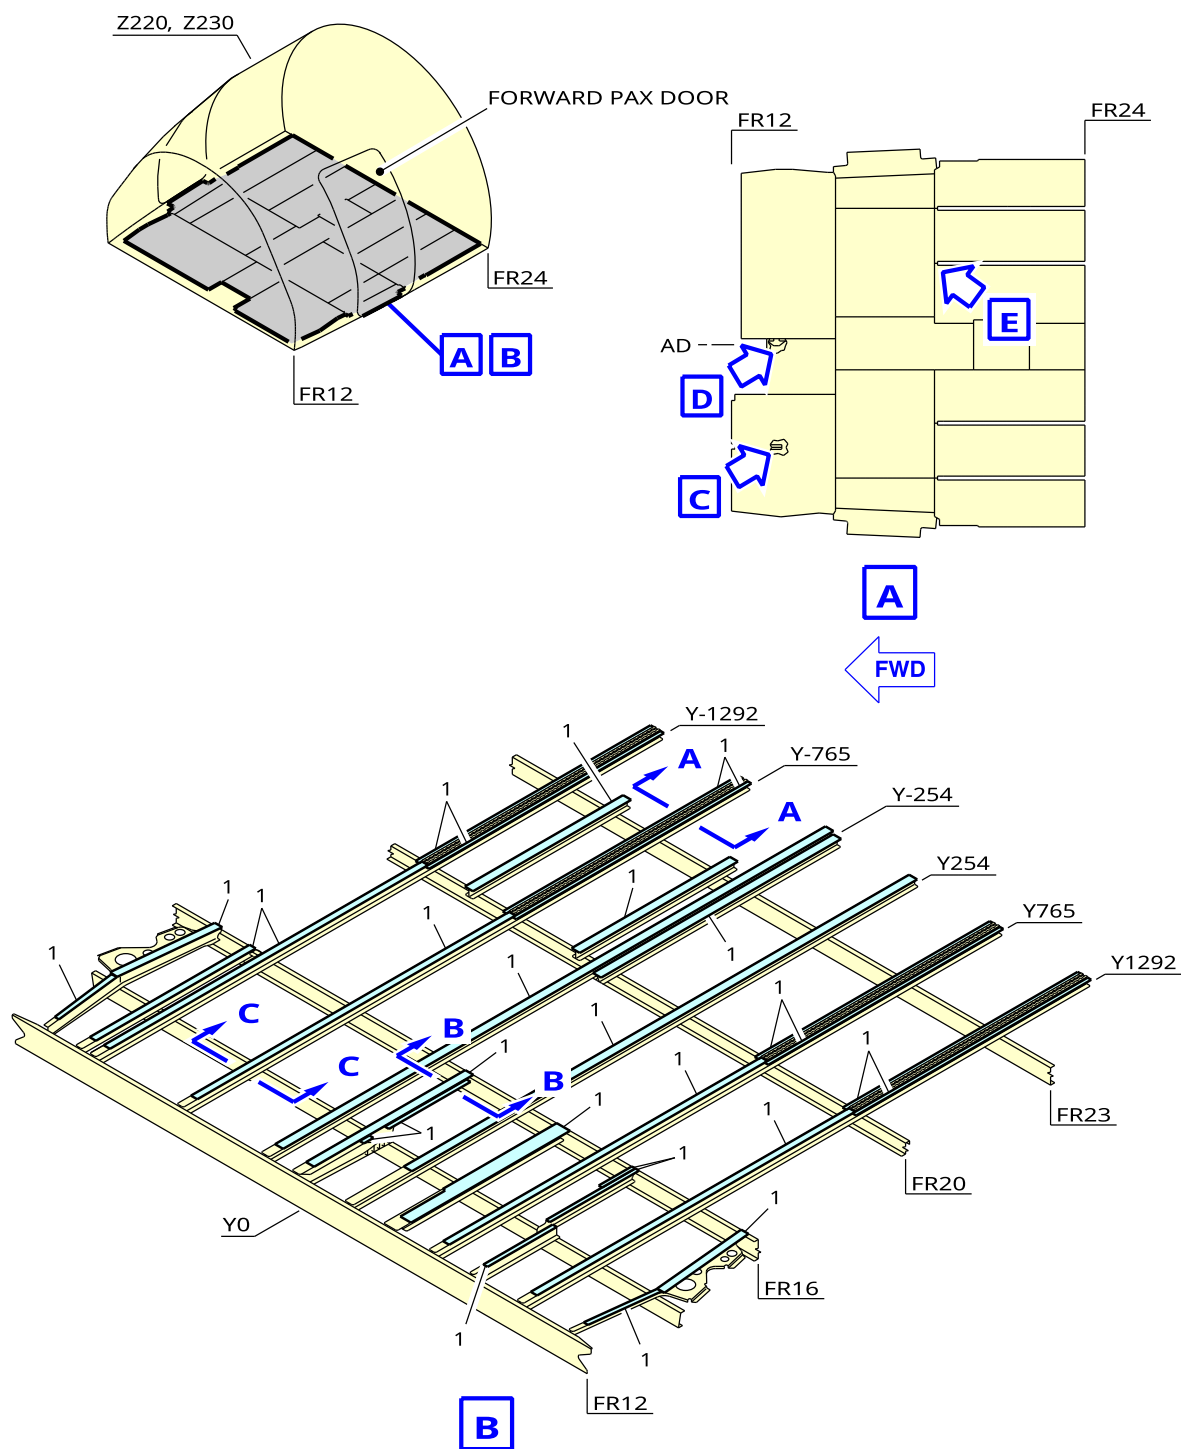

N_MM_531100_6_SMD0_01_00


Adhesive Tapes on the Cabin Floor Structure

Figure 1 / Graphic 53-11-00 -991-19300


On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230


TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

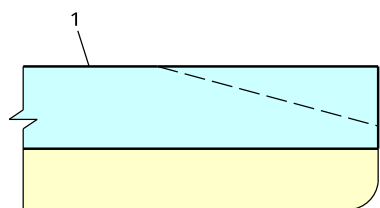


C

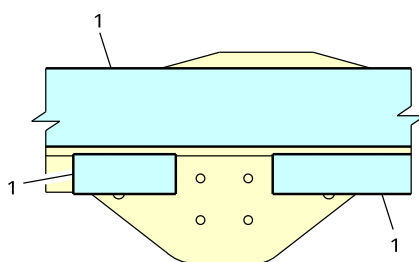

D

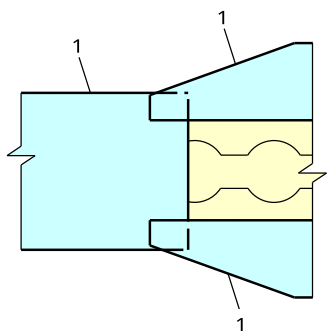


E

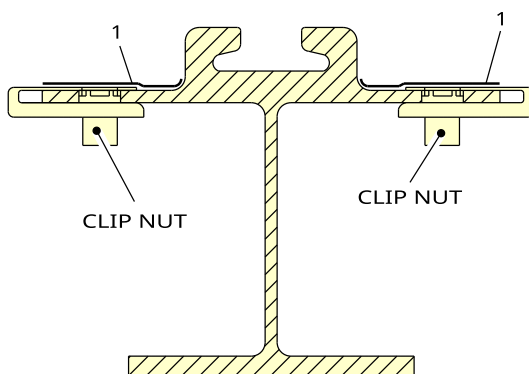


A-A

VIEW LOOKING AFT

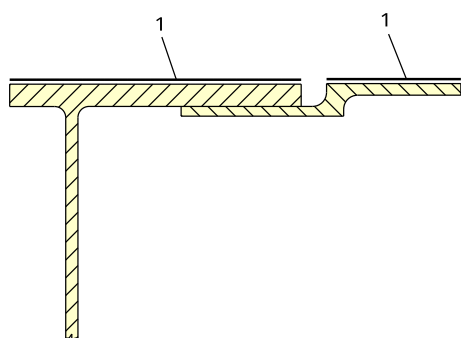

B-B

VIEW LOOKING AFT

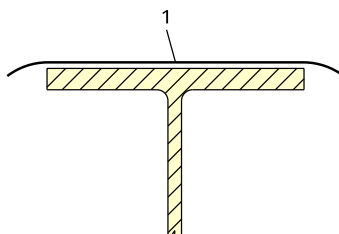

C-C

VIEW LOOKING AFT

N_MM_531100_6_SMD0_02_00


Adhesive Tapes on the Cabin Floor Structure

Figure 2 / Graphic 53-11-00 -991-19300

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

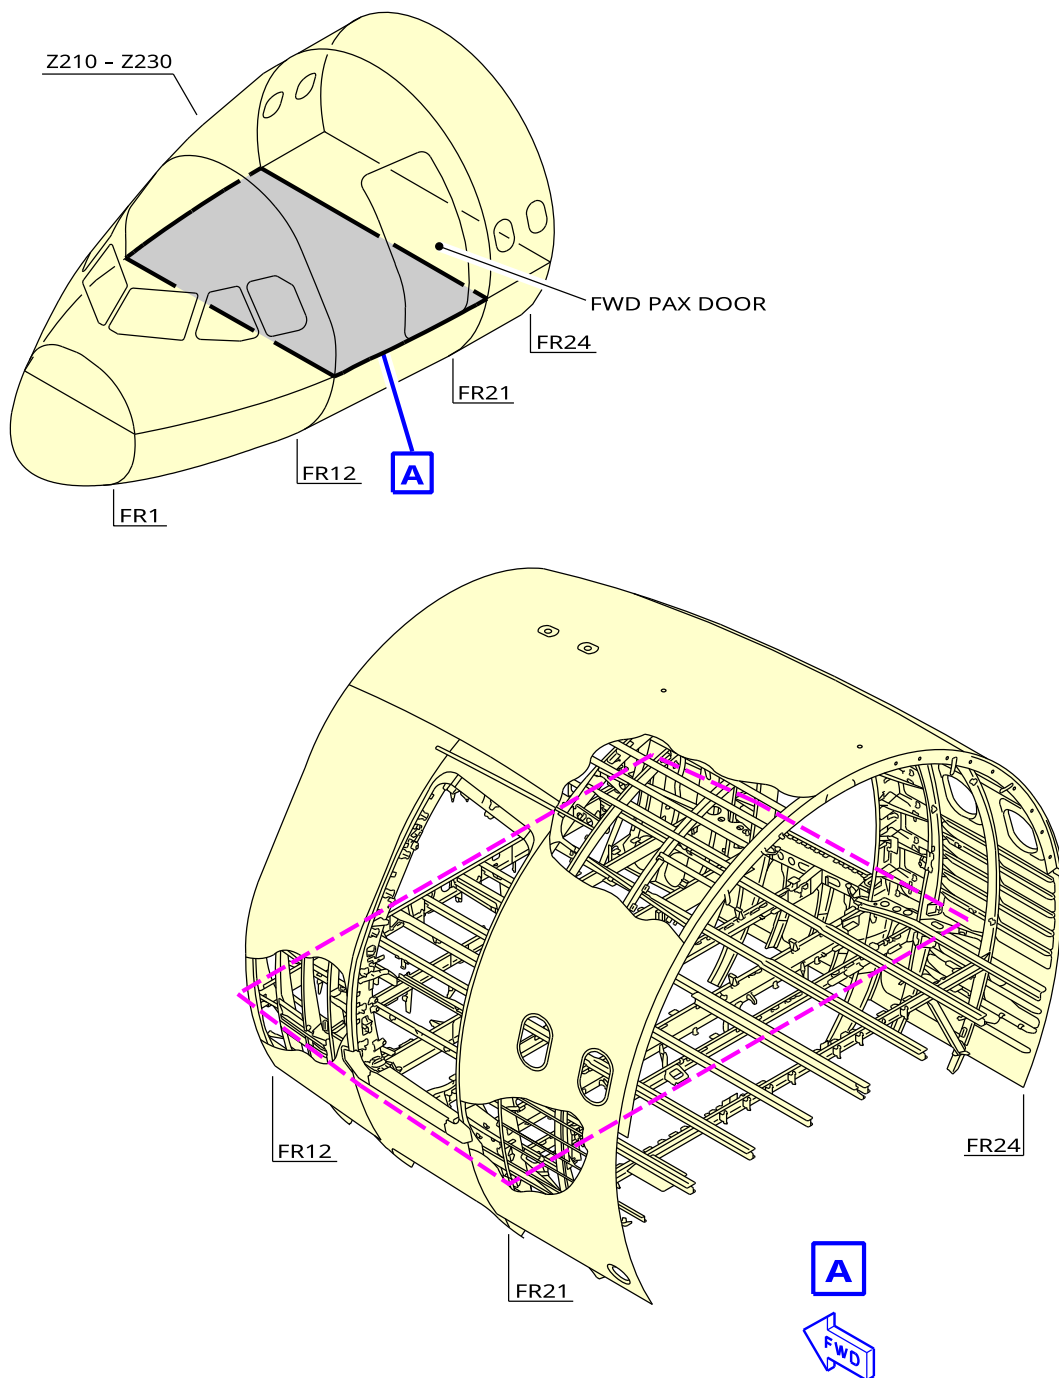

NOTE:
 INSPECTION AREA

N_MM_531100_6_DLM0_01_01

Floor Structure FR12 to FR21
 Figure 1 / Graphic 53-11-00 -991-06100
 On A/C 001-999

 MET.32712651		Task Card Title: FLOOR STRUCTURE FR21 TO FR24 INSP				
Task Card NO: 531194-01-2		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD		
A/C Type: 320		Block Taskcard		Main Skill: II,INSP,CAB,ACFT_TECH		PROD Final Acceptance:
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05		
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 57
ENCLOSURE: ☒ CMR: ☐ CPCP: ☒ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐						
Type Code: DET		Special Code: INSP		MSG Code: CPCP, MRB		Request: INSPECTION, TC/P, JOB-CLOSEUP, JOB-CLOSEUP, P, JOB-CLOSEUP
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRIED OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.						
Zones: 221,222,231,232						
DOCUMENT REFERENCES:						
Doc Typ		Reference				
AMM		53-11-00-220-003-A				
AMM		53-12-12-000-001-A				
AMM		51-78-00-916-001-A				
AMM		53-12-12-400-001-A				
AMM		531100-220-003				
ACCESS PANELS:						
MATERIAL REQUIREMENTS:						
Part Number		Description				Qty.
14SBA1		TEXTILE - LINT FREE COTTON AMS3819				1.0
ARDROX AV30		PREVENTIVE - HEAVY DUTY HARD FILM				1.0
LOTOXANE		NON-AQUEOUS CLEANER				1.0
MASKING TAPE		MASKING TAPE				1.0
ARDROX AV30		PREVENTIVE - HEAVY DUTY HARD FILM				1.0
TOOLING REQUIREMENTS:						
Part Number		Description				Qty.
No tools assigned to this Task Item						
1. JOB SET-UP						
Job Description						
1. PERFORM JOB SET-UP FOR DETAILED INSPECTION OF CABIN FLOOR STRUCTURE, BELOW AND 0.5M AROUND GALLEYS AND TOILETS, BETWEEN FR 21 AND FR 24 PER AMM 53-11-00-220-003-A AS FOLLOWING A) REMOVE THE GALLEYS AND LAVATORIES BETWEEN FR21 AND FR24 (IF AVAILABLE) B) REMOVE THE NECESSARY CABIN FLOOR PANELS BETWEEN FR21 AND FR24 TO GET ACCESS TO THE INSPECTION AREA AS PER REF AMM TASK 53-12-12-000-001.						
STEP COMPLETION SIGN OFF:						
Qualification / Skill		Number of employees	Duration	Number./Signature	Date	
					Day	Month
					Year	



MET.32712651

Task Card Title:

FLOOR STRUCTURE FR21 TO FR24 INSP

Task Card NO:

531194-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Mechanic/s

CAB/ACFT_TECH

HRS

Insp.

HRS

2. PREPARATION OF THE INSPECTION AREA**Job Description**

A) PERFORM CLEANING OF THE INSPECTION AREA AS PER AMM TASK 53-11-00-220-003-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.			HRS				

3.TASK INSTRUCTIONS**Job Description****NOTE**

Ensure to fill the attached TSV# 92-634 along with this task.

A) PERFORM DETAILED VISUAL INSPECTION OF CABIN FLOOR STRUCTURE BELOW AND 0.5 M (19.685 IN.) AROUND THE GALLEYS AND THE LAVATORIES, BETWEEN FR21 AND FR24 AS PER AMM TASK 53-11-00-220-003-A.

NOTE:

MAKE SURE THAT THERE IS NO CORROSION DAMAGE AND OTHER DAMAGE (SCRATCHES, CRACKS, GOUGES, DENTS, CREASES)

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	II/INSP		HRS				

3.TASK INSTRUCTIONS**Job Description**

B) PERFORM THE APPLICATION OF THE TEMPORARY PROTECTION SYSTEM AND APPLY CORROSION PREVENTIVE ARDROX AV 30 AS PER AMM TASK 53-11-00-220-003-A AND AMM 51-78-00-916-001-A.



MET.32712651

Task Card Title:

FLOOR STRUCTURE FR21 TO FR24 INSP

Task Card NO:

531194-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.	II/INSP			HRS			

4.INSTALLATION OF CABIN FLOOR PANELS BETWEEN FR21 AND FR24**Job Description**

A) OK TO INSTALL THE CABIN FLOOR PANELS FROM FR21 THRU FR24.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s				HRS			
Insp.	INSP/II			HRS			

4. INSTALLATION OF THE CABIN FLOOR PANELS BETWEEN FR21 AND FR24**Job Description**

B) INSTALL THE CABIN FLOOR PANELS BETWEEN FR21 AND FR24 REF PER AMM TASK 53-12-12-400-001.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.	INSP/II			HRS			

5. JOB-CLOSEUP**Job Description**

A) PERFORM JOB CLOSE UP AS PER AMM 53-11-00-220-003-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.				HRS			

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____



MET.32712651

Task Card Title:

FLOOR STRUCTURE FR21 TO FR24 INSP

Task Card NO:

531194-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

TASK 51-78-00-916-001 -A

On A/C 001-999

Application of Temporary Protection System (TPS)

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

CAUTION: DO NOT APPLY THE CLEANING AGENTS TO THESE PARTS:

- BEARINGS, ACTUATORS, FITTINGS
- ACRYLICS OR POLYCARBONATE MATERIALS
- ELECTRICAL HARNESSSES, SENSORS, CONNECTORS.

CLEANING AGENT ON OR IN THESE PARTS CAN CAUSE DAMAGE.

CAUTION: DO NOT APPLY TEMPORARY PROTECTION ON THE OXYGEN SYSTEMS. MAKE SURE THAT THE TEMPORARY PROTECTION DOES NOT GET:

- ON COMPOSITE PARTS, CONTROL CABLES, PULLEYS,TEFLON BEARINGS.
- ON LUBRICATED SURFACES.
- IN DRAIN VALVES OR OTHER ORIFICES.

TEMPORARY PROTECTION ON OR IN THESE PARTS CAN CAUSE DAMAGE.

1. Reason for the Job

This task is for the:

- Removal of the TPS
- New application of the TPS.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 10M (33 FT) - ADJUSTABLE
No specific	1	BRUSH - BRISTLED, SOFT
No specific	1	BRUSH - NON METALLIC
No specific	AR	CAP - BLANKING
No specific	1	HOT AIR BLOWER OPERATING 40 DEG C(104 F)
No specific	1	SCRAPER - NON METALLIC
No specific	1	VACUUM EQUIPMENT 0 TO 0.4 BAR (6 PSI)

B. Consumable Materials

REFERENCE	DESIGNATION
05RDA1	Adhesive Film Tape-Masking - -
08BAA9	Non Aqueous Cleaner-General - -
08BBB1	Non Aqueous Cleaner-- Petroleum Based -
08BBC1	Non Aqueous Cleaner-- Naphta based and Alcohol -
08BDA1	Non Aqueous Cleaner-Wax and grease remover - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
12ADB1	Corrosion Preventive Compound-Water Displacing & Heavy Duty Hard Film -
14SBA1	Textile-Lint free Cotton -

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-38-51-000-001-A	Removal of the Battery

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

REFERENCE	DESIGNATION
Ref. AMM 24-38-51-400-001-A	Installation of the Battery
Ref. AMM 24-41-00-861-002-A	Energize the Aircraft Electrical Circuits from the External Power
Ref. AMM 24-41-00-861-002-A-01	Energize the Aircraft Electrical Circuits from the APU
Ref. AMM 24-41-00-861-002-A-02	Energize the Aircraft Electrical Circuits from Engine 1(2)
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 24-42-00-861-001-A	Energize the Ground Service Network from the External Power
Ref. AMM 24-42-00-862-001-A	De-energize the Ground Service Network Supplied from the External Power
Ref. Fig. (1 / 51-78-00-991-00200)	

3. Job Set-up

Subtask 51-78-00-860-050-A

On A/C 001-999

A. Aircraft Maintenance Configuration

- (1) Energize the ground service network

[Ref. AMM 24-42-00-861-001-A.](#)

- (2) If necessary, put a ACCESS PLATFORM 10M (33 FT) - ADJUSTABLE in position.

WARNING: YOU MUST PUT ON AND ATTACH A SAFETY HARNESS BEFORE YOU START WORK:

- ON THE THS OR IN THE REAR FUSELAGE
- ON TOP OF THE WINGS OR PYLONS.

WITHOUT A SAFETY HARNESS, YOU CAN FALL. THIS CAN KILL YOU OR CAUSE YOU INJURY.

- (3) Put on and attach a SAFETY HARNESS before you start work in the work area.

Subtask 51-78-00-941-063-A

On A/C 001-999

B. Safety Precautions

- (1) De-energize the aircraft electrical circuits [Ref. AMM 24-41-00-862-002-A](#)
[Ref. AMM 24-41-00-862-002-A-01](#) [Ref. AMM 24-41-00-862-002-A-02.](#)
- (2) Disconnect the electrical connector from the battery [Ref. AMM 24-38-51-000-001-A.](#)
- (3) Put the CAP - BLANKING on each disconnected electrical connector and receptacle.
- (4) Do not spray the cleaning solution directly on the electrical connection.

Subtask 51-78-00-941-057-A

On A/C 001-999

C. Get Access

- (1) Get access to the area(s) where you will do the inspection/check.

Subtask 51-78-00-010-056-A

On A/C 001-999

D. Removal of Components

- (1) Remove all the components necessary from the TPS inspection/check area.
- (2) Remove all the insulation blankets/material from the inspection/check area.

4. Procedure

Ref. Fig. 1 / 51-78-00-991-00200

Subtask 51-78-00-210-051-A

On A/C 001-999

A. Inspection of the Temporary Protection System (TPS)

- (1) Inspect the area where the TPS is applied.

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

- (2) If the TPS is in the correct condition, a secondary layer of the same TPS can be applied over the first layer.
- (3) If the TPS is not in the correct condition, remove the TPS, clean the area and apply a new layer of the correct TPS type.
- (4) If the TPS has been removed for an inspection, apply a new layer of the TPS to the inspection area.
- (5) If the TPS layer is locally damaged, remove and apply a new layer of the TPS on the damaged areas.

Subtask 51-78-00-160-052-A

On A/C 001-999

B. Cleaning and/or Removal of the Temporary Protective System (TPS)

- (1) Does the MPD task make the removal of the TPS necessary.
 - (a) If the TPS does not need to be removed, clean the inspection area with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a clean lint-free cloth Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (2) If it is necessary to remove the TPS, you must use a SCRAPER - NON METALLIC or VACUUM EQUIPMENT 0 TO 0.4 BAR (6 PSI) and BRUSH - NON METALLIC.
- (3) Apply the cleaning agents to the TPS:
 - (a) Apply a layer of the Non Aqueous Cleaner-- Petroleum Based - (Material No. **08BBB1**) or Non Aqueous Cleaner-- Naphta based and Alcohol - (Material No. **08BBC1**) on the TPS with a BRUSH - NON METALLIC.
 - (b) Remove the TPS with a SCRAPER - NON METALLIC.
 - (c) If the TPS is a hard wax compound, apply a layer of Non Aqueous Cleaner-Wax and grease remover - - (Material No. **08BDA1**) with BRUSH - NON METALLIC.
 - (d) The Non Aqueous Cleaner-Wax and grease remover - - (Material No. **08BDA1**) must soak into the TPS for a minimum of 20 minutes to make the compound soft.
 - (e) Remove the TPS with a SCRAPER - NON METALLIC.
- (4) Flush the work area with warm water.

WARNING: BE CAREFUL WHEN YOU DO THIS PROCEDURE. THE AIRFLOW CAN BE HOT AND HOT AIR CAN CAUSE BURNS.

- (5) Dry the area with a HOT AIR BLOWER OPERATING 40 DEG C(104 F).
- (6) Use the VACUUM EQUIPMENT 0 TO 0.4 BAR (6 PSI) to remove any loose particles from the work area.

Subtask 51-78-00-916-054-A

On A/C 001-999

C. Application of the Temporary Protection System (TPS)

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

CAUTION: DO NOT APPLY TEMPORARY PROTECTION ON THE OXYGEN SYSTEMS. MAKE SURE THAT THE TEMPORARY PROTECTION DOES NOT GET:

- ON COMPOSITE PARTS, CONTROL CABLES, PULLEYS,TEFLON BEARINGS.
- ON LUBRICATED SURFACES.
- IN DRAIN VALVES OR OTHER ORIFICES.

TEMPORARY PROTECTION ON OR IN THESE PARTS CAN CAUSE DAMAGE.

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

CAUTION: DO NOT APPLY TEMPORARY PROTECTION SYSTEM (TPS) TYPE 3 OR 1+2 ON THE MOVABLE COMPONENTS. USE ONLY TPS TYPE 1 GRADE 2. IF YOU DO NOT OBEY THIS INSTRUCTION, THE MECHANISMS WILL NOT OPERATE CORRECTLY.

- (1) Apply the TPS on the surface of the inspection area if:
 - You cleaned the TPS with the solvents, alkaline cleaners, high pressure water and solvent or steam and solvents
 - You removed the TPS with the SCRAPER - NON METALLIC or BRUSH - NON METALLIC.
- (2) The three types of TPS are:
 - TPS type 1 grade 2 Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) or TPS type 1 grade 3 Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)
 - TPS type 2, Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
 - TPS type 3, Corrosion Preventive Compound-Water Displacing & Heavy Duty Hard Film - (Material No. **12ADB1**) .
- (3) Make sure the correct TPS type is applied to the surface.
- (4) If TPS type 1 has been removed, apply the same TPS type 1 to the surface.
- (5) If TPS type 2 has been removed, apply the same TPS type 2 to the surface.
- (6) If TPS type 1 and TPS type 2 have been applied in an inspection area and are removed:
 - Apply the same TPS type 1 and type 2 or, as an alternative, apply the TPS type 3 to the inspection area.
- (7) If TPS type 3 has been removed, apply the same TPS type 3 to the surface:
 - As an alternative to TPS type 3 Corrosion Preventive Compound-Water Displacing & Heavy Duty Hard Film - (Material No. **12ADB1**) , apply TPS type 1 Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) or Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) , type 2 Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**) to the inspection area.

NOTE : Corrosion prevention (Corrosion Preventive Compound-Water Displacing & Heavy Duty Hard Film - (Material No. **12ADB1**) or Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)) can be used inside the doors. Mechanisms are treated with Corrosion prevention (Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**)) only if necessary.

- (8) You must not apply TPS material to these items:
 - All oxygen components and circuits
 - All PTFE items
 - All ball, roller or swivel bearings
 - All disconnected electrical connectors, bonding points and terminal strips
 - All connected unsealed electrical connectors, bonding points and terminal strips
 - All disconnected pipe and fittings
 - All flap and slat transmission components

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

- All fuel system components
 - All drain valves
 - Placards
 - All insulating blankets
 - Elastomer seals
 - Adhesive foam discs
 - Velcro strips
 - Flight control cables
 - As protection against hydraulic fluids
 - Areas where the operating temperature is constantly above 80 deg.C (176.00 deg.F).
- (a) Protect the above components with the Adhesive Film Tape-Masking - - (Material No. **05RDA1**) and/or applicable plastic or paper sheets.
- (b) Make sure that all the drain valves have a cover to prevent any TPS or loose material to cause a blockage.
- (9) Apply the TPS in a continuous and smooth layer over the area with either of the following equipment:
- Electrostatic-effect gun
 - Air gun
 - Low and high pressure pmp
 - Aerosol and capillary tube
 - BRUSH - BRISTLED, SOFT.
- (10) Remove the covers from the drain valves.
- (11) Make sure that there is no blockage of the drain valves and drain paths:
- (a) If you think there is a blockage, pour water into the drain valves and the drain paths to remove the blockage.

NOTE : No blockage remains when the water runs freely through the drain valves and the drain paths.

5. Close-up

Subtask 51-78-00-410-056-A

On A/C 001-999

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the insulation blankets/material as necessary.
- (3) Install the components from the TPS inspection/check area as necessary.

Subtask 51-78-00-942-058-A

On A/C 001-999

B. Safety Precautions

- (1) Remove the CAP - BLANKING from each electrical connector and receptacle.
- (2) Connect the electrical connector to the battery [Ref. AMM 24-38-51-400-001-A](#).
- (3) Energize the aircraft electrical circuits [Ref. AMM 24-41-00-861-002-A](#)
[Ref. AMM 24-41-00-861-002-A-01](#) [Ref. AMM 24-41-00-861-002-A-02](#).

Subtask 51-78-00-860-051-A

On A/C 001-999


C. Put the aircraft back to its initial configuration.

- (1) Remove the ground support and maintenance equipment, the special and standard tools and all other items.
- (2) De-energize the ground service network

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

Ref. AMM 24-42-00-862-001-A.

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

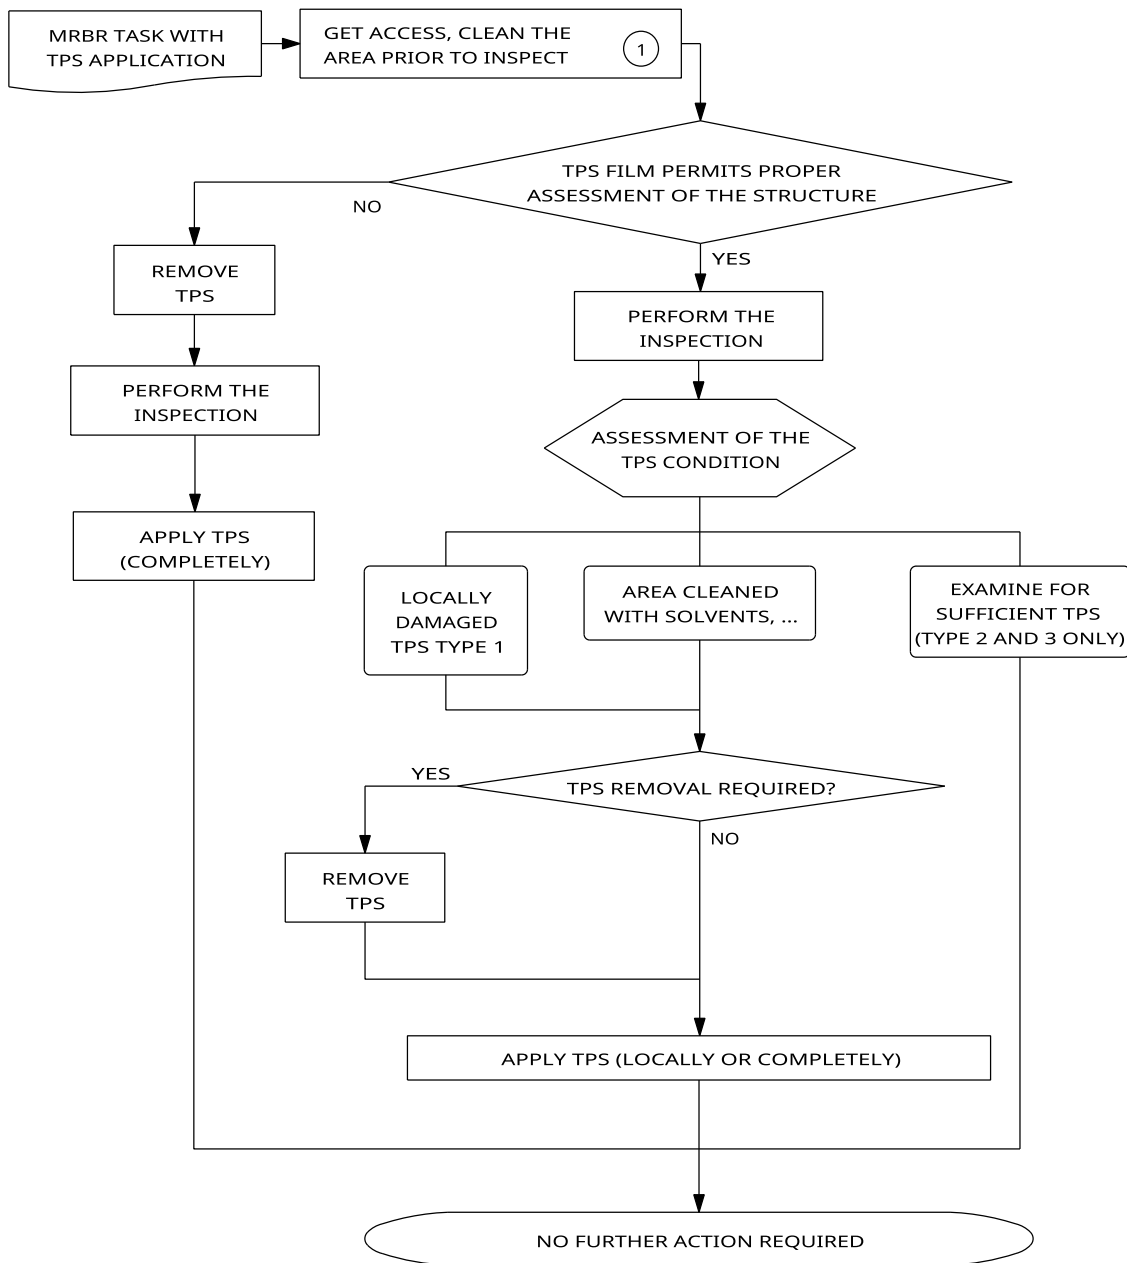

NOTE:

- ① THE AREA/ITEM TO BE INSPECTED MUST HAVE A CLEAN SURFACE THAT PERMITS A SATISFACTORY INSPECTION TO THE NECESSARY INSPECTION LEVEL

N_MM_517800_7_AMM0_01_01

Temporary Protection System (TPS)
Figure 1 / Graphic 51-78-00 -991-00200

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

TASK 53-11-00-220-003 -A

On A/C 001-999

Detailed Inspection of Cabin Floor Structure, Below and 0.5 M Around Galleys and Toilets, Between FR 21 and FR 24

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 531194-01

DETAILED INSPECTION OF CABIN FLOOR STRUCTURE, BELOW AND 0.5M AROUND GALLEYS AND TOILETS, BETWEEN FR 21 AND FR 24

NOTE : This task is applicable if galleys or toilets are installed in this area.

NOTE : The applicability of this task is given in the MPD.

2. Job Set-up Information

A. Consumable Materials

REFERENCE	DESIGNATION
08BAA9	Non Aqueous Cleaner-General - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
14SBA1	Textile-Lint free Cotton -

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
221	FWD CAB UTILITY AREA
222	FWD CAB UTILITY AREA
231	FWD PASSENGER COMPARTMENT
232	FWD PASSENGER COMPARTMENT

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 51-78-00-916-001-A	Application of Temporary Protection System (TPS)
Ref. AMM 53-12-12-000-001-A	Removal of the Cabin Floor Panels from FR12 thru FR24
Ref. AMM 53-12-12-400-001-A	Installation of the Cabin Floor Panels from FR12 thru FR24
Ref. SRM 51-11-00	(for corrective action)
Ref. SRM 51-22-00	(for corrective action)
Ref. AMM 25-31-00-00	FORWARD GALLEY - DESCRIPTION AND OPERATION
Ref. AMM 25-41-00-00	FORWARD LAVATORIES - DESCRIPTION AND OPERATION
Ref. Fig. (1 / 53-11-00-991-06300)	

3. Job Set-up

Subtask 53-11-00-010-085-A

On A/C 001-999

A. Get Access

- (1) Remove the galleys and lavatories between FR21 and FR24.

To do this, refer to the para. Component Location in the applicable ATA 25 Description/ Operation: for the galleys [Ref. AMM 25-31-00-00](#), for the lavatories [Ref. AMM 25-41-00-00](#). In this paragraph, you will find the cross-references of the removal/installation tasks.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (2) Remove the necessary cabin floor panels between FR21 and FR24 to get access to the inspection area [Ref. AMM 53-12-12-000-001-A](#).

Subtask 53-11-00-110-099-A

[On A/C 001-999](#)

B. Preparation of the Inspection Area

- (1) Make sure that the inspection area is sufficiently clean to do a satisfactory inspection of the area.
- (2) If the inspection area is not sufficiently clean, clean it with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (3) If there is a Temporary Protection System (TPS) layer and if it does not let you do a satisfactory inspection, remove the TPS layer
[Ref. AMM 51-78-00-916-001-A](#).

4. Procedure

Subtask 53-11-00-220-065-A

[On A/C 001-999](#)

A. Inspection

Ref. Fig. (1 / 53-11-00-991-06300)

- (1) Do a detailed inspection of the cabin floor structure for damage or discontinuities. Do this inspection below and 0.5 M (19.685 in.) around the galleys and the lavatories, between frame 21 and frame 24.
- (2) Make sure that there is no:
 - (a) Corrosion:
If you find corrosion, refer to the Structural Repair Manual for the corrosion types, inspection, removal and subsequent corrosion protection
Ref. SRM 51-22-00.
 - (b) Cracks, scratches, gouges, dents, creases or other damage:
If you find this type of damage, refer to the Structural Repair Manual for the damage types, classification and corrective action
Ref. SRM 51-11-00.

Subtask 53-11-00-916-059-A

[On A/C 001-999](#)

B. Check and Application of the TPS Layer

- (1) If you removed the TPS layer at the "Preparation of the Inspection Area" paragraph, apply a new layer of
Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**)
and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or
Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)
and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
[Ref. AMM 51-78-00-916-001-A](#).
- (2) If you did not remove the TPS layer at the "Preparation of the Inspection Area" paragraph, do a check of the condition and integrity of the TPS layer
[Ref. AMM 51-78-00-916-001-A](#).
- (3) If the TPS layer has local damage, remove the damaged TPS layer and apply a new layer of
Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**)
and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or
Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
[Ref. AMM 51-78-00-916-001-A](#).

5. Close-up


Subtask 53-11-00-410-085-A

[On A/C 001-999](#)

A. Close Access

- (1) Install the cabin floor panels between FR21 and FR24 [Ref. AMM 53-12-12-400-001-A](#).
- (2) Install the galleys and lavatories between FR21 and FR24.
To do this, refer to the para. Component Location in the applicable ATA 25 Description/
Operation: for the galleys [Ref. AMM 25-31-00-00](#), for the lavatories [Ref. AMM 25-41-00-00](#).
In this paragraph, you will find the cross-references of the removal/installation tasks.
- (3) Make sure that the work area is clean and clear of tools and other items.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

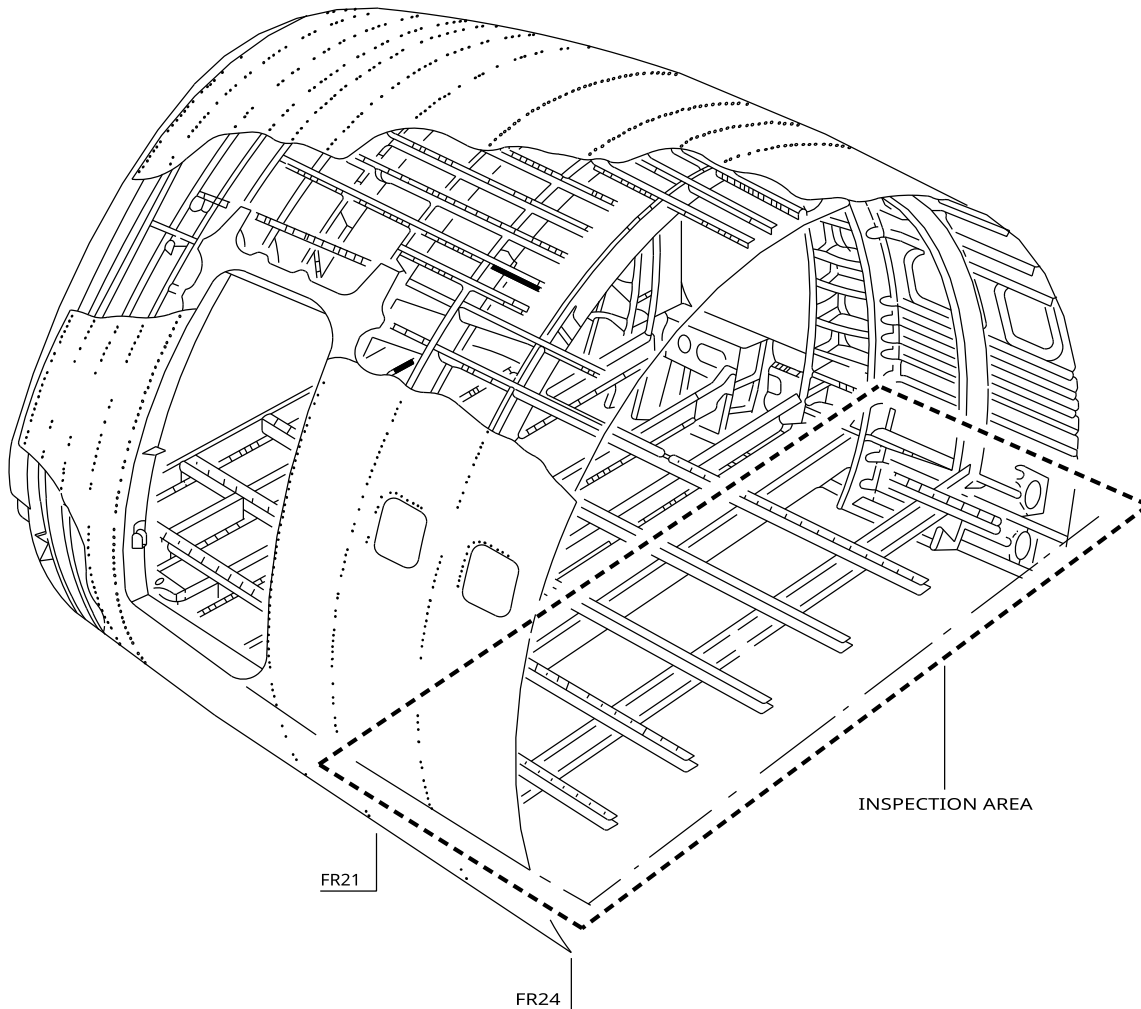

N_MM_531100_6_DPM0_01_00

Cabin Floor Structure Between Frame 21 and Frame 24
Figure 1 / Graphic 53-11-00 -991-06300

TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - CABIN FLOOR - REMOVAL/INSTALLATION

TASK 53-12-12-000-001 -A

On A/C 001-999

Removal of the Cabin Floor Panels from FR12 thru FR24

1. Reason for the Job

Self explanatory

2. Job Set-up Information

A. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
220	FWD CAB UTILITY AREAS
230	FWD PASSENGER COMPARTMENT

B. Referenced Information

REFERENCE	DESIGNATION
On A/C 003-113	
Ref. AMM 53-00-00-000-801-A	Removal of the Floor Panels in the Cabin from FR12 to FR70
On A/C 001-999	
Ref. AMM 53-00-00-000-801-A-01	Removal of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Removal Procedure - Dry Sealing Concept)

3. Job Set-up

Subtask 53-12-12-918-050-A

On A/C 001-999

A. No special job set-up is necessary for this task.

4. Procedure

Subtask 53-12-12-020-059-A

On A/C 001-999

A. Removal of the Cabin Floor Panels from FR12 thru FR24

NOTE : Refer to

On A/C 003-113

Ref. AMM 53-00-00-000-801-A

On A/C 001-999

Ref. AMM 53-00-00-000-801-A-01.

TF-N
AIRCRAFT MAINTENANCE MANUAL
PANELS - CABIN FLOOR - REMOVAL/INSTALLATION

TASK 53-12-12-400-001 -A

On A/C 001-999

Installation of the Cabin Floor Panels from FR12 thru FR24

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Self explanatory

2. Job Set-up Information

A. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
220	FWD CAB UTILITY AREAS
230	FWD PASSENGER COMPARTMENT

B. Referenced Information

REFERENCE	DESIGNATION
On A/C 003-113	
Ref. AMM 53-00-00-400-801-A	Installation of the Floor Panels in the Cabin from FR12 to FR70
On A/C 001-999	
Ref. AMM 53-00-00-400-801-A-01	Installation of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Installation Procedure - Dry Sealing Concept)

3. Job Set-up

Subtask 53-12-12-918-051-A

On A/C 001-999

A. No special job set-up is necessary for this task.

4. Procedure

Subtask 53-12-12-420-059-A

On A/C 001-999

A. Installation of the Cabin Floor Panels from FR12 thru FR24

NOTE : Refer to

On A/C 003-113

Ref. AMM 53-00-00-400-801-A

On A/C 001-999

Ref. AMM 53-00-00-400-801-A-01.

Copyright of Saudia Technic - Regeneration is not allowed without prior approval by Saudia Technic.



MET.32712615

Task Card Title:

MLG BAY INCLUDING DOOR BAY INSP



Task Card NO:

533136-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.			HRS				

TASK INSTRUCTIONS

Job Description

! NOTE

Ensure to fill the attached TSV# 92-634 along with this task.

A. PERFORM A GENERAL VISUAL INSPECTION OF THE MLG BAY INCLUDING THE MLG DOOR HINGES FOR CORROSION AND OTHER DAMAGE AS PER AMM TASK 53-31-00-210-023-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

TASK CLOSE UP

Job Description

A. APPLY AV8 MATERIALS TO MLG BAY AND MLG DOOR HINGES.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	II/INSP		HRS				

TASK CLOSE UP

Job Description

B. PERFORM CLOSE-UP PER AMM TASK 53-31-00-210-023-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				



MET.32712615

Task Card Title:

MLG BAY INCLUDING DOOR BAY INSP

Task Card NO:

533136-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Insp.

HRS

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

_____, _____, _____, _____, _____, _____, _____, _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 2 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 3 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 4 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 5 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

**Task Completion Close Up And
System Update**

Station

Date

Signature

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

TASK 53-31-00-210-023 -A

On A/C 001-999

General Visual Inspection of MLG Bay

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 533136-01

GENERAL VISUAL INSPECTION OF MLG BAY

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 3M (10 FT)- ADJUSTABLE
No specific	AR	WARNING NOTICE(S)

B. Consumable Materials

REFERENCE	DESIGNATION
08BAA9	Non Aqueous Cleaner-General - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
14SBA1	Textile-Lint free Cotton -

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
147	MAIN GEAR WELL AND HYDRAULIC COMPARTMENT
148	MAIN GEAR WELL AND HYDRAULIC COMPARTMENT

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 29-00-00-864-001-A	Put the Related Hydraulic System in the Depressurized Configuration before Maintenance Action
Ref. AMM 32-12-00-010-001-A	Open the Main Gear Doors for Access
Ref. AMM 32-12-00-410-001-A	Close the Main Gear Doors after Access
Ref. AMM 51-78-00-916-001-A	Application of Temporary Protection System (TPS)
Ref. SRM 51-11-00	
Ref. SRM 51-22-00	
Ref. SRM 51-23-00	
On A/C 003-250; 301-350	
Ref. Fig. (1 / 53-31-00-991-02400)	

3. Job Set-up

Subtask 53-31-00-010-070-A

On A/C 001-999

A. Get Access

- (1) Open the MLG doors [Ref. AMM 32-12-00-010-001-A](#).
- (2) Depressurize the aircraft hydraulic systems
[Ref. AMM 29-00-00-864-001-A](#).
- (3) Put the WARNING NOTICE(S) in position to tell persons not to operate the landing gear.
- (4) Put the ACCESS PLATFORM 3M (10 FT)- ADJUSTABLE in position below the main landing-gear bay.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

Subtask 53-31-00-110-108-A

On A/C 001-999

B. Preparation of the inspection area

- (1) Make sure that the inspection area is sufficiently clean to do a satisfactory inspection of the area.
- (2) If the inspection area is not sufficiently clean, clean it with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a clean Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (3) If there is a Temporary Protection System (TPS) layer and if it does not let you do a satisfactory inspection, remove the TPS layer

Ref. AMM 51-78-00-916-001-A.

4. Procedure

On A/C 003-250; 301-350

Ref. Fig. 1 / 53-31-00-991-02400

Subtask 53-31-00-210-071-A

On A/C 001-999

A. Inspection

- (1) Do a general visual inspection of the MLG bay for damage or discontinuities.
- (2) Make sure that there is no:
 - (a) Corrosion:
If you find corrosion, refer to the Structural Repair Manual for the corrosion types, inspection, removal and subsequent corrosion protection
Ref. SRM 51-22-00.
 - (b) Cracks, scratches, gouges, dents, creases or other damage:
If you find this type of damage, refer to the Structural Repair Manual for the damage types, classification and corrective action
Ref. SRM 51-11-00.
 - (c) Paint layer damage:
If you find this type of damage, refer to the Structural Repair Manual for general data for paint layers
Ref. SRM 51-23-00.

Subtask 53-31-00-916-111-A

On A/C 001-999

B. Check and Application of the TPS layer

- (1) If you removed the TPS layer at the "Preparation of the Inspection Area" paragraph, apply a new layer of
Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**)
and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or
Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)
and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
Ref. AMM 51-78-00-916-001-A.
- (2) If you did not remove the TPS layer at the "Preparation of the Inspection Area" paragraph, do a check of the condition and integrity of the TPS layer
Ref. AMM 51-78-00-916-001-A.
- (3) If the TPS layer has local damage, remove the damaged TPS layer and apply a new layer of
Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**)
and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or
Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
[Ref. AMM 51-78-00-916-001-A](#).

5. Close-up


Subtask 53-31-00-410-068-A

[On A/C 001-999](#)

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Close the MLG doors [Ref. AMM 32-12-00-410-001-A](#).
- (3) Remove the WARNING NOTICE(S).
- (4) Remove the access platform(s).
- (5) Remove the ground support and maintenance equipment, the special and standard tools and all other items.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

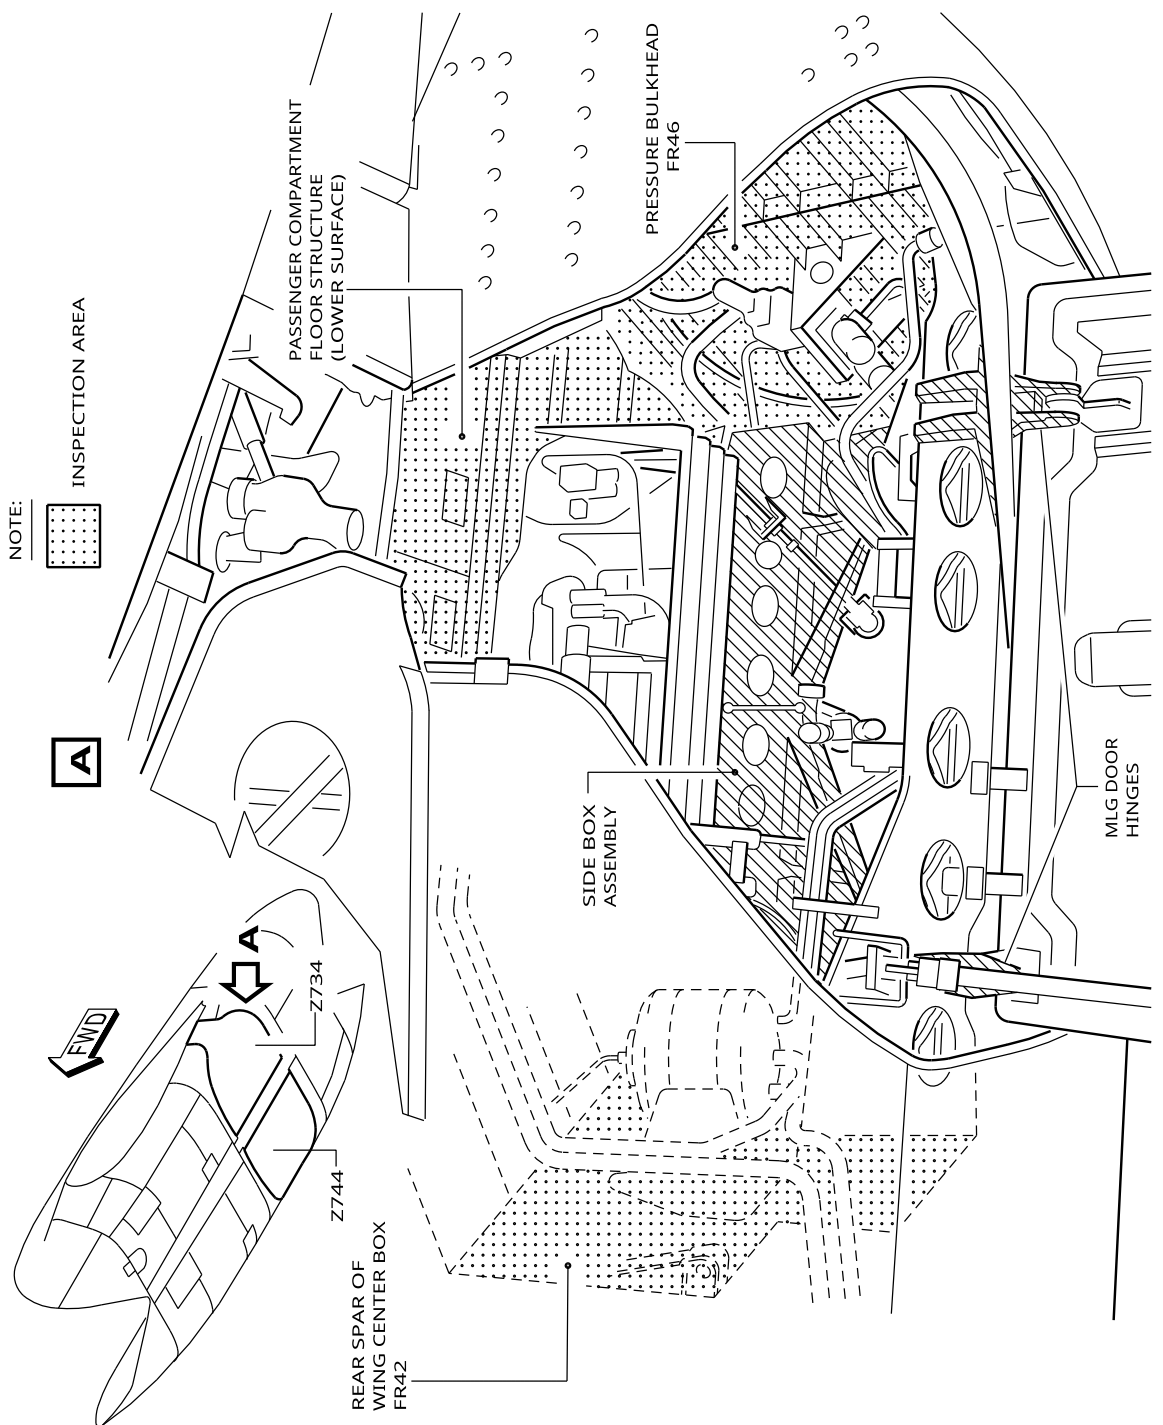

N_MM_533100_6_CAM0_01_00

MLG Bay
Figure 1 / Graphic 53-31-00 -991-02400
On A/C 003-250; 301-350

Copyright of Saudia Technic - Regeneration is not allowed without prior approval by Saudia Technic.



Task Card Title:

AFT PASSENGER/CREW DOOR CUTOUT INSP

Task Card NO:

534135-01-4

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

AND FRAME 68, BETWEEN LH/RH STRINGER 22 AND STRINGER 23 AS PER AMM TASK 53-41-00-210-003-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	HRS	Number./Signature	Date		
						Day	Month	Year
Mechanic/s								
Insp.	INSP/II							

TASK CLOSE UP**Job Description**

A. APPLY A LAYER OF TEMPORARY PROTECTION AV8 TO THE INSPECTION AREA AS PER AMM TASK 53-41-00-210-003-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	HRS	Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH							
Insp.	INSP/II							

TASK CLOSE UP**Job Description**

B. OK TO INSTALL INSULATION BLANKETS, LOWER & UPPER SIDE WALL PANELS AND DOOR FRAME LINING.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	HRS	Number./Signature	Date		
						Day	Month	Year
Mechanic/s								
Insp.	INSP/II							

TASK CLOSE UP**Job Description**

C. INSTALL INSULATION BLANKETS, LOWER & UPPER SIDE WALL PANELS AND DOOR FRAME LINING.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	HRS	Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH							
Insp.	INSP/II							

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____



Task Card Title:

AFT PASSENGER/CREW DOOR CUTOUT INSP

Task Card NO:

534135-01-4

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

TASK 53-41-00-210-003 -A

On A/C 001-999

General Visual Inspection of Internal Structure Around Aft Passenger/Crew Door Cutout, Above Cabin Floor Level, Between FR 65 and FR 69 and From Stringer 6 to Stringer 23, LH/RH. Excluding the Lower Corners of the Door Entrance Area at Frame 66 and ...

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 534135-01

GENERAL VISUAL INSPECTION OF INTERNAL STRUCTURE AROUND AFT PASSENGER/ CREW DOOR CUTOUT, ABOVE CABIN FLOOR LEVEL, BETWEEN FR 65 AND FR 69 AND FROM STRINGER 6 TO STRINGER 23, LH/RH. EXCLUDING THE LOWER CORNERS OF THE DOOR ENTRANCE AREA AT FRAME 66 AND FRAME 68, BETWEEN STRINGER 22 AND STRINGER 23, LH/RH.

2. Job Set-up Information

A. Consumable Materials

REFERENCE	DESIGNATION
08BAA9	Non Aqueous Cleaner-General - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
14SBA1	Textile-Lint free Cotton -

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
261	AFT CABIN UTILITY AREA
262	AFT CABIN UTILITY AREA
263	AFT CABIN OVERHEAD COMPARTMENT
264	AFT CABIN OVERHEAD COMPARTMENT
832 , 842	

C. Referenced Information

REFERENCE	DESIGNATION
On A/C 003-250	
Ref. AMM 25-23-43-000-001-A	Removal of the Upper Sidewall Panel
Ref. AMM 25-23-43-400-001-A	Installation of the Upper Sidewall Panel
Ref. AMM 25-23-44-000-001-A	Removal of the Lower Sidewall Panels (Dado Panels)
Ref. AMM 25-23-44-400-001-A	Installation of the Lower Sidewall Panels
Ref. AMM 25-23-45-000-003-A	Removal of the Door Frame Linings From the Left Aft Passenger/Crew Door
Ref. AMM 25-23-45-000-004-A	Removal of the Door Frame Linings From the Right Aft Passenger/Crew Door
Ref. AMM 25-23-45-400-005-A	Installation of the Door Frame Linings on the Right Aft Passenger/Crew Door
Ref. AMM 25-23-45-400-008-A	Installation of the Door Frame Linings on the Left Aft Passenger/Crew Door
On A/C 001-999	
Ref. AMM 25-80-00-000-001-A	Removal of the Insulation Blankets
Ref. AMM 25-80-00-400-001-A	Installation of the Insulation Blankets
Ref. AMM 51-78-00-916-001-A	Application of Temporary Protection System (TPS)
Ref. AMM 52-10-00-010-001-A	Opening of the Passenger/Crew Door

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

REFERENCE	DESIGNATION
Ref. AMM 52-10-00-410-001-A	Closing of the Passenger/Crew Door
Ref. SRM 51-11-00	
Ref. SRM 51-22-00	
Ref. AMM 25-20-00-00	PASSENGER COMPARTMENT - DESCRIPTION AND OPERATION
Ref. AMM 25-30-00-00	BUFFET AND GALLEY - DESCRIPTION AND OPERATION
Ref. AMM 25-40-00-00	LAVATORIES - DESCRIPTION AND OPERATION
Ref. Fig. (1 / 53-41-00-991-00400)	

3. Job Set-up

Subtask 53-41-00-010-070-A

On A/C 001-999

A. Get Access

- (1) Open aft passenger/crew door 832 (842) [Ref. AMM 52-10-00-010-001-A](#).
- (2) Remove the door frame linings from aft passenger/crew door 832 (842)

On A/C 003-250

[Ref. AMM 25-23-45-000-003-A](#)

On A/C 251-350

[Ref. AMM 25-23-45-000-003-B](#) or

On A/C 003-250

[Ref. AMM 25-23-45-000-004-A](#)

On A/C 251-350

[Ref. AMM 25-23-45-000-004-B](#).

- (3) Remove the applicable galleys, lavatories and/or stowages between frame 65 and frame 69. To do this, refer to the Component Location paragraph in the applicable ATA 25 Description/Operation:

- For the galleys, refer to the System Description

On A/C 001-999

[Ref. AMM 25-30-00-00](#).

- For the lavatories, refer to the System Description [Ref. AMM 25-40-00-00](#).
- For the stowages, refer to the System Description [Ref. AMM 25-20-00-00](#).

- (4) If the upper sidewall panels are installed between frame 65 and frame 69, remove them

On A/C 003-250

[Ref. AMM 25-23-43-000-001-A](#)

On A/C 251-350

[Ref. AMM 25-23-43-000-001-B](#).

- (5) If the lower sidewall panels are installed between frame 65 and frame 69, remove them

On A/C 003-250

[Ref. AMM 25-23-44-000-001-A](#)

On A/C 251-350

[Ref. AMM 25-23-44-000-001-B](#).

- (6) Remove the applicable insulation blankets between frame 65 and frame 69 to get access to the inspection area

On A/C 001-999

[Ref. AMM 25-80-00-000-001-A](#):

- (a) Identify the insulation blankets to make the subsequent installation procedure easier.

Subtask 53-41-00-110-059-A

On A/C 001-999

B. Preparation of the Inspection Area

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (1) Make sure that the inspection area is sufficiently clean to do a satisfactory inspection of the area.
- (2) If the inspection area is not sufficiently clean, clean it with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and the Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (3) If there is a Temporary Protection System (TPS) layer and if it does not let you do a satisfactory inspection, remove the TPS layer
[Ref. AMM 51-78-00-916-001-A.](#)

4. Procedure

Ref. Fig. 1 / 53-41-00-991-00400

Subtask 53-41-00-210-056-A

[On A/C 001-999](#)

A. Inspection

- (1) Do a general visual inspection of the internal structure around the aft passenger/crew door-cutout above the cabin floor level. Do this inspection between frames 65 and 69 and from stringers 6 to 23 (does not include the lower corners of the door entrance area at frames 66 and 68, between stringers 22 and 23), on the left and right sides.
- (2) Make sure that there is no:
 - (a) Corrosion:
If you find corrosion, refer to the Structural Repair Manual for the corrosion types, inspection, removal and subsequent corrosion protection
[Ref. SRM 51-22-00.](#)
 - (b) Cracks, scratches, gouges, dents, creases or other damage:
If you find this type of damage, refer to the Structural Repair Manual for the damage types, classification and corrective action
[Ref. SRM 51-11-00.](#)

Subtask 53-41-00-916-050-A

[On A/C 001-999](#)

B. Check and Application of the TPS Layer

- (1) If you removed the TPS layer at the "Preparation of the Inspection Area" paragraph, apply a new layer of
Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**)
and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or
Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)
and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
[Ref. AMM 51-78-00-916-001-A.](#)
- (2) If you did not remove the TPS layer at the "Preparation of the Inspection Area" paragraph, do a check of the condition and integrity of the TPS layer
[Ref. AMM 51-78-00-916-001-A.](#)
- (3) If the TPS layer has local damage, remove the damaged TPS layer and apply a new layer of
Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**)
and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or
Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)
and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
[Ref. AMM 51-78-00-916-001-A.](#)

5. Close-up

Subtask 53-41-00-410-071-A

[On A/C 001-999](#)

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

A. Close Access

(1) Make sure that the work area is clean and clear of tools and other items.

(2) Install the removed insulation blankets between frame 65 and frame 69

Ref. AMM 25-80-00-400-001-A.

(3) If you removed the lower sidewall panels between frame 65 and frame 69, install them

On A/C 003-250

Ref. AMM 25-23-44-400-001-A

On A/C 251-350

Ref. AMM 25-23-44-400-001-B.

(4) If you removed the upper sidewall panels between frame 65 and frame 69, install them

On A/C 003-250

Ref. AMM 25-23-43-400-001-A

On A/C 251-350

Ref. AMM 25-23-43-400-001-B.

(5) Install the removed galleys, lavatories and/or stowages between frame 65 and frame 69.

To do this, refer to the Component Location paragraph in the applicable ATA 25 Description/Operation:

- For the galleys, refer to the System Description

On A/C 001-999

Ref. AMM 25-30-00-00.

- For the lavatories, refer to the System Description Ref. AMM 25-40-00-00.

- For the stowages, refer to the System Description Ref. AMM 25-20-00-00.

(6) Install the removed door frame linings on aft passenger/crew door 832 (842)

On A/C 003-250

Ref. AMM 25-23-45-400-008-A

On A/C 251-350

Ref. AMM 25-23-45-400-008-B or

On A/C 003-250

Ref. AMM 25-23-45-400-005-A

On A/C 251-350

Ref. AMM 25-23-45-400-005-B.


(7) Close aft passenger/crew door 832 (842)

On A/C 001-999

Ref. AMM 52-10-00-410-001-A.

(8) Remove the ground support and maintenance equipment, the special and standard tools and all other items.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

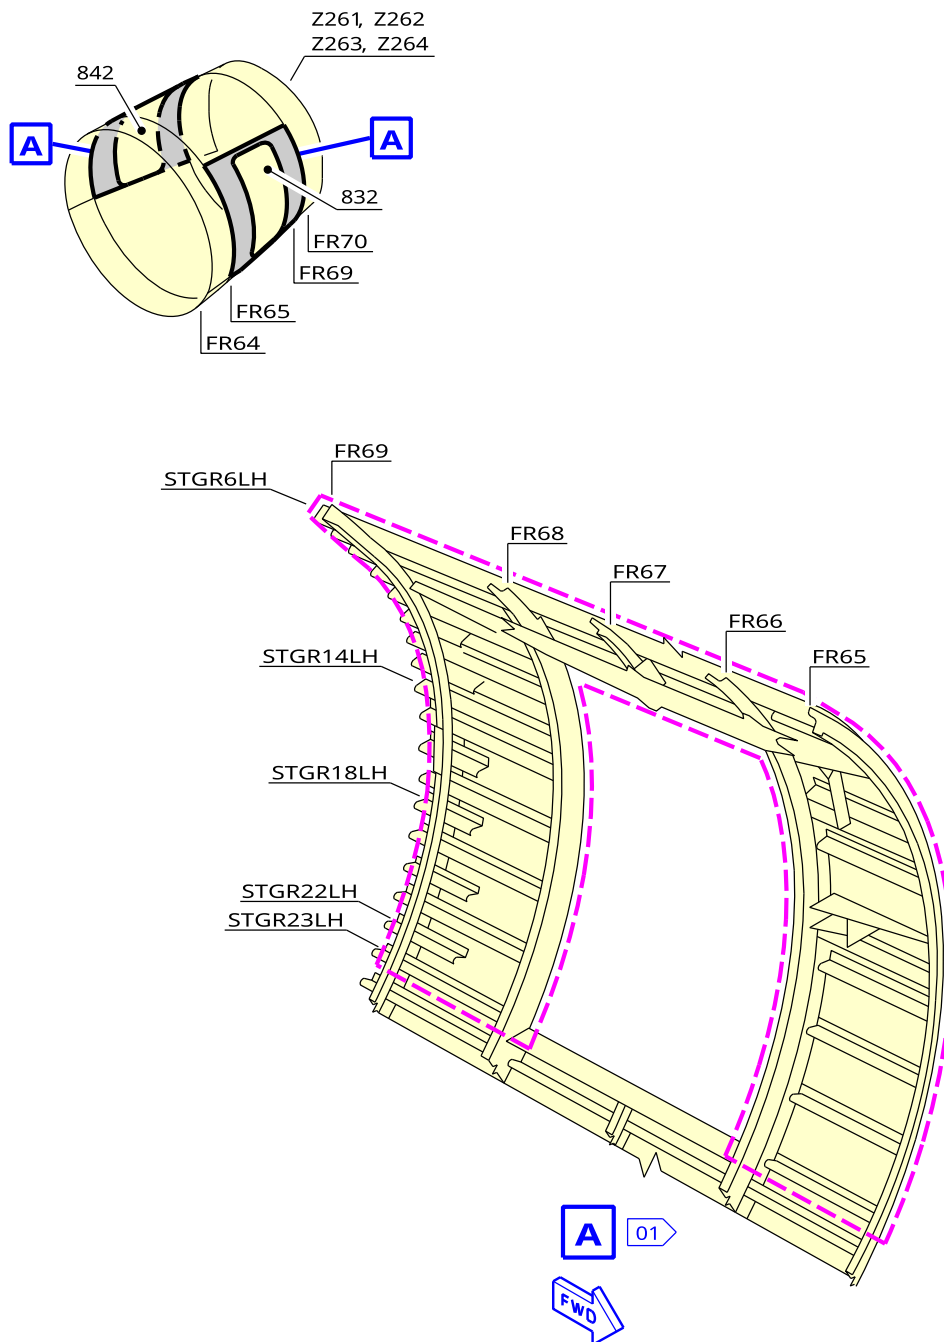

NOTE:
 INSPECTION AREA
01 LH SHOWN, RH SYMMETRICAL

N_MM_534100_6_AEM0_01_01

Internal Structure Around the Aft Passenger/Crew Door-Cutouts
Figure 1 / Graphic 53-41-00 -991-00400

Copyright of Saudia Technic - Regeneration is not allowed without prior approval by Saudia Technic.



Task Card Title:

CABIN FLOOR STRUC AROUND GALLEY&LAV

Task Card NO:

534147-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

EN6131-3C1	NUT-CLIP	50.0
EN6131C3C4	NUT-CLIP	50.0
MIL-PRE-8116	JOINTING PUTTY	1.0
PR1782 CLASS C	POLYSULFIDE SEALANT	1.0
06AAB1	SEALANT, USE PN: PS-870-B2	1.0
ABS0376-3-35	SCREW	50.0

TOOLING REQUIREMENTS:

Part Number	Description	Qty.
No tools assigned to this Task Item		

PREPARATION**Job Description**

- A. PERFORM JOB SET UP TO REMOVE GALLEYS AND THE LAVATORIES IF THEY ARE INSTALLED AS PER AMM 53-41-00-210-037.
- B. REMOVE THE NECESSARY AND THE THE APPLICABLE FLOOR PANELS FROM THE INSPECTION AREA REF. AMM TASK 53-00-00-000-801.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.			HRS				

PREPARATION**Job Description**

- C. CLEAN THE INSPECTION AREA AS REQUIRED, REMOVE THE TPS LAYER TO SATISFACTORY INSPECTION (REF. AMM 53-41-00-210-037) AND MAKE SURE THAT THE INSPECTION AREAS ARE DRY.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.			HRS				

TASK INSTRUCTIONS**Job Description****! NOTE**

Ensure to fill the attached TSV# 92-634 along with this task.

- A. PERFORM A DETAILED INSPECTION OF THE CABIN FLOOR STRUCTURE, BELOW AND 0.5 M (1.64 FT.) AROUND THE



Task Card Title:

CABIN FLOOR STRUC AROUND GALLEY&LAV

Task Card NO:

534147-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

GALLEYS AND THE TOILETS FOR CORROSION., FROM FR 47 TO FR 70 AS PER AMM TASK 53-41-00-210-037-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	II/INSP			HRS				

CLOSE UP**Job Description**

A. APPLY TEMPORARY PROTECTION SYSTEM TPS (REF. AMM TASK 51-78-00-916-001-A).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS				
Insp.	II/INSP			HRS				

CLOSE UP**Job Description**

B. OK TO INSTALL THE FLOOR PANELS REMOVE IN THE PREPARATION.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	II/INSP			HRS				

CLOSE UP**Job Description**

C. INSTALL THE FLOOR PANELS THAT REMOVED IN THE PREPARATION (REF. AMM TASK 53-00-00-400-801).

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS				
Insp.	INSP/II			HRS				

CLOSE UP**Job Description**

D. INSTALL THE REMOVED GALLEYS AND LAVATORIES TAHT REMOVED THE PREPERATION (REF AMM 53-41-00-210-037-A) AND RETURN AIRCRAFT BACK TO NORMAL CONFIGURATION.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS				



Task Card Title:

CABIN FLOOR STRUC AROUND GALLEY&LAV

Task Card NO:

534147-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Insp.

HRS

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

_____, _____, _____, _____, _____, _____, _____, _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 2 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 3 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 4 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 5 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

**Task Completion Close Up And
System Update****Station****Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

TASK 51-78-00-916-001 -A

On A/C 001-999

Application of Temporary Protection System (TPS)

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

CAUTION: DO NOT APPLY THE CLEANING AGENTS TO THESE PARTS:

- BEARINGS, ACTUATORS, FITTINGS
- ACRYLICS OR POLYCARBONATE MATERIALS
- ELECTRICAL HARNESSSES, SENSORS, CONNECTORS.

CLEANING AGENT ON OR IN THESE PARTS CAN CAUSE DAMAGE.

CAUTION: DO NOT APPLY TEMPORARY PROTECTION ON THE OXYGEN SYSTEMS. MAKE SURE THAT THE TEMPORARY PROTECTION DOES NOT GET:

- ON COMPOSITE PARTS, CONTROL CABLES, PULLEYS,TEFLON BEARINGS.
- ON LUBRICATED SURFACES.
- IN DRAIN VALVES OR OTHER ORIFICES.

TEMPORARY PROTECTION ON OR IN THESE PARTS CAN CAUSE DAMAGE.

1. Reason for the Job

This task is for the:

- Removal of the TPS
- New application of the TPS.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 10M (33 FT) - ADJUSTABLE
No specific	1	BRUSH - BRISTLED, SOFT
No specific	1	BRUSH - NON METALLIC
No specific	AR	CAP - BLANKING
No specific	1	HOT AIR BLOWER OPERATING 40 DEG C(104 F)
No specific	1	SCRAPER - NON METALLIC
No specific	1	VACUUM EQUIPMENT 0 TO 0.4 BAR (6 PSI)

B. Consumable Materials

REFERENCE	DESIGNATION
05RDA1	Adhesive Film Tape-Masking - -
08BAA9	Non Aqueous Cleaner-General - -
08BBB1	Non Aqueous Cleaner-- Petroleum Based -
08BBC1	Non Aqueous Cleaner-- Naphta based and Alcohol -
08BDA1	Non Aqueous Cleaner-Wax and grease remover - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
12ADB1	Corrosion Preventive Compound-Water Displacing & Heavy Duty Hard Film -
14SBA1	Textile-Lint free Cotton -

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 24-38-51-000-001-A	Removal of the Battery

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

REFERENCE	DESIGNATION
Ref. AMM 24-38-51-400-001-A	Installation of the Battery
Ref. AMM 24-41-00-861-002-A	Energize the Aircraft Electrical Circuits from the External Power
Ref. AMM 24-41-00-861-002-A-01	Energize the Aircraft Electrical Circuits from the APU
Ref. AMM 24-41-00-861-002-A-02	Energize the Aircraft Electrical Circuits from Engine 1(2)
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 24-42-00-861-001-A	Energize the Ground Service Network from the External Power
Ref. AMM 24-42-00-862-001-A	De-energize the Ground Service Network Supplied from the External Power
Ref. Fig. (1 / 51-78-00-991-00200)	

3. Job Set-up

Subtask 51-78-00-860-050-A

On A/C 001-999

A. Aircraft Maintenance Configuration

- (1) Energize the ground service network

[Ref. AMM 24-42-00-861-001-A.](#)

- (2) If necessary, put a ACCESS PLATFORM 10M (33 FT) - ADJUSTABLE in position.

WARNING: YOU MUST PUT ON AND ATTACH A SAFETY HARNESS BEFORE YOU START WORK:

- ON THE THS OR IN THE REAR FUSELAGE
- ON TOP OF THE WINGS OR PYLONS.

WITHOUT A SAFETY HARNESS, YOU CAN FALL. THIS CAN KILL YOU OR CAUSE YOU INJURY.

- (3) Put on and attach a SAFETY HARNESS before you start work in the work area.

Subtask 51-78-00-941-063-A

On A/C 001-999

B. Safety Precautions

- (1) De-energize the aircraft electrical circuits [Ref. AMM 24-41-00-862-002-A](#)
[Ref. AMM 24-41-00-862-002-A-01](#) [Ref. AMM 24-41-00-862-002-A-02.](#)
- (2) Disconnect the electrical connector from the battery [Ref. AMM 24-38-51-000-001-A.](#)
- (3) Put the CAP - BLANKING on each disconnected electrical connector and receptacle.
- (4) Do not spray the cleaning solution directly on the electrical connection.

Subtask 51-78-00-941-057-A

On A/C 001-999

C. Get Access

- (1) Get access to the area(s) where you will do the inspection/check.

Subtask 51-78-00-010-056-A

On A/C 001-999

D. Removal of Components

- (1) Remove all the components necessary from the TPS inspection/check area.
- (2) Remove all the insulation blankets/material from the inspection/check area.

4. Procedure

Ref. Fig. 1 / 51-78-00-991-00200

Subtask 51-78-00-210-051-A

On A/C 001-999

A. Inspection of the Temporary Protection System (TPS)

- (1) Inspect the area where the TPS is applied.

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

- (2) If the TPS is in the correct condition, a secondary layer of the same TPS can be applied over the first layer.
- (3) If the TPS is not in the correct condition, remove the TPS, clean the area and apply a new layer of the correct TPS type.
- (4) If the TPS has been removed for an inspection, apply a new layer of the TPS to the inspection area.
- (5) If the TPS layer is locally damaged, remove and apply a new layer of the TPS on the damaged areas.

Subtask 51-78-00-160-052-A

On A/C 001-999

B. Cleaning and/or Removal of the Temporary Protective System (TPS)

- (1) Does the MPD task make the removal of the TPS necessary.
 - (a) If the TPS does not need to be removed, clean the inspection area with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a clean lint-free cloth Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (2) If it is necessary to remove the TPS, you must use a SCRAPER - NON METALLIC or VACUUM EQUIPMENT 0 TO 0.4 BAR (6 PSI) and BRUSH - NON METALLIC.
- (3) Apply the cleaning agents to the TPS:
 - (a) Apply a layer of the Non Aqueous Cleaner-- Petroleum Based - (Material No. **08BBB1**) or Non Aqueous Cleaner-- Naphta based and Alcohol - (Material No. **08BBC1**) on the TPS with a BRUSH - NON METALLIC.
 - (b) Remove the TPS with a SCRAPER - NON METALLIC.
 - (c) If the TPS is a hard wax compound, apply a layer of Non Aqueous Cleaner-Wax and grease remover - - (Material No. **08BDA1**) with BRUSH - NON METALLIC.
 - (d) The Non Aqueous Cleaner-Wax and grease remover - - (Material No. **08BDA1**) must soak into the TPS for a minimum of 20 minutes to make the compound soft.
 - (e) Remove the TPS with a SCRAPER - NON METALLIC.
- (4) Flush the work area with warm water.

WARNING: BE CAREFUL WHEN YOU DO THIS PROCEDURE. THE AIRFLOW CAN BE HOT AND HOT AIR CAN CAUSE BURNS.

- (5) Dry the area with a HOT AIR BLOWER OPERATING 40 DEG C(104 F).
- (6) Use the VACUUM EQUIPMENT 0 TO 0.4 BAR (6 PSI) to remove any loose particles from the work area.

Subtask 51-78-00-916-054-A

On A/C 001-999

C. Application of the Temporary Protection System (TPS)

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

CAUTION: DO NOT APPLY TEMPORARY PROTECTION ON THE OXYGEN SYSTEMS. MAKE SURE THAT THE TEMPORARY PROTECTION DOES NOT GET:

- ON COMPOSITE PARTS, CONTROL CABLES, PULLEYS,TEFLON BEARINGS.
- ON LUBRICATED SURFACES.
- IN DRAIN VALVES OR OTHER ORIFICES.

TEMPORARY PROTECTION ON OR IN THESE PARTS CAN CAUSE DAMAGE.

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

CAUTION: DO NOT APPLY TEMPORARY PROTECTION SYSTEM (TPS) TYPE 3 OR 1+2 ON THE MOVABLE COMPONENTS. USE ONLY TPS TYPE 1 GRADE 2. IF YOU DO NOT OBEY THIS INSTRUCTION, THE MECHANISMS WILL NOT OPERATE CORRECTLY.

- (1) Apply the TPS on the surface of the inspection area if:
 - You cleaned the TPS with the solvents, alkaline cleaners, high pressure water and solvent or steam and solvents
 - You removed the TPS with the SCRAPER - NON METALLIC or BRUSH - NON METALLIC.
- (2) The three types of TPS are:
 - TPS type 1 grade 2 Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) or TPS type 1 grade 3 Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**)
 - TPS type 2, Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
 - TPS type 3, Corrosion Preventive Compound-Water Displacing & Heavy Duty Hard Film - (Material No. **12ADB1**) .
- (3) Make sure the correct TPS type is applied to the surface.
- (4) If TPS type 1 has been removed, apply the same TPS type 1 to the surface.
- (5) If TPS type 2 has been removed, apply the same TPS type 2 to the surface.
- (6) If TPS type 1 and TPS type 2 have been applied in an inspection area and are removed:
 - Apply the same TPS type 1 and type 2 or, as an alternative, apply the TPS type 3 to the inspection area.
- (7) If TPS type 3 has been removed, apply the same TPS type 3 to the surface:
 - As an alternative to TPS type 3 Corrosion Preventive Compound-Water Displacing & Heavy Duty Hard Film - (Material No. **12ADB1**) , apply TPS type 1 Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) or Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) , type 2 Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**) to the inspection area.

NOTE : Corrosion prevention (Corrosion Preventive Compound-Water Displacing & Heavy Duty Hard Film - (Material No. **12ADB1**) or Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)) can be used inside the doors. Mechanisms are treated with Corrosion prevention (Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**)) only if necessary.

- (8) You must not apply TPS material to these items:
 - All oxygen components and circuits
 - All PTFE items
 - All ball, roller or swivel bearings
 - All disconnected electrical connectors, bonding points and terminal strips
 - All connected unsealed electrical connectors, bonding points and terminal strips
 - All disconnected pipe and fittings
 - All flap and slat transmission components

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

- All fuel system components
 - All drain valves
 - Placards
 - All insulating blankets
 - Elastomer seals
 - Adhesive foam discs
 - Velcro strips
 - Flight control cables
 - As protection against hydraulic fluids
 - Areas where the operating temperature is constantly above 80 deg.C (176.00 deg.F).
- (a) Protect the above components with the Adhesive Film Tape-Masking - - (Material No. **05RDA1**) and/or applicable plastic or paper sheets.
- (b) Make sure that all the drain valves have a cover to prevent any TPS or loose material to cause a blockage.
- (9) Apply the TPS in a continuous and smooth layer over the area with either of the following equipment:
- Electrostatic-effect gun
 - Air gun
 - Low and high pressure pmp
 - Aerosol and capillary tube
 - BRUSH - BRISTLED, SOFT.
- (10) Remove the covers from the drain valves.
- (11) Make sure that there is no blockage of the drain valves and drain paths:
- (a) If you think there is a blockage, pour water into the drain valves and the drain paths to remove the blockage.

NOTE : No blockage remains when the water runs freely through the drain valves and the drain paths.

5. Close-up

Subtask 51-78-00-410-056-A

On A/C 001-999

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the insulation blankets/material as necessary.
- (3) Install the components from the TPS inspection/check area as necessary.

Subtask 51-78-00-942-058-A

On A/C 001-999

B. Safety Precautions

- (1) Remove the CAP - BLANKING from each electrical connector and receptacle.
- (2) Connect the electrical connector to the battery [Ref. AMM 24-38-51-400-001-A](#).
- (3) Energize the aircraft electrical circuits [Ref. AMM 24-41-00-861-002-A](#)
[Ref. AMM 24-41-00-861-002-A-01](#) [Ref. AMM 24-41-00-861-002-A-02](#).

Subtask 51-78-00-860-051-A

On A/C 001-999


C. Put the aircraft back to its initial configuration.

- (1) Remove the ground support and maintenance equipment, the special and standard tools and all other items.
- (2) De-energize the ground service network

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

Ref. AMM 24-42-00-862-001-A.

TF-N
AIRCRAFT MAINTENANCE MANUAL
CLEANING PROCESSES - CLEANING/PAINTING

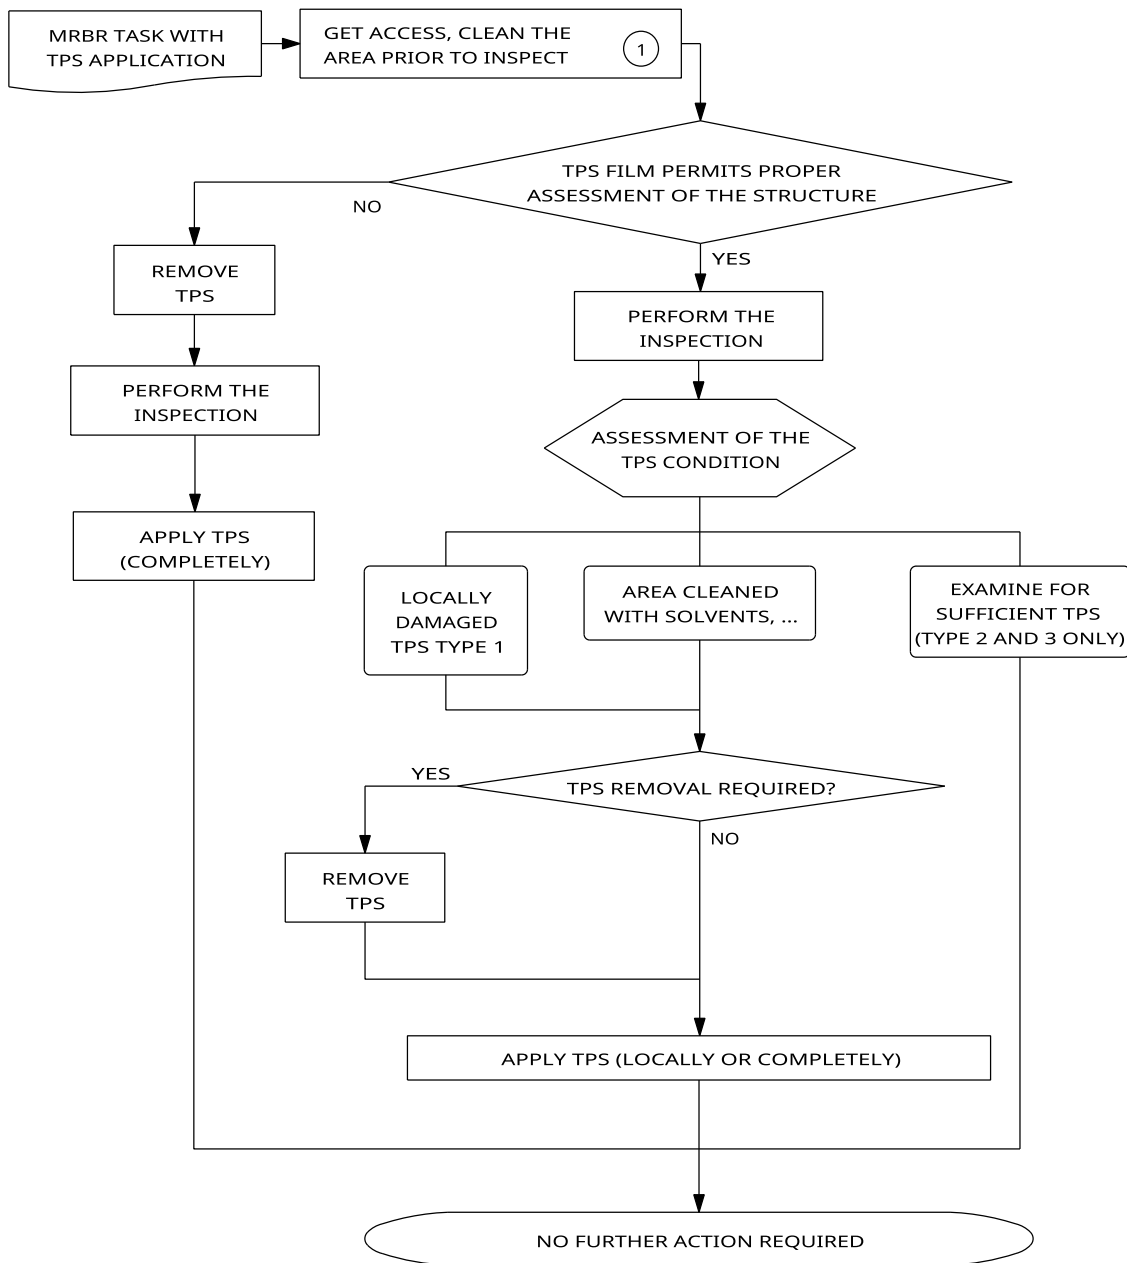

NOTE:

- ① THE AREA/ITEM TO BE INSPECTED MUST HAVE A CLEAN SURFACE THAT PERMITS A SATISFACTORY INSPECTION TO THE NECESSARY INSPECTION LEVEL

N_MM_517800_7_AMM0_01_01

Temporary Protection System (TPS)
Figure 1 / Graphic 51-78-00 -991-00200

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

TASK 53-41-00-210-037 -A

On A/C 001-999

Detailed Inspection of Cabin Floor Structure, Below and 0.5m Around Galleys and Toilets

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 534147-01

DETAILED INSPECTION OF CABIN FLOOR STRUCTURE, BELOW AND 0.5M AROUND GALLEYS AND TOILETS

NOTE : The applicability of this task is given in the MPD.

NOTE : This inspection includes the cabin floor structure below and 0.5 m (1.64 ft.) around the galleys and the toilets from frame 47/54 (A318), frame 47/51 (A319), frame 47 (A320/321) and frame 70. The locations of the galleys and the toilets are different for each aircraft type. This inspection is not applicable for the areas between frame 66 and frame 68 and the lateral shear plates between frame 68 and frame 70.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	FLASHLIGHT
No specific	1	MIRROR - INSPECTION
On A/C 051-350		
No specific	1	SCRAPER - NON METALLIC

B. Consumable Materials

REFERENCE	DESIGNATION
05RDA1	Adhesive Film Tape-Masking - -
08BAA9	Non Aqueous Cleaner-General - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
14JAD1	Sealing Profile-- PTFE Expanded -
14SBA1	Textile-Lint free Cotton -

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
250	AFT PASSENGER COMPARTMENT
251	AFT PASSENGER COMPARTMENT
252	AFT PASSENGER COMPARTMENT
260	AFT CABIN UTILITY AREA
261	AFT CABIN UTILITY AREA
262	AFT CABIN UTILITY AREA

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 51-78-00-916-001-A	Application of Temporary Protection System (TPS)
On A/C 003-113	
Ref. AMM 53-00-00-000-801-A	Removal of the Floor Panels in the Cabin from FR12 to FR70

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

REFERENCE	DESIGNATION
On A/C 001-999	
Ref. AMM 53-00-00-000-801-A-01	Removal of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Removal Procedure - Dry Sealing Concept)
On A/C 003-113	
Ref. AMM 53-00-00-400-801-A	Installation of the Floor Panels in the Cabin from FR12 to FR70
On A/C 001-999	
Ref. AMM 53-00-00-400-801-A-01	Installation of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Installation Procedure - Dry Sealing Concept)
Ref. SRM 51-11-00	(for corrective action)
Ref. SRM 51-22-00	(for corrective action)
Ref. AMM 06-41-53-00	FUSELAGE-DESCRIPTION AND OPERATION
Ref. AMM 25-30-00-00	BUFFET AND GALLEY - DESCRIPTION AND OPERATION
Ref. AMM 25-40-00-00	LAVATORIES - DESCRIPTION AND OPERATION
On A/C 051-350	
Ref. Fig. (1 / 53-41-00-991-27600)	
Ref. Fig. (1 / 53-41-00-991-03100)	

3. Job Set-up

Subtask 53-41-00-010-112-A

On A/C 001-999

A. Get Access

- (1) Remove the applicable galleys and the lavatories from the inspection area.
To do this, refer to the Component Location paragraph in the applicable ATA 25 Description/Operation:
 - For the galleys, refer to the System Description [Ref. AMM 25-30-00-00](#).
 - For the lavatories, refer to the System Description [Ref. AMM 25-40-00-00](#).
- (2) Remove the applicable floor panels from the inspection area

On A/C 003-113

[Ref. AMM 53-00-00-000-801-A](#)

On A/C 001-999

[Ref. AMM 53-00-00-000-801-A-01](#):

- (a) For the locations of the floor panels, refer to the System Description [Ref. AMM 06-41-53-00](#).

Subtask 53-41-00-020-084-A

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

B. Removal of the Adhesive Tapes

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

[Ref. Fig. \(1 / 53-41-00-991-27600\)](#)

- (1) Use the SCRAPER - NON METALLIC and remove the adhesive tapes (1) from the cabin floor structure between frame 64 and frame 70, and discard them.

Subtask 53-41-00-110-155-A

On A/C 001-999

C. Preparation of the Inspection Area

- (1) Make sure that the inspection area is sufficiently clean to do a satisfactory inspection of the area.
- (2) If the inspection area is not sufficiently clean, clean it with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a Textile-Lint free Cotton - (Material No. **14SBA1**) .

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (3) If there is a Temporary Protection System (TPS) layer and if it does not let you do a satisfactory inspection, remove the TPS layer
[Ref. AMM 51-78-00-916-001-A.](#)
- (4) Use the FLASHLIGHT and/or the MIRROR - INSPECTION to do the inspection.

4. Procedure

Ref. Fig. 1 / 53-41-00-991-03100

Subtask 53-41-00-210-091-A

On A/C 001-999

A. Inspection

- (1) Do a detailed inspection of the cabin floor structure below and 0.5 m (1.64 ft.) around the galleys and the toilets for damage or discontinuities.
- (2) Make sure that there is (are) no:
 - (a) Corrosion (only applicable to metal parts):
 - If you find corrosion, refer to the Structural Repair Manual for the corrosion types, inspection, removal and subsequent corrosion protection
Ref. SRM 51-22-00.
 - (b) Cracks, scratches, gouges, dents, creases or other damage:
 - If you find this type of damage, refer to the Structural Repair Manual for the damage types, classification and corrective action
Ref. SRM 51-11-00.

Subtask 53-41-00-916-075-A

On A/C 001-999

B. Check and Application of the TPS Layer

CAUTION: DO NOT APPLY TEMPORARY PROTECTION SYSTEM (TPS) TYPE 3 OR 1+2 ON THE MOVABLE COMPONENTS. USE ONLY TPS TYPE 1 GRADE 2. IF YOU DO NOT OBEY THIS INSTRUCTION, THE MECHANISMS WILL NOT OPERATE CORRECTLY.

- (1) Apply the masking paper or the Adhesive Film Tape-Masking - - (Material No. **05RDA1**) on the equipment and the fittings adjacent to the inspection area. This is to make sure that you do not apply TPS on these areas.
- (2) If you removed the TPS layer at the "Preparation of the Inspection Area" paragraph, apply a new layer of the TPSs that follow [Ref. AMM 51-78-00-916-001-A](#):
 - The Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and the Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) , or
 - The Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and the Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**) .
- (3) If you did not remove the TPS layer at the "Preparation of the Inspection Area" paragraph, do a check of the condition and integrity of the TPS layer
[Ref. AMM 51-78-00-916-001-A.](#)
- (4) If the TPS layer has local damage, remove the damaged TPS layer and apply a new layer of the TPSs that follow [Ref. AMM 51-78-00-916-001-A](#):
 - The Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and the Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) , or

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- The Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and the Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**) .

(5) Remove the masking paper or the adhesive film tape-masking.

5. Close-up

Subtask 53-41-00-420-127-A

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

A. Installation of the Adhesive Tapes

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

Ref. Fig. (1 / 53-41-00-991-27600)

- (1) Remove the remaining adhesive from the cabin floor structure between frame 64 and frame 70 with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a clean Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (2) Before you install the adhesive tapes (1), make sure that the clip nuts are clean and in the correct condition:
 - (a) If the clip nuts are damaged, replace them.
- (3) Install the adhesive tapes (1) on the cabin floor structure between frame 64 and frame 70 as follows:
 - (a) Cut the new Sealing Profile-- PTFE Expanded - (Material No. **14JAD1**) (1) to the same dimension as the removed adhesive tapes (1).
 - (b) Apply the Sealing Profile-- PTFE Expanded - (Material No. **14JAD1**) (1) on the full width of the beams:

NOTE : The Sealing Profile-- PTFE Expanded - (Material No. **14JAD1**) is available in different widths.

- 1 If one adhesive tape (1) is not sufficient to cover the width of the beam, use more adhesive tapes (1).
- 2 Make sure that the adhesive tape (1) of larger width is put on top of the adhesive tape (1) of smaller width.
- 3 Make sure that you do not make overlaps of more than three adhesive tapes (1).
- (c) Make sure that overlap A between the adhesive tapes (1) is 10 -5 mm or +5 mm (0.3937 -0.1969 in. or +0.1969 in.).
- (d) Make sure that the adhesive tapes (1) extend 2 mm (0.0787 in.) more than the rail edges.
- (e) Make sure that the adhesive tapes (1) are flush with the plugs:
 - 1 If the adhesive tapes (1) are not flush with the plugs, cut the adhesive tapes (1) to make them flush.
- (f) Make sure that there is no adhesive tape (1) on all the hard points on the cabin floor structure.

Subtask 53-41-00-410-110-A

On A/C 001-999

B. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the removed floor panels

On A/C 003-113

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

Ref. AMM 53-00-00-400-801-A

On A/C 001-999

Ref. AMM 53-00-00-400-801-A-01:

(a) For the locations of the floor panels, refer to the System Description


Ref. AMM 06-41-53-00.

(3) Install the removed galleys and the lavatories.

To do this, refer to the Component Location paragraph in the applicable ATA 25 Description/
Operation:

- For the galleys, refer to the System Description Ref. AMM 25-30-00-00.
- For the lavatories, refer to the System Description Ref. AMM 25-40-00-00.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

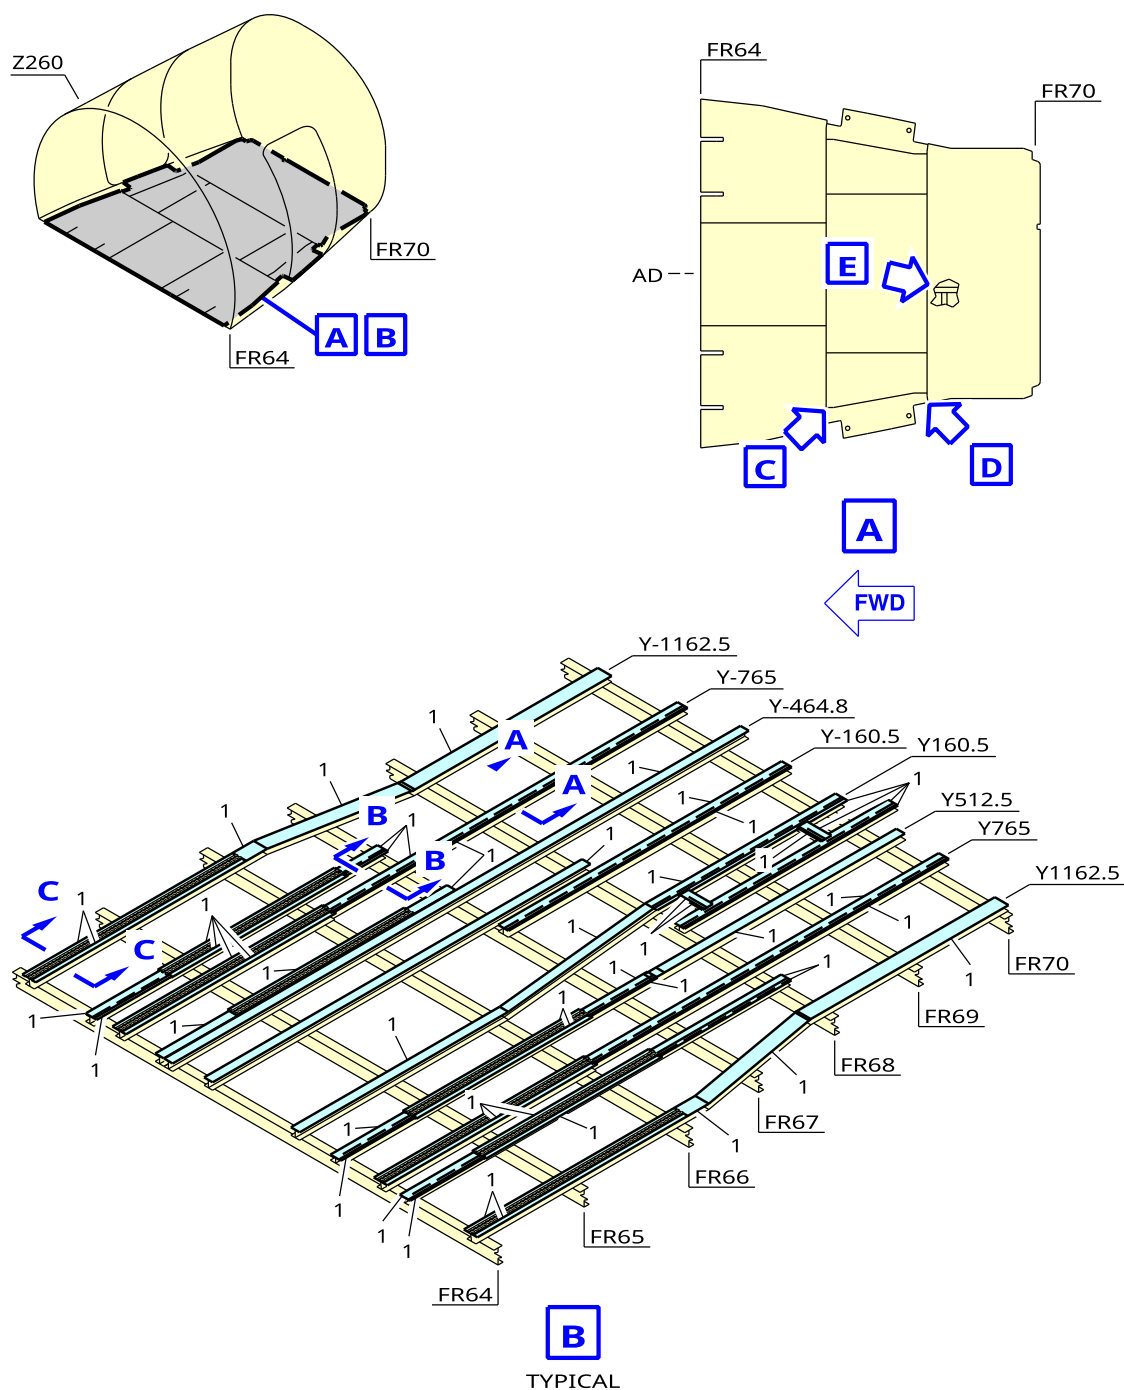

N_MM_534100_6_DLT2_01_00


Adhesive Tapes on the Cabin Floor Structure

Figure 1 / Graphic 53-41-00 -991-27600

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

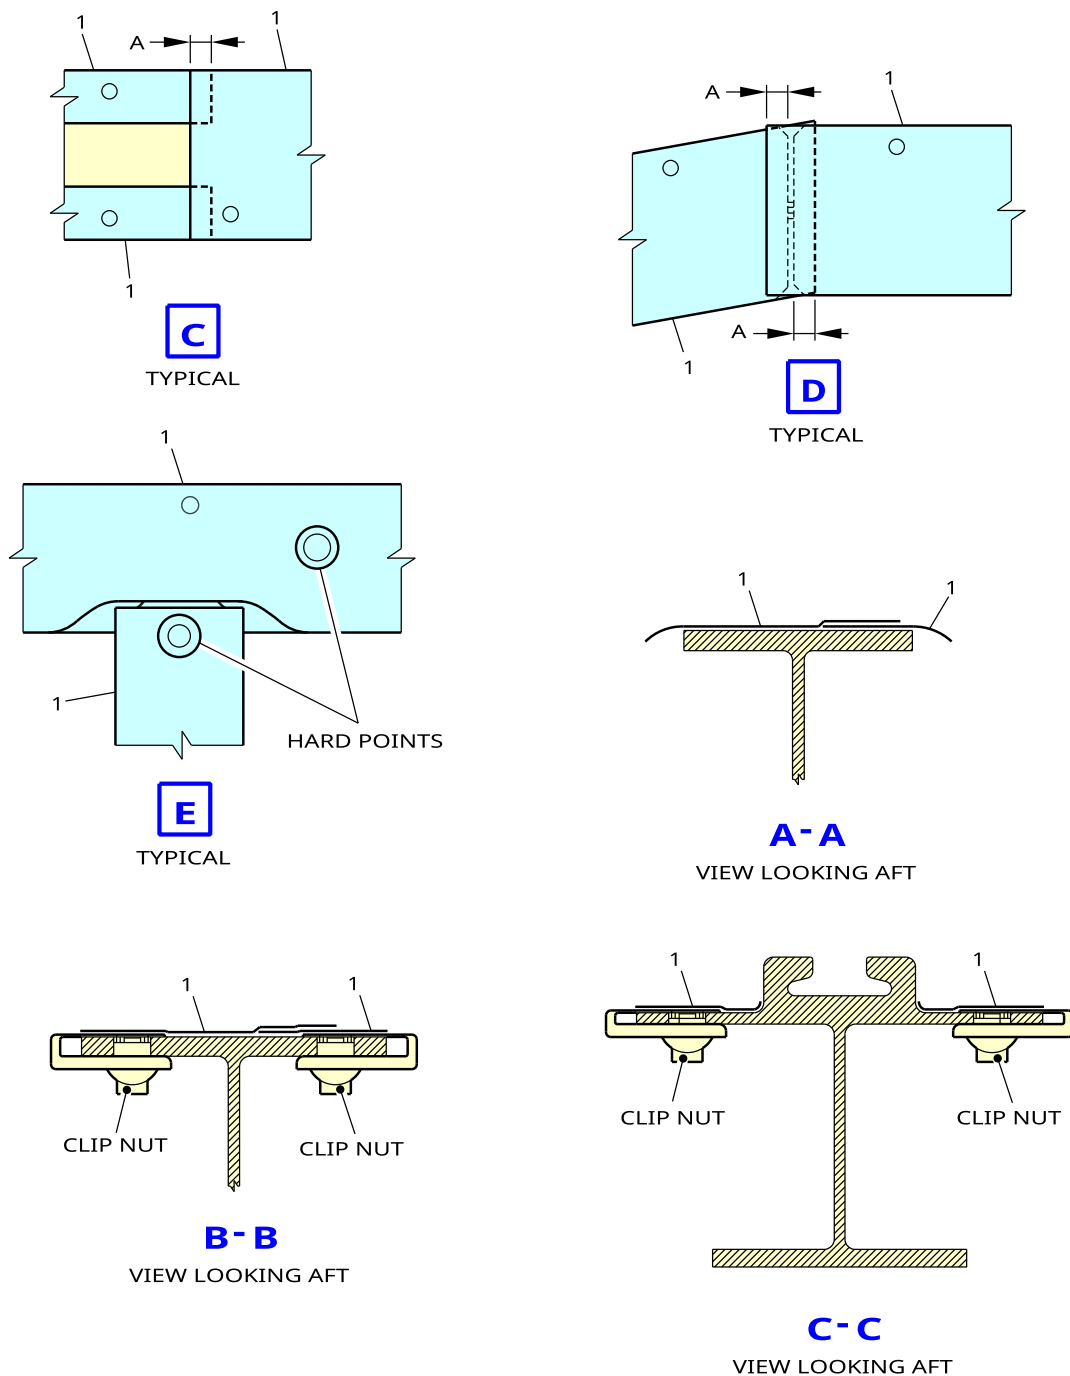

N_MM_534100_6_DLT2_02_00


Adhesive Tapes on the Cabin Floor Structure

Figure 2 / Graphic 53-41-00 -991-27600

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

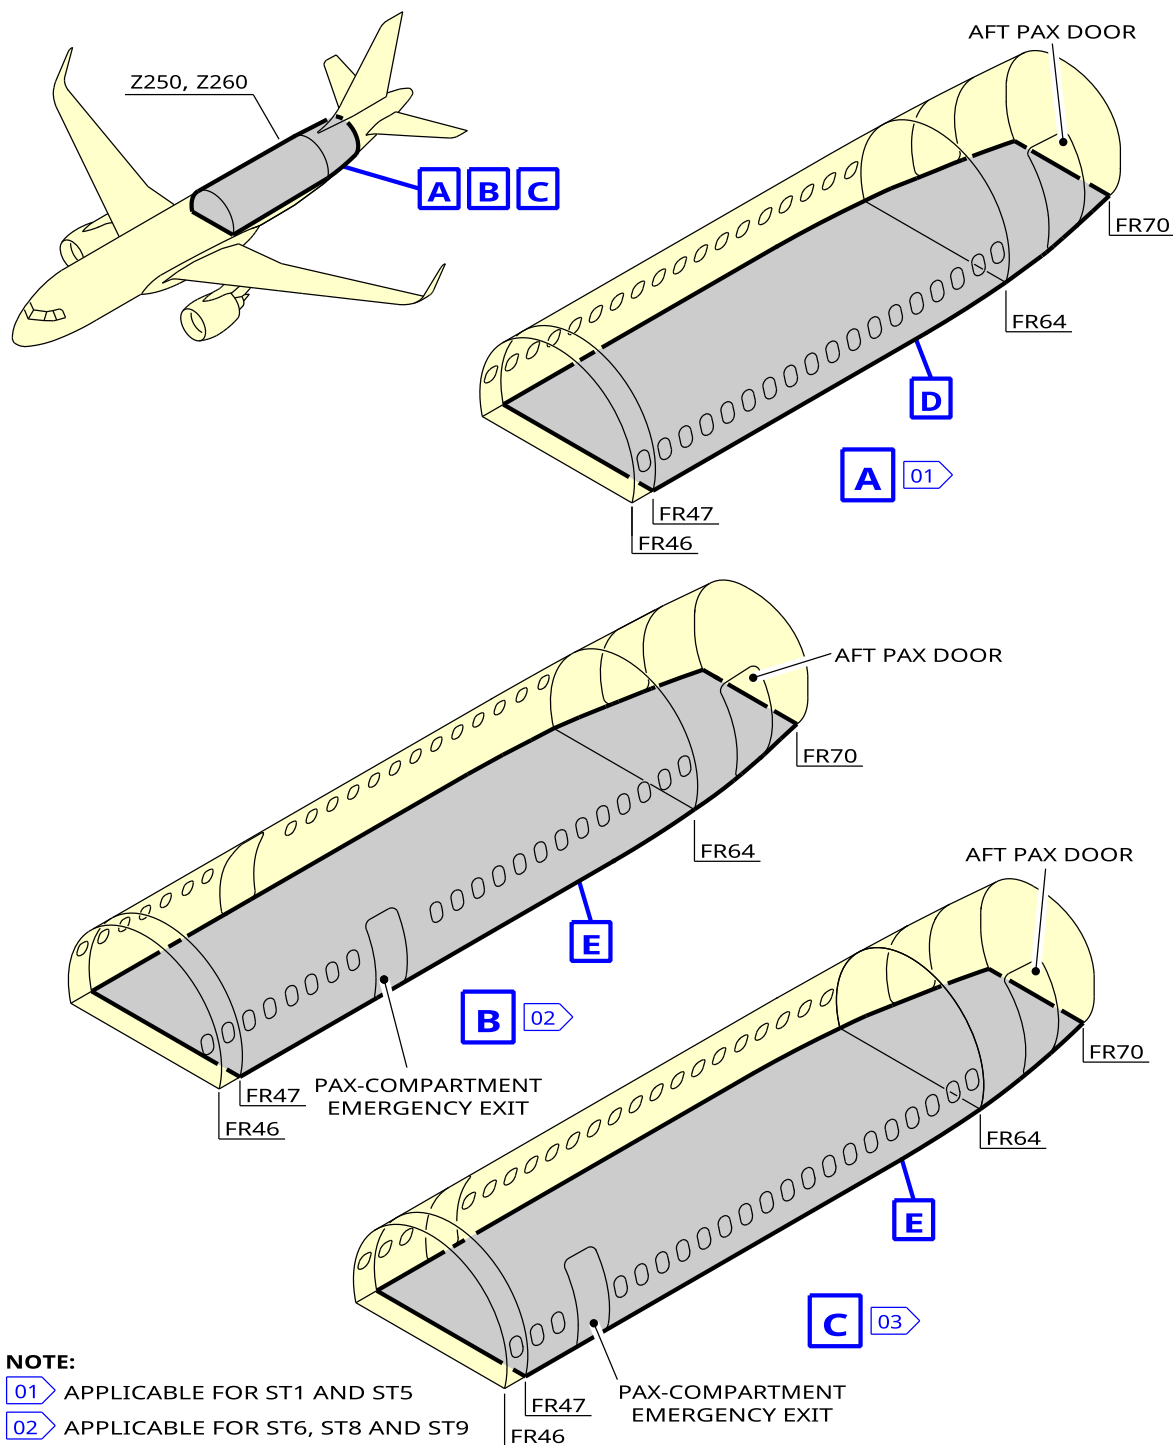


N_MM_534100_6_CSM0_01_01

Cabin Floor Structure Between Frame 47 and Frame 70

Figure 1 / Graphic 53-41-00 -991-03100

On A/C 001-999

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

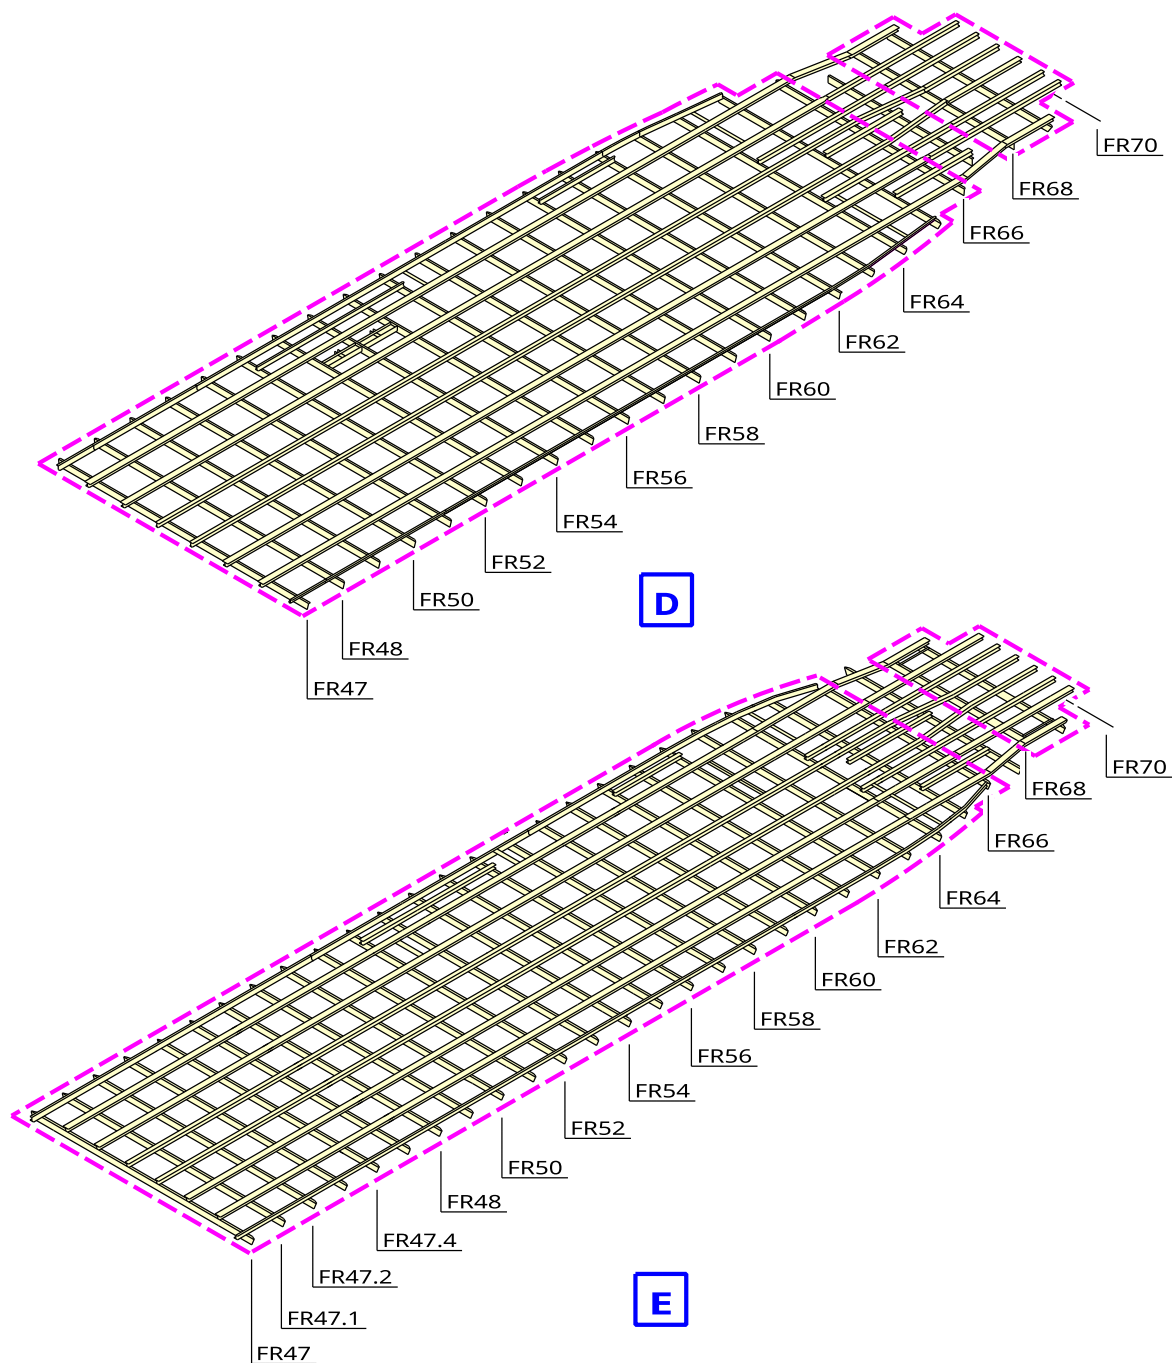

NOTE:
INSPECTION AREA

N_MM_534100_6_CSM0_02_00

Cabin Floor Structure Between Frame 47 and Frame 70
Figure 2 / Graphic 53-41-00 -991-03100

 MET.25335797		Task Card Title: CABIN FLOOR STRUCT BELOW AFT ENTERAN					
Task Card NO: 534195-01-2		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: INSP,II,CAB,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 05			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 66	
ENCLOSURE: ☒ CMR: ☐ CPCP: ☒ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: DET		Special Code: INSP		MSG Code: CPCP, MRB		Request: JOB-SETUP,INSPECTION,INSPECTION,JOEUP	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 261,262							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		53-41-00-210-835-A					
MRB		534195-01-2					
ACCESS PANELS:							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
AV 30		PREVENTIVE - HEAVY DUTY HARD FILM				1.0	
AV 8		PREVENTIVE- WATER DISPLACE HARD FILM				1.0	
LOTOXANE HD		SOLVENT				1.0	
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
Job Description							
1. JOB SET-UP: A. PERFORM JOB SET-UP FOR AS DETAILED INSPECTION OF CABIN FLOOR STRUCTURE AND STRUCTURE BELOW AFT ENTRANCE AREA, BETWEEN FR66 AND FR68 AND LATERAL SHEAR PLATES BETWEEN FR68 AND FR70 PER AMM TASK 53-41-00-210-835A.							
STEP COMPLETION SIGN OFF:							
Qualification / Skill		Number of employees		Duration		Number./Signature	
Date							
Day Month Year							
Mechanic/s		CAB/ACFT_TECH		HRS			
Insp.				HRS			
Job Description							
2. INSTRUCTION :							



Task Card Title:

CABIN FLOOR STRUCT BELOW AFT ENTERAN

Task Card NO:

534195-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

A. PERFORM A DETAILED VISUAL INSPECTION OF THE CABIN FLOOR STRUCTURE AND THE STRUCTURE BELOW THE AFT ENTRANCE AREA, BETWEEN FR66 AND FR68 AND THE LATERAL SHEAR PLATES BETWEEN FR68 AND FR70 AS PER AMM TASK 53-41-00-210-835-A.

NOTE

Ensure to fill the attached TSV# 92-634 along with this task.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/II			HRS				

Job Description

....CONTINUED:

2.

B. APPLY CORROSION PREVENTIVE COMPOUND AV 8 AND SUBSEQUENTLY APPLY AV 30 TO THE INSPECTION AREA REF AMM TASK 51-75-13-916-002.
(AMM REF 53-41-00-210-835-A)

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	CAB/ACFT_TECH			HRS				
Insp.				HRS				

Job Description

3. CLOSE-UP :

A. PERFORM JOB-CLOSEUP AS PER AMM TASK 53-41-00-210-835-A.

STEP COMPLETION SIGN OFF:



Task Card Title:

CABIN FLOOR STRUCT BELOW AFT ENTERAN

Task Card NO:

534195-01-2

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.			HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____

(1) If Task card interrupted or performed by different personals updates the system and update the following accord (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 2 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 3 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 4 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

- Interruption No. 5 [] Task card [] AMM [] Other specify. _____

Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____

Remark's: _____

**Task Completion Close Up And
System Update****Station****Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

TASK 53-41-00-210-835 -A

On A/C 001-999

Detailed Inspection of Cabin Floor Structure and Structure Below Aft Entrance Area, Between FR 66 and FR 68

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 534195-01

DETAILED INSPECTION OF CABIN FLOOR STRUCTURE AND STRUCTURE BELOW AFT ENTRANCE AREA, BETWEEN FR 66 AND FR 68.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE
No specific	1	FLASHLIGHT
No specific	1	MIRROR - INSPECTION

On A/C 051-350

No specific	1	SCRAPER - NON METALLIC
-------------	---	------------------------

B. Consumable Materials

REFERENCE	DESIGNATION
08BAA9	Non Aqueous Cleaner-General - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
14JAD1	Sealing Profile-- PTFE Expanded -

On A/C 001-999

14SBA1	Textile-Lint free Cotton -
--------	----------------------------

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
261	AFT CABIN UTILITY AREA
262	AFT CABIN UTILITY AREA
832 , 842	

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 25-22-41-000-001-A	Removal of the Wall-Mounted Cabin Attendant Seat (CAS)
Ref. AMM 25-22-41-400-001-A	Installation of the Wall-Mounted Cabin Attendant Seat (CAS)
Ref. AMM 25-22-42-000-001-A	Removal of the Free-Standing Cabin Attendant Seat (CAS)
Ref. AMM 25-22-42-400-001-A	Installation of the Free-Standing Cabin Attendant Seat (CAS)

On A/C 003-250

Ref. AMM 25-23-45-000-003-A	Removal of the Door Frame Linings From the Left Aft Passenger/Crew Door
Ref. AMM 25-23-45-000-004-A	Removal of the Door Frame Linings From the Right Aft Passenger/Crew Door
Ref. AMM 25-23-45-400-005-A	Installation of the Door Frame Linings on the Right Aft Passenger/Crew Door
Ref. AMM 25-23-45-400-008-A	Installation of the Door Frame Linings on the Left Aft Passenger/Crew Door

On A/C 001-999

Ref. AMM 51-78-00-916-001-A	Application of Temporary Protection System (TPS)
Ref. AMM 52-10-00-010-001-A	Opening of the Passenger/Crew Door
Ref. AMM 52-10-00-410-001-A	Closing of the Passenger/Crew Door

On A/C 003-113

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

REFERENCE	DESIGNATION
Ref. AMM 53-00-00-000-801-A	Removal of the Floor Panels in the Cabin from FR12 to FR70
On A/C 001-999	
Ref. AMM 53-00-00-000-801-A-01	Removal of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Removal Procedure - Dry Sealing Concept)
On A/C 003-113	
Ref. AMM 53-00-00-400-801-A	Installation of the Floor Panels in the Cabin from FR12 to FR70
On A/C 001-999	
Ref. AMM 53-00-00-400-801-A-01	Installation of the Floor Panels in the Cabin from FR12 to FR70 (Alternative Installation Procedure - Dry Sealing Concept)
Ref. SRM 51-11-00	(for corrective action)
Ref. SRM 51-22-00	(for corrective action)
Ref. AMM 06-41-53-00	FUSELAGE-DESCRIPTION AND OPERATION
On A/C 051-350	
Ref. Fig. (1 / 53-41-00-991-27100)	
Ref. Fig. (1 / 53-41-00-991-09600)	

3. Job Set-up

Subtask 53-41-00-010-172-A

On A/C 001-999

A. Get Access

- (1) Put the ACCESS PLATFORM 4M (13 FT)-ADJUSTABLE in position at aft passenger/crew door 832 (842).
- (2) Open aft passenger/crew door 832 (842) [Ref. AMM 52-10-00-010-001-A](#).
- (3) Remove the Cabin Attendant Seat (CAS) [Ref. AMM 25-22-41-000-001-A](#) or [Ref. AMM 25-22-42-000-001-A](#).
- (4) Remove the lower door-frame lining at frame 68

On A/C 003-250

[Ref. AMM 25-23-45-000-003-A](#)

On A/C 251-350

[Ref. AMM 25-23-45-000-003-B](#) and

On A/C 003-250

[Ref. AMM 25-23-45-000-004-A](#)

On A/C 251-350

[Ref. AMM 25-23-45-000-004-B](#).

- (5) Remove the side lateral-galley lining.
- (6) Remove the applicable floor panels between frame 66 and frame 68

On A/C 003-113

[Ref. AMM 53-00-00-000-801-A](#)

On A/C 001-999

[Ref. AMM 53-00-00-000-801-A-01](#):

- (a) For the locations of the floor panels, refer to the System Description [Ref. AMM 06-41-53-00](#).

Subtask 53-41-00-020-082-A

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

B. Removal of the Adhesive Tapes

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

[Ref. Fig. \(1 / 53-41-00-991-27100\)](#)

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (1) Use the SCRAPER - NON METALLIC and remove the adhesive tapes (1) from the cabin floor structure between frame 66 and frame 68, and discard them.

Subtask 53-41-00-110-160-A

On A/C 001-999

C. Preparation of the Inspection Area

- (1) Make sure that the inspection area is sufficiently clean to do a satisfactory inspection of the area.
- (2) If the inspection area is not sufficiently clean, clean it with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (3) If there is a Temporary Protection System (TPS) layer and if it does not let you do a satisfactory inspection, remove the TPS layer
[Ref. AMM 51-78-00-916-001-A.](#)
- (4) Use the FLASHLIGHT and the MIRROR - INSPECTION to do the inspection.

4. Procedure

Ref. Fig. 1 / 53-41-00-991-09600

Subtask 53-41-00-210-136-A

On A/C 001-999

A. Inspection

- (1) Do a detailed inspection of the cabin floor structure and the structure below the aft entrance area between frame 66 and frame 68 for damage or discontinuities.
- (2) Make sure that there is no:
 - (a) Corrosion (only applicable to metal parts):
 - If you find corrosion, refer to the Structural Repair Manual for the corrosion types, inspection, removal and subsequent corrosion protection
Ref. SRM 51-22-00.
 - (b) Cracks, scratches, gouges, dents, creases or other damage:
 - If you find this type of damage, refer to the Structural Repair Manual for the damage types, classification and corrective action
Ref. SRM 51-11-00.

Subtask 53-41-00-916-089-A

On A/C 001-999

B. Check and Application of the TPS Layer

CAUTION: DO NOT APPLY TEMPORARY PROTECTION SYSTEM (TPS) TYPE 3 OR 1+2 ON THE MOVABLE COMPONENTS. USE ONLY TPS TYPE 1 GRADE 2. IF YOU DO NOT OBEY THIS INSTRUCTION, THE MECHANISMS WILL NOT OPERATE CORRECTLY.

- (1) If you removed the TPS layer at the "Preparation of the Inspection Area" paragraph, apply a new layer of the TPS that follow [Ref. AMM 51-78-00-916-001-A](#):
 - The Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and the Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) , or
 - The Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and the Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**) .

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (2) If you did not remove the TPS layer at the "Preparation of the Inspection Area" paragraph, do a check of the condition and integrity of the TPS layer
[Ref. AMM 51-78-00-916-001-A.](#)
- (3) If the TPS layer has local damage, remove the damaged TPS layer and apply a new layer of the TPS that follow [Ref. AMM 51-78-00-916-001-A:](#)
 - The Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and the Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) , or
 - The Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and the Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**) .

5. Close-up

Subtask 53-41-00-420-125-A

[On A/C 051-350](#)

[EMB SB 53-1483 for A/C 051-055; 101-115; 201-230](#)

A. Installation of the Adhesive Tapes

[On A/C 051-350](#)

[EMB SB 53-1483 for A/C 051-055; 101-115; 201-230](#)

Ref. Fig. (1 / 53-41-00-991-27100)

- (1) Remove the remaining adhesive from the cabin floor structure between frame 66 and frame 68 with the Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a clean Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (2) Before you install the adhesive tapes (1), make sure that the clip nuts are clean and in the correct condition:
 - (a) If the clip nuts are damaged, replace them.
- (3) Install the adhesive tapes (1) on the cabin floor structure between frame 66 and frame 68 as follows:
 - (a) Cut the new Sealing Profile-- PTFE Expanded - (Material No. **14JAD1**) (1) to the same dimension as the removed adhesive tapes (1).
 - (b) Apply the Sealing Profile-- PTFE Expanded - (Material No. **14JAD1**) (1) on the full width of the beams:

NOTE : The Sealing Profile-- PTFE Expanded - (Material No. **14JAD1**) is available in different widths.

- 1 If one adhesive tape (1) is not sufficient to cover the width of the beam, use more adhesive tapes (1).
- 2 Make sure that the adhesive tape (1) of larger width is put on top of the adhesive tape (1) of smaller width.
- 3 Make sure that you do not make overlaps of more than three adhesive tapes (1).
- (c) Make sure that overlap A between the adhesive tapes (1) is 10 -5 mm or +5 mm (0.3937 -0.1969 in. or +0.1969 in.).
- (d) Make sure that the adhesive tapes (1) extend 2 mm (0.0787 in.) more than the rail edges.
- (e) Make sure that the adhesive tapes (1) are flush with the plugs:
 - 1 If the adhesive tapes (1) are not flush with the plugs, cut the adhesive tapes (1) to make them flush.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (f) Make sure that there is no adhesive tape (1) on all the hard points on the cabin floor structure.

Subtask 53-41-00-410-168-A

On A/C 001-999

B. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the removed floor panels between frame 66 and frame 68

On A/C 003-113

Ref. AMM 53-00-00-400-801-A

On A/C 001-999

Ref. AMM 53-00-00-400-801-A-01:

- (a) For the locations of the floor panels, refer to the System Description
Ref. AMM 06-41-53-00.
- (3) Install the side lateral-galley lining.
- (4) Install the lower door-frame lining at frame 68

On A/C 003-250

Ref. AMM 25-23-45-400-005-A

On A/C 251-350

Ref. AMM 25-23-45-400-005-B and

On A/C 003-250

Ref. AMM 25-23-45-400-008-A

On A/C 251-350

Ref. AMM 25-23-45-400-008-B.


- (5) Install the CAS

On A/C 001-999

Ref. AMM 25-22-41-400-001-A or Ref. AMM 25-22-42-400-001-A.

- (6) Close aft passenger/crew door 832 (842) Ref. AMM 52-10-00-410-001-A.
- (7) Remove the ground support and maintenance equipment, the special and standard tools and all other items.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

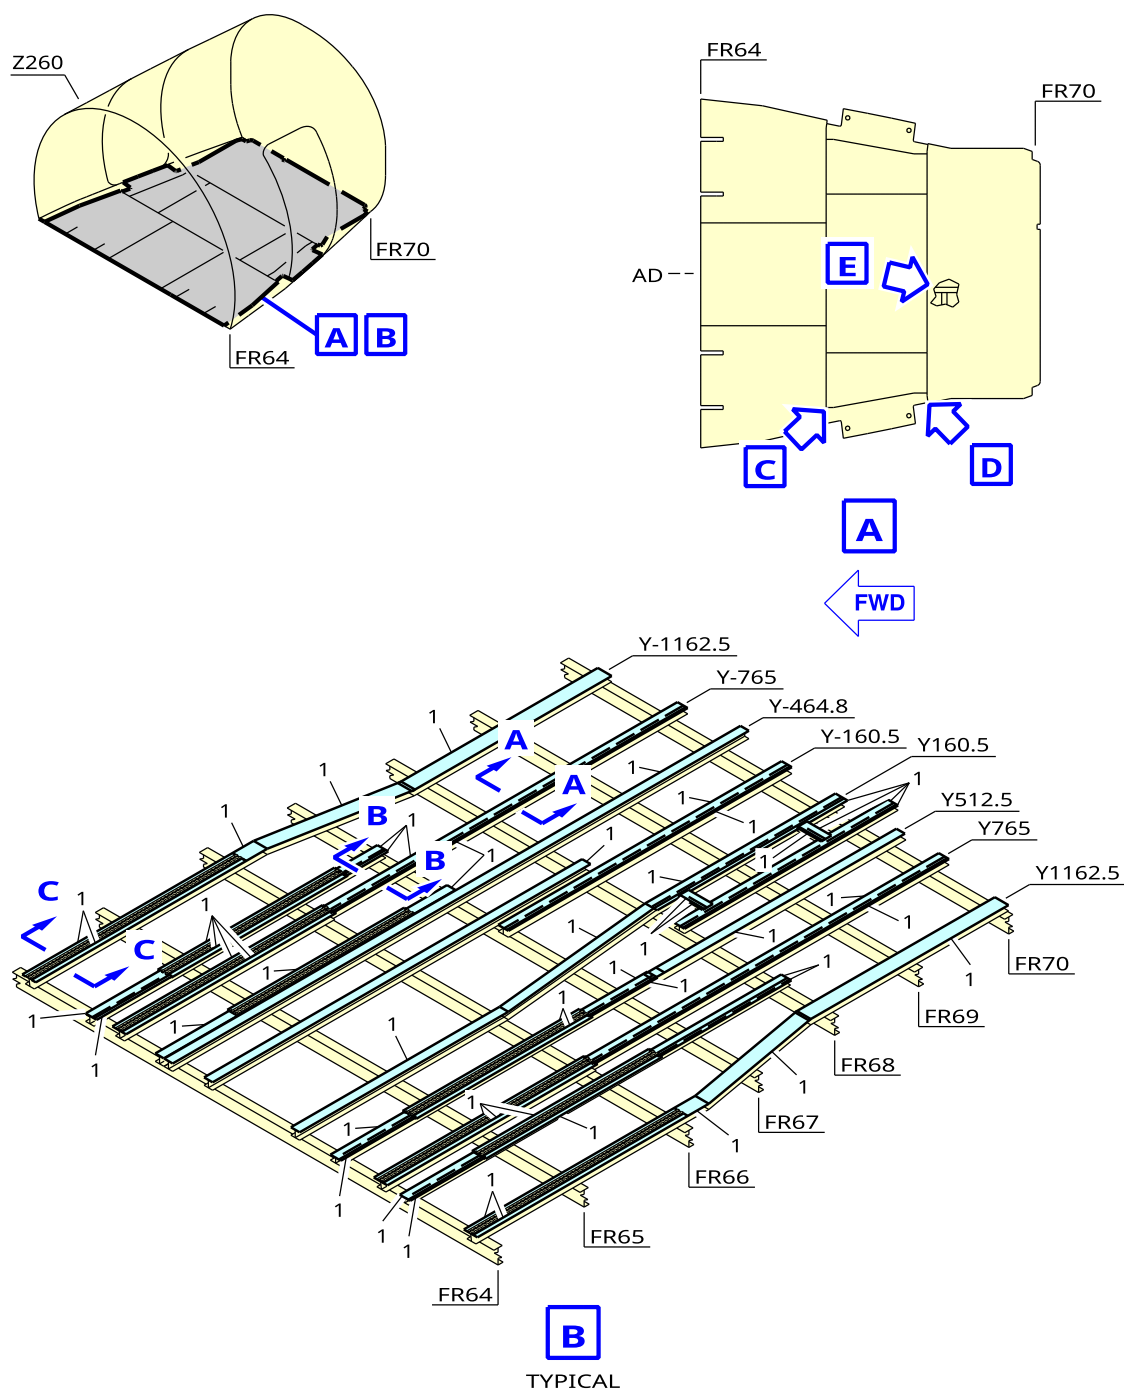

N_MM_534100_6_CLT2_01_00


Adhesive Tapes on the Cabin Floor Structure

Figure 1 / Graphic 53-41-00 -991-27100

On A/C 051-350

EMB SB 53-1483 for A/C 051-055; 101-115; 201-230



TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

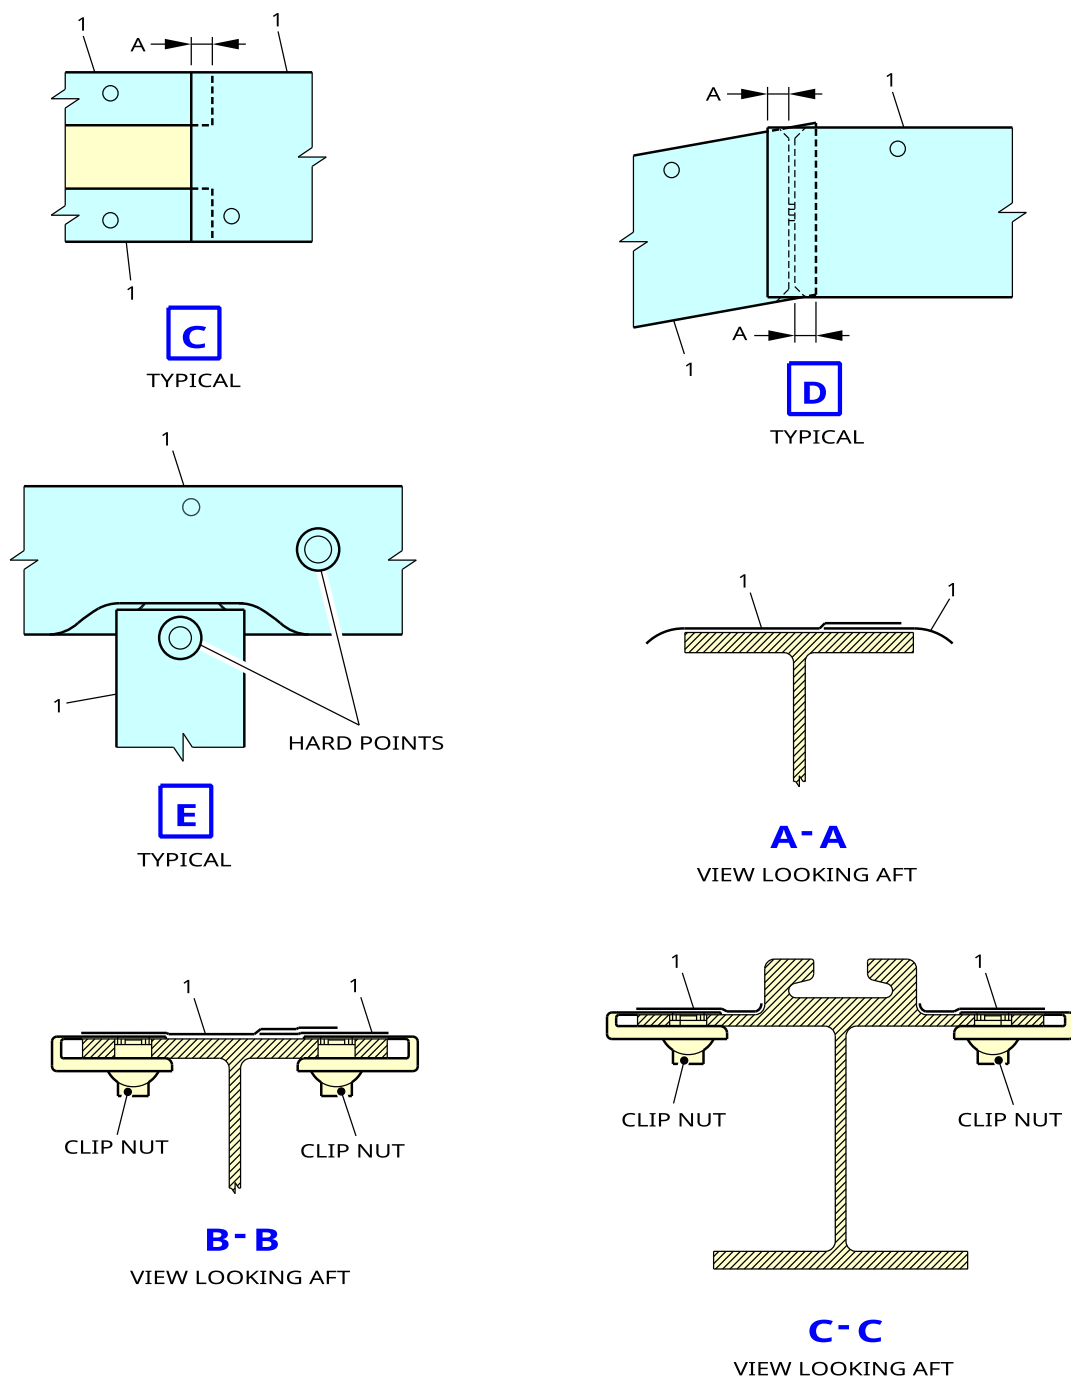

N_MM_534100_6_CLT2_02_01

Adhesive Tapes on the Cabin Floor Structure
Figure 2 / Graphic 53-41-00 -991-27100
On A/C 051-350
EMB SB 53-1483 for A/C 051-055; 101-115; 201-230

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

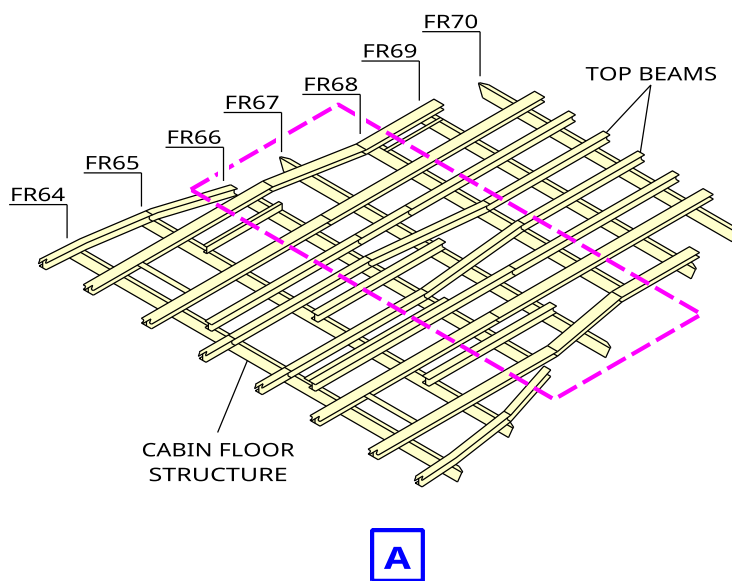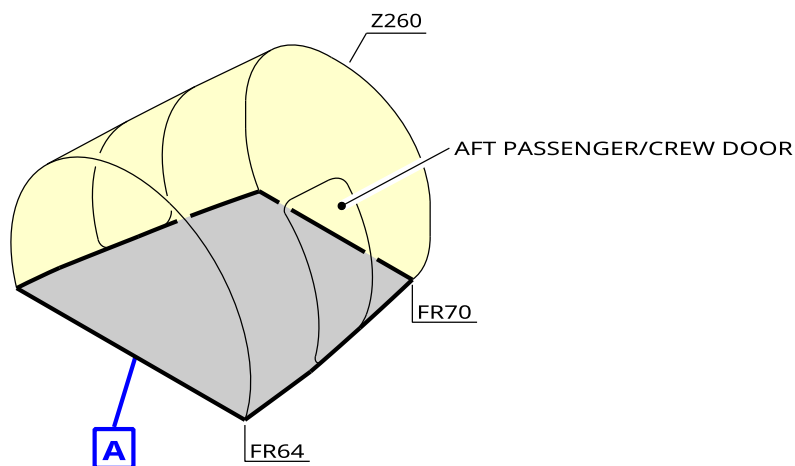

NOTE:
[Dashed Pink Box] INSPECTION AREA

N_MM_534100_6_JQM0_01_01

Cabin Floor Structure - FR66 thru FR70
Figure 1 / Graphic 53-41-00 -991-09600
On A/C 001-999

Copyright of Saudia Technic - Regeneration is not allowed without prior approval by Saudia Technic.



Task Card Title:

REAR PRESSURE BULKHEAD AFT FACE INSP

Task Card NO:

535101-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**Job Description**

B. CLEAN THE INSPECTION AREA WITH CLEANING AGENTS AND LINT-FREE COTTON CLOTH AS REQUIRED AS PER AMM 53-51-00-210-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				
Insp.				HRS				

Job Description

C. PERFORM A DETAILED VISUAL INSPECTION OF THE REAR PRESSURE BULKHEAD COMPLETE AFT FACE, AND FUSELAGE BETWEEN FR 70 AND FR 71, FROM STRINGER 26, LH / RH TO BOTTOM CENTER LINE PER AMM TASK 53-51-00-210-001-A.

NOTE

Ensure to fill the attached TSV# 92-634 along with this task.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/II			HRS				

Job Description

D. APPLY CORROSION PREVENTATION AV 8 SUBSEQUENTLY WITH AV 30 TO THE INSPECTION AREA.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				
Insp.	INSP/II			HRS				

Job Description



Task Card Title:

REAR PRESSURE BULKHEAD AFT FACE INSP

Task Card NO:

535101-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

E. OK TO INSTALL THE REAR PRESSURE BULKHEAD COVER.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/II			HRS				

Job Description

F. INSTALL THE REAR PRESSURE BULKHEAD COVER.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				
Insp.	INSP/II			HRS				

Job Description

G. PERFORM JOB CLOSE UP AND RETURN THE AIRCRAFT TO ITS NORMAL CONFIGURATION AS PER AMM TASK 53-51-00-210-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				
Insp.				HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

_____, _____, _____, _____, _____, _____, _____, _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____

_____, _____, _____, _____, _____, _____, _____, _____



MET.32712606

Task Card Title:

REAR PRESSURE BULKHEAD AFT FACE INSP

Task Card NO:

535101-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

TASK 53-51-00-210-001 -A

On A/C 001-999

Detailed Inspection of Rear Pressure Bulkhead Complete Aft Face, and Fuselage Internal Structure, between FR 70 and FR 71, from Stringer 26, LH/RH to Bottom Center Line

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 535101-01

DETAILED INSPECTION OF REAR PRESSURE BULKHEAD COMPLETE AFT FACE, AND FUSELAGE INTERNAL STRUCTURE, BETWEEN FR 70 AND FR 71, FROM STRINGER 26, LH/RH TO BOTTOM CENTER LINE

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 3M (10 FT)
No specific	1	SCRAPER - NON METALLIC

B. Consumable Materials

REFERENCE	DESIGNATION
06AAA1	Polysulfide Sealant-General Purpose Brushable -
08BAA9	Non Aqueous Cleaner-General - -
12ABB1	Corrosion Preventive Compound-Water Displacing Hard Film -
12ABC1	Corrosion Preventive Compound-Water Displacing Soft Film -
12ACB1	Corrosion Preventive Compound-Heavy Duty Hard Film -
12ACC1	Corrosion Preventive Compound-Heavy Duty Soft Film -
14SBA1	Textile-Lint free Cotton -

C. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
311	AFT FUSLG TAIL SECTION
312	AFT FUSLG TAIL SECTION
312AR	

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 51-78-00-916-001-A	Application of Temporary Protection System (TPS)
Ref. SRM 51-11-00	
Ref. SRM 51-22-00	
Ref. Fig. (1 / 53-51-00-991-00100)	

3. Job Set-up

Subtask 53-51-00-010-051-A

On A/C 001-999

A. Get Access

Ref. Fig. (1 / 53-51-00-991-00100)

WARNING: MAKE SURE THAT THE SAFETY DEVICES AND THE WARNING NOTICES ARE IN POSITION BEFORE YOU START A TASK ON OR NEAR:

- THE FLIGHT CONTROLS
- THE FLIGHT CONTROL SURFACES
- THE LANDING GEAR AND RELATED DOORS
- THE CARGO DOORS
- OTHER COMPONENTS THAT MOVE.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

**MOVEMENT OF COMPONENTS CAN KILL OR CAUSE INJURY TO PERSONS
AND/OR DAMAGE TO EQUIPMENT.**

- (1) Put the ACCESS PLATFORM 3M (10 FT) below access door 312AR .
- (2) Open access door 312AR .
- (3) Get access to the inspection area.
- (4) Remove the rear pressure-bulkhead cover (1).

Subtask 53-51-00-110-069-A

On A/C 001-999

B. Preparation of the Inspection Area

- (1) Make sure that the inspection area is sufficiently clean to do a satisfactory inspection of the area.
- (2) If not, clean the inspection area with Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and the Textile-Lint free Cotton - (Material No. **14SBA1**) .
- (3) If there is a TPS layer and if it does not let you do a satisfactory inspection, remove the TPS layer [Ref. AMM 51-78-00-916-001-A](#).

4. Procedure

Ref. Fig. 1 / 53-51-00-991-00100

Subtask 53-51-00-210-050-A

On A/C 001-999

A. Inspection

- (1) Do a detailed inspection of the complete aft face of the rear pressure bulkhead for damage and discontinuities. Do this also for the fuselage internal structure between FR70 and FR71, from stringer 26 on the left and right sides to the bottom center line.
- (2) Make sure that there is no:
 - (a) Corrosion:
If you find corrosion, refer to the Structural Repair Manual
Ref. SRM 51-22-00 for the corrosion types, inspection, removal and subsequent corrosion protection.
 - (b) Other damage (scratches, cracks, gouges, dents, creases):
If you find this type of damage, refer to the Structural Repair Manual
Ref. SRM 51-11-00 for the damage types, classification and corrective action.
- (3) Examine the leveling compound/sealant around the drain pipe. Make sure that the fluid in the area goes out of the drain pipe.

NOTE : The leveling compound/sealant must be removed only if it is found cracked or in a bad condition, or if the edge of the levelling compound/sealant is not in contact with the fuselage skin.

Subtask 53-51-00-916-050-A

On A/C 001-999

B. Check and Application of the TPS Layer

- (1) If you removed the TPS at the "Preparation of the Inspection Area", apply a new layer of Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
[Ref. AMM 51-78-00-916-001-A](#).

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

- (2) If you did not remove the TPS at the "Preparation of the Inspection Area", do a check of the condition and integrity of the TPS layer [Ref. AMM 51-78-00-916-001-A](#).
- (3) If the TPS layer has local damage, remove the damaged TPS layer and apply a new layer of Corrosion Preventive Compound-Water Displacing Soft Film - (Material No. **12ABC1**) and Corrosion Preventive Compound-Heavy Duty Soft Film - (Material No. **12ACC1**) or Corrosion Preventive Compound-Water Displacing Hard Film - (Material No. **12ABB1**) and Corrosion Preventive Compound-Heavy Duty Hard Film - (Material No. **12ACB1**)
[Ref. AMM 51-78-00-916-001-A](#).

5. Close-up

Subtask 53-51-00-914-050-A

[On A/C 001-999](#)

A. Sealant Application

- (1) If the leveling compound/sealant is in a bad condition:
 - (a) Carefully remove the leveling compound/sealant from around the drain pipe with the SCRAPER - NON METALLIC.
 - (b) Apply Polysulfide Sealant-General Purpose Brushable - (Material No. **06AAA1**) on the area around the drain pipe.

Subtask 53-51-00-410-050-A


[On A/C 001-999](#)

B. Close Access

Ref. Fig. (1 / 53-51-00-991-00100)

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the rear pressure-bulkhead cover (1).
- (3) Close access door 312AR .
- (4) Remove the access platform(s).
- (5) Remove the ground support and maintenance equipment, the special and standard tools and all other items.

TF-N
AIRCRAFT MAINTENANCE MANUAL
MAIN STRUCTURE - INSPECTION/CHECK

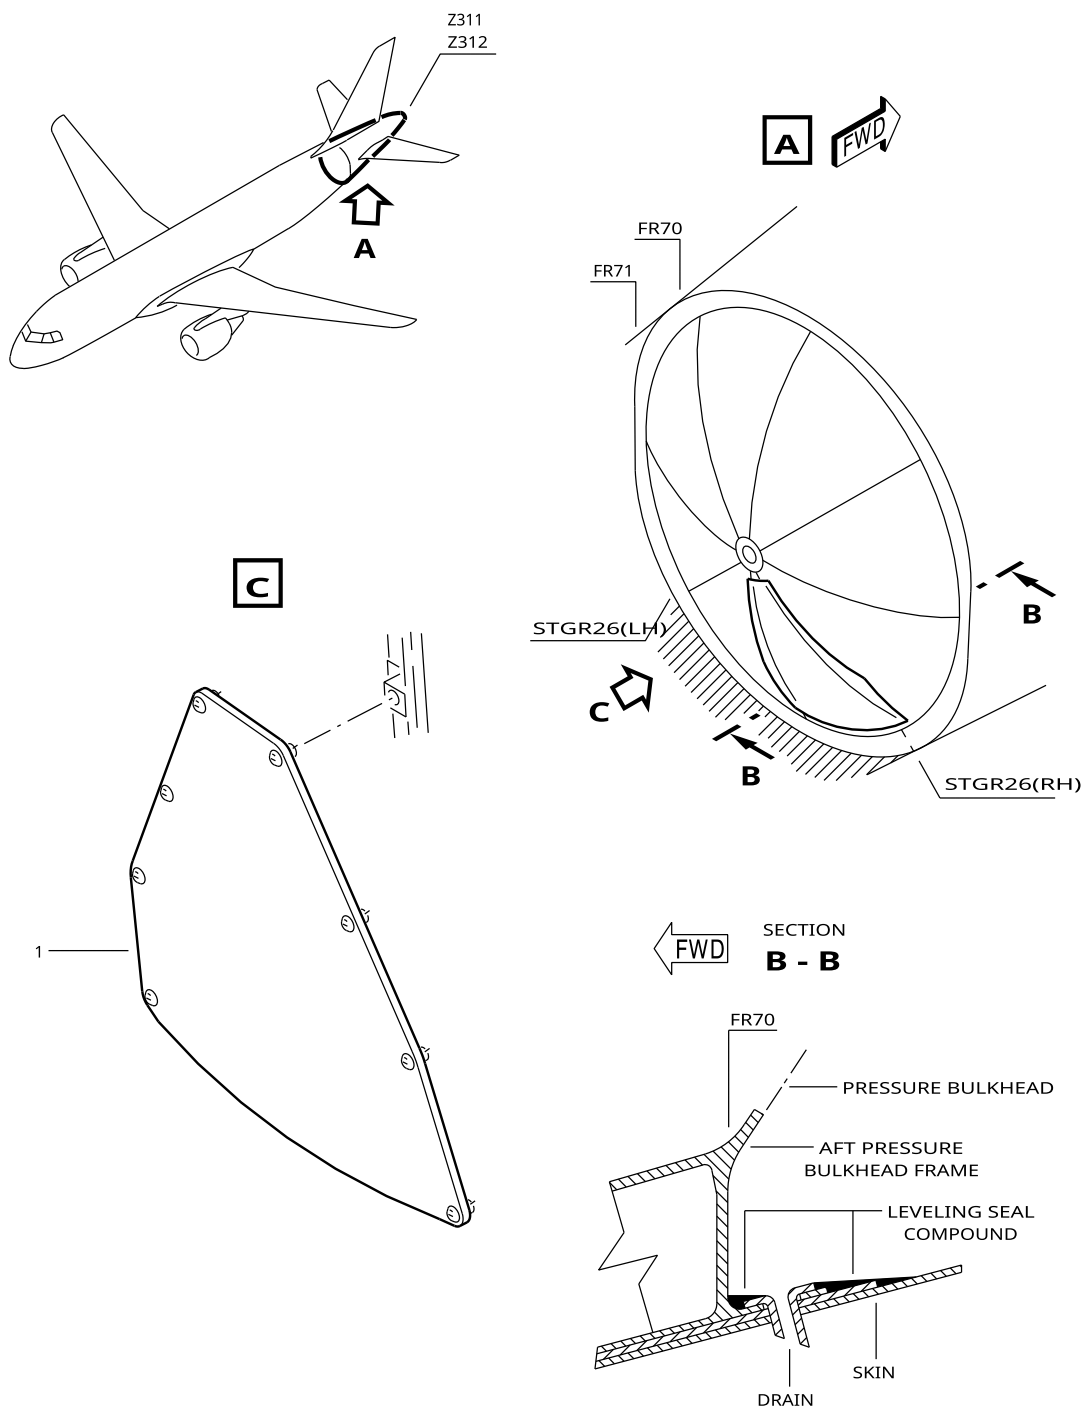

N_MM_535100_6_ACM0_01_00

Pressure Bulkhead and FR70-71
Figure 1 / Graphic 53-51-00 -991-00100

 MET.32712644		Task Card Title: VERT STABILIZER ATTACH FITTINGS INSP					
Task Card NO: 553004-01-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: INSP,IL,AF,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 10			
Internal Check:		Check Type:		Work Order NO: 32797253		Tally Sequence NO: 71	
ENCLOSURE: ☒ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: DET		Special Code: INSP		MSG Code: MRB		Request: Phase: JOB SETUP,INSPECTION, JOB-CLOSEUP	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRIED OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 323							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		55-36-00-210-001-A					
MRB		553004-01-1					
ACCESS PANELS:							
323AL, 323AR							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
LOTOXANE		NON-AQUEOUS CLEANER				1.0	
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
PREPARATION							
Job Description							
A. CLEAN THE INSPECTION AREA WITH CLEANING AGENTS LINT-FREE COTTON CLOTH.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
						Day	Month
Mechanic/s	AF/ACFT_TECH		HRS				Year
Insp.			HRS				
TASK INSTRUCTION							
Job Description							
A. PERFORM DETAIL VISUAL INSPECTION OF THE VERTICAL STABILIZER ATTACH FITTINGS INCLUDING THE LOAD INTRODUCTION AREA AT THE SKIN PANELS PER AMM TASK 55-36-00-210-001-A.							



MET.32712644

Task Card Title:

VERT STABILIZER ATTACH FITTINGS INSP

Task Card NO:

553004-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD**STEP COMPLETION SIGN OFF:**

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s				HRS				
Insp.	INSP/II			HRS				

CLOSE UP**Job Description**

A. PERFORM AIRCRAFT CLOSE UP PER AMM TASK 55-36-00-210-001-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration		Number./Signature	Date		
						Day	Month	Year
Mechanic/s	AF/ACFT_TECH			HRS				
Insp.	INSP/II			HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) [] Yes [] No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to create the finding Work Order on task card level.

Remark's: _____



MET.32712644

Task Card Title:

VERT STABILIZER ATTACH FITTINGS INSP

Task Card NO:

553004-01-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
VERTICAL STABILIZER ATTACH FITTINGS - INSPECTION/CHECK

TASK 55-36-00-210-001 -A

On A/C 001-999

Detailed Inspection of Vertical Stabilizer, Attach Fittings, Including Load Introduction Area at Skin Panels

WARNING: MAKE SURE THAT THE SAFETY DEVICES AND THE WARNING NOTICES ARE IN POSITION BEFORE YOU START A TASK ON OR NEAR:

- THE FLIGHT CONTROLS
- THE FLIGHT CONTROL SURFACES
- THE LANDING GEAR AND RELATED DOORS
- THE CARGO DOORS
- OTHER COMPONENTS THAT MOVE.

MOVEMENT OF COMPONENTS CAN KILL OR CAUSE INJURY TO PERSONS AND/OR DAMAGE TO EQUIPMENT.

WARNING: MAKE SURE THAT THE TRAVEL RANGES OF THE FLIGHT CONTROLS SURFACES ARE CLEAR. MOVEMENT OF FLIGHT CONTROLS CAN CAUSE INJURY TO PERSONS AND/OR DAMAGE TO EQUIPMENT.

WARNING: BE CAREFUL WHEN YOU USE CONSUMABLE MATERIALS. OBEY THE MATERIAL MANUFACTURER'S INSTRUCTIONS AND YOUR LOCAL REGULATIONS.

1. Reason for the Job

Refer to the MPD TASK: 553004-01

DETAILED INSPECTION OF VERTICAL STABILIZER, ATTACH FITTINGS, INCLUDING LOAD INTRODUCTION AREA AT SKIN PANELS

2. Job Set-up Information

A. Consumable Materials

REFERENCE	DESIGNATION
08BAA9	Non Aqueous Cleaner-General - -
14SBA1	Textile-Lint free Cotton -

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
320	VERTICAL STABILIZER AND RUDDER
323	VERTICAL STABILIZER SPAR BOX

C. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 23-11-00-040-802-A	Deactivation of the HF Antenna for Maintenance
Ref. AMM 23-11-00-440-802-A	Reactivation of the HF Antenna after Maintenance
On A/C 001-999	
Ref. AMM 53-55-11-000-001-A	Removal of the Vertical Stabilizer Fairings
Ref. AMM 53-55-11-400-001-A	Installation of the Vertical Stabilizer Fairings
Ref. SRM 55-31-00	(for corrective action)
Ref. Fig. (1 / 55-36-00-991-00100)	

3. Job Set-up

Subtask 55-36-00-860-052-A

On A/C 001-999

A. Aircraft Maintenance Configuration

WARNING: BEFORE YOU DO MAINTENANCE WORK WITHIN A RADIUS OF 29 METERS (96 FEET) AROUND AND ABOVE THE BROADBAND ANTENNA, MAKE

TF-N
AIRCRAFT MAINTENANCE MANUAL
VERTICAL STABILIZER ATTACH FITTINGS - INSPECTION/CHECK

SURE THAT THE ANTENNA IS DE-ENERGIZED. THE ANTENNA USES HIGH POWER WHEN IT TRANSMITS AND CAN CAUSE INJURY TO PERSONS.

- (1) If the broadband antenna is installed, do its deactivation for maintenance

On A/C 251-310; 315-350

Ref. AMM 44-33-00-040-804-A.

Subtask 55-36-00-040-050-A

On A/C 001-999

B. Deactivation of the HF Antenna

WARNING: BEFORE YOU DO MAINTENANCE WORK WITHIN A RADIUS OF 3 METERS (10 FEET) AROUND AND ABOVE THE HF ANTENNA, MAKE SURE THAT THE ANTENNA IS DE-ENERGIZED. THE ANTENNA USES HIGH POWER WHEN IT TRANSMITS AND CAN CAUSE INJURY TO PERSONS.

- (1) Do the deactivation of the HF antenna for maintenance

Ref. AMM 23-11-00-040-802-A.

Subtask 55-36-00-010-050-A

On A/C 001-999

C. Get Access

- (1) Remove the fairings 323AL and 323AR Ref. AMM 53-55-11-000-001-A.
(2) Carefully clean the inspection area with Non Aqueous Cleaner-General - - (Material No. **08BAA9**) and a Textile-Lint free Cotton - (Material No. **14SBA1**) .

4. Procedure

Ref. Fig. 1 / 55-36-00-991-00100

Subtask 55-36-00-210-050-A

On A/C 001-999

- A. Do a detailed visual inspection of the vertical stabilizer attach fittings including the load introduction area at the skin panels.

NOTE : If necessary, refer to the ASRM
Ref. SRM 55-31-00 for the correct repair procedure.

5. Close-up

Subtask 55-36-00-410-050-A

On A/C 001-999

A. Close Access

- (1) Make sure that the work area is clean and clear of tools and other items.
(2) Install the fairings 323AL and 323AR Ref. AMM 53-55-11-400-001-A.
(3) Remove the WARNING NOTICE(S).
(4) Remove the ground support and maintenance equipment, the special and standard tools and all other items.

Subtask 55-36-00-440-050-A

On A/C 001-999

B. Reactivation of the HF Antenna

- (1) Do the reactivation of the HF antenna after maintenance
Ref. AMM 23-11-00-440-802-A.

Subtask 55-36-00-860-053-A


On A/C 001-999

C. Aircraft Maintenance Configuration

TF-N
AIRCRAFT MAINTENANCE MANUAL
VERTICAL STABILIZER ATTACH FITTINGS - INSPECTION/CHECK

- (1) If the broadband antenna is installed, do its reactivation after maintenance
On A/C 251-310; 315-350
Ref. AMM 44-33-00-440-804-A.

TF-N
AIRCRAFT MAINTENANCE MANUAL
VERTICAL STABILIZER ATTACH FITTINGS - INSPECTION/CHECK

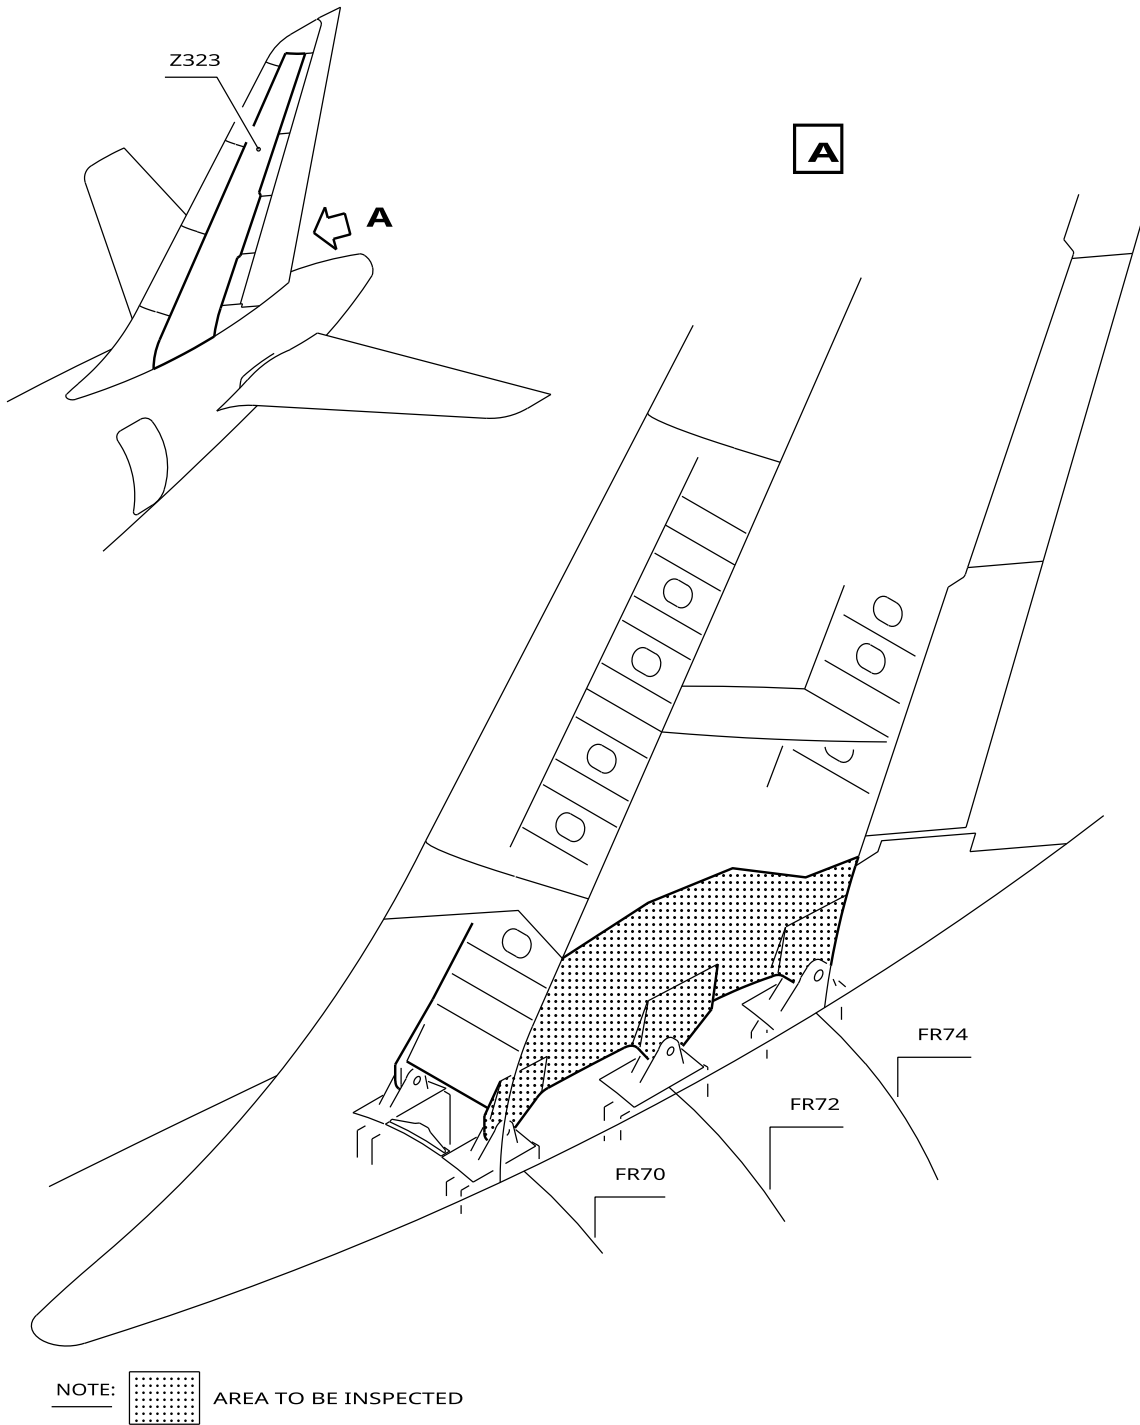

N_MM_553600_6_AAM0_01_00

Inspection Area
Figure 1 / Graphic 55-36-00 -991-00100
On A/C 001-999