

 MET.25336083		Task Card Title: RUDDER CONTROL CABLES INSP					
Task Card NO: 272100-02-1		Work Package: ASD/H-26 C2+6Y CHK		A/C Registration: HZ-ASD			
A/C Type: 320		Block Taskcard		Main Skill: INSP,II,CAB,AF,ACFT_TECH		PROD Final Acceptance:	
Project No: 01BASDC22606		Related Task Card:		A/C Area: 09			
Internal Check:		Check Type:		Work Order NO: 31574335		Tally Sequence NO: 318	
ENCLOSURE: ☐ CMR: ☐ CPCP: ☐ ETOPS: ☐ CDCCL: ☐ AD: ☐ ALI: ☐							
Type Code: DET		Special Code: INSP		MSG Code: MRB, 6		Request: ON,INSPECTION,INSPECTION,INSPECTION,INSPECTION	
I HEREBY CERTIFY THAT ALL WARNINGS AND CAUTIONS HAVE BEEN READ AND THE WORK HAS BEEN CARRID OUT IN ACCORDING WITH ALL LAID DOWN PROCEDURES, ATTACHED NOTES AND INFORMATION.							
Zones: 130,150,160,210,220,230,240,310							
DOCUMENT REFERENCES:							
Doc Typ		Reference					
AMM		27-21-00-210-002-A					
AMM		272100-210-002					
MRB		27.21.00/03					
ACCESS PANELS:							
312AR, 825, 826							
MATERIAL REQUIREMENTS:							
Part Number		Description				Qty.	
No parts assigned to this Task Item							
TOOLING REQUIREMENTS:							
Part Number		Description				Qty.	
No tools assigned to this Task Item							
TASK PREPARATION							
Job Description							
A. PERFORM JOB SETUP AND REMOVE FLOOR ACCESS PANELS BETWEEN FR4 AND FR24 AS PER AMM TASK 27-21-00-210-002-A.							
STEP COMPLETION SIGN OFF:							
	Qualification / Skill	Number of employees	Duration		Number./Signature	Date	
				HRS		Day	Month
Mechanic/s	CAB/ACFT_TECH			HRS			
Insp.				HRS			
TASK PREPARATION							
Job Description							
B. PERFORM JOB SETUP AND REMOVE THE FOLLOWING ACCESS PANELS AS PER AMM TASK 27-21-00-210-002-A:							
(1) CEILING PANELS BETWEEN FR24 AND FR35.							
(2) FORWARD CARGO-COMPARTMENT PARTITION AT FR34.							
(3) CEILING PANELS BETWEEN FR47 AND FR65.							



Task Card Title:

RUDDER CONTROL CABLES INSP



Task Card NO:

272100-02-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(4) AFT CARGO-COMPARTMENT PARTITION AT FR65.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.			HRS				

TASK INSTRUCTIONS
Job Description

A. PERFORM DETAILED VISUAL INSPECTION OF THE RUDDER MECHANICAL CONTROL CABLES INCLUDING ZONE 311 AS PER AMM TASK 27-21-00-210-002-A.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

TASK CLOSE UP
Job Description

A. OK TO INSTALL FLOOR ACCESS PANELS BETWEEN FR4 AND FR24.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	II/INSP		HRS				

TASK CLOSE UP
Job Description

B. INSTALL FLOOR ACCESS PANELS BETWEEN FR4 AND FR24.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	CAB/ACFT_TECH		HRS				
Insp.	II/INSP		HRS				

TASK CLOSE UP
Job Description

C. OK TO INSTALL THE FWD CARGO COMPARTMENT CEILING PANELS BETWEEN FR24 AND FR35 AND PARTITION AT FR34.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year



Task Card Title:

RUDDER CONTROL CABLES INSP



Task Card NO:

272100-02-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

Mechanic/s				HRS			
Insp.	II/INSP			HRS			

TASK CLOSE UP

Job Description

D. INSTALL THE FWD CARGO COMPARTMENT CEILING PANELS BETWEEN FR24 AND FR35 AND PARTITION AT FR34.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	INSP/II		HRS				

TASK CLOSE UP

Job Description

E. OK TO INSTALL THE AFT CARGO COMPARTMENT CEILING PANELS BETWEEN FR47 AND FR65 AND PARTITION AT FR65.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s			HRS				
Insp.	INSP/II		HRS				

TASK CLOSE UP

Job Description

F. INSTALL THE AFT CARGO COMPARTMENT CEILING PANELS BETWEEN FR47 AND FR65 AND PARTITION AT FR65.

STEP COMPLETION SIGN OFF:

	Qualification / Skill	Number of employees	Duration	Number./Signature	Date		
					Day	Month	Year
Mechanic/s	AF/ACFT_TECH		HRS				
Insp.	INSP/II		HRS				

-Aircraft Maintenance Manual used: Revision No. _____ Dated. _____.

Task card finding (Tick Applicable Box) ☐ Yes ☐ No. If yes update the system and list Task card finding WO below

Work order No: _____

Note: Make sure to creat the finding Work Order on task card level.

Remark's: _____



Task Card Title:

RUDDER CONTROL CABLES INSP

Task Card NO:

272100-02-1

Work Package:

ASD/H-26 C2+6Y CHK

A/C Registration:

HZ-ASD

(1) If Task card interrupted or performed by different personals updates the system and update the following according (Tick Applicable Box)

- Interruption No. 1 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 2 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 3 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 4 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____
- Interruption No. 5 [] Task card [] AMM [] Other specify. _____
 Performed by: _____ Page No. _____ Step From _____ To _____

(2) Record any dimension or torque through the performed steps and sign-off as applicable:

- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____
- Dimension/torque: _____ Mech _____ INSP _____ Page No. _____ Step _____
 Remark's: _____

**Task Completion Close Up And
System Update**

Station**Date****Signature**

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

TASK 27-21-00-210-002 -A

On A/C 003-250; 301-350

Detailed Inspection of Control Cables

WARNING: MAKE SURE THAT THE SAFETY DEVICES AND THE WARNING NOTICES ARE IN POSITION BEFORE YOU START A TASK ON OR NEAR:

- THE FLIGHT CONTROLS
- THE FLIGHT CONTROL SURFACES
- THE LANDING GEAR AND RELATED DOORS
- THE CARGO DOORS
- OTHER COMPONENTS THAT MOVE.

MOVEMENT OF COMPONENTS CAN KILL OR CAUSE INJURY TO PERSONS AND/OR DAMAGE TO EQUIPMENT.

WARNING: MAKE SURE THAT THE TRAVEL RANGES OF THE FLIGHT CONTROL SURFACES ARE CLEAR BEFORE YOU PRESSURIZE/DEPRESSURIZE A HYDRAULIC SYSTEM. IF YOU DO NOT OBEY THESE INSTRUCTIONS, THE MOVEMENT OF THE FLIGHT CONTROL SURFACES CAN CAUSE INJURY TO PERSONS AND DAMAGE TO EQUIPMENT.

WARNING: PUT ON GLOVES WHEN YOU TOUCH THE CABLES. IF YOU DO NOT, INJURY CAN OCCUR.

1. Reason for the Job

Refer to the MPD TASK: 272100-02

DETAILED INSPECTION OF CONTROL CABLES

Two persons are necessary to do this task:

- One person in the cockpit.
- One person to do the inspection of the cables.

2. Job Set-up Information

A. Fixtures, Tools, Test and Support Equipment

REFERENCE	QTY	DESIGNATION
No specific	1	ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE
No specific	1	ACCESS PLATFORM 3M (10 FT)- ADJUSTABLE
No specific	AR	MAT - PROTECTIVE
No specific	AR	SAFETY BARRIER(S)
No specific	AR	WARNING NOTICE(S)

B. Work Zones and Access Panels

ZONE/ACCESS	ZONE DESCRIPTION
130	FWD CARGO COMPT AFT BULKHEAD OF AVNCS COMPT TO FWD PRESSURE BULKHEAD OF WING CENTER BOX
150	AFT CARGO COMPARTMENT FWD PRESS BULKHEAD TO AFT BULKHEAD OF AFT CARGO COMPARTMENT
160	BULK CARGO COMPARTMENT AFT BULKHEAD OF AFT CARGO COMPARTMENT TO AFT BULKHEAD OF BULK CARGO COMPARTMENT
210	CKPT,FWD COMPT BHD TO FLT COMPT BULKHEAD
220	FWD CAB UTILITY AREAS
230	FWD PASSENGER COMPARTMENT
240	MID PASSENGER COMPARTMENT
310	FUSLG TAIL SECTION AFT OF AFT PRESS BHD
312AR , 825 , 826	

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

C. Expendable Parts

FIG.ITEM	DESIGNATION	IPC-CSN
6	CABLE TIES	IPC-CSN(27-21-04-05 ITEM 060)
6	TIE	IPC-CSN(27-21-84-03 ITEM 040)

D. Referenced Information

REFERENCE	DESIGNATION
Ref. AMM 20-24-11-100-001-A	Cleaning and Protection of the Cables
Ref. AMM 20-24-12-200-001-A	Check of the Control Cables
Ref. AMM 24-41-00-861-002-A	Energize the Aircraft Electrical Circuits from the External Power
Ref. AMM 24-41-00-861-002-A-01	Energize the Aircraft Electrical Circuits from the APU
Ref. AMM 24-41-00-861-002-A-02	Energize the Aircraft Electrical Circuits from Engine 1(2)
Ref. AMM 24-41-00-862-002-A	De-energize the Aircraft Electrical Circuits Supplied from the External Power
Ref. AMM 24-41-00-862-002-A-01	De-energize the Aircraft Electrical Circuits Supplied from the APU
Ref. AMM 24-41-00-862-002-A-02	De-energize the Aircraft Electrical Circuits Supplied from the Engine 1(2)
Ref. AMM 25-54-12-000-001-A	Removal of the Partition Panel From the Forward Cargo Compartment at Frame 34 or Frame 35.1 or Frame 35.5
Ref. AMM 25-54-12-000-002-A	Removal of the Ceiling Panel From the Forward Cargo Compartment
Ref. AMM 25-54-12-400-001-A	Installation of the Partition Panel in the Forward Cargo Compartment at Frame 34 or Frame 35.1 or Frame 35.5
Ref. AMM 25-54-12-400-002-A	Installation of the Ceiling Panel in the Forward Cargo Compartment
Ref. AMM 25-55-11-000-002-A	Removal of the Ceiling Panels From the Aft Cargo Compartment - Frame 47/ Frame 59
Ref. AMM 25-55-11-400-002-A	Installation of the Ceiling Panels in the Aft Cargo Compartment - Frame 47/Frame 59
Ref. AMM 25-55-12-000-001-A	Removal of the Partition Panels at Frame 65 From the Bulk Cargo Compartment
Ref. AMM 25-55-12-000-002-A	Removal of the Ceiling Panels From the Bulk Cargo Compartment - Frame 59/ Frame 65
Ref. AMM 25-55-12-400-001-A	Installation of the Partition Panels at Frame 65 in the Bulk Cargo Compartment
Ref. AMM 25-55-12-400-002-A	Installation of the Ceiling Panels in the Bulk Cargo Compartment - Frame 59/ Frame 65
Ref. AMM 27-24-00-710-001-A	Operational Test of the Rudder Hydraulic Actuation
Ref. AMM 29-10-00-863-003-A	Pressurize the Blue Hydraulic System with a Hydraulic Ground Power-Cart
Ref. AMM 29-10-00-863-003-A-01	Pressurize the Blue Hydraulic System with the Blue Electric Pump
Ref. AMM 29-10-00-864-001-A	Depressurize the Green Hydraulic System
Ref. AMM 29-10-00-864-002-A	Depressurize the Yellow Hydraulic System
Ref. AMM 29-10-00-864-003-A	Depressurize the Blue Hydraulic System
Ref. AMM 29-23-00-863-001-A	Pressurize the Green Hydraulic System from the Yellow Hydraulic System through the PTU with the Electric Pump
Ref. AMM 29-23-00-864-001-A	Depressurize the Green and Yellow Hydraulic Systems after Operation of the PTU
Ref. AMM 29-24-00-863-001-A	Pressurize the Yellow Hydraulic System with the Electric Pump
Ref. AMM 29-24-00-864-001-A	Depressurize the Yellow Hydraulic System
Ref. AMM 31-60-00-860-001-A	EIS Start Procedure
Ref. AMM 31-60-00-860-002-A	EIS Stop Procedure
Ref. AMM 52-30-00-860-001-A	Open the Forward or Aft Cargo-Compartment Door With the Yellow Electric Pump
Ref. AMM 52-30-00-860-002-A	Close the FWD or Aft Cargo-Compartment Door with the Yellow Electric Pump
Ref. AMM 53-12-11-000-001-A	Removal of the Cockpit Floor Panels from FR1 thru FR12
Ref. AMM 53-12-11-400-001-A	Installation of the Cockpit Floor Panels from FR1 thru FR12
Ref. AMM 53-12-12-000-001-A	Removal of the Cabin Floor Panels from FR12 thru FR24
Ref. AMM 53-12-12-400-001-A	Installation of the Cabin Floor Panels from FR12 thru FR24
Ref. AMM 53-22-12-000-001-A	Removal of the Cabin Floor Panels
Ref. AMM 53-22-12-400-001-A	Installation of the Cabin Floor Panels
Ref. AMM 53-32-12-000-002-A	Removal of the Cabin Floor Panels

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

REFERENCE	DESIGNATION
Ref. AMM 53-32-12-400-002-A	Installation of the Cabin Floor Panels
Ref. AMM 06-41-53-00	FUSELAGE-DESCRIPTION AND OPERATION
Ref. Fig. (1 / 27-21-00-991-03400)	
Ref. Fig. (1 / 27-21-00-991-04300)	
On A/C 003-250; 301-310	
Ref. Fig. (1 / 27-21-00-991-01500)	

3. Job Set-up

Subtask 27-21-00-941-065-A

[On A/C 003-250; 301-350](#)

A. Safety Precautions

- (1) As necessary, use the applicable SAFETY BARRIER(S), specified by the operator's instructions and your local regulations.
- (2) In the cockpit, put the WARNING NOTICE(S) in position to tell persons not to operate the flight controls.

Subtask 27-21-00-860-056-A

[On A/C 003-250; 301-350](#)

B. Aircraft Maintenance Configuration

- (1) Energize the aircraft electrical circuits
[Ref. AMM 24-41-00-861-002-A](#) [Ref. AMM 24-41-00-861-002-A-01](#)
[Ref. AMM 24-41-00-861-002-A-02](#).
- (2) On the overhead panel, on FLT CTL panel 23VU, make sure that the FAC 1 pushbutton switch is pushed (the OFF legend is off).
- (3) On the overhead panel, on FLT CTL panel 24VU, make sure that the FAC 2 pushbutton switch is pushed (the OFF legend is off).
- (4) On the center pedestal, on RUD TRIM/PARKING BRK panel 110VU, make sure that the RUD TRIM indicator shows "0".
- (5) Do the Electronic Instrument System (EIS) start procedure [Ref. AMM 31-60-00-860-001-A](#).
- (6) Make sure that the hydraulic systems are depressurized
[Ref. AMM 29-10-00-864-001-A](#), [Ref. AMM 29-10-00-864-002-A](#) and
[Ref. AMM 29-10-00-864-003-A](#).
- (7) On the center pedestal, on the ECAM control panel, push the F/CTL key (on the lower ECAM Display Unit (DU), the F/CTL page comes into view).

Subtask 27-21-00-865-070-A

[On A/C 003-250; 301-350](#)

C. Make sure that this (these) circuit breaker(s) is (are) closed:

PANEL	DESIGNATION	FIN	LOCATION
On A/C 003-250			
49VU	AUTO FLT/FAC1/28VDC	5CC1	B04
49VU	AUTO FLT/FAC1/26VAC	14CC1	B03
On A/C 003-250; 301-350			
121VU	AUTO FLT/FAC2/28VDC	5CC2	M19
121VU	AUTO FLT/FAC2/26VAC	14CC2	M18

Subtask 27-21-00-010-072-A

[On A/C 003-250; 301-350](#)

D. Get Access

Ref. Fig. (1 / 27-21-00-991-03400)

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

- (1) Put the ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE in position at zone 132:
 - (a) Open forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-001-A](#).
- (2) Put the ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE in position at zone 154:
 - (a) Open aft cargo-compartment door 826 [Ref. AMM 52-30-00-860-001-A](#).
- (3) Put the ACCESS PLATFORM 3M (10 FT)- ADJUSTABLE in position below accessory compartment access-door 312AR :
 - (a) Open accessory compartment access-door 312AR .
- (4) Put the MAT - PROTECTIVE in the area of the rudder control cables to prevent damage to the structure.
- (5) Remove the panels. Refer to AMM chapter 06 for information about the panels [Ref. AMM 06-41-53-00](#):
 - (a) In zones 211 and 221:
 - 1 Remove the floor panels between frame 8 and frame 20
[Ref. AMM 53-12-11-000-001-A](#) and [Ref. AMM 53-12-12-000-001-A](#).
 - (b) In zones 231 and 241:
 - 1 Remove the floor panels between frame 20 and frame 24, and between frame 32 and frame 47 [Ref. AMM 53-12-12-000-001-A](#), [Ref. AMM 53-22-12-000-001-A](#) and [Ref. AMM 53-32-12-000-002-A](#).
 - (c) In zone 131:
 - 1 Remove the ceiling panels between frame 24 and frame 35
[Ref. AMM 25-54-12-000-002-A](#):
 - a If the Additional Center Tank (ACT) is installed, remove the floor panels between frame 24 and frame 35 [Ref. AMM 53-22-12-000-001-A](#).
 - 2 Remove the forward cargo-compartment partition at frame 34
[Ref. AMM 25-54-12-000-001-A](#).
 - (d) In zones 151 and 161:
 - 1 Remove the ceiling panels between frame 47 and frame 65
[Ref. AMM 25-55-11-000-002-A](#) and [Ref. AMM 25-55-12-000-002-A](#):
 - a If the ACT is installed, remove the floor panels between frame 47 and frame 51 [Ref. AMM 53-22-12-000-001-A](#) and remove the ceiling panels between frame 51 and frame 65 [Ref. AMM 25-55-11-000-002-A](#) and [Ref. AMM 25-55-12-000-002-A](#).
 - (e) In zone 161:
 - 1 Remove the aft cargo-compartment partition at frame 65
[Ref. AMM 25-55-12-000-001-A](#).

Subtask 27-21-00-010-077-B

[On A/C 003-250; 301-350](#)

E. Removal of the Pulley Cover

Ref. Fig. (1 / 27-21-00-991-04300)

- (1) Remove the bolts (4) and the washers (3).
- (2) Remove the pulley cover (5).
- (3) Cut the cable ties (6) and discard them.
- (4) Remove the fairleads (2) and the plate (1) from the rudder control cables.

4. Procedure

Subtask 27-21-00-210-051-A

[On A/C 003-250; 301-350](#)

A. Detailed Inspection of the Rudder Mechanical Control-Cables with the Rudder in the Neutral Position

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

On A/C 003-250; 301-310

Ref. Fig. (1 / 27-21-00-991-01500)

- (1) Make sure that the fairleads are in the correct condition.
- (2) At FR70, make sure that the pressure seals (3) are correctly installed and in the correct condition.
- (3) Make sure that the turnbuckles (1) are safetied with the lock clips (2).
- (4) Do the check of the control cables

On A/C 003-250; 301-350

Ref. AMM 20-24-12-200-001-A.

- (5) Make sure that the linkage can move freely and does not touch or rub:

- The tubing
- The structures
- The electrical wires
- The adjacent controls.

- (6) Do the cleaning and protection of the control cables Ref. AMM 20-24-11-100-001-A.

Subtask 27-21-00-210-055-A

On A/C 003-250; 301-350

- B. Detailed Inspection of the Rudder Mechanical Control-Cables with the Rudder in the Left Position, then in the Right Position

WARNING: BEFORE YOU OPERATE THE RUDDER, MAKE SURE THAT ALL PERSONS KEEP THEIR HANDS AWAY FROM THE PULLEYS AND THE CONTROL CABLES. IF YOU DO NOT OBEY THIS PRECAUTION, INJURY CAN OCCUR DURING THE RUDDER MOVEMENT.

- (1) Pressurize the aircraft hydraulic systems
Ref. AMM 29-23-00-863-001-A, Ref. AMM 29-24-00-863-001-A and
Ref. AMM 29-10-00-863-003-A Ref. AMM 29-10-00-863-003-A-01.
- (2) On the center pedestal, on panel 110VU:
 - (a) Turn the RUD TRIM control switch to the NOSE/L position. Hold it in this position until, on panel 110VU, the RUD TRIM position indicator shows "L 20" degrees plus or minus 1 degree.
 - (b) Release the RUD TRIM control switch.
- (3) Do the inspection of the parts of the rudder mechanical control-cables which were not visible. To do this, obey the instruction given in Para. 4.A.
- (4) On the center pedestal, on panel 110VU, push and release the RUD TRIM/RESET pushbutton switch.
- (5) Make sure that the rudder moves to the neutral position and stays in this position.
- (6) On the center pedestal, on panel 110VU:
 - (a) Turn the RUD TRIM control switch, to the NOSE/R position. Hold it in this position until, on panel 110VU, the RUD TRIM position indicator of the panel 110VU shows "R 20" degrees plus or minus 1 degree.
 - (b) Release the RUD TRIM control switch.
- (7) Do the inspection of the parts of the rudder mechanical control-cables which were not visible. To do this, obey the instruction given in Para. 4.A.
- (8) On the center pedestal, on panel 110VU, push and release the RUD TRIM/RESET pushbutton switch.
- (9) Make sure that the rudder moves to the neutral position and stays in this position.
- (10) Depressurize the aircraft hydraulic systems

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

Ref. AMM 29-23-00-864-001-A, Ref. AMM 29-24-00-864-001-A and
Ref. AMM 29-10-00-864-003-A.

Subtask 27-21-00-410-071-B

On A/C 003-250; 301-350

C. Installation of the Pulley Cover

Ref. Fig. (1 / 27-21-00-991-04300)

- (1) Install the plate (1) and the fairleads (2) on the rudder control cables.
- (2) Install the new IPC-CSN(27-21-04-05 ITEM 060) CABLE TIES (6) or the new IPC-CSN(27-21-84-03 ITEM 040) TIE (6) .
- (3) Install the pulley cover (5) and put the plate (1) in the correct position.
- (4) Install the washers (3) and the bolts (4).
- (5) Tighten the bolts (4).

Subtask 27-21-00-710-066-A

On A/C 003-250; 301-350

D. Operational Test

- (1) Do the operational test of the Rudder Hydraulic Actuation Ref. AMM 27-24-00-710-001-A.

5. Close-up

Subtask 27-21-00-410-066-A

On A/C 003-250; 301-350

A. Close Access

Ref. Fig. (1 / 27-21-00-991-03400)

- (1) Make sure that the work area is clean and clear of tools and other items.
- (2) Install the panels. Refer to AMM chapter 06 for information about the panels

Ref. AMM 06-41-53-00:

(a) In zones 211 and 221:

- 1 Install the floor panels between frame 8 and frame 20 Ref. AMM 53-12-11-400-001-A and Ref. AMM 53-12-12-400-001-A.

(b) In zones 231 and 241:

- 1 Install the floor panels between frame 20 and frame 24, and between frame 32 and frame 47 Ref. AMM 53-12-12-400-001-A, Ref. AMM 53-22-12-400-001-A and Ref. AMM 53-32-12-400-002-A.

(c) In zone 131:

- 1 Install the ceiling panels between frame 24 and frame 35
Ref. AMM 25-54-12-400-002-A:
 - a If the ACT is installed, install the floor panels between frame 24 and frame 35
Ref. AMM 53-22-12-400-001-A.
- 2 Install the forward cargo-compartment partition at frame 34
Ref. AMM 25-54-12-400-001-A.

(d) In zones 151 and 161:

- 1 Install the ceiling panels between frame 47 and frame 65
Ref. AMM 25-55-11-400-002-A and Ref. AMM 25-55-12-400-002-A:
 - a If the ACT is installed, install the floor panels between frame 47 and frame 51 Ref. AMM 53-22-12-400-001-A and install the ceiling panels between frame 51 and frame 65 Ref. AMM 25-55-11-400-002-A and Ref. AMM 25-55-12-400-002-A.

(e) In zone 161:

- 1 Install the aft cargo-compartment partition at frame 65
Ref. AMM 25-55-12-400-001-A.

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

- (3) Remove the MAT - PROTECTIVE.
- (4) Close accessory compartment access-door 312AR .
- (5) Close forward cargo-compartment door 825 [Ref. AMM 52-30-00-860-002-A](#).
- (6) Close aft cargo-compartment door 826 [Ref. AMM 52-30-00-860-002-A](#).


Subtask 27-21-00-860-057-A

[On A/C 003-250; 301-350](#)

B. Put the aircraft back to its initial configuration.

- (1) Remove the WARNING NOTICE(S).
- (2) Do the EIS stop procedure
[Ref. AMM 31-60-00-860-002-A](#).
- (3) De-energize the aircraft electrical circuits
[Ref. AMM 24-41-00-862-002-A](#) [Ref. AMM 24-41-00-862-002-A-01](#)
[Ref. AMM 24-41-00-862-002-A-02](#).
- (4) Remove the ground support and maintenance equipment, the special and standard tools and all other items.

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

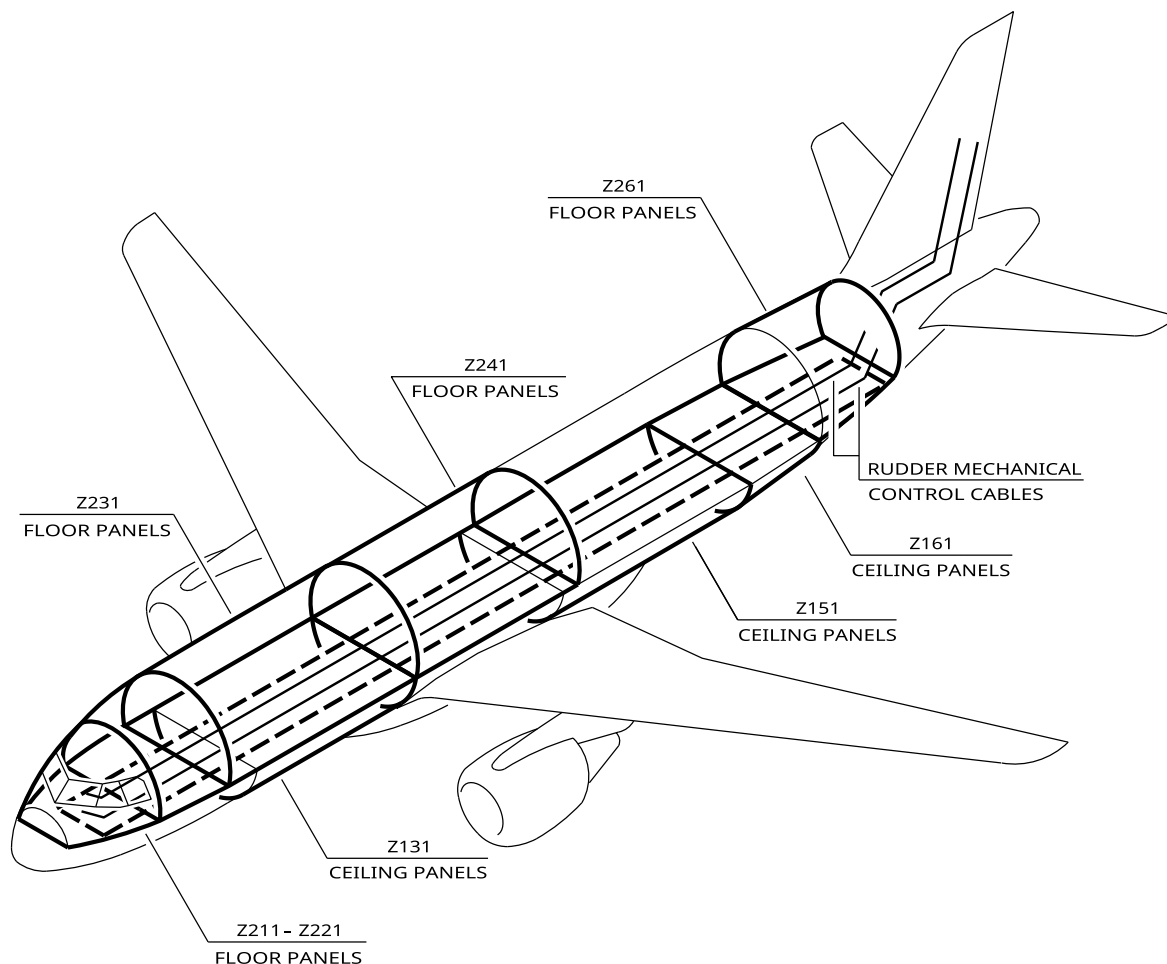

NOTE:

REFER TO AMM CHAPTER 06 FOR PANELS DETAILS




VISUAL INSPECTION ZONE

N_MM_272100_6_AZM0_01_00


Rudder Mechanical Control-Cables
Figure 1 / Graphic 27-21-00 -991-03400

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

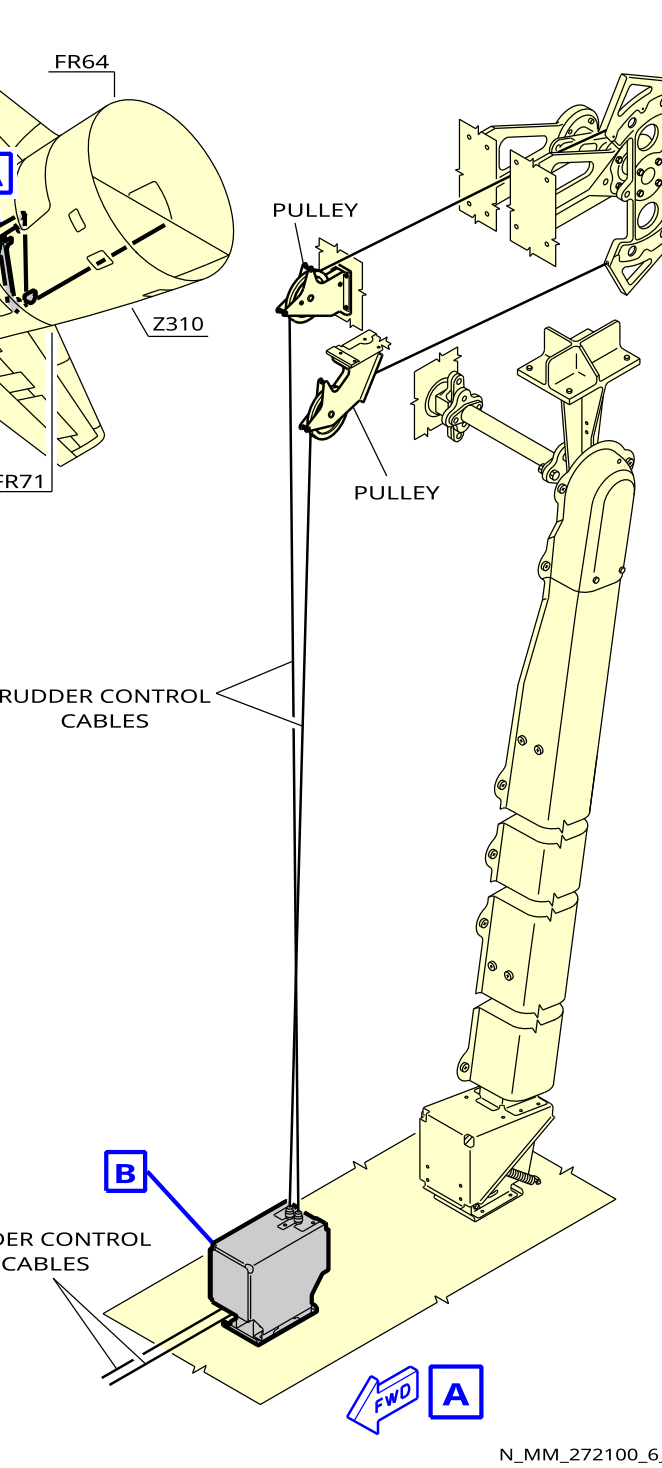

Pulley Cover
Figure 1 / Graphic 27-21-00 -991-04300

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

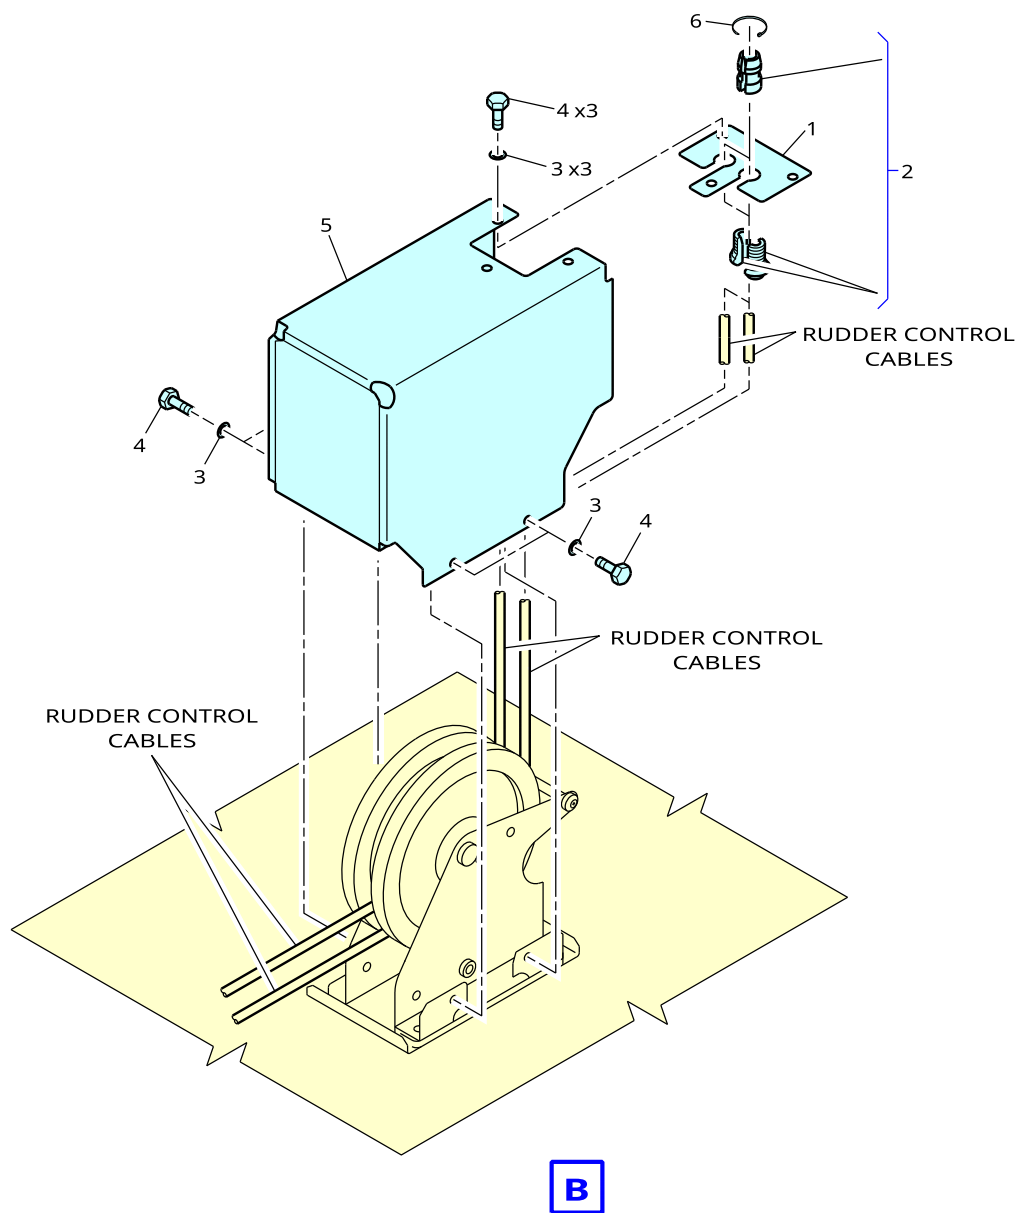


B

N_MM_272100_6_PULO_02_00

Pulley Cover

Figure 2 / Graphic 27-21-00 -991-04300


TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

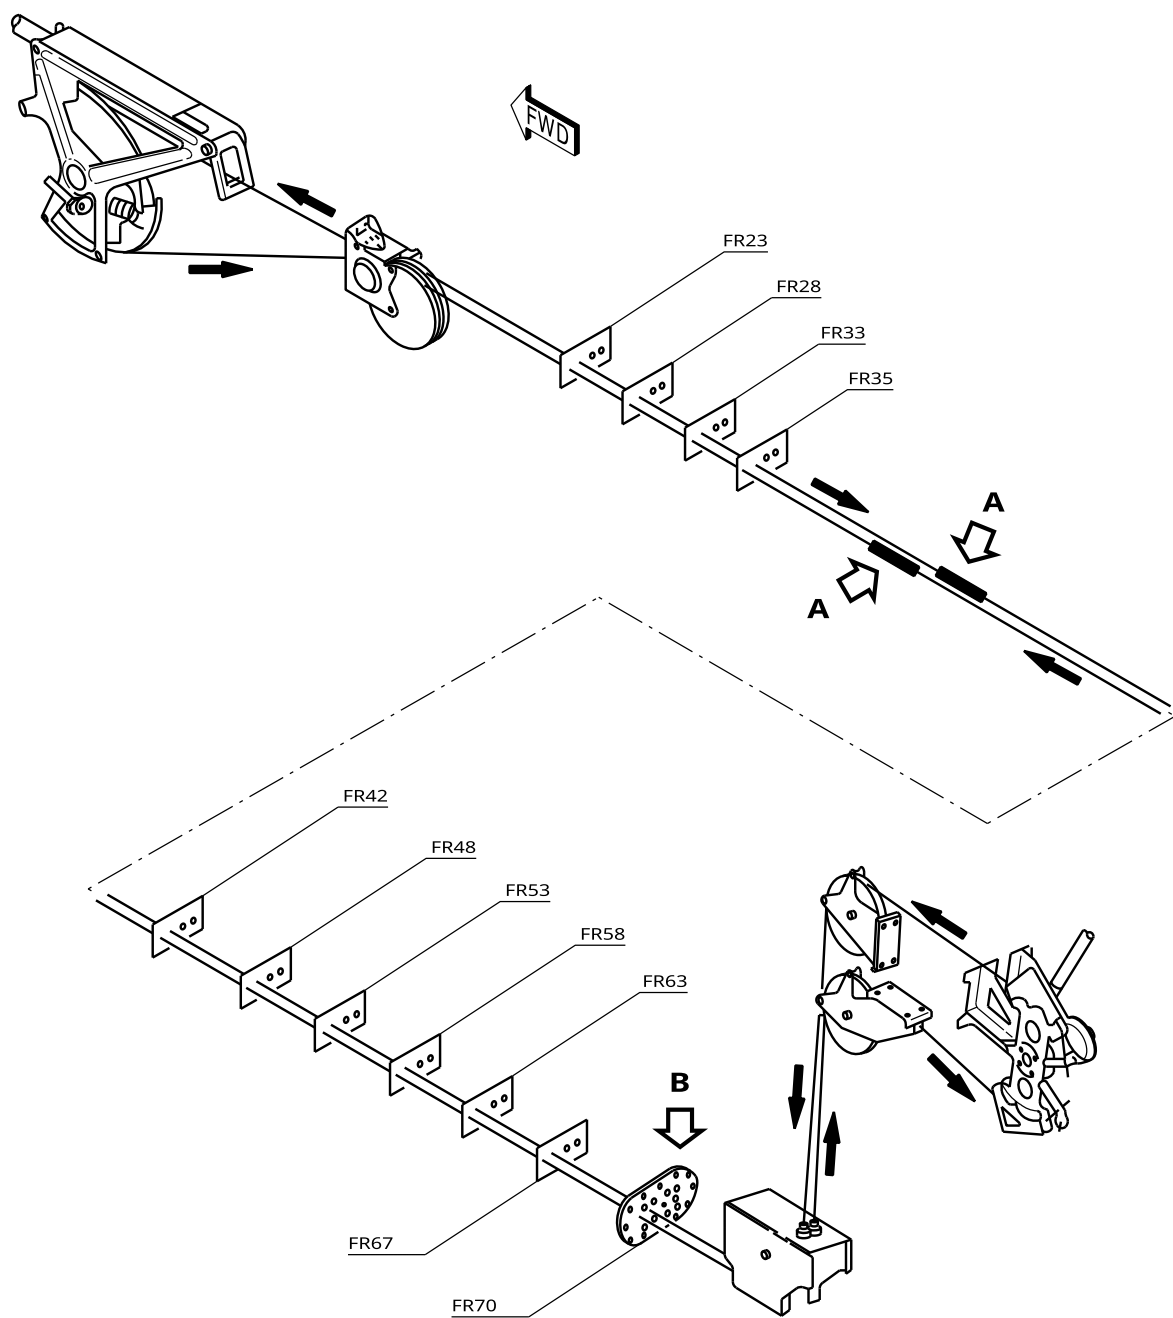

N_MM_272100_6_FCM0_01_00

Rudder Mechanical Control-Cables
Figure 1 / Graphic 27-21-00 -991-01500
On A/C 003-250; 301-310

TF-N
AIRCRAFT MAINTENANCE MANUAL
RUDDER CONTROL - INSPECTION/CHECK

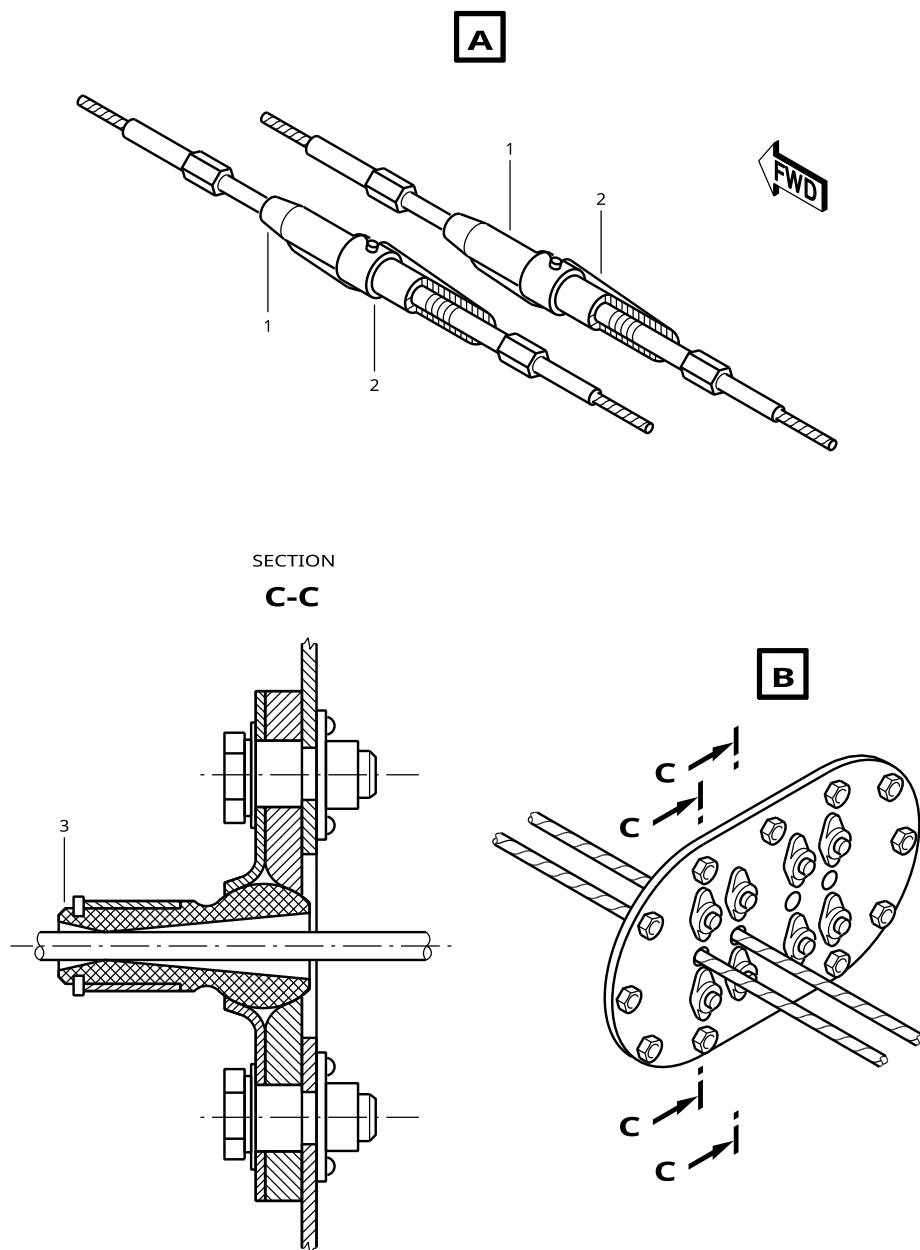

N_MM_272100_6_FCM0_02_00

Rudder Mechanical Control-Cables
Figure 2 / Graphic 27-21-00 -991-01500