Map Management
User Manual

Initial Page

Screen Area

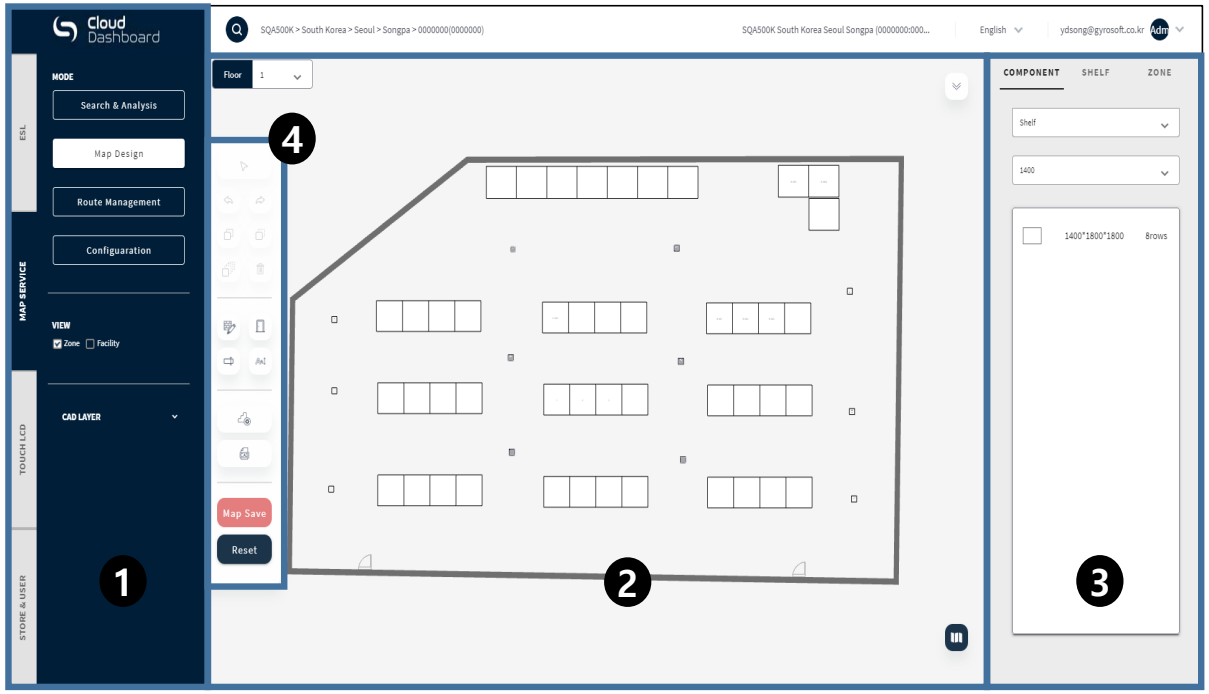

① MODE
- Map Info./Design/Configuration

VIEW
- Object On/Off

CAD LAYER
- Cad Layer On/Off

② Map area

③ Property Panel

④ Map Editor

Draw a Map

Floor setting

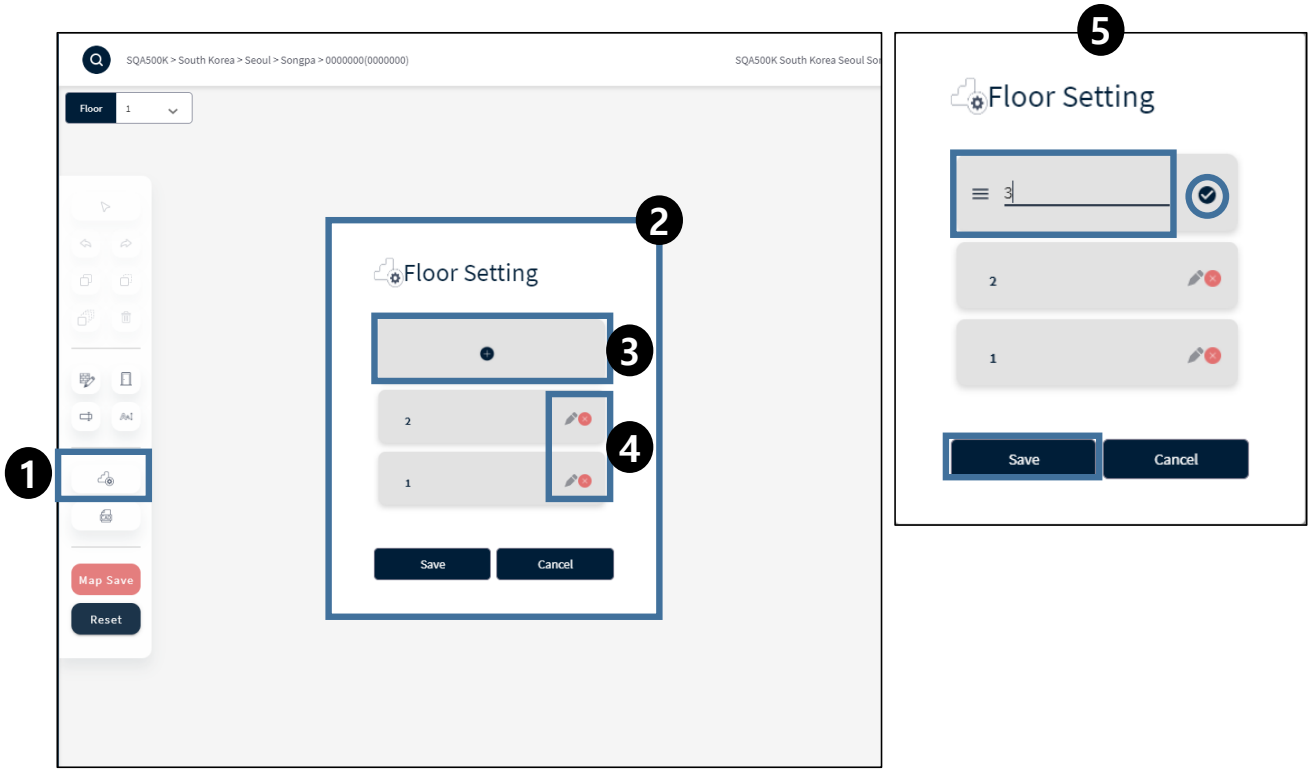

① floor setting button

② floor setting popup

③ adding a floor

④ edit/delete a floor

⑤ detail of popup
– input the name of the floor and click confirm
– the floor is added on the list
– click Save button

Draw the wall

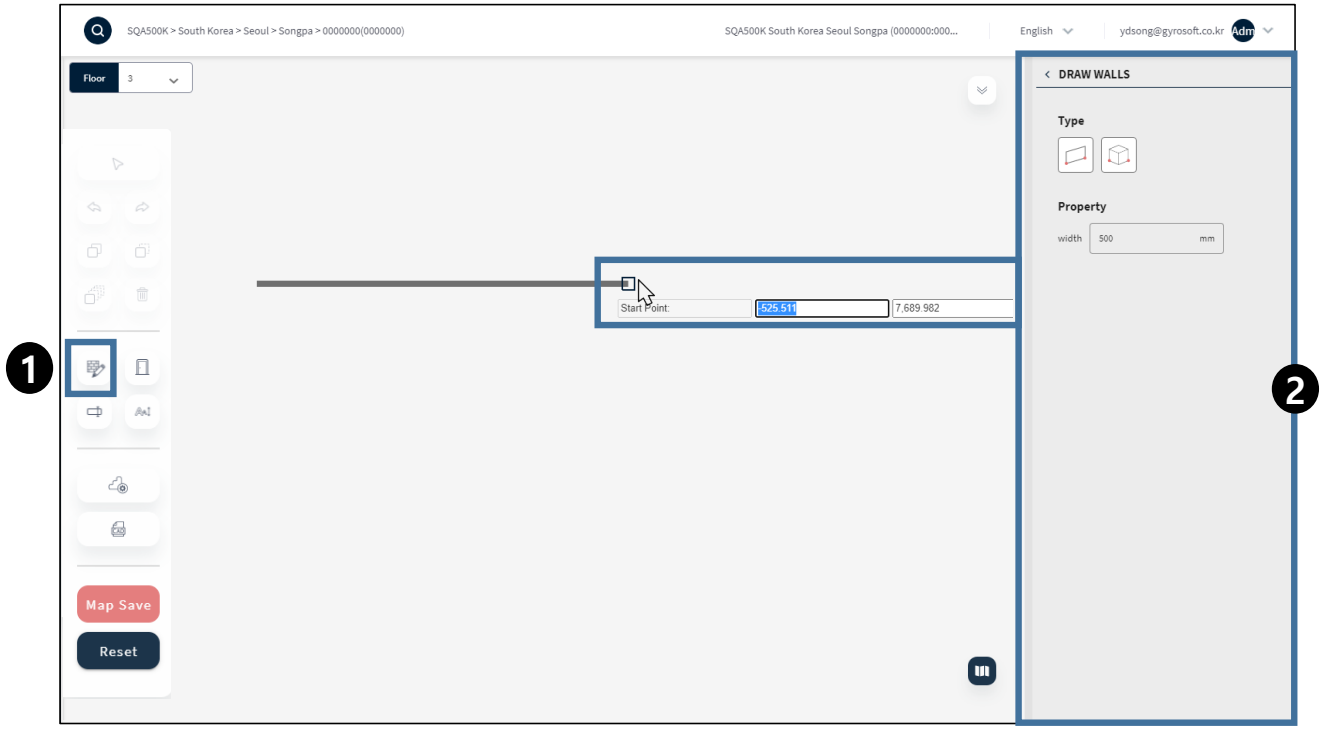

① draw wall

② property of the wall
– shape and width setting

③ prompt for drawing wall
– focus change with Tab key
and input the value

* The snap to the endpoint or extended line of another wall is enabled

Draw the straight wall

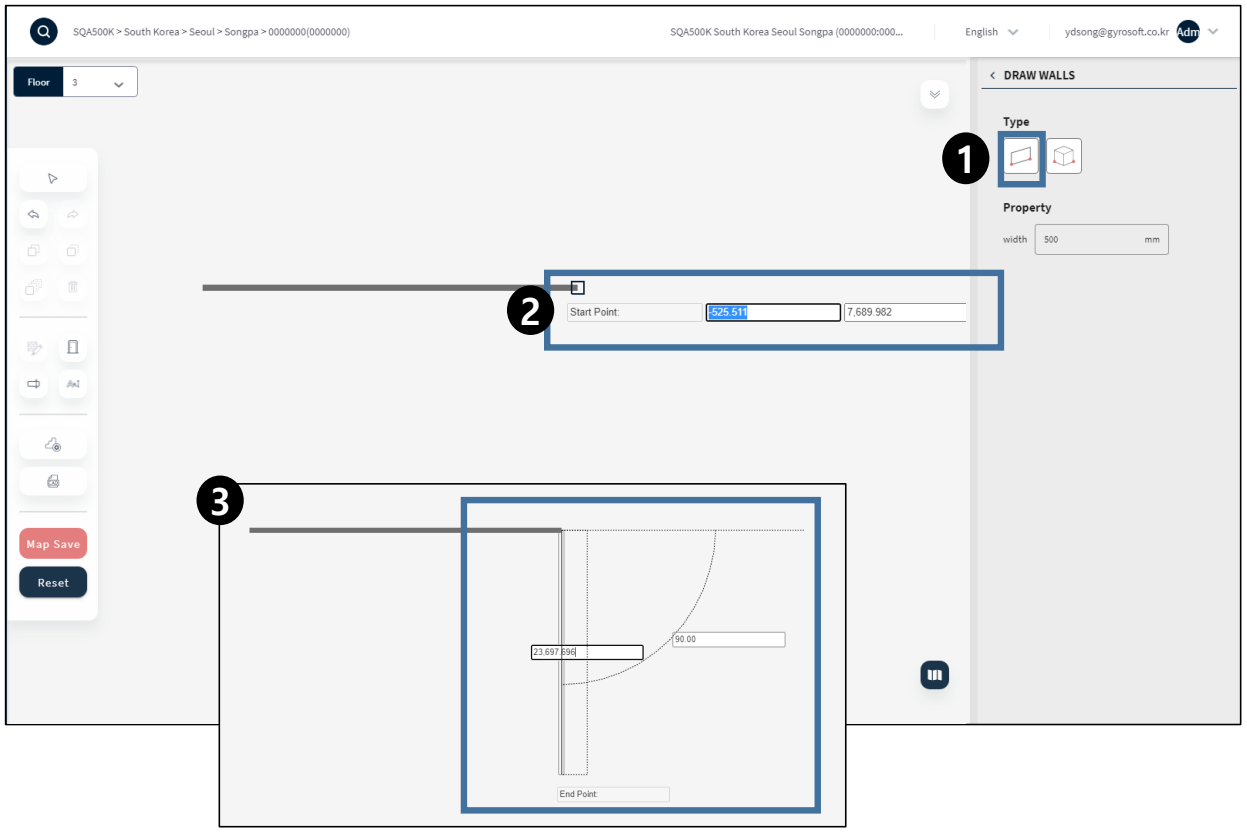

① select the straight wall

② define the Start Point
– start point of the wall. Click the position with a mouse or input X/Y coordinate manually

③ define the End Point
– start point of the wall. Click the position with a mouse or input X/Y coordinate manually

* you can activate the degree snap feature by pressing Shift key (with 15 degree interval)

Draw the square wall

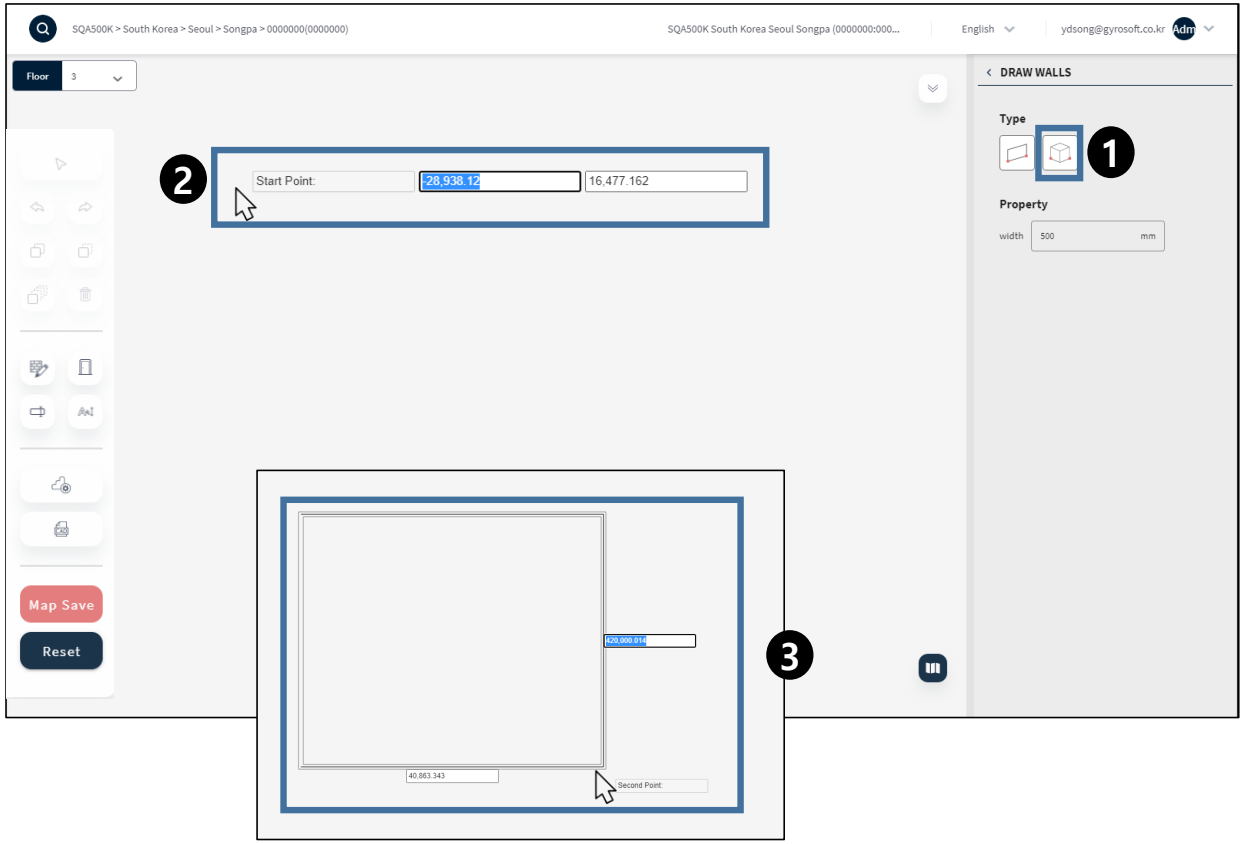

① select the square wall

② define the Start Point
– start point of the wall. Click the position with a mouse or input X/Y coordinate manually

③ define the End Point
– start point of the wall. Click the position with a mouse or input X/Y coordinate manually

Draw a door

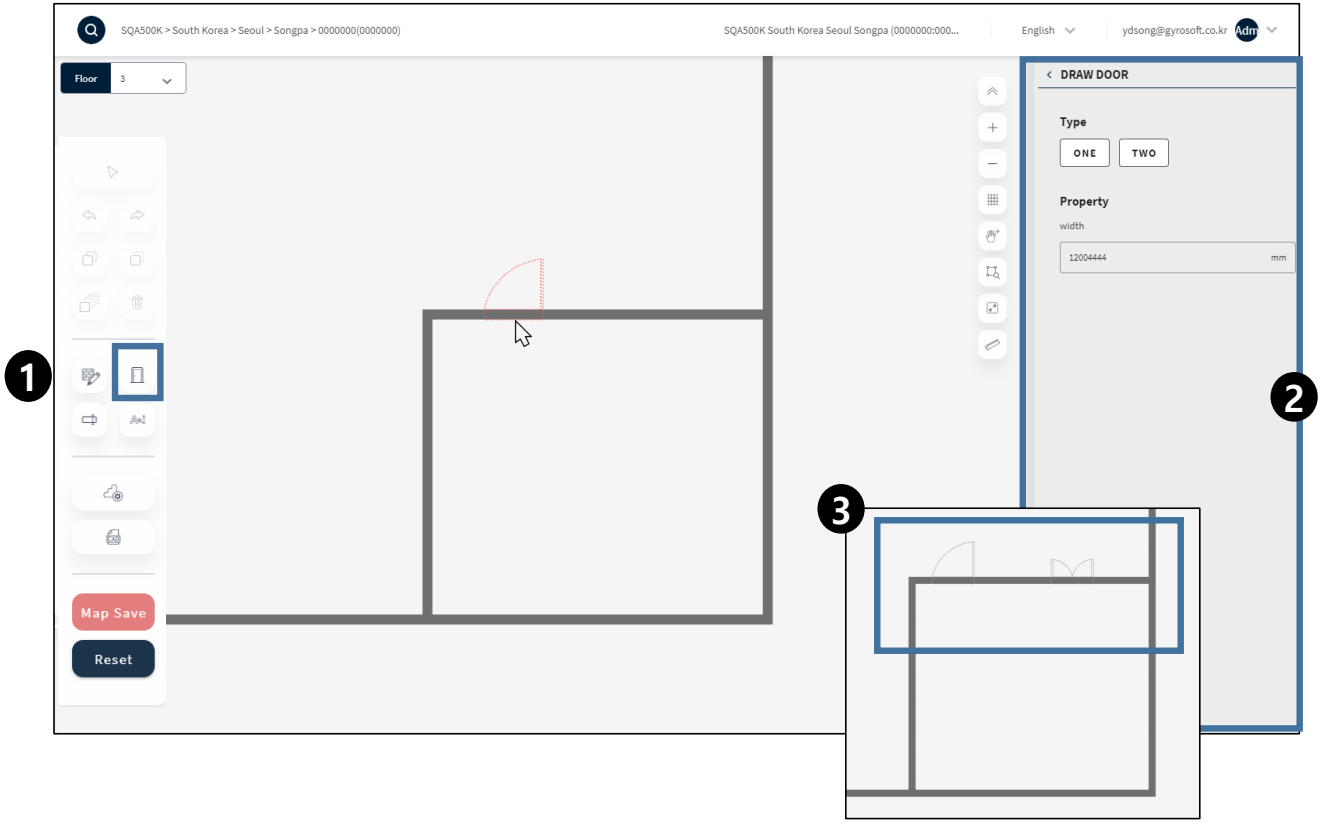

① select a door

② property of the door
– shape/width setting

③ detailed shape of the door
– one door/two door

* snap function works when a door is close to a wall

Edit the door

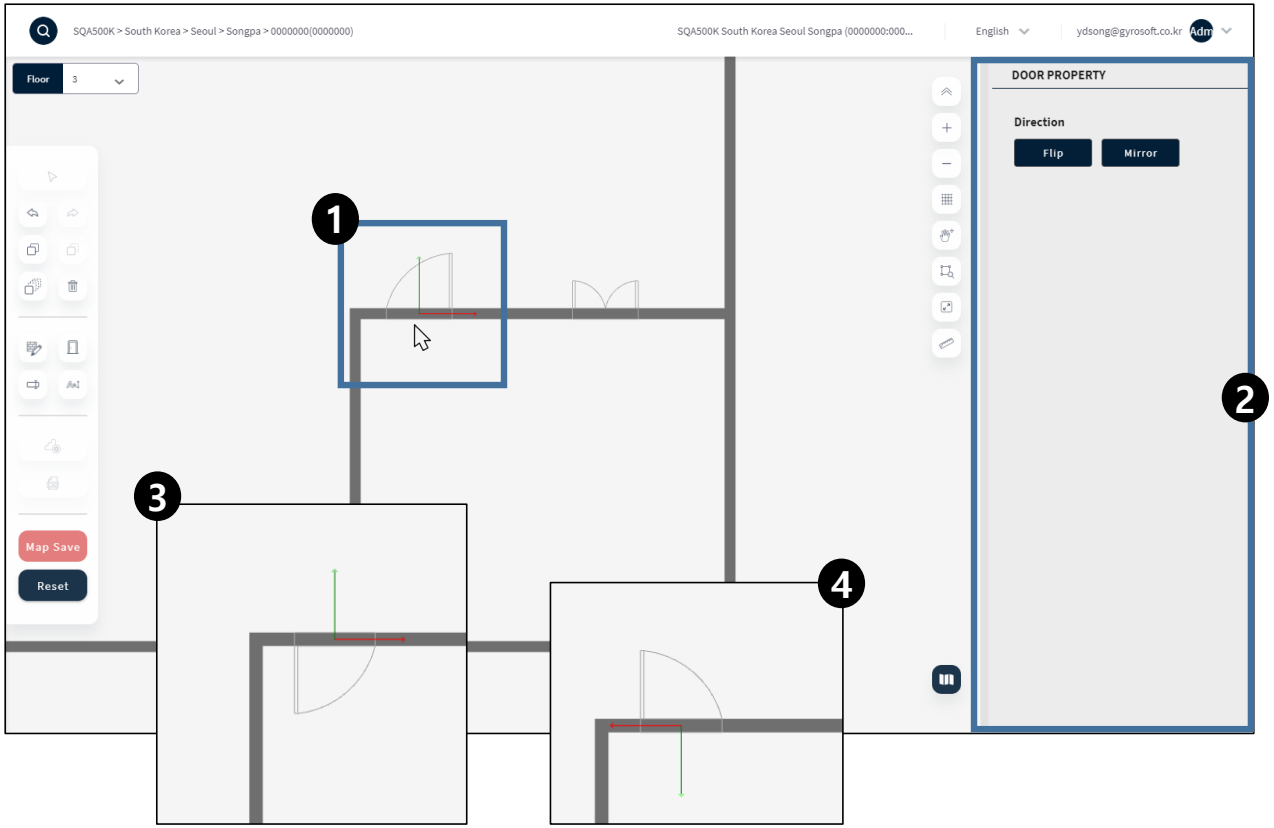

① select a door

② modifying the property of a door
– Flip/Mirror

③ Flip

④ Mirror

Map Edit Menu

* The name of the menu button will be shown when a user puts a mouse cursor on it

COMPONENT

Component management

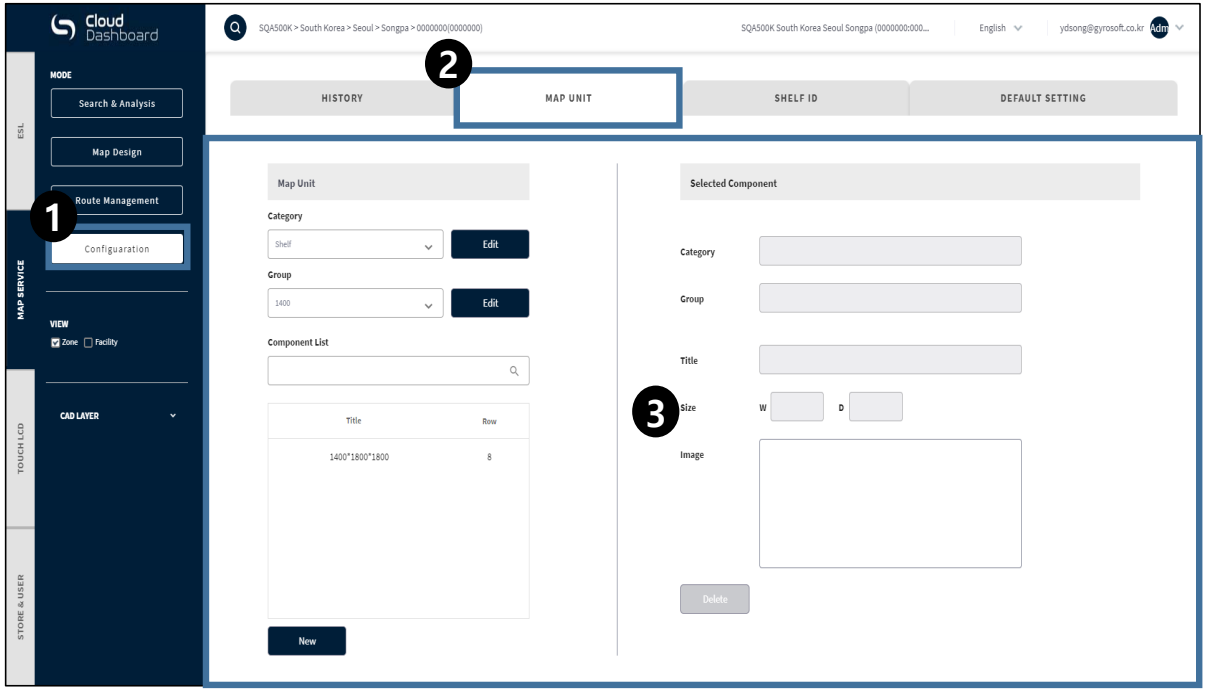

① Configuration menu

② MAP UNIT tab

③ component management area
– category/group management
– new/edit/delete the component

Newly generate a component

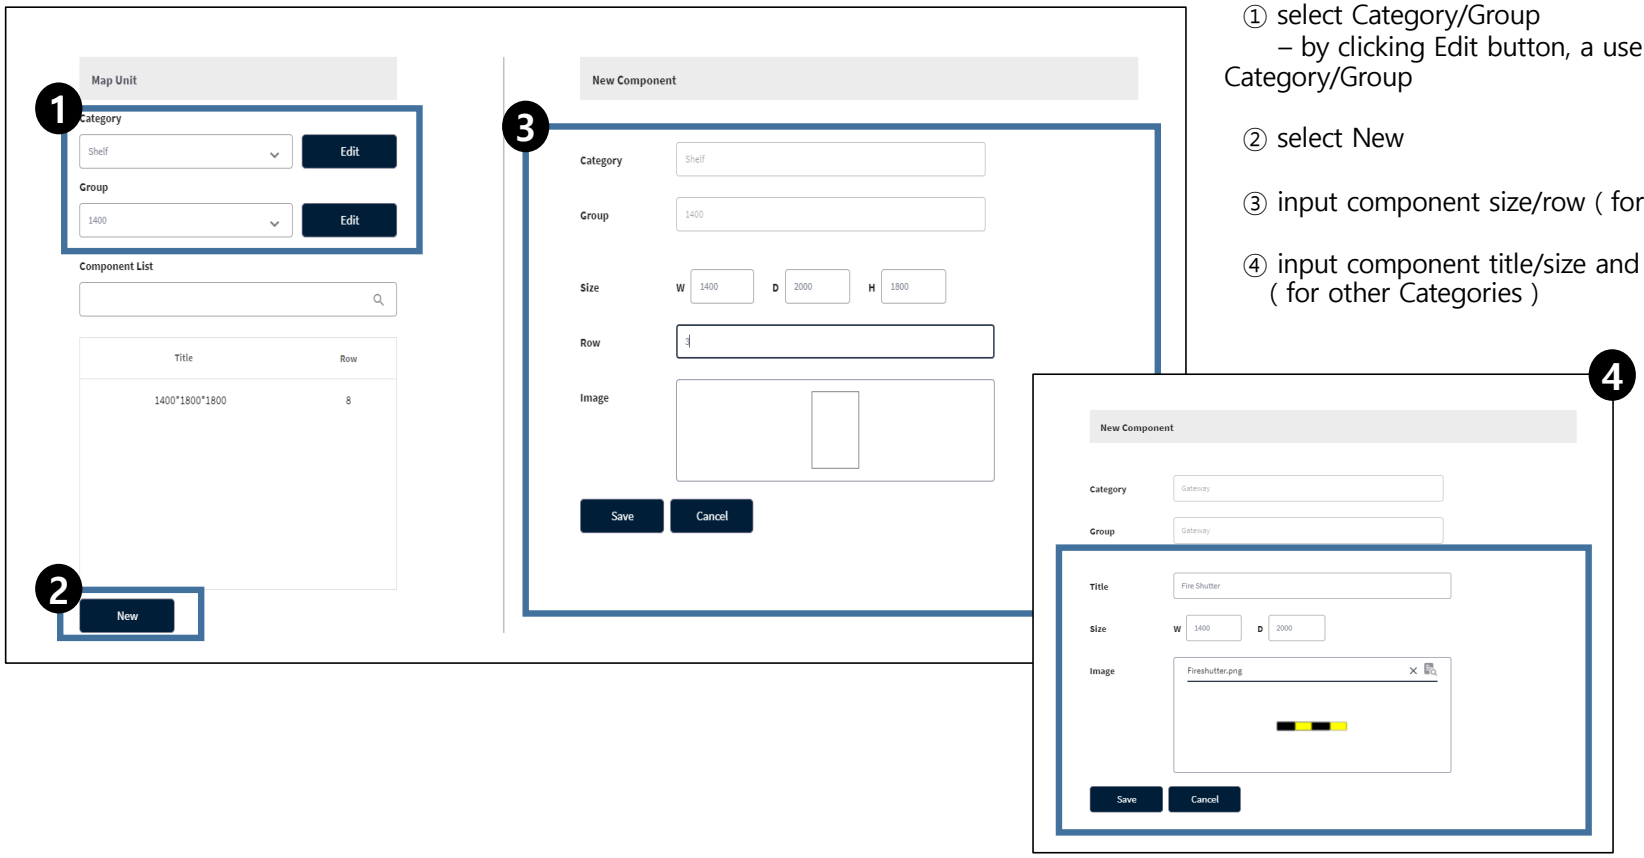

① select Category/Group
– by clicking Edit button, a user can add/edit Category/Group

② select New

③ input component size/row (for Shelf Category)

④ input component title/size and upload image file (for other Categories)

Arrange components

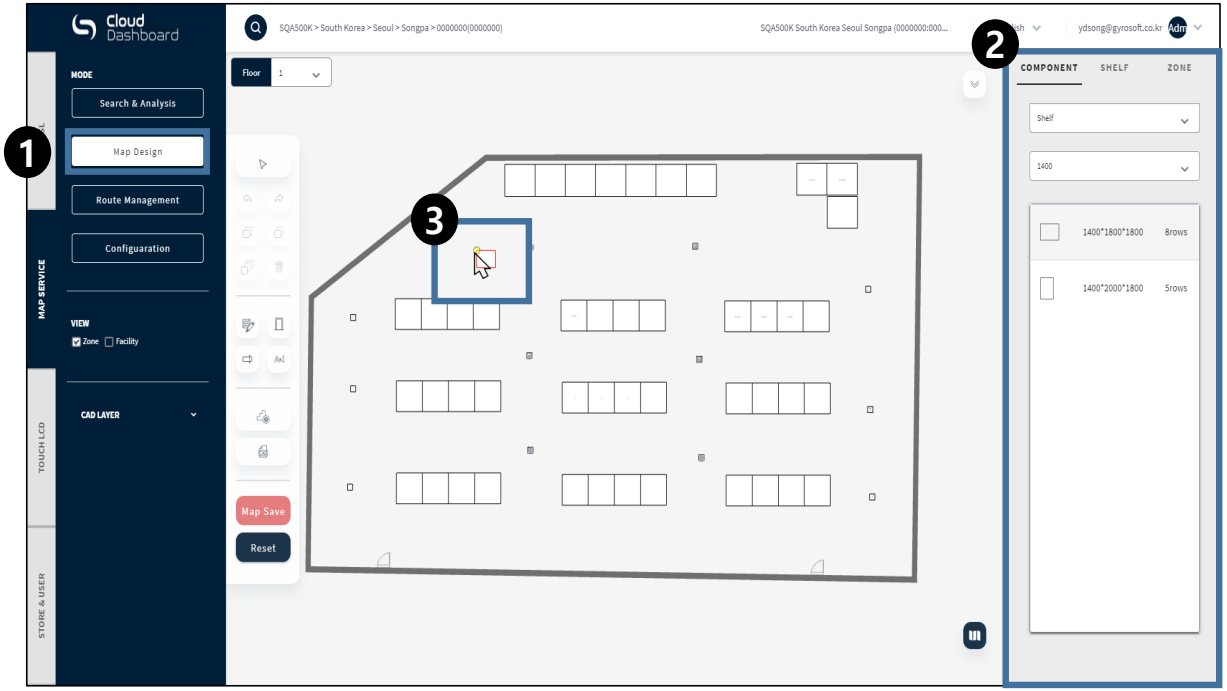

① Map Design menu

② select a component to arrange on the map in the COMPONET tab
* component add/delete is described in the previous page

③ allocate the object by clicking at the desired location

Adjust the object on the map

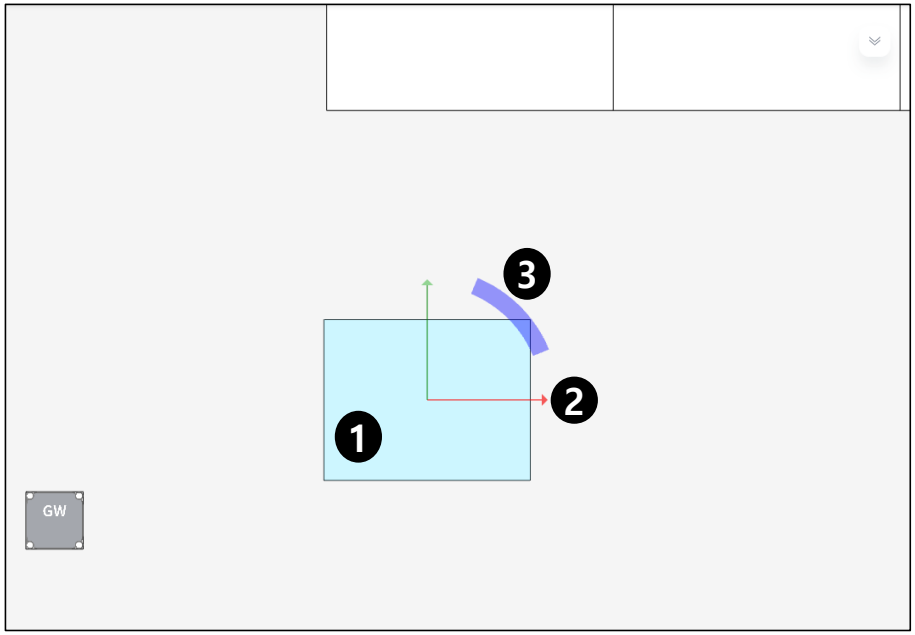

① when a user clicks the object, color of the object is changed and gizmo will be generated

② if a user drag the arrow, the object will move to that direction

③ A user can adjust the angle of the object by dragging the rotation controller in blue.

* by clicking the other part of the object and dragging, not the arrow, a user can move the object

SHELF

SHELF ID management

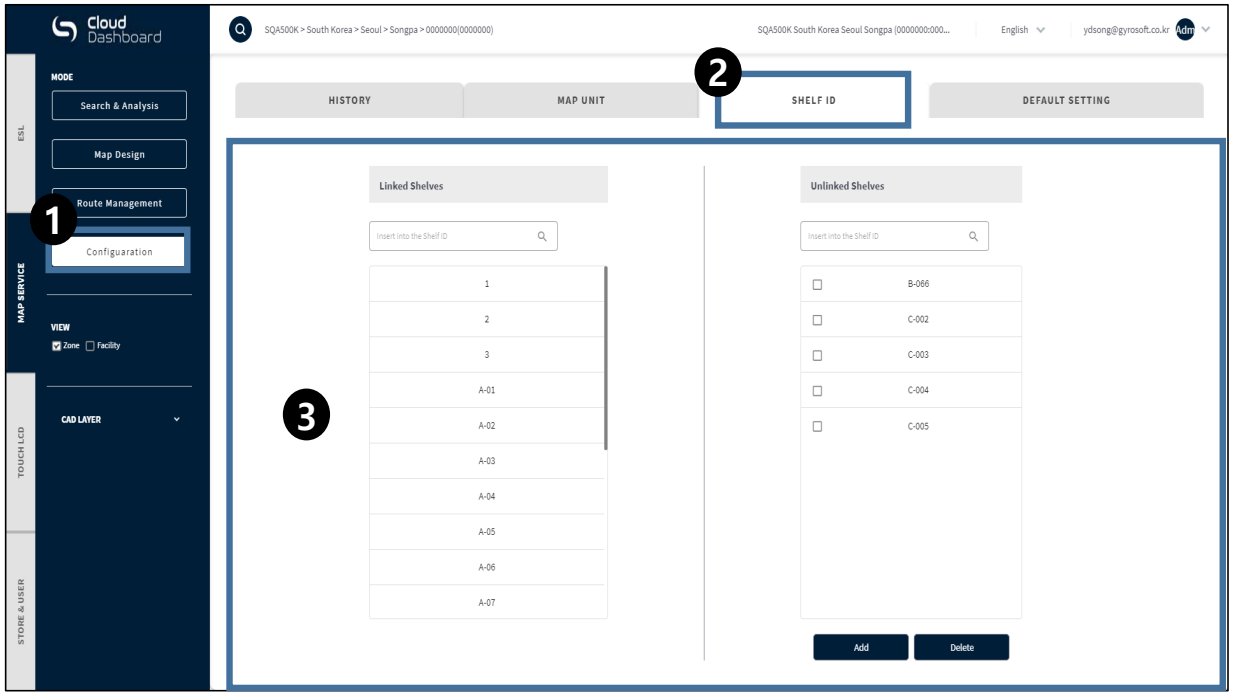

① in Configuration menu

② select SHELF ID tab

③ SHELF ID management area
– SHELF ID add/delete
– check linked ID

SHELF ID Generation

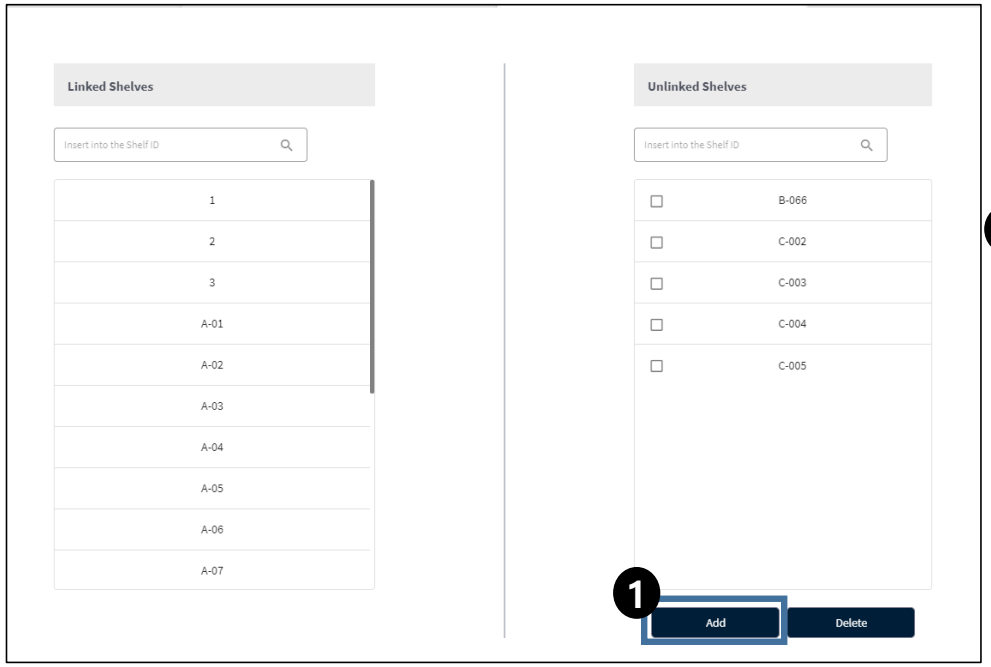

① Add button in the Unlinked Shelves area on the right side

② ID generation popup
– Generate IDs based on the guide
– If there is a duplication in the store, error popup will be shown.

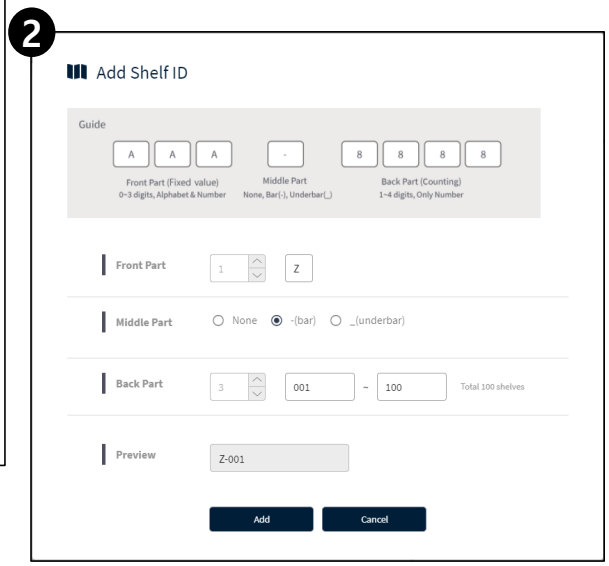

SHELF ID Link (1)

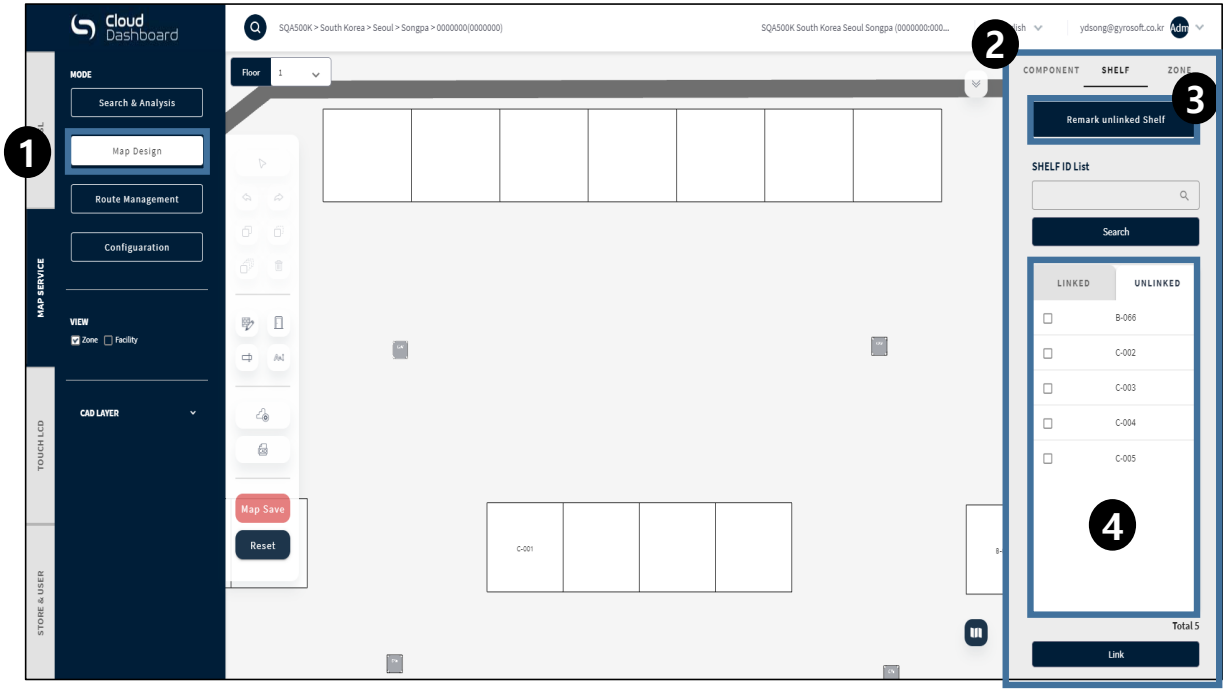

① Map Design menu

② select SHELF Tab

③ Shelves without a associated ID will be shown with a certain color

④ SHELF ID in the list
– LINKED/UNLINKED with an object

* add/delete a component is described in another section

SHELF ID Link (2)

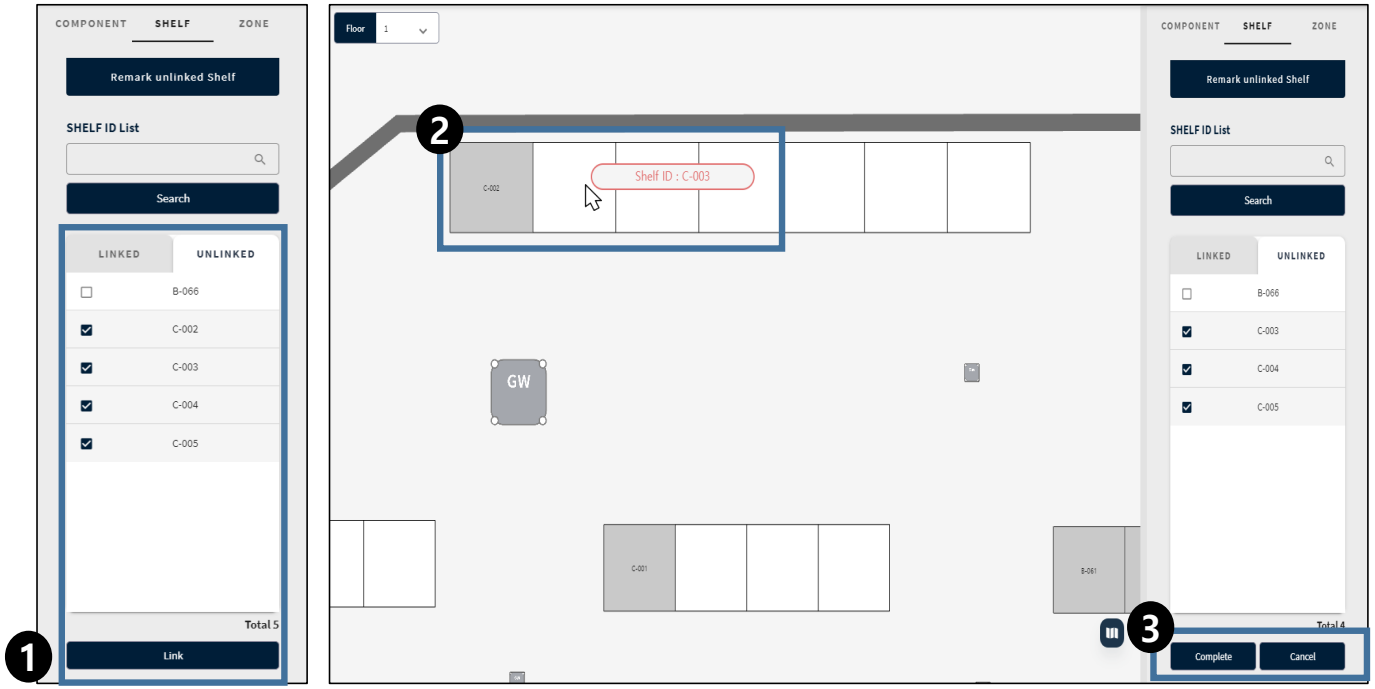

① select IDs to link in the UNLINKED tab. And then click Link button

② on the map, ID Tooltip will be activated. If a user clicks an object/shelf, then the ID will be associated with it.
– already linked object/shelf will be displayed with a grey color
– if a user selects the objects/shelves with the amount of IDs which is selected in the process ①, Link process will be finished

③ Complete: save the linking job
Cancel: ignore the linking job

ZONE

Add Zone

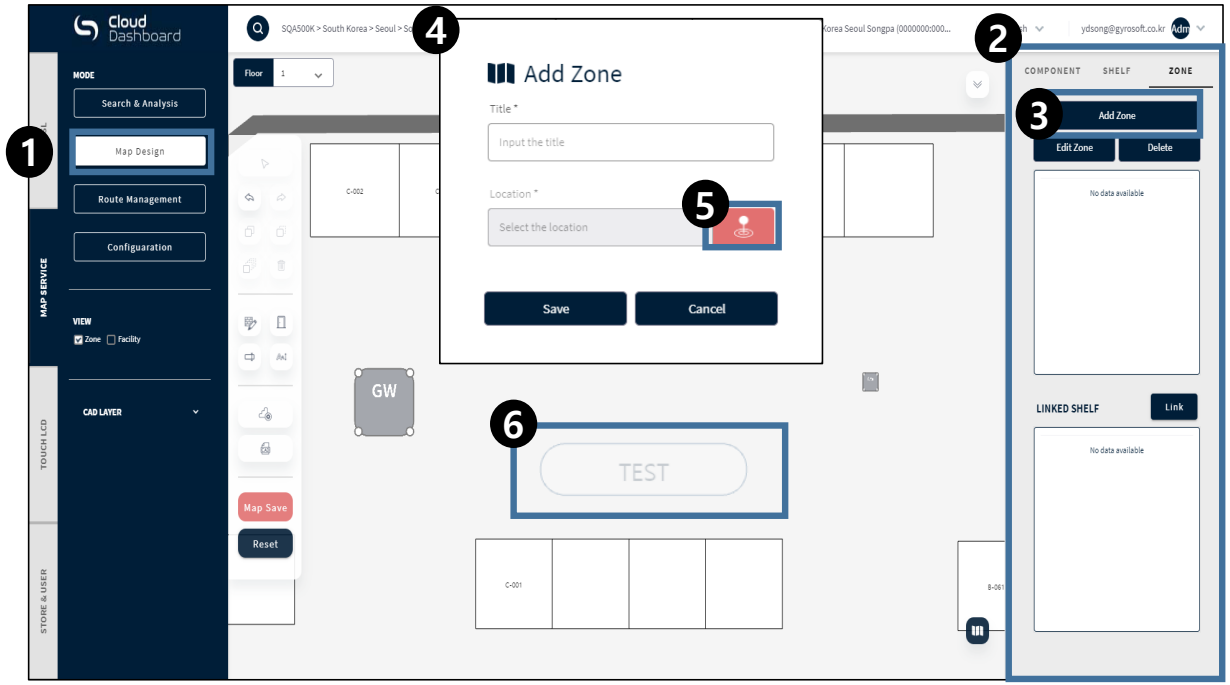

① Map Design

② ZONE tab

③ Add Zone

④ Add Zone popup details
– input the name of zone

⑤ click the positioning button and click the position of the zone on the map

⑥ If a user clicks the Save button, then a new zone will be saved and displayed on the map

Edit/Delete Zone

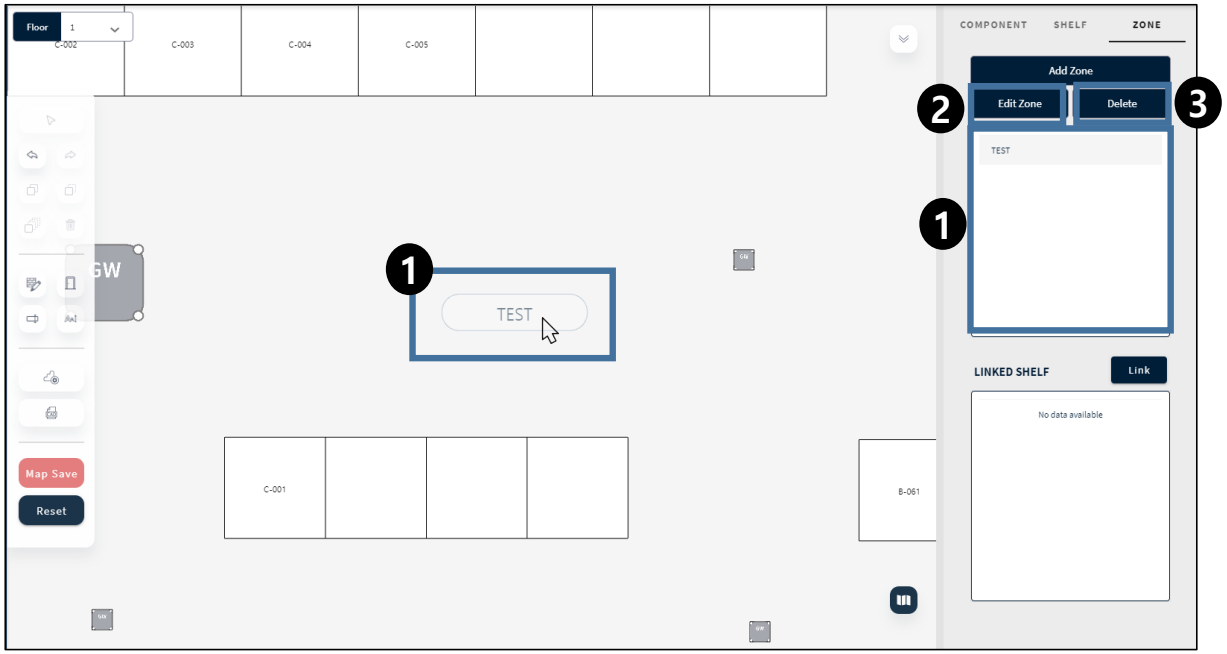

① Select a zone in the map or list of the zones

② click Edit Zone button and modify title/location
* same with Add Zone feature

③ delete a zone by clicking the Delete button
– there should be no linked shelf for the zone.
Or it cannot be deleted.

* in the next page, you can find how to link/unlink a shelf with a zone

Zone-Shelf Link

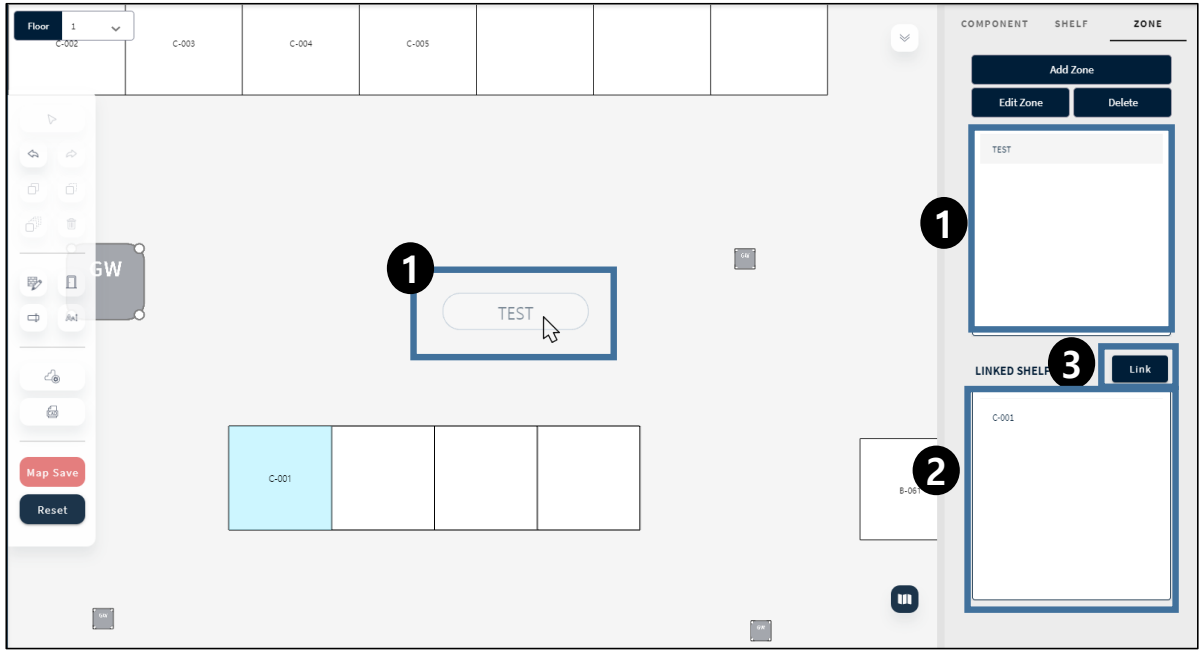

① Select a zone in the map or list of the zones

② The shelf list linked with the select zone

③ If a user clicks Link button, then it will be changed as a Confirm button and a user can modify the list

④ Link: select a shelf to link with the zone in the map
Unlink: in ③, press X button or select a shelf to unlink with the zone in the map
– already linked shelf are shown in grey

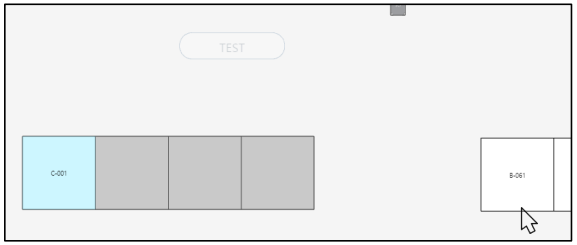

⑤ click Confirm button to finish linking

ROUTE MANAGEMENT

ROUTE MANAGEMENT

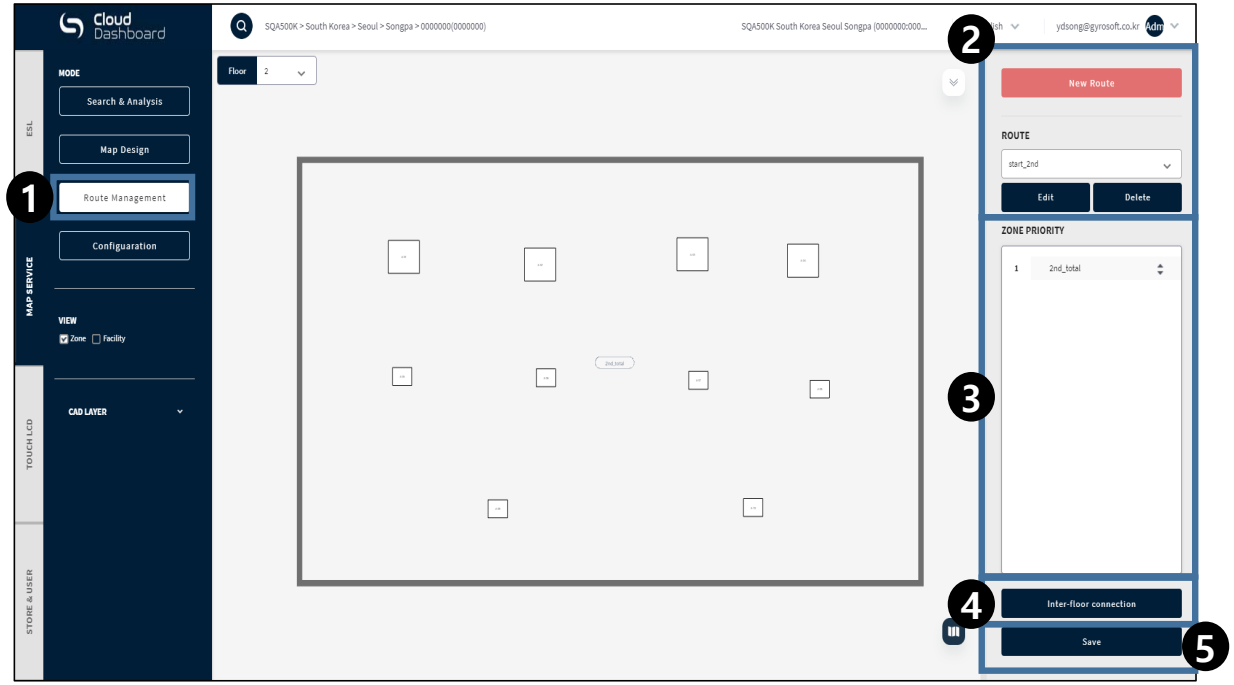

① Route Management Menu click

② Route Add/Edit/Delete

③ Zone Priority setting (Drag&Drop)

④ Inter-floor connection

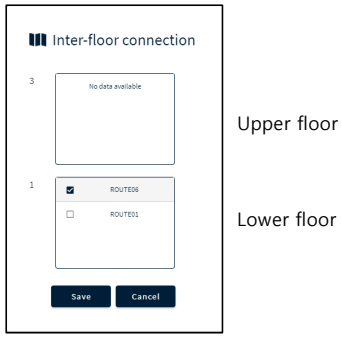

⑤ Save

* Add/Edit/Delete features are same with ZONE page