






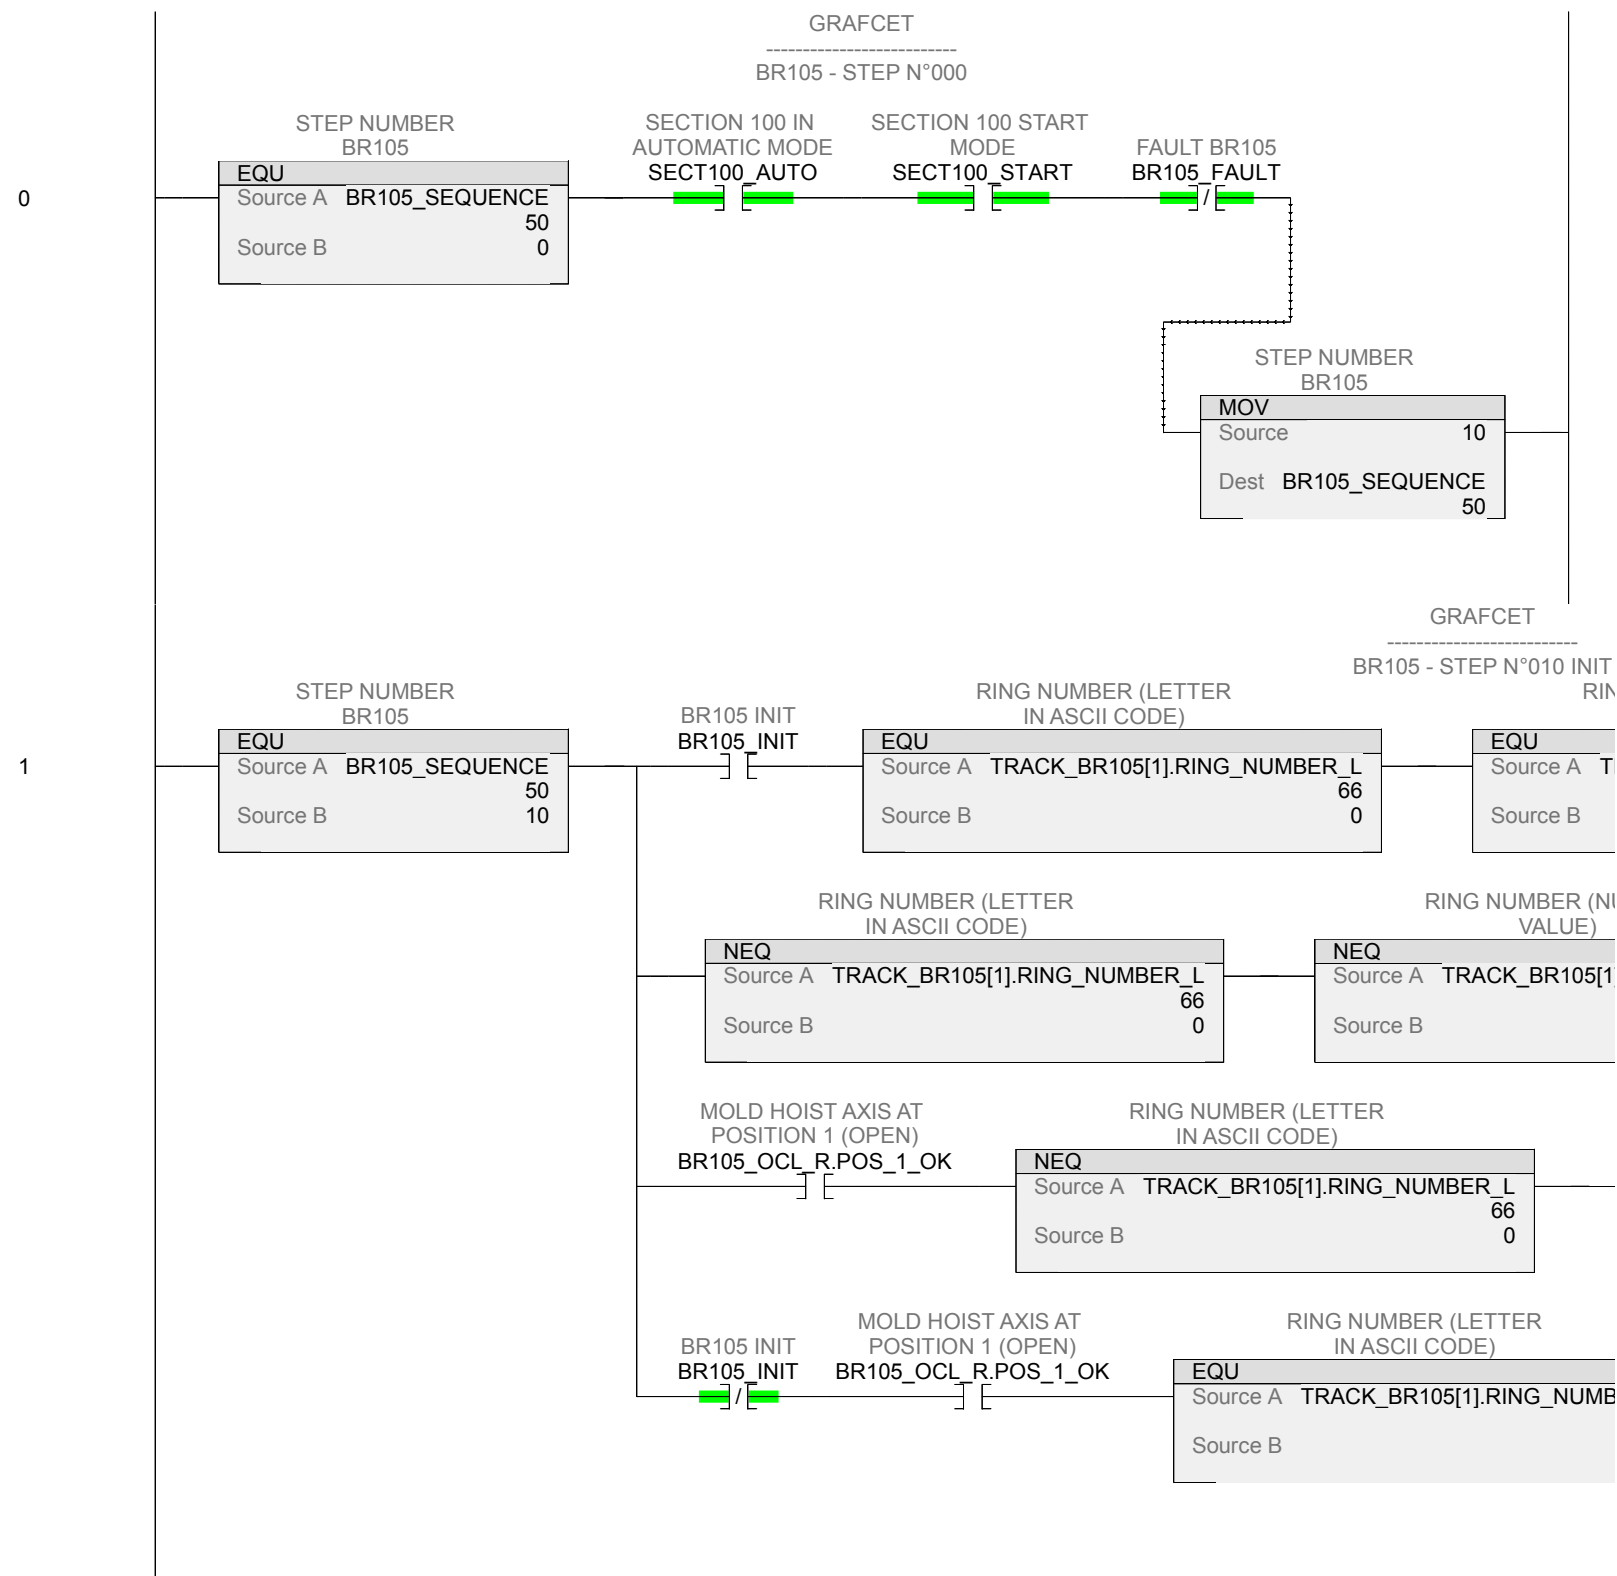


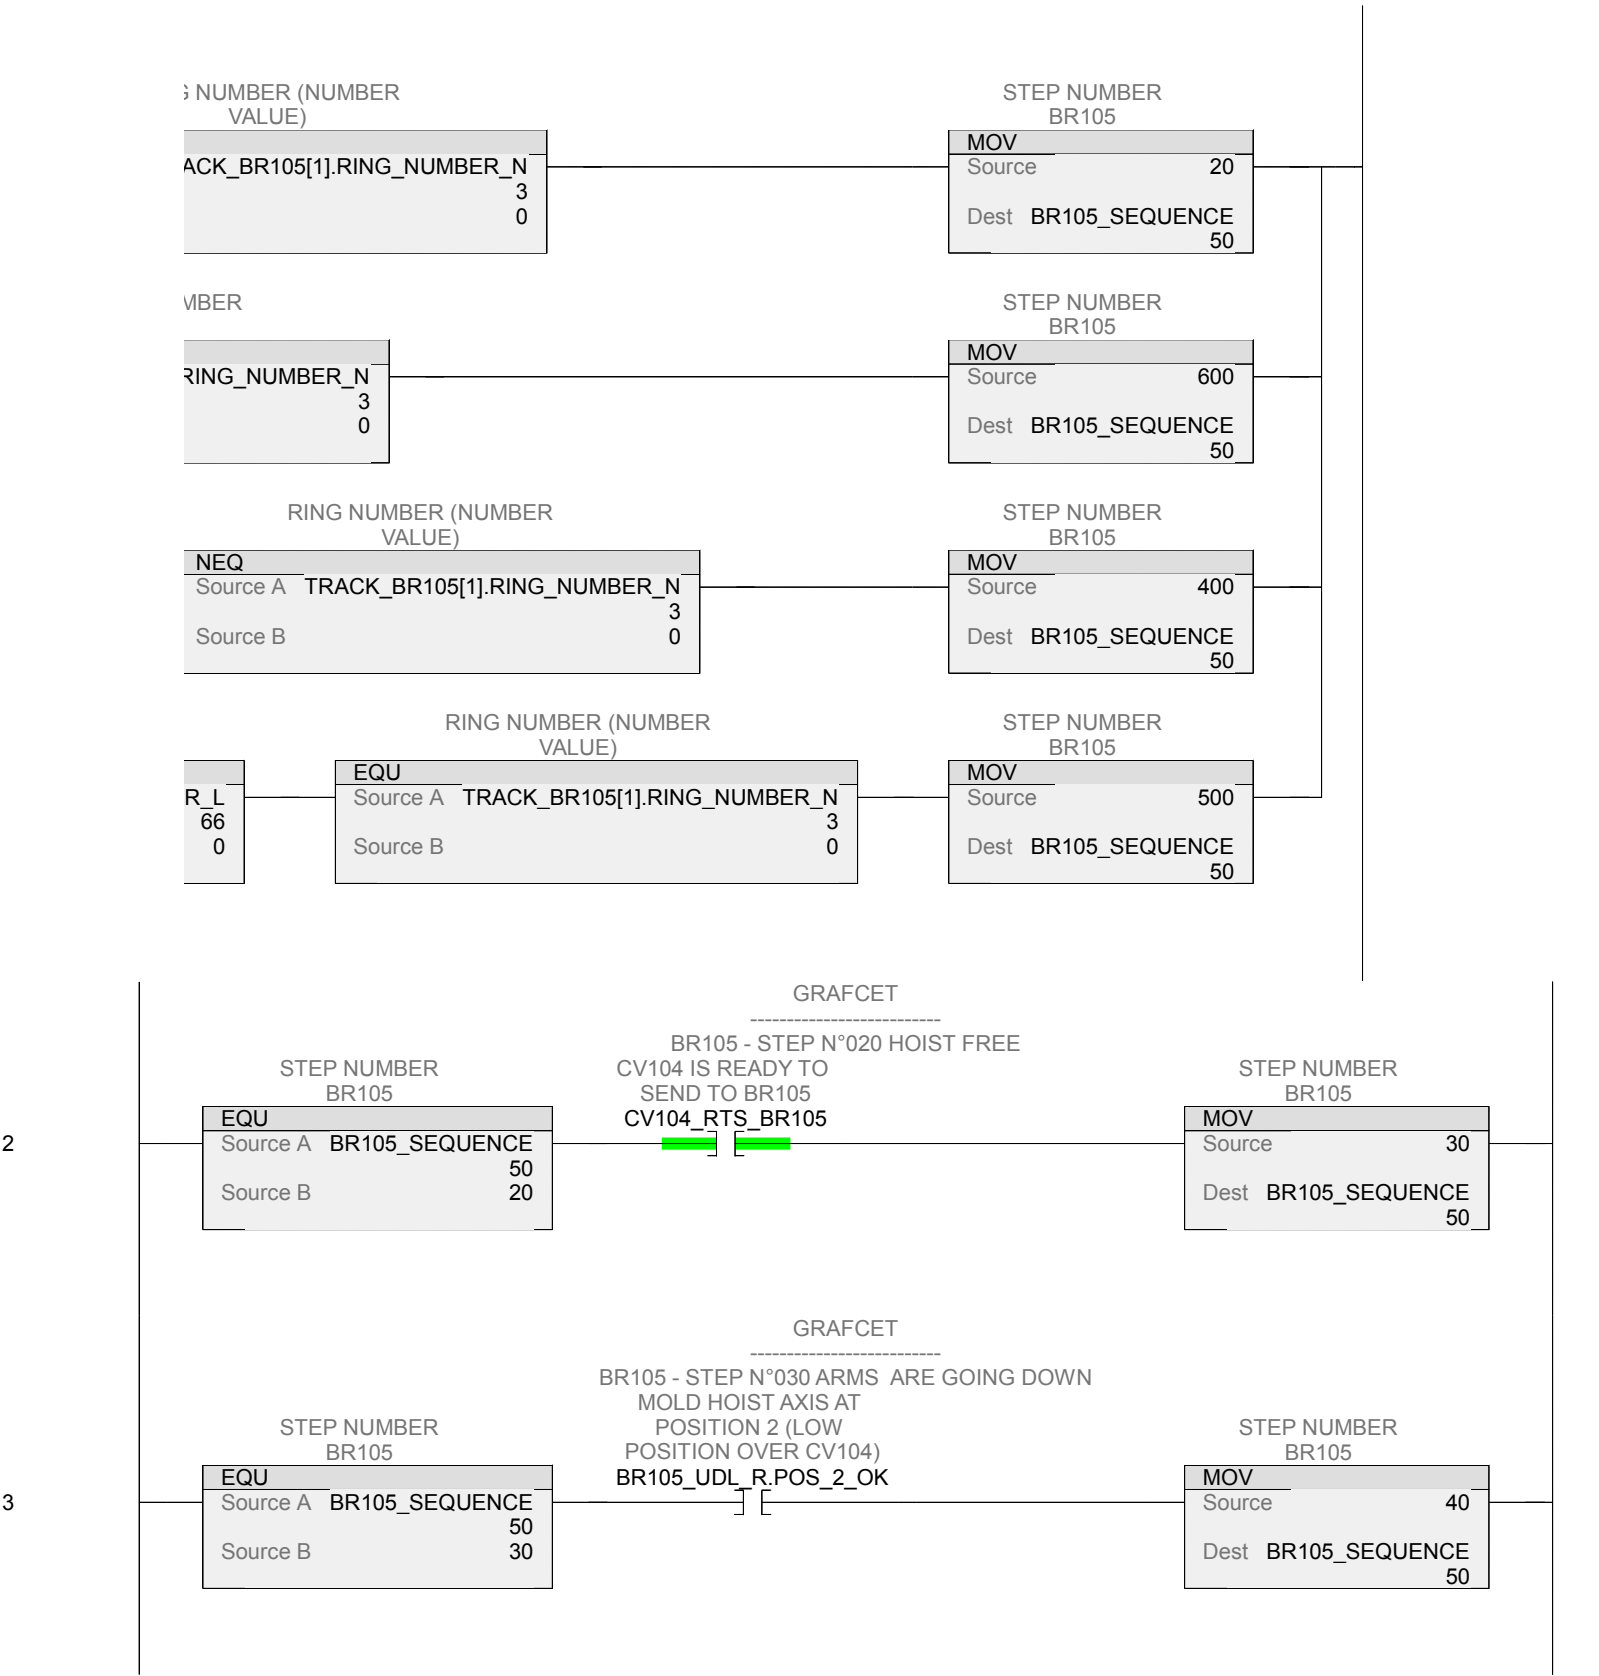


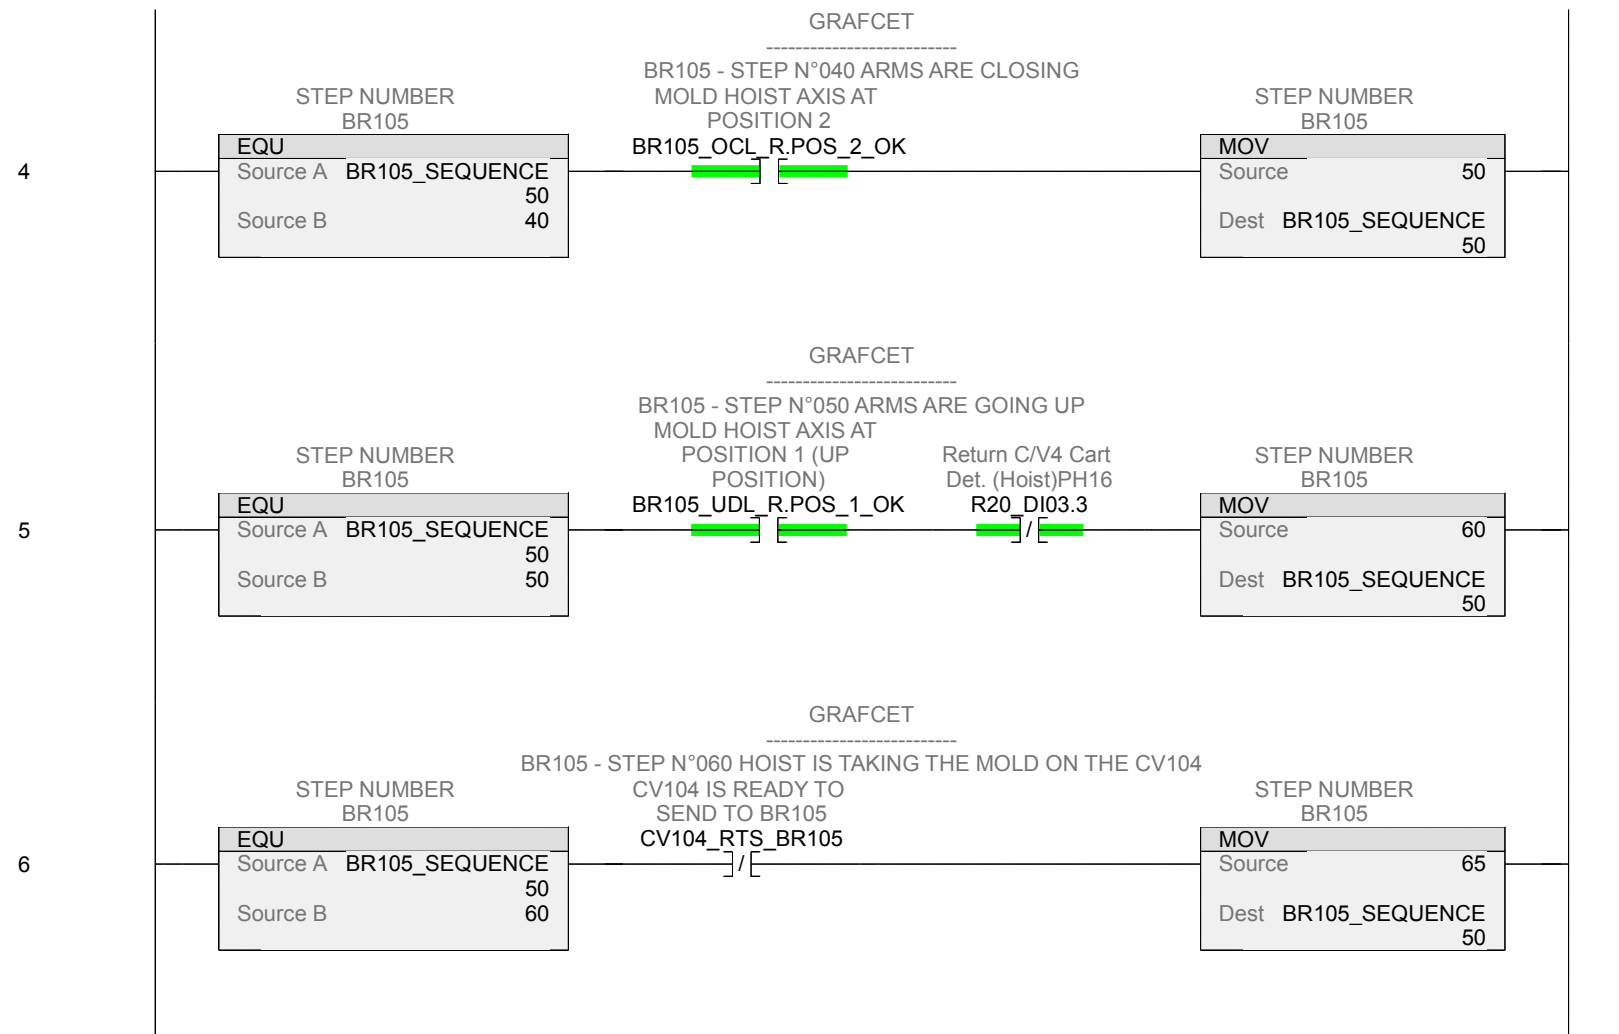

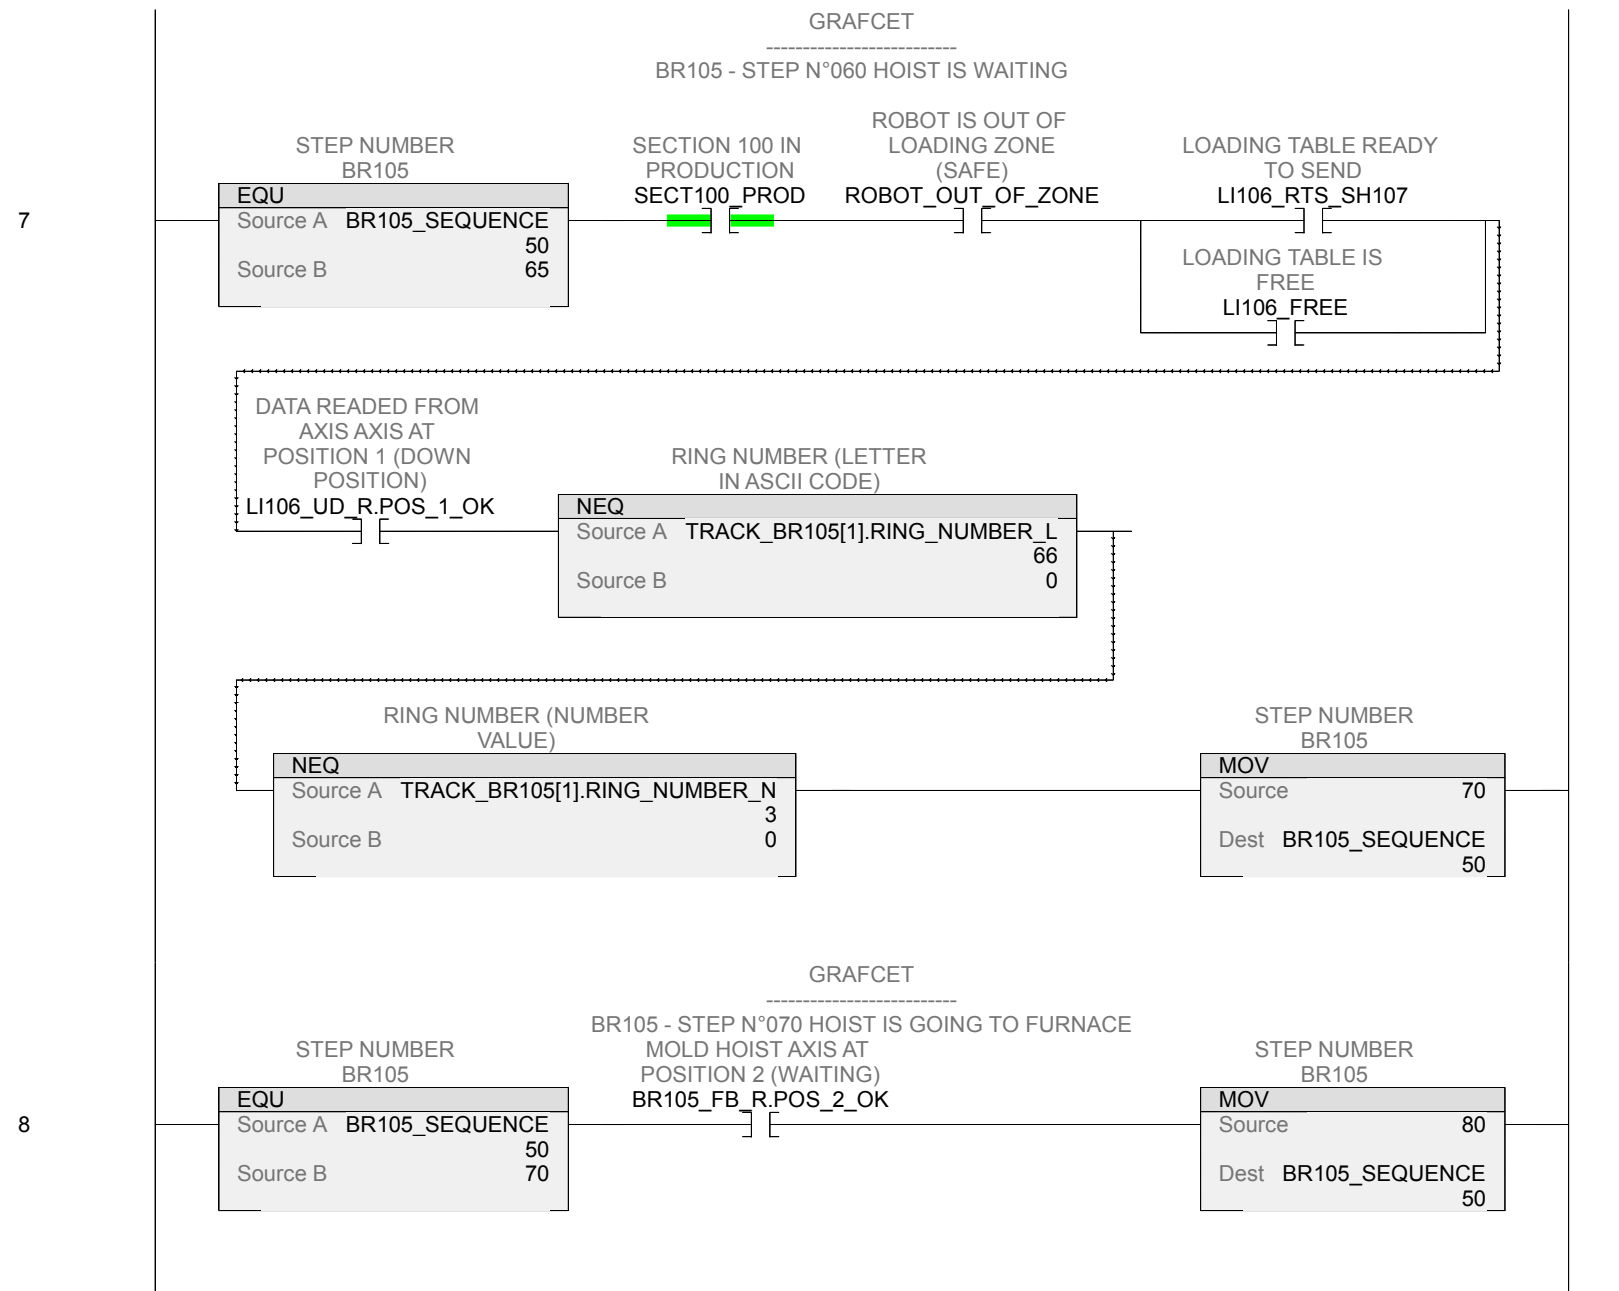

9

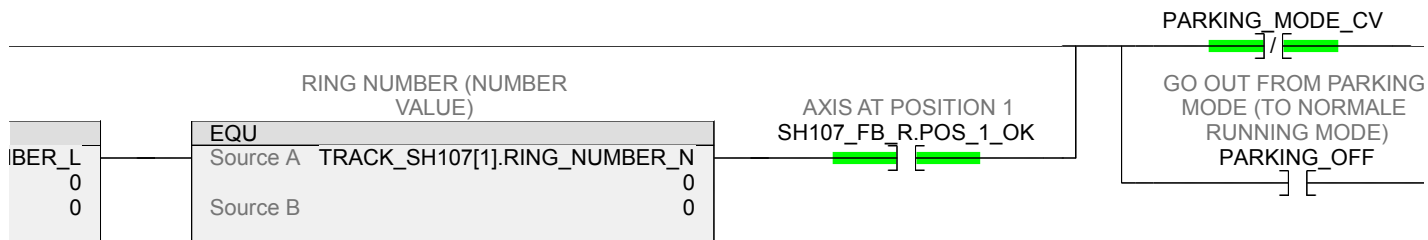
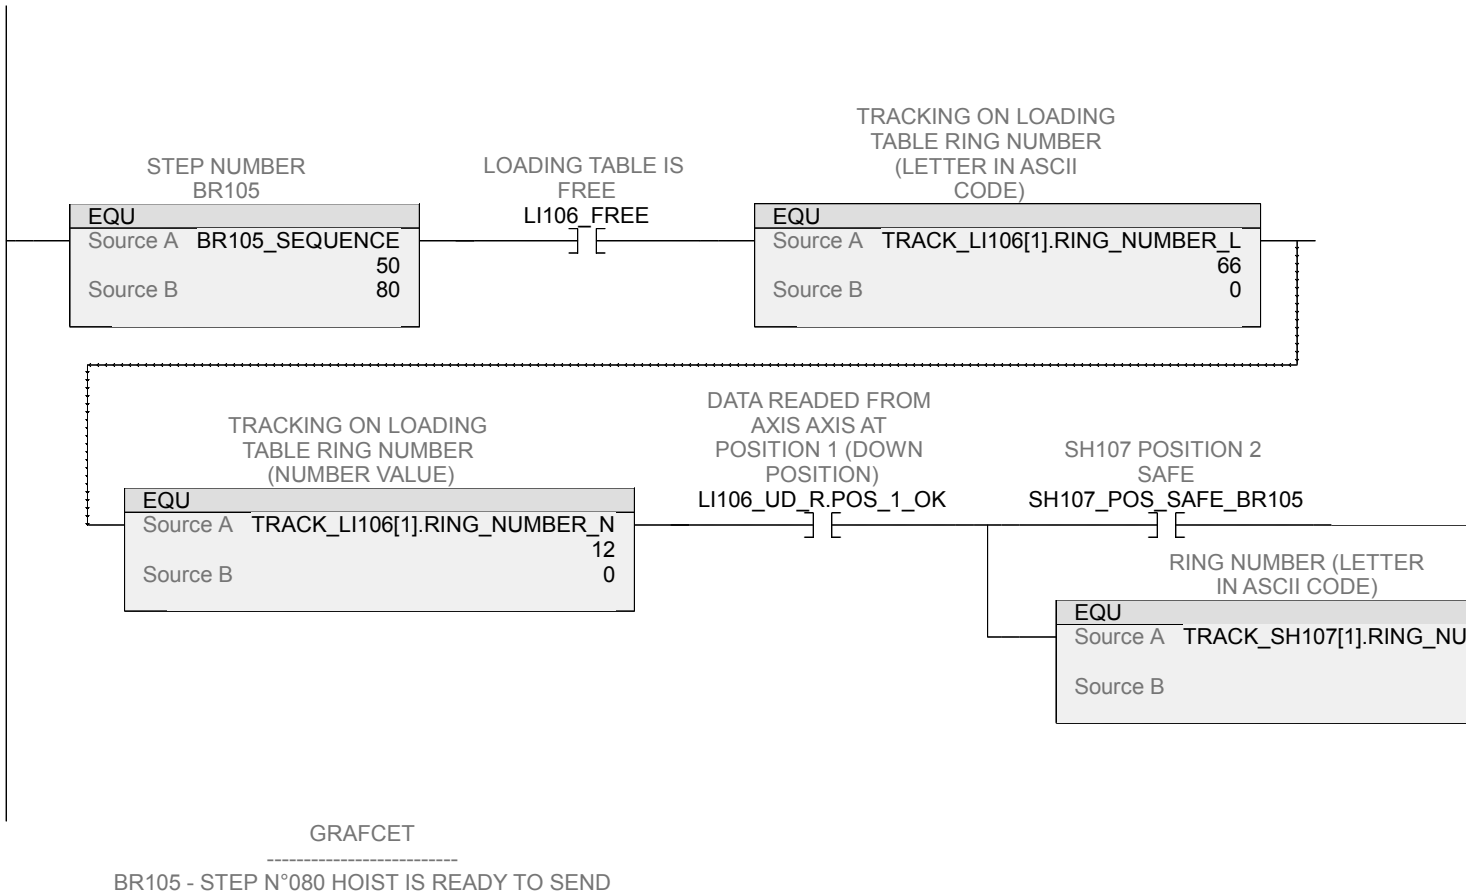


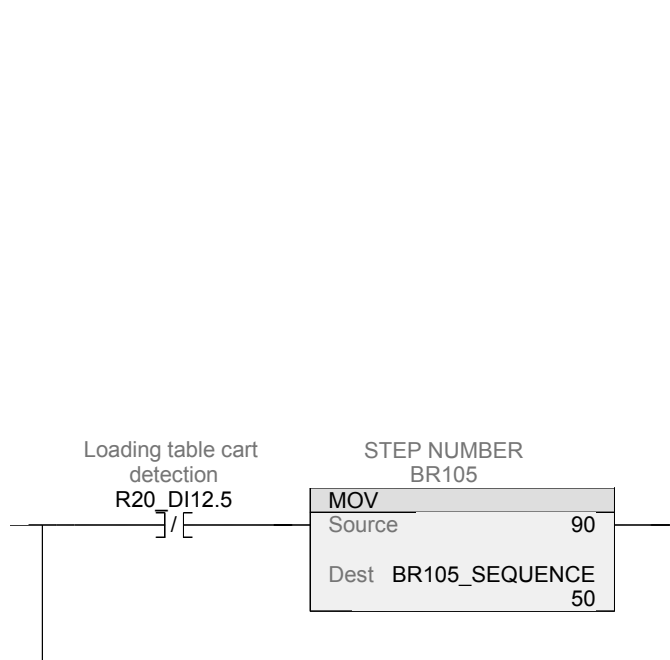

GRAFCET

BR105 - STEP N°090 ARMS ARE GOING DOWN



10

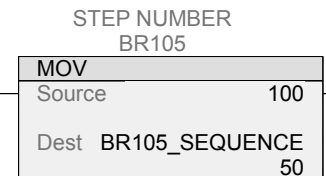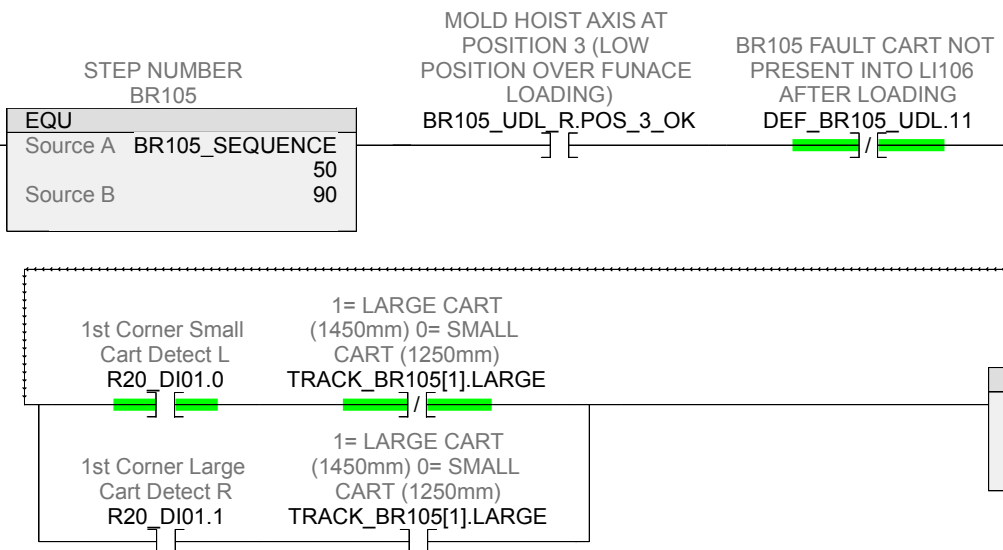



GRAFCET


BR105 - STEP N°100 ARMS ARE OPENING


11

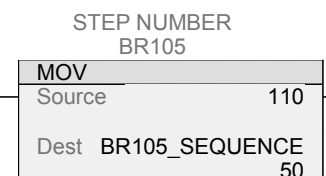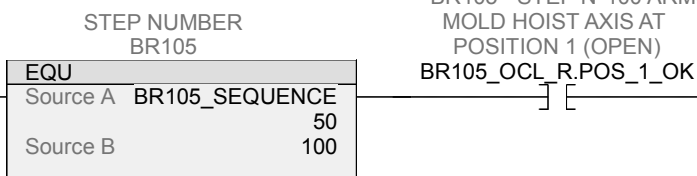


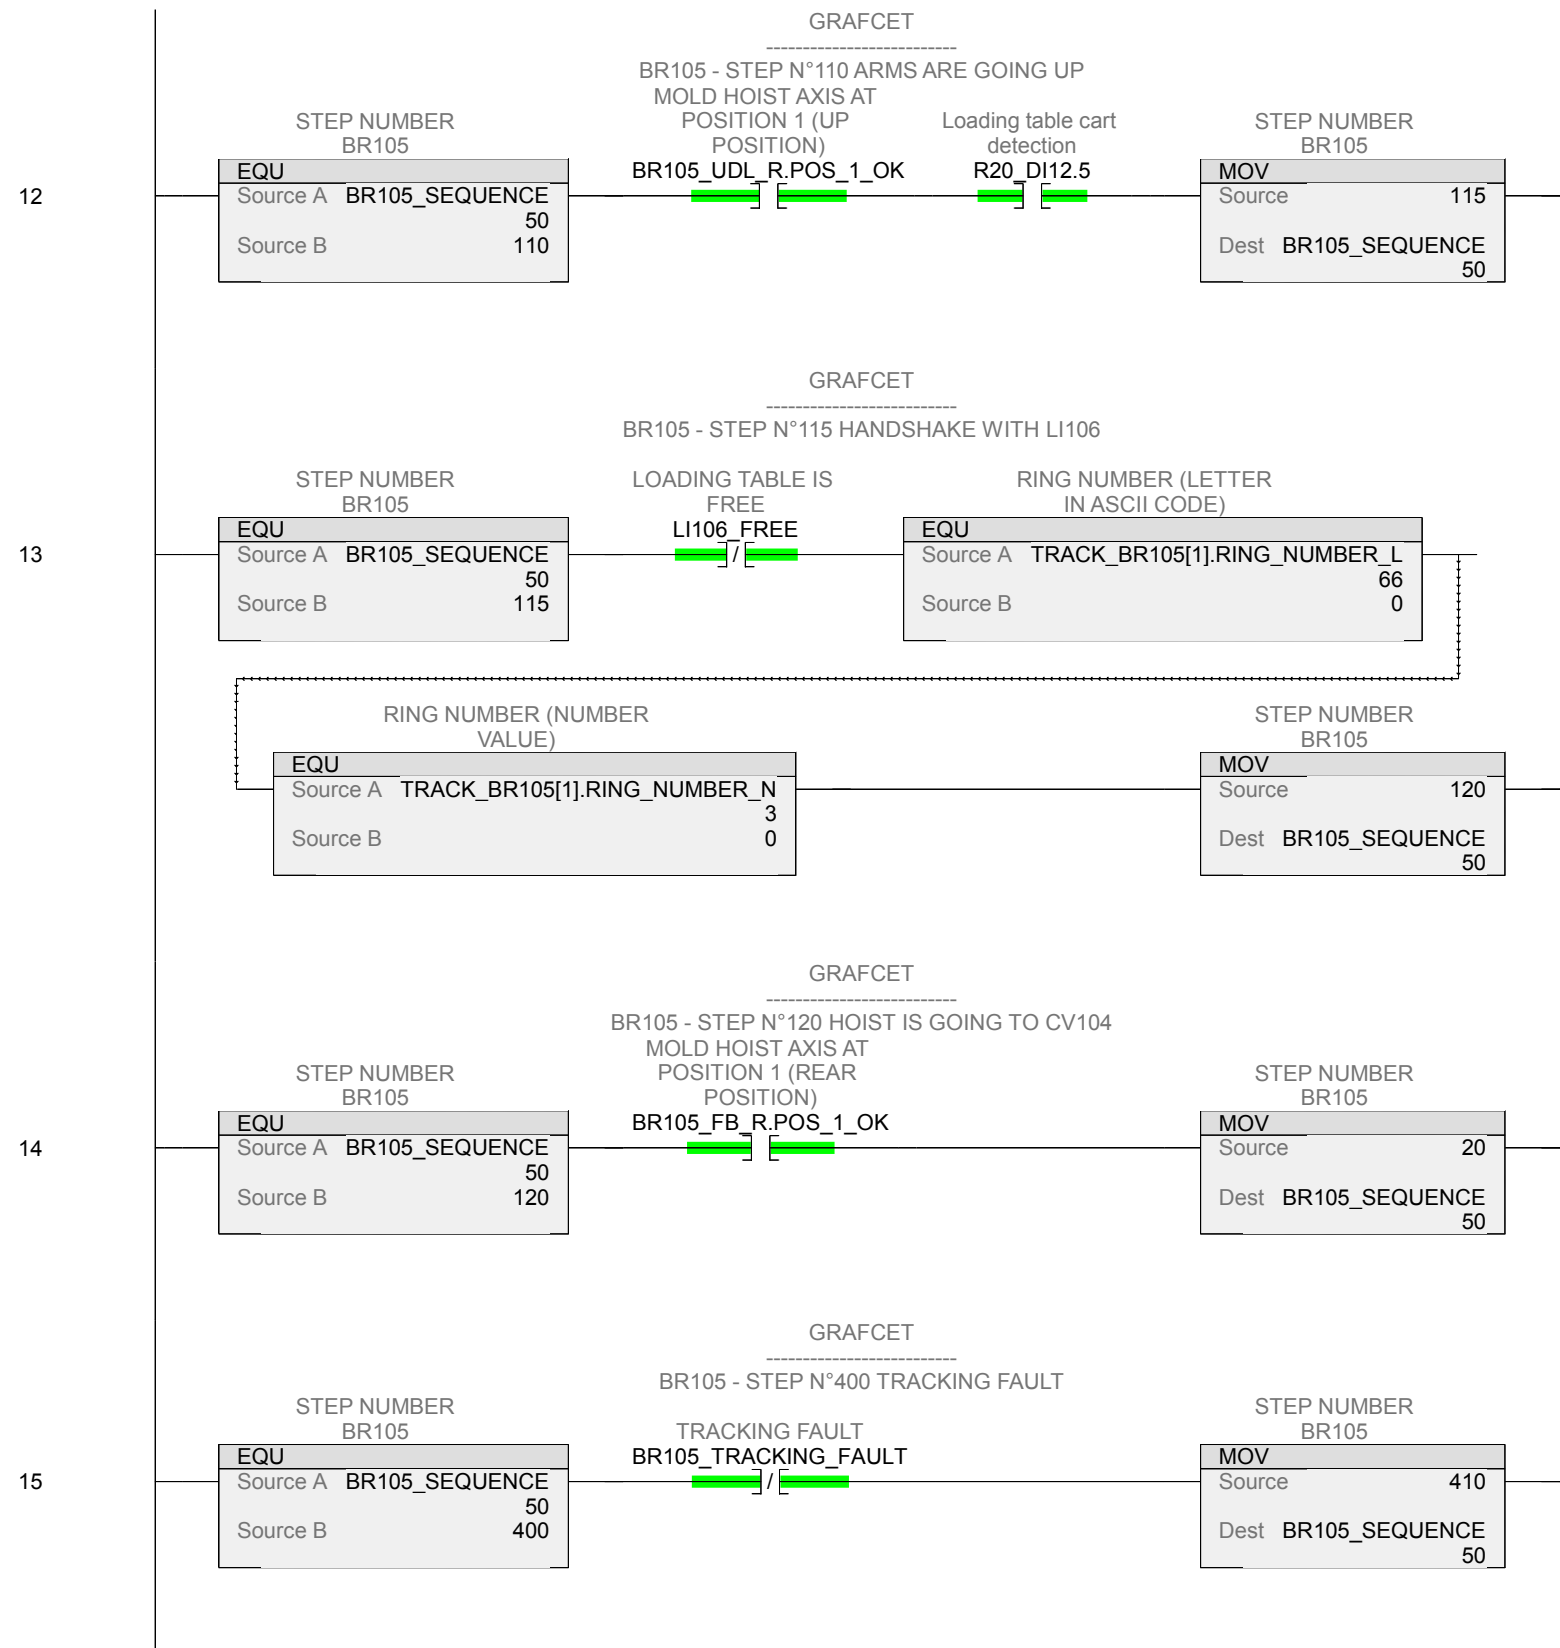


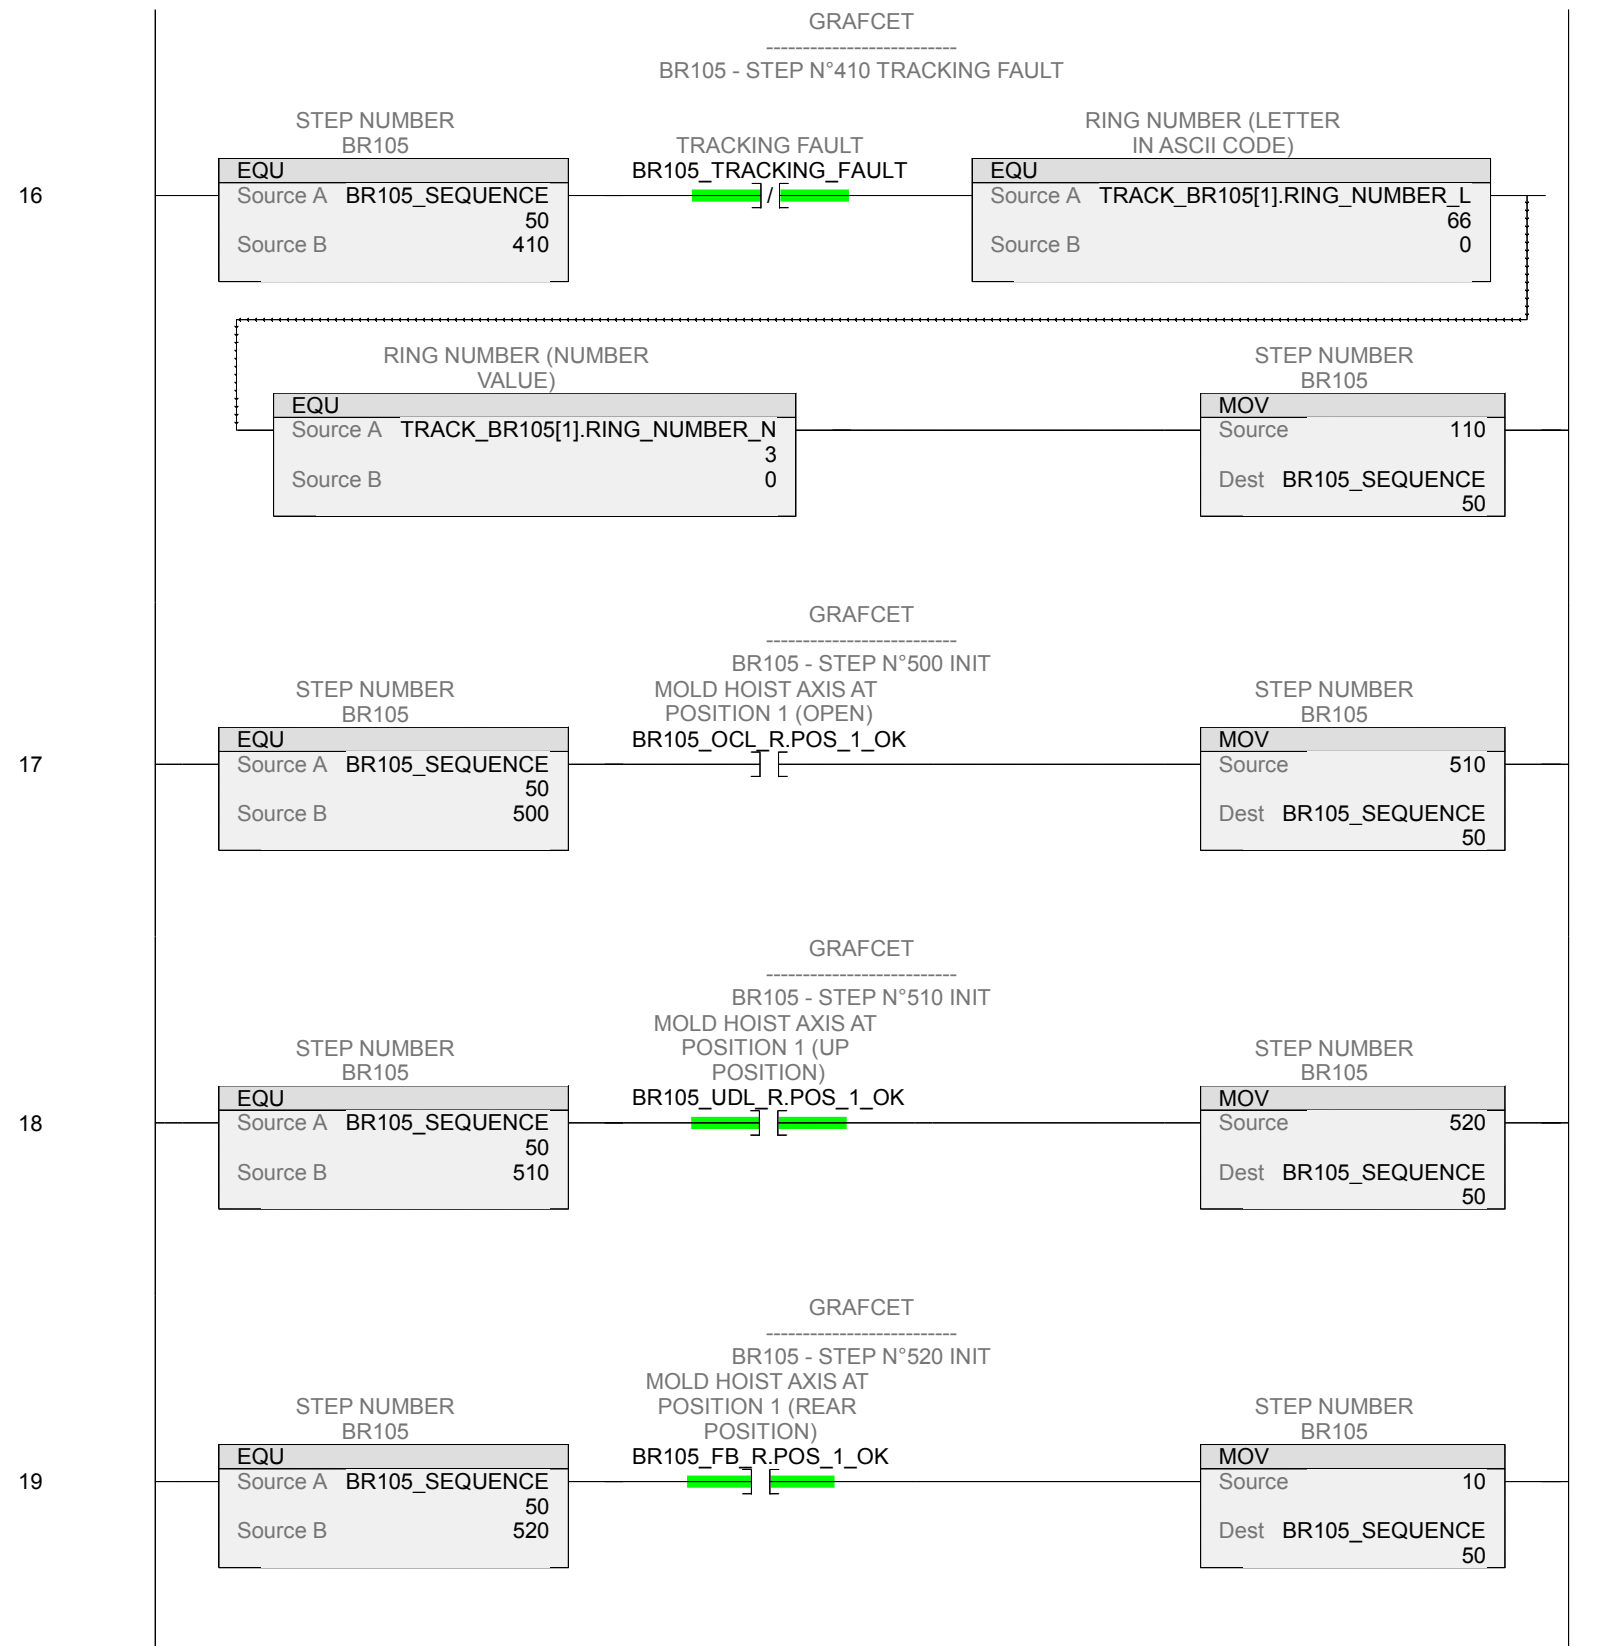


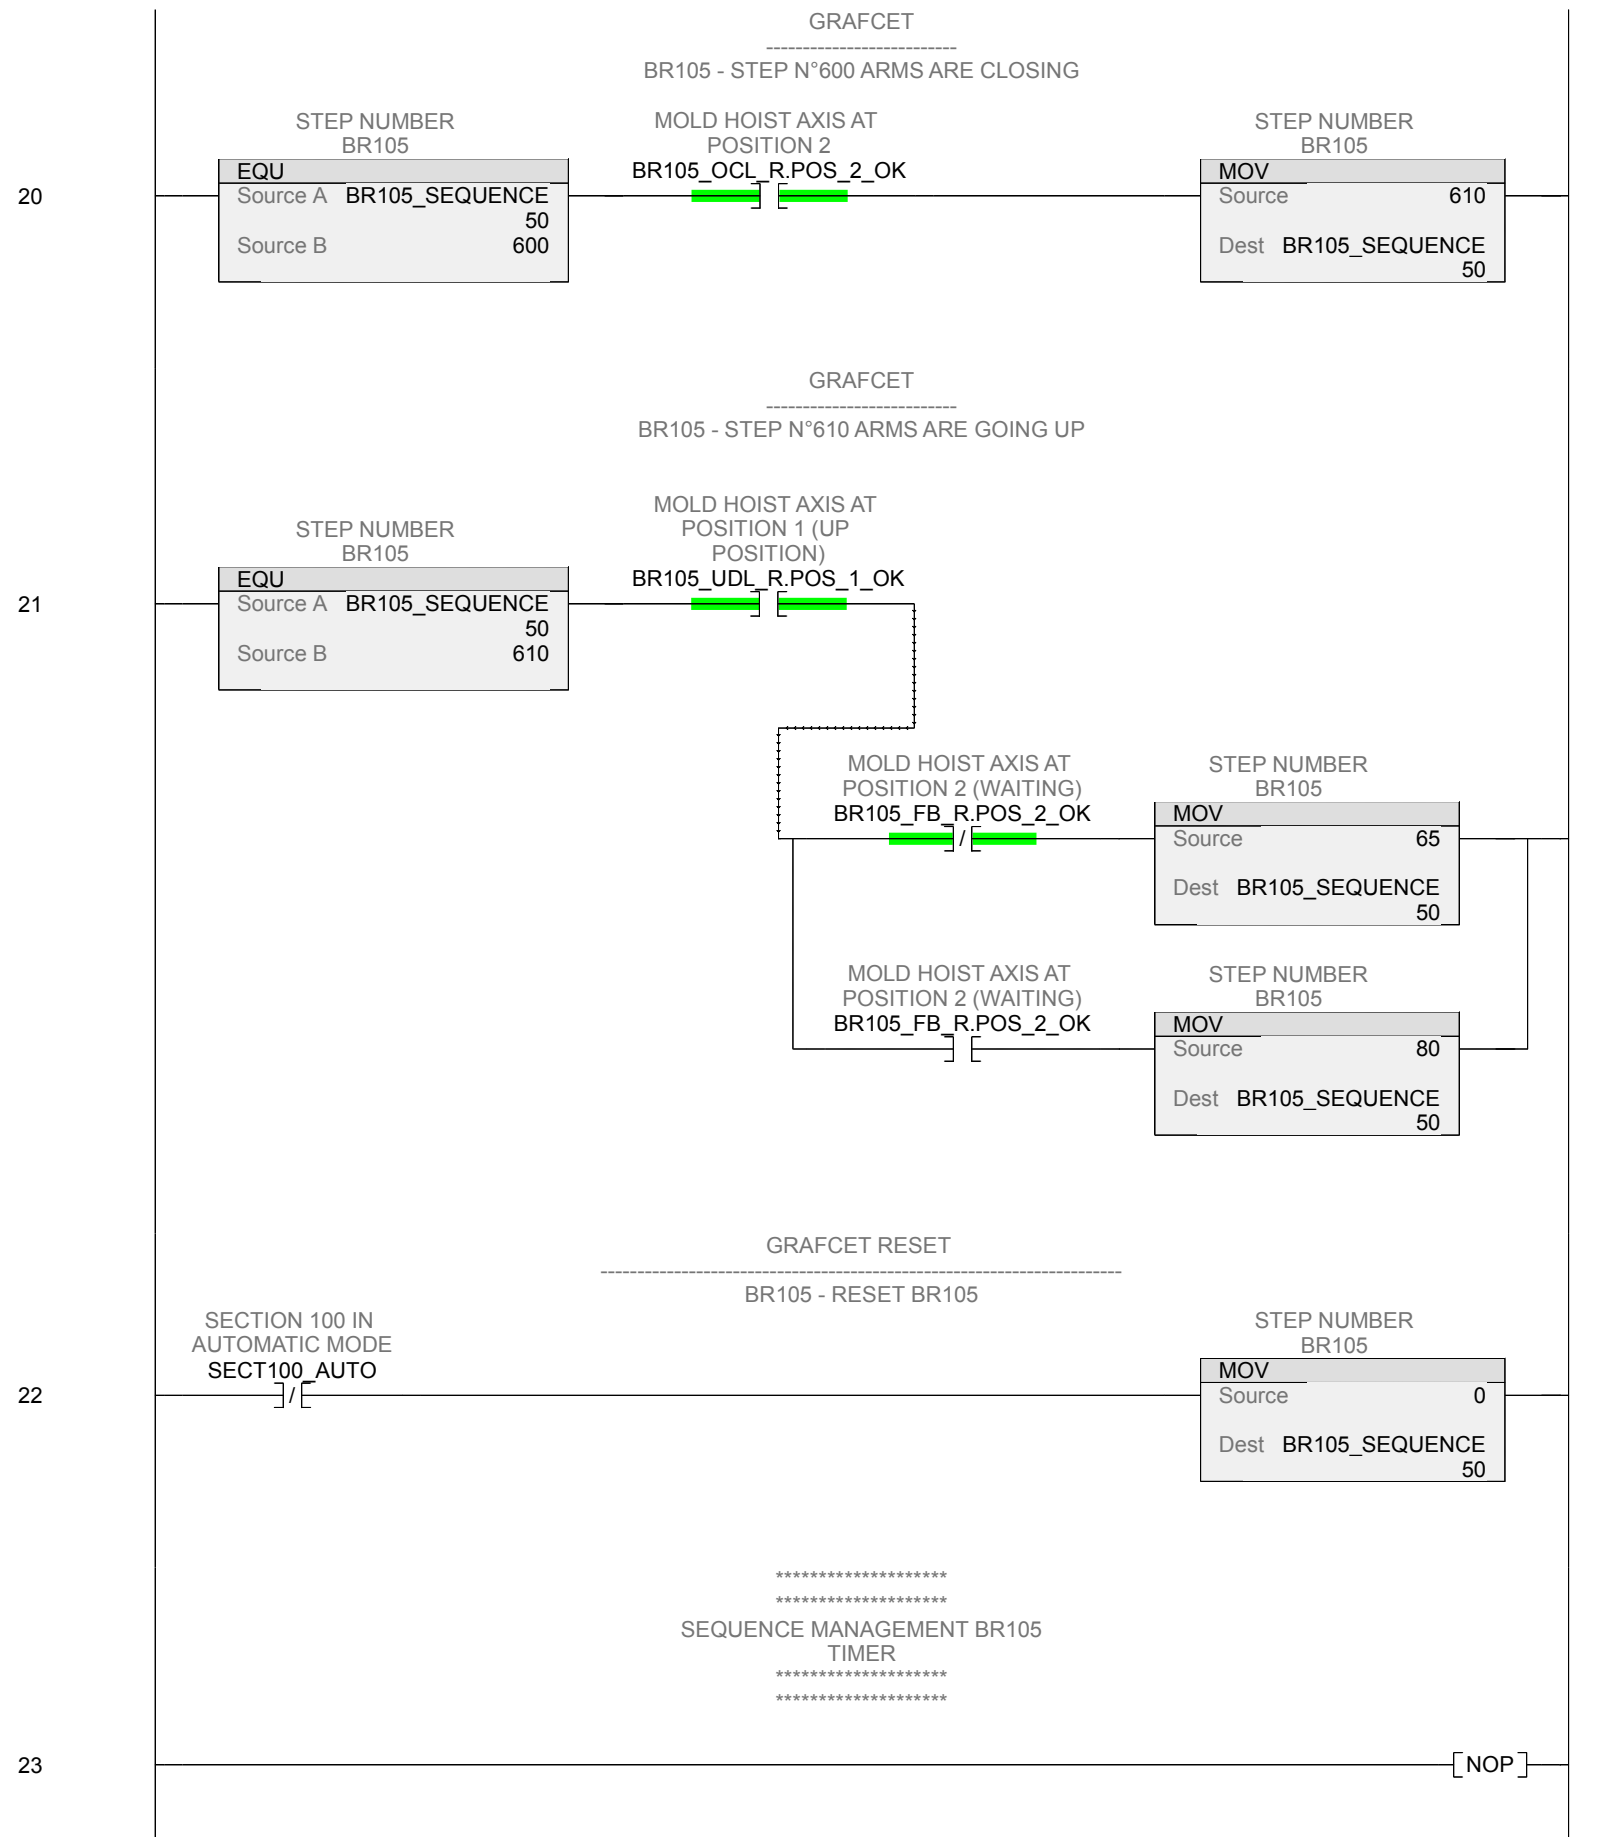

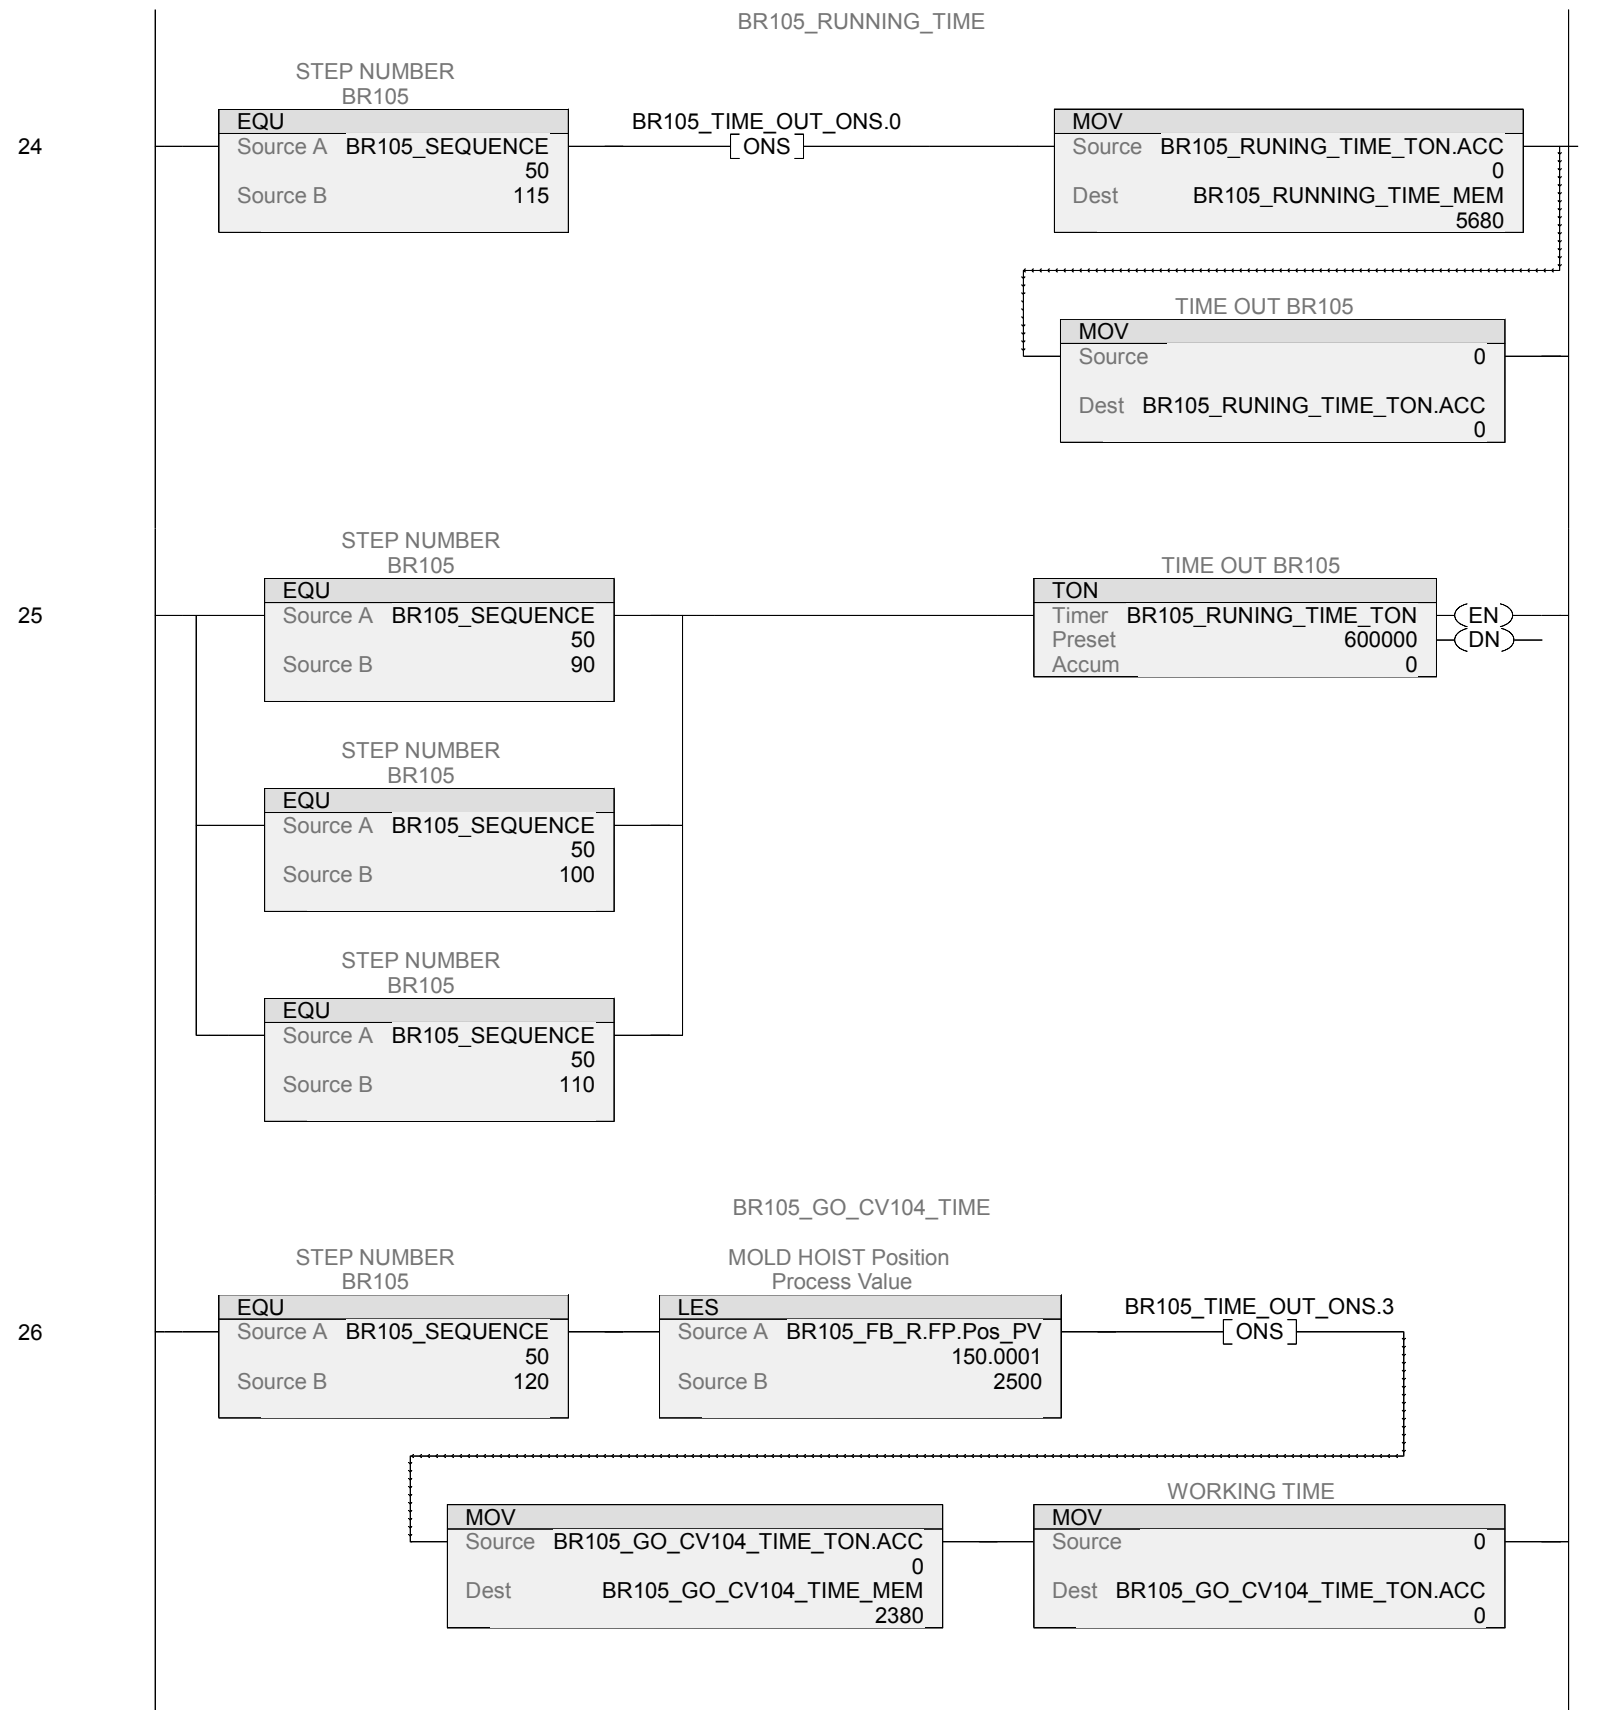


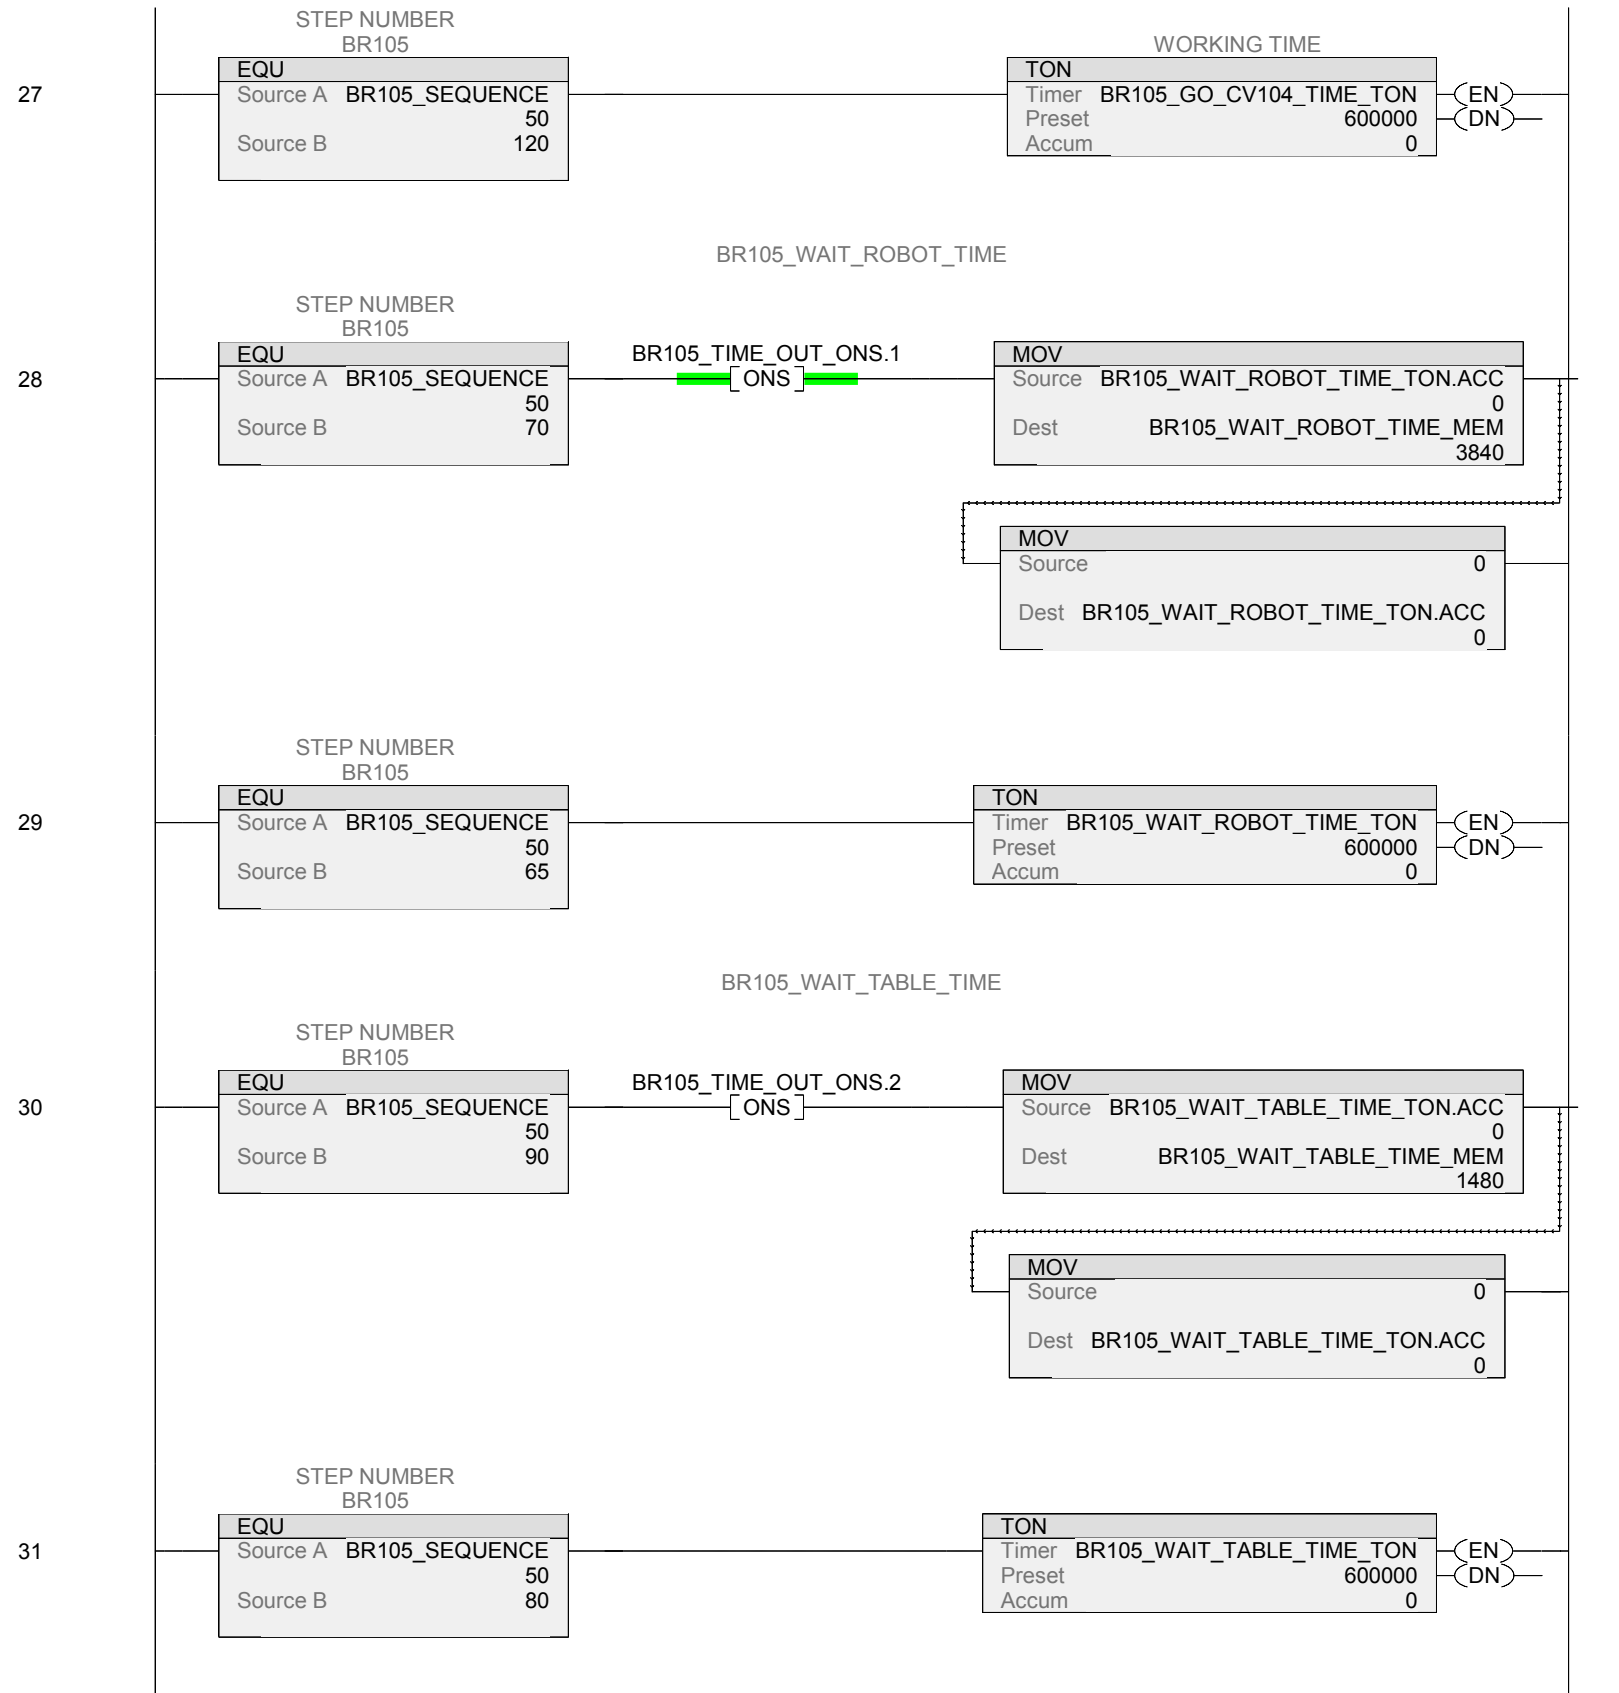


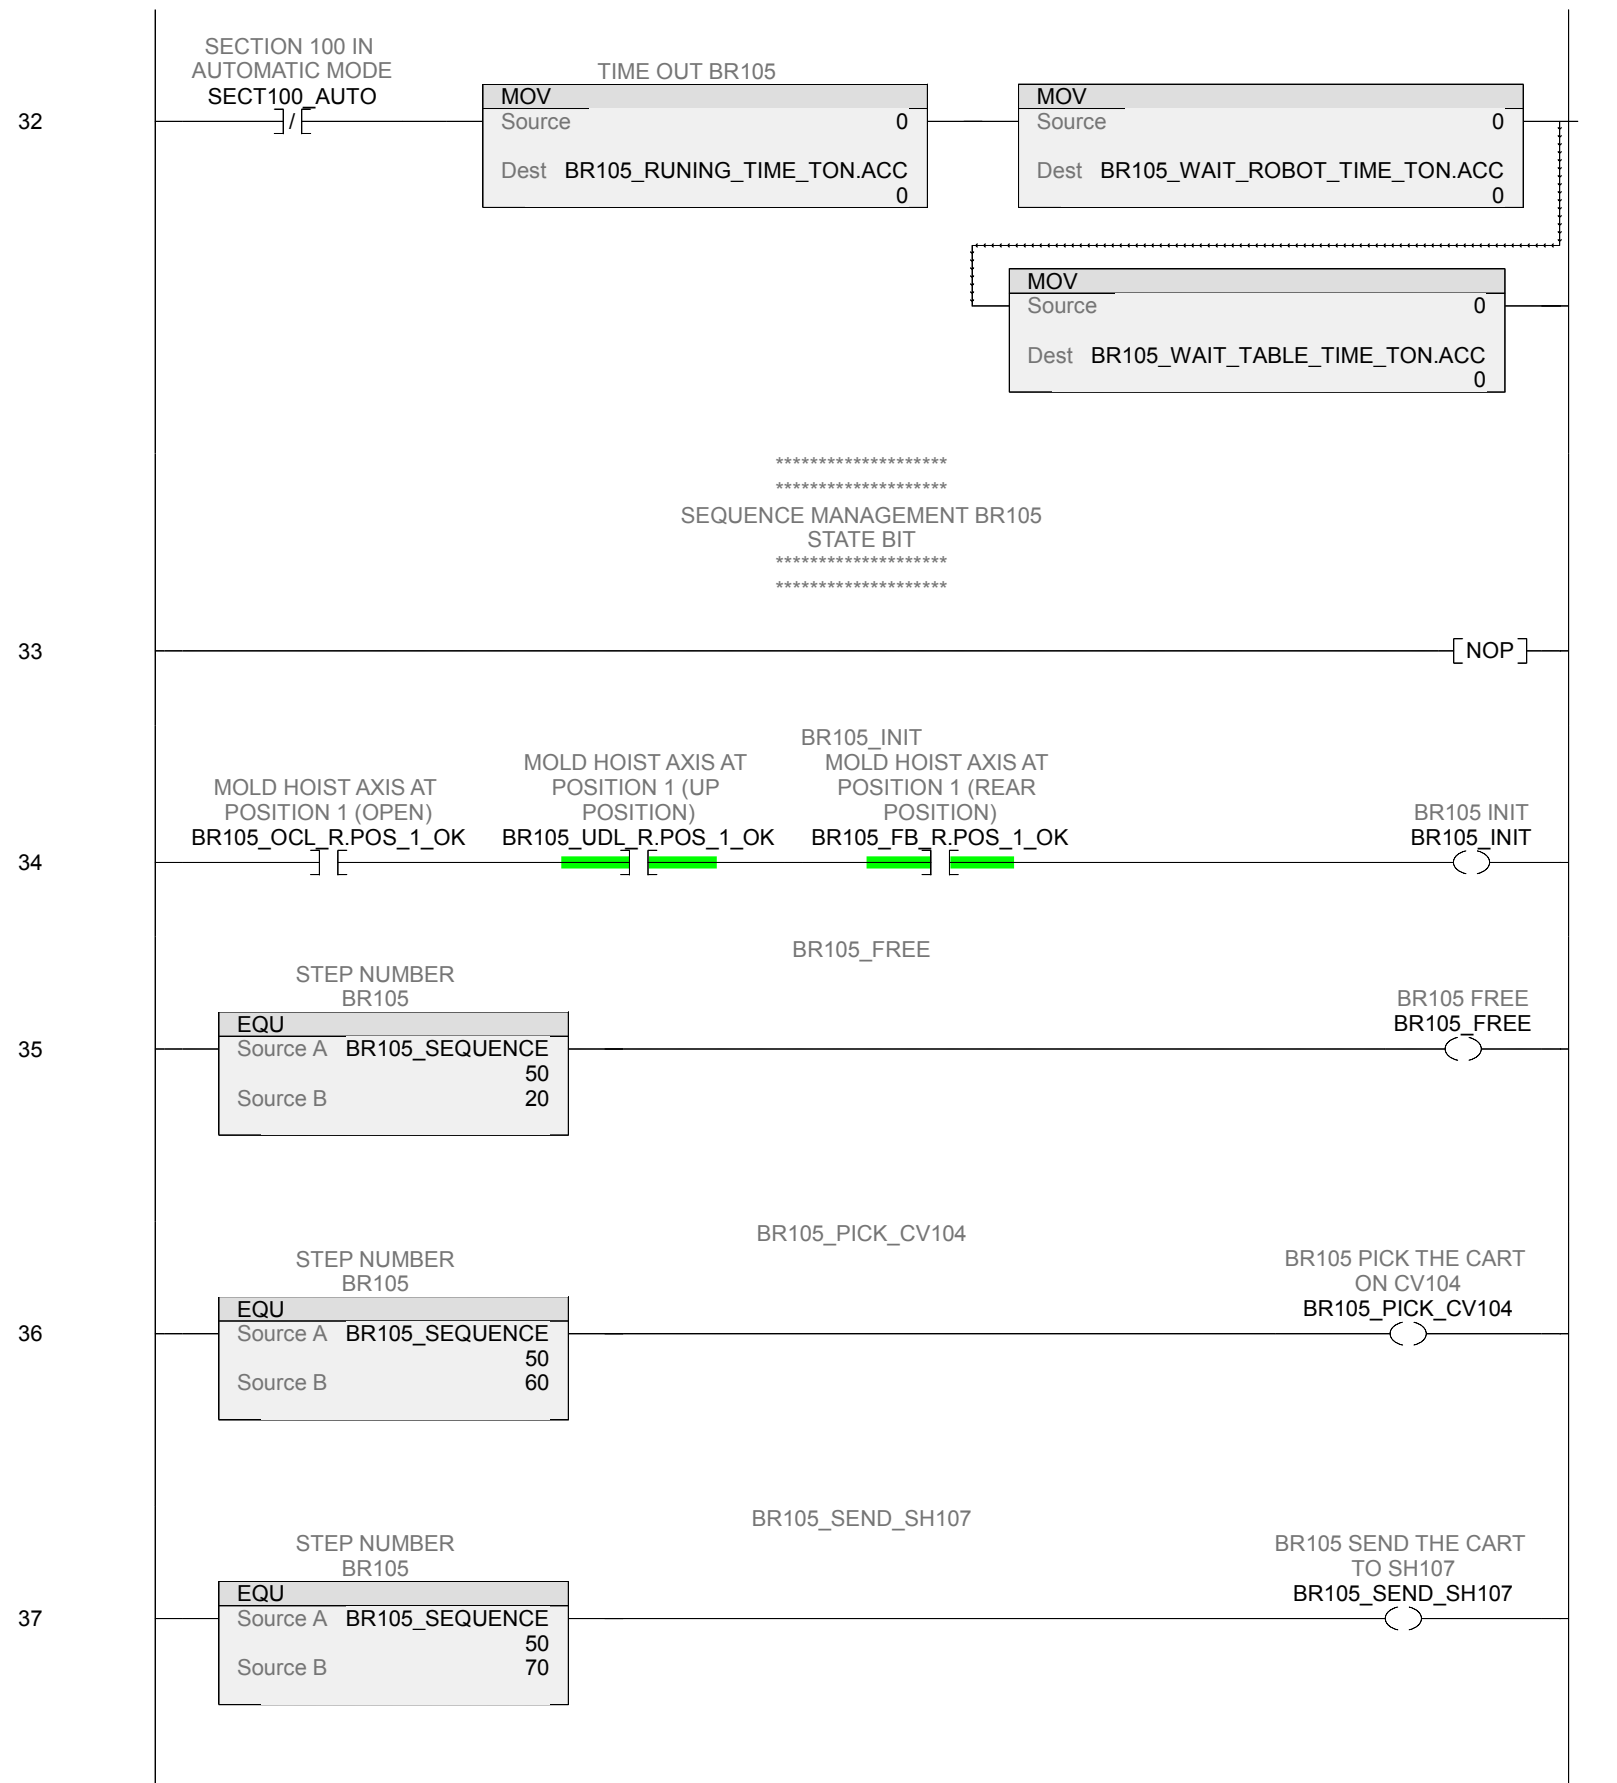


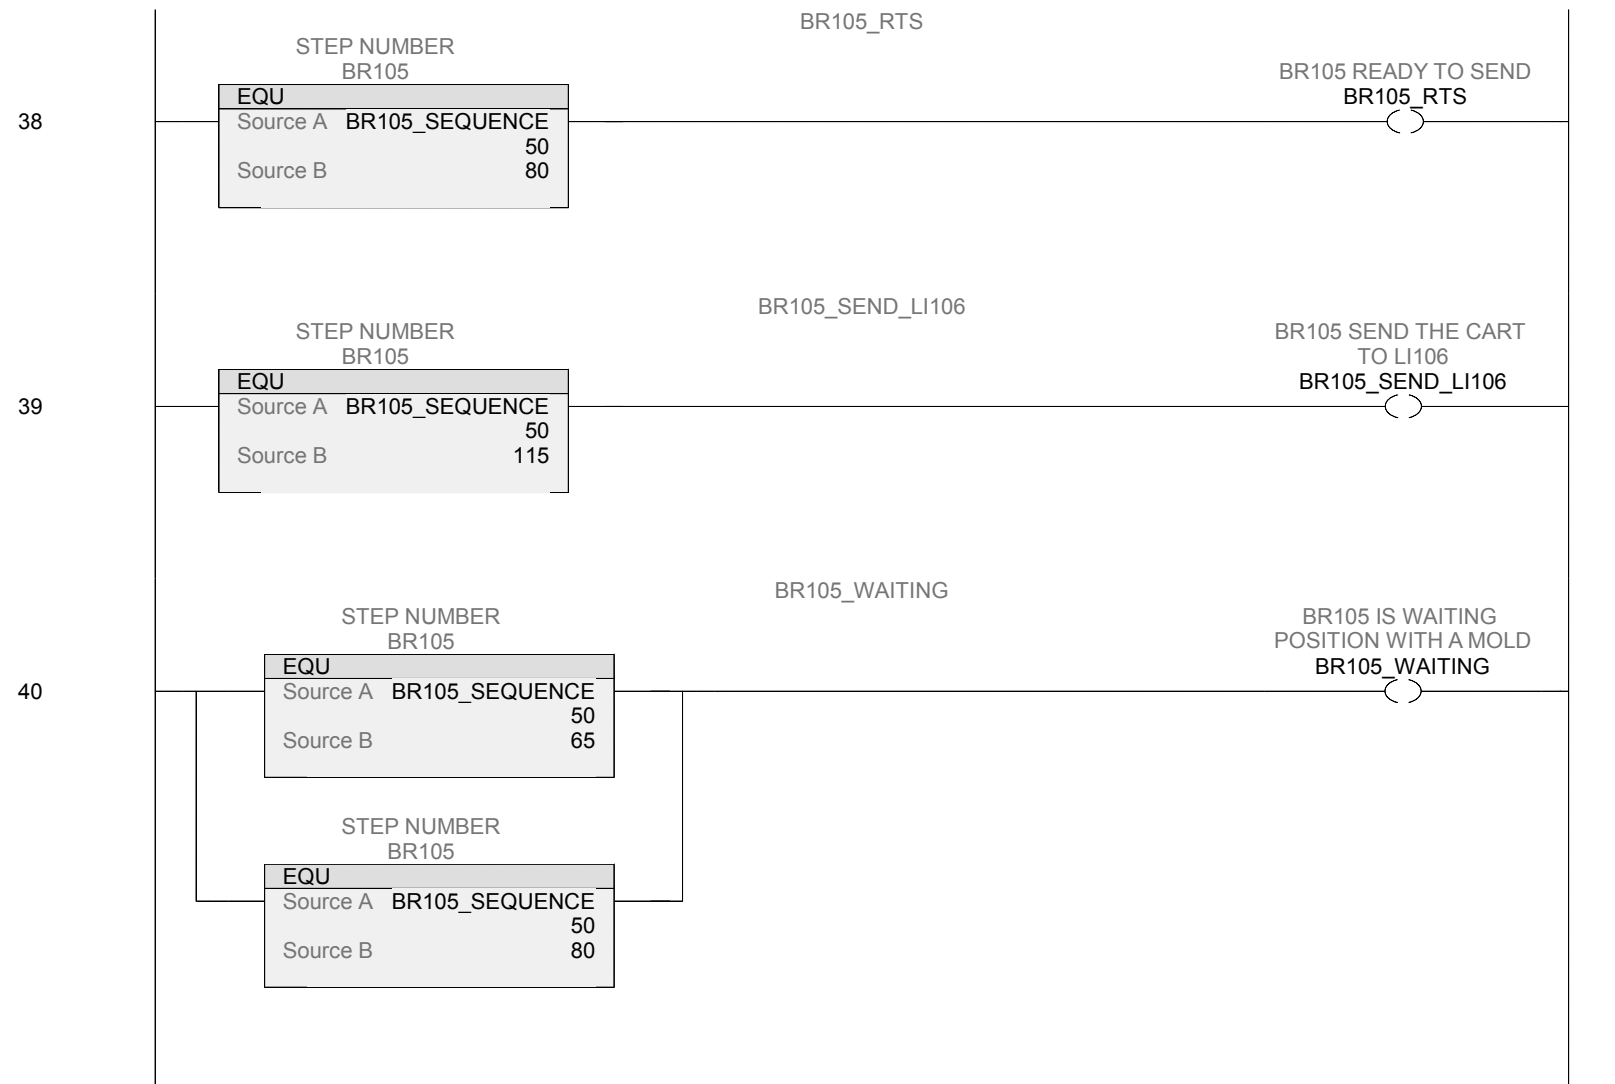



41

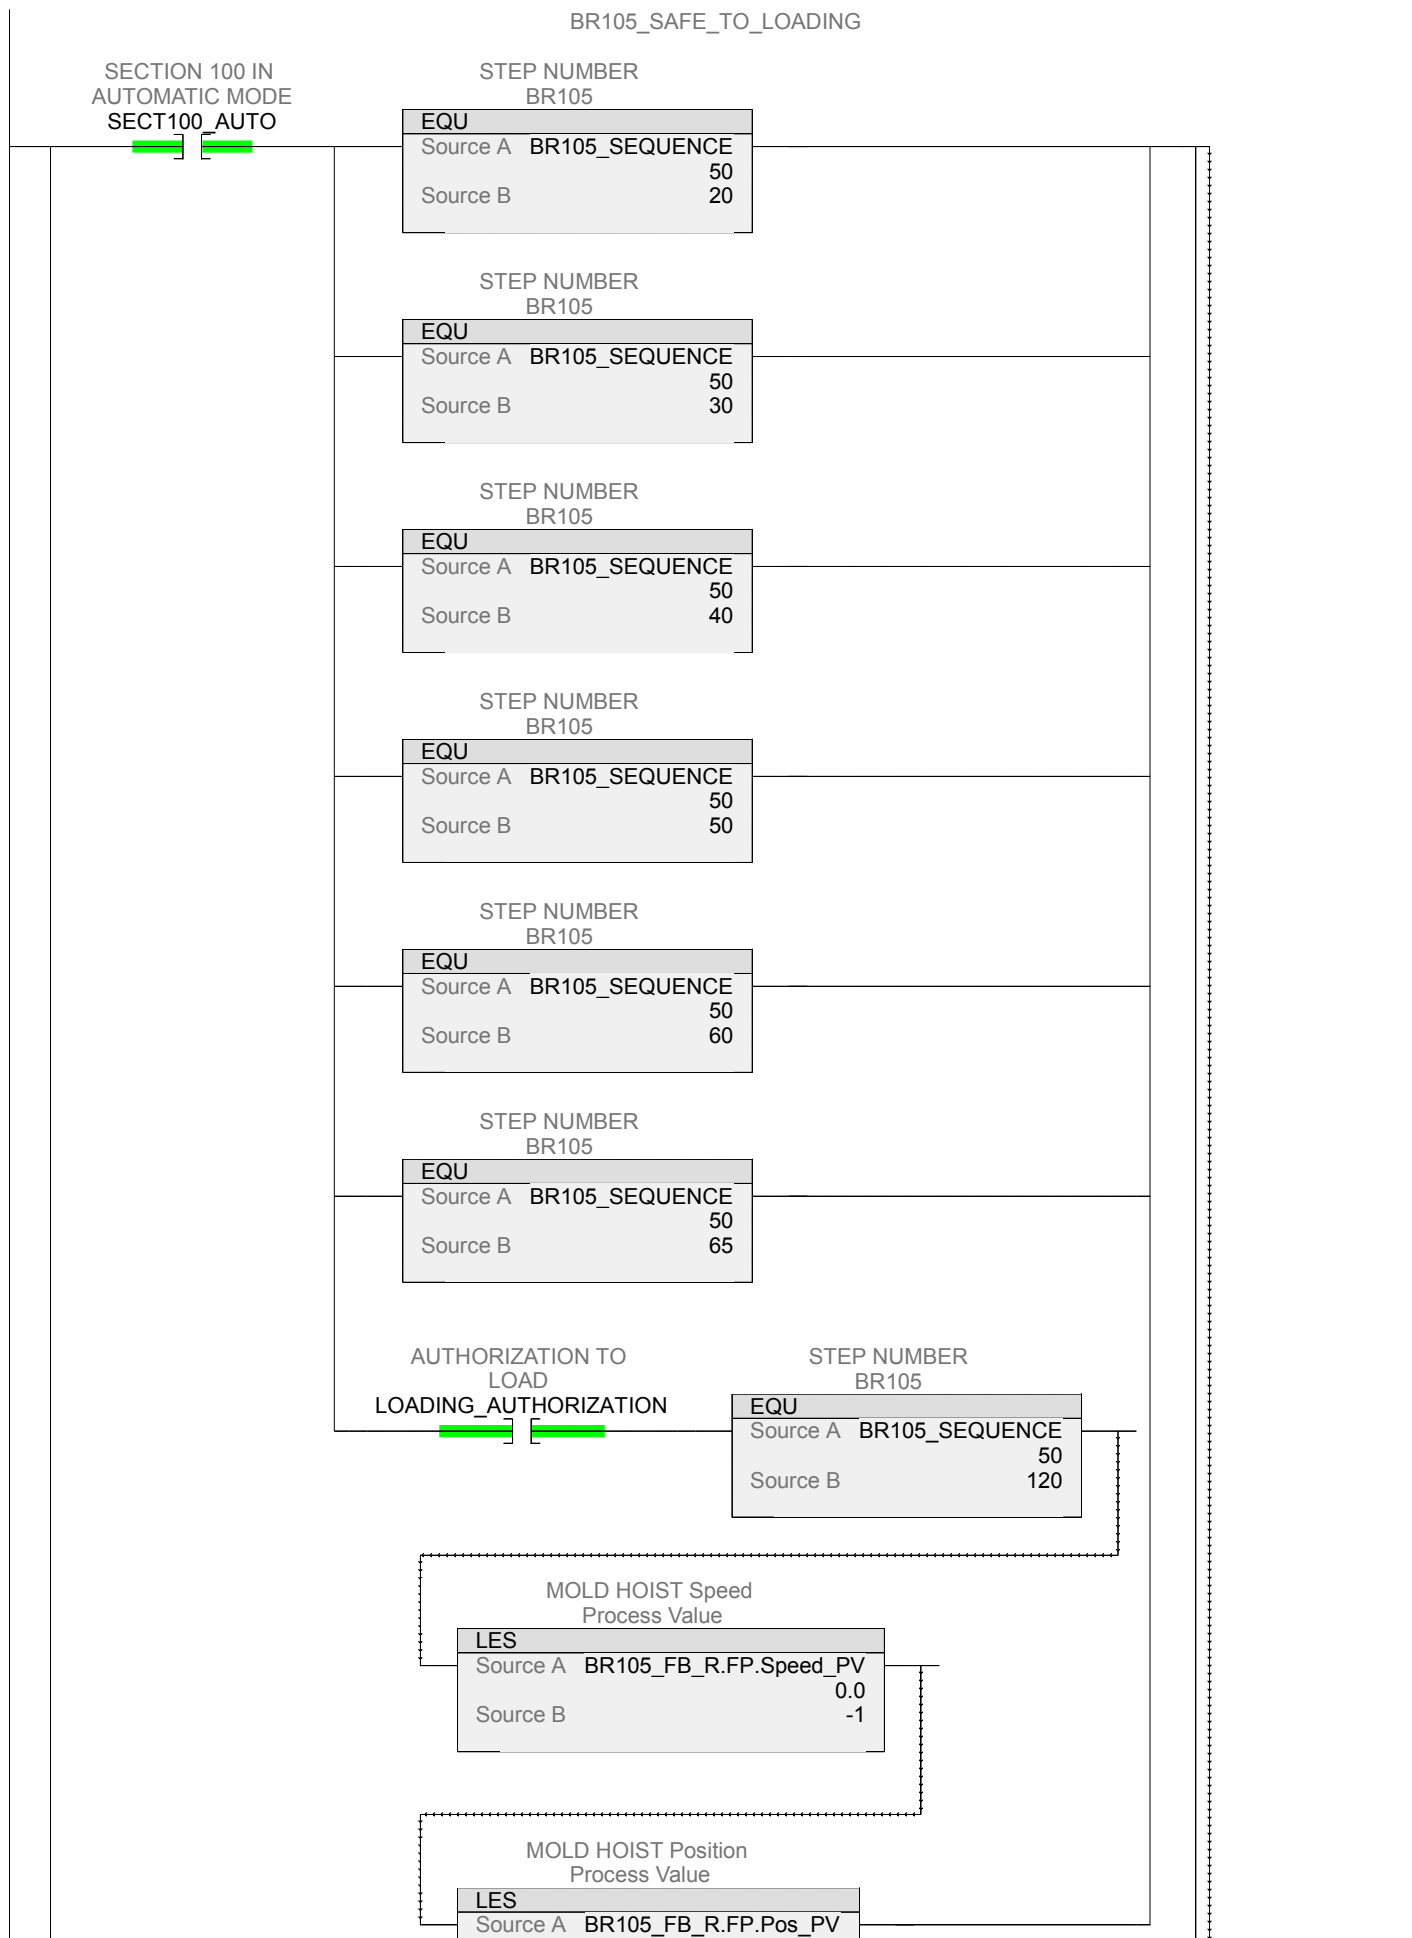

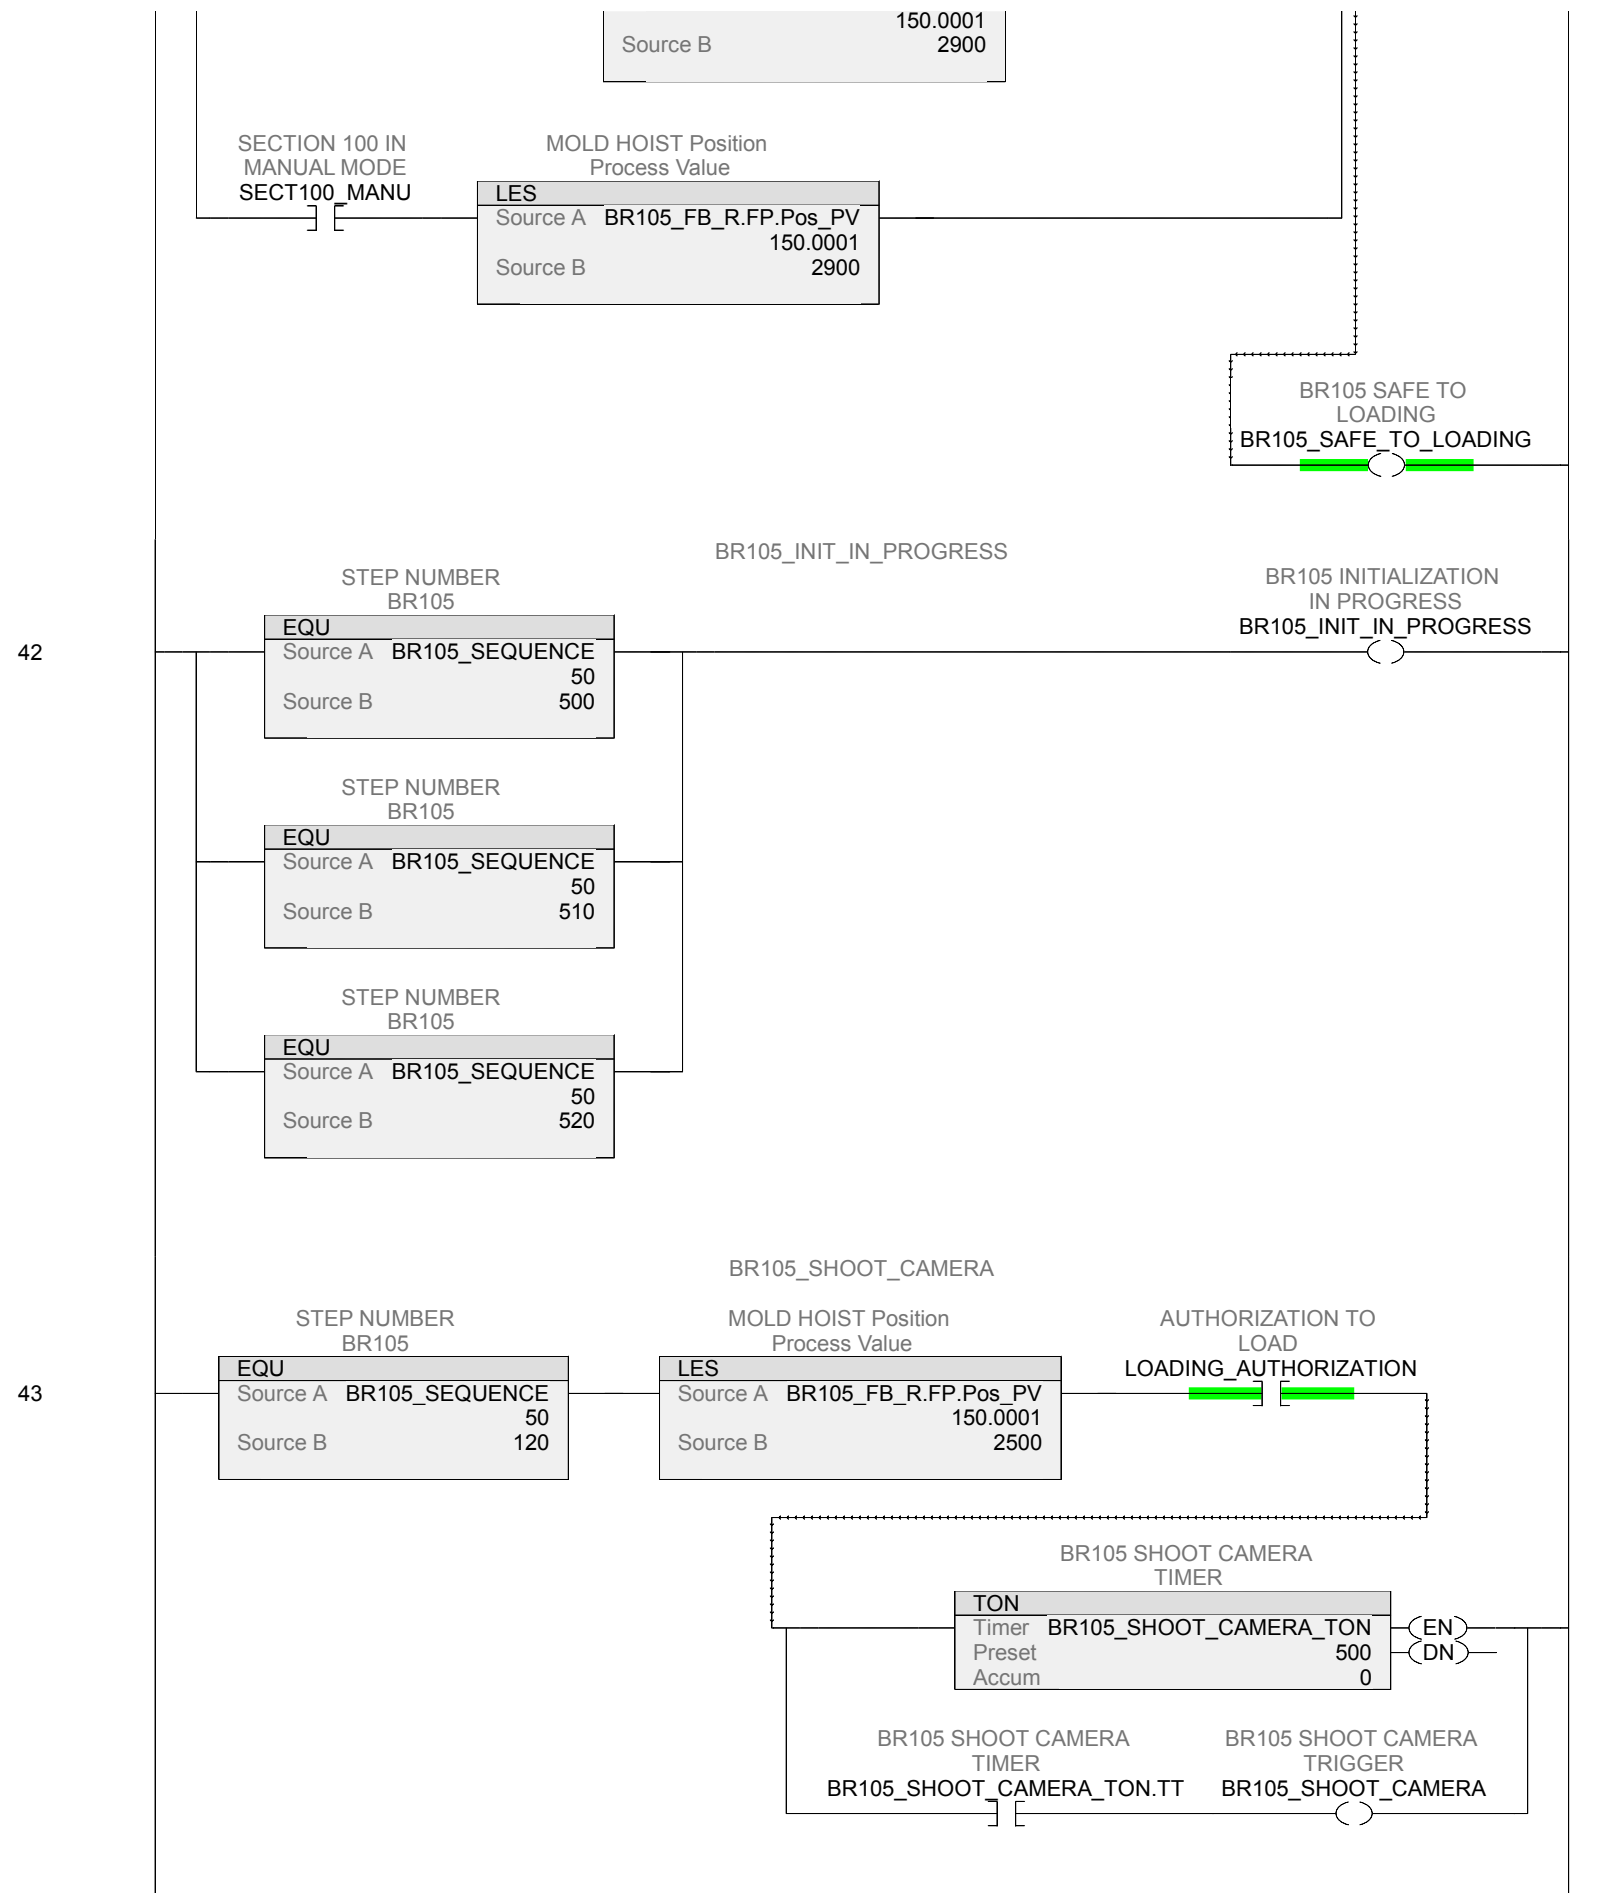

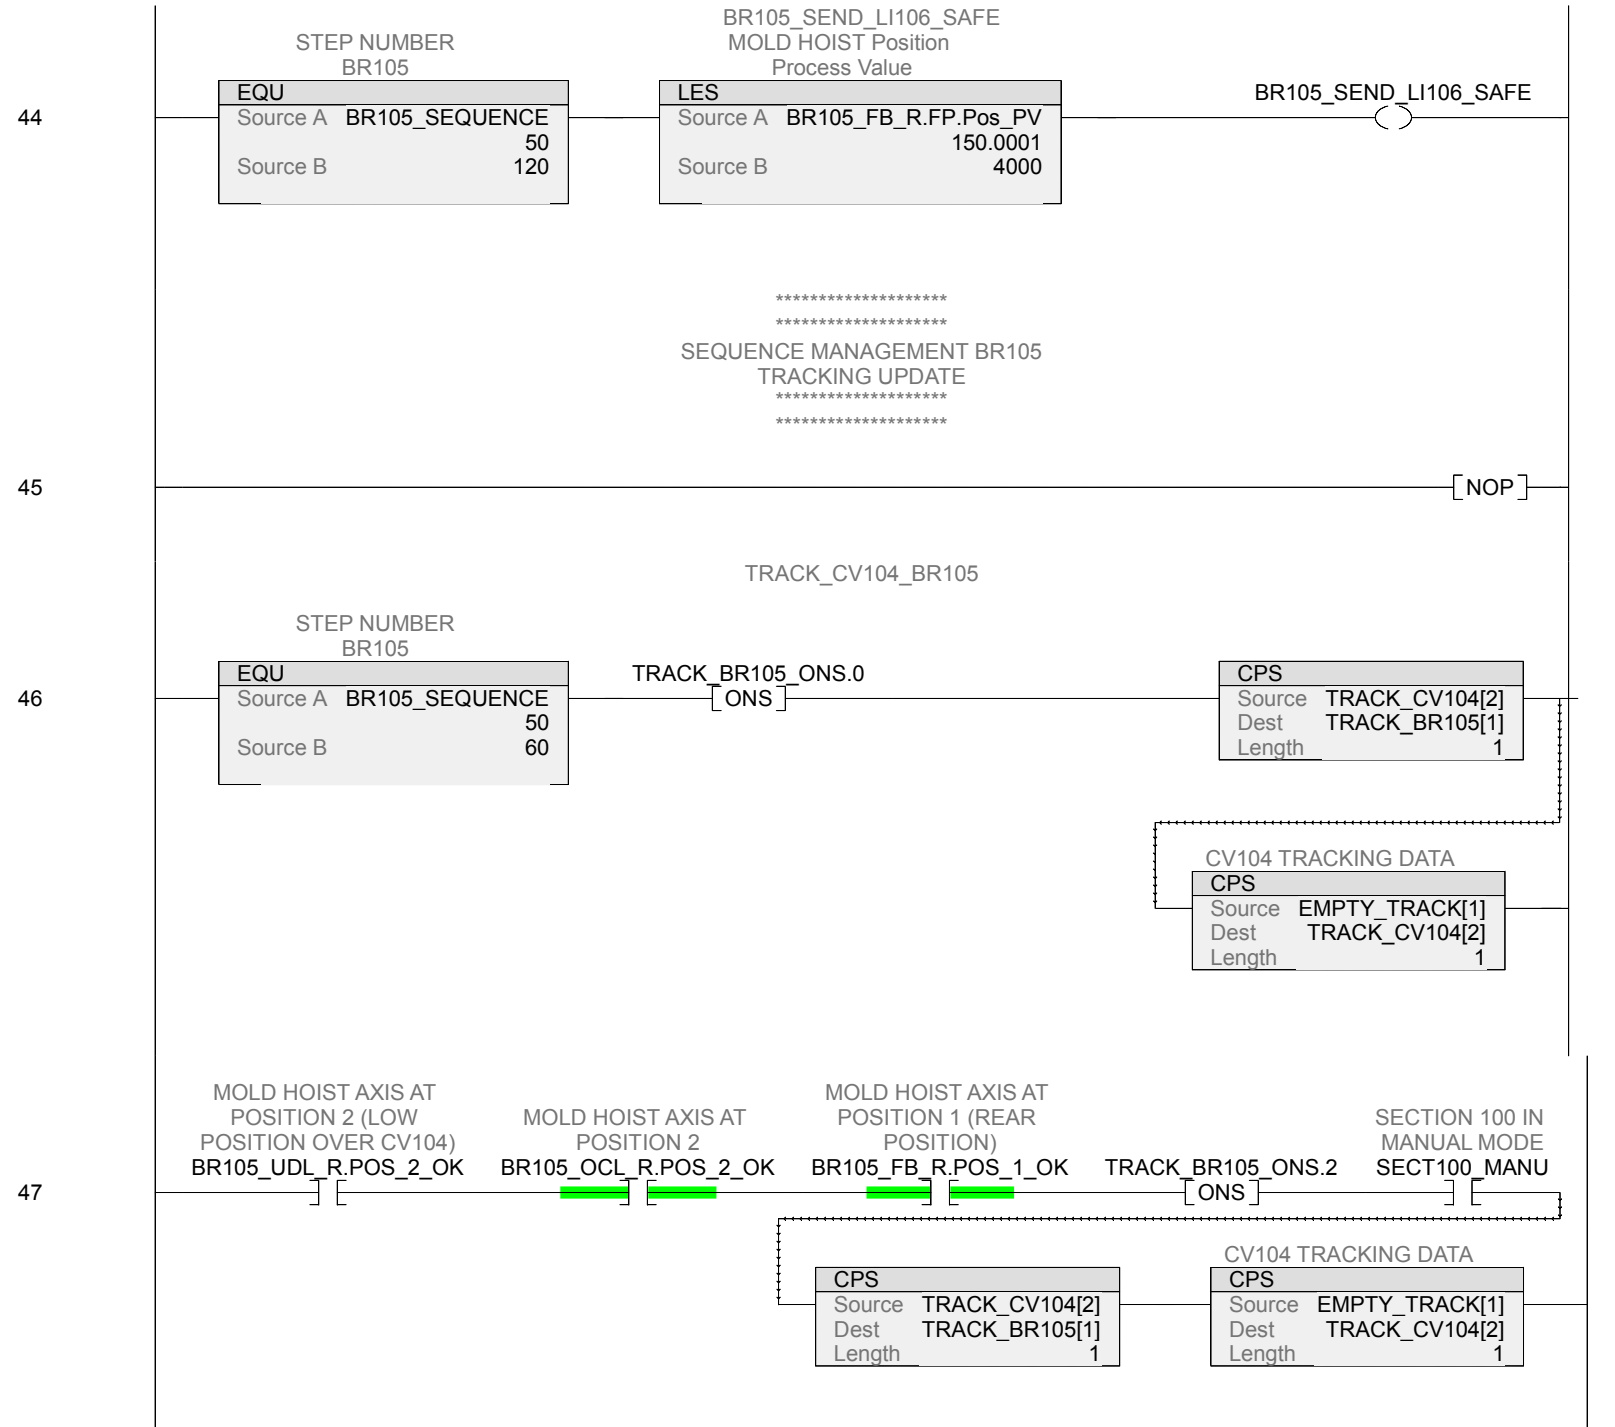

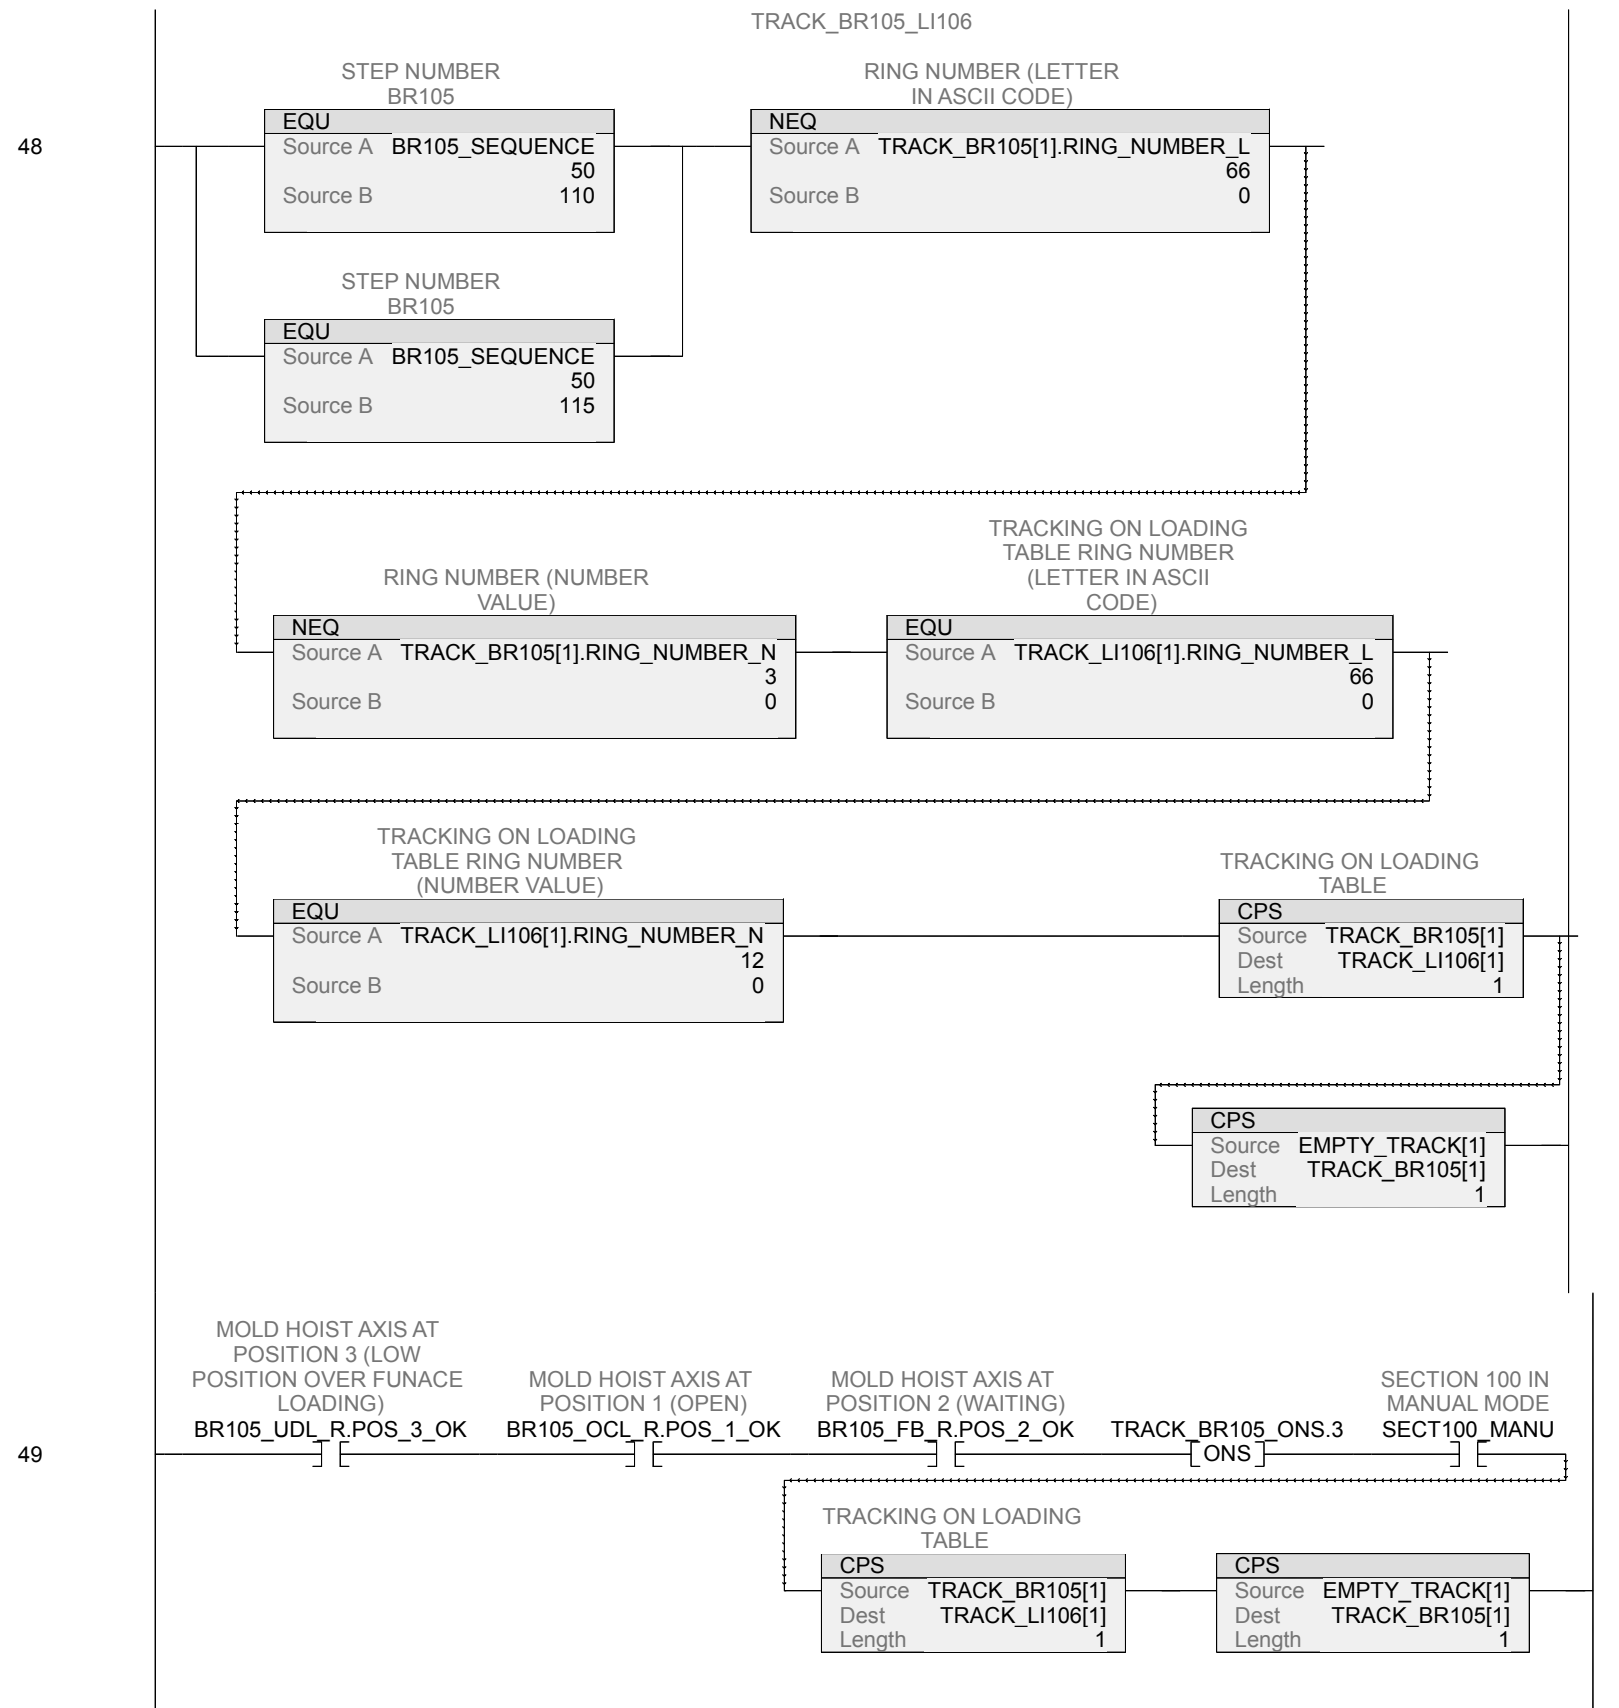

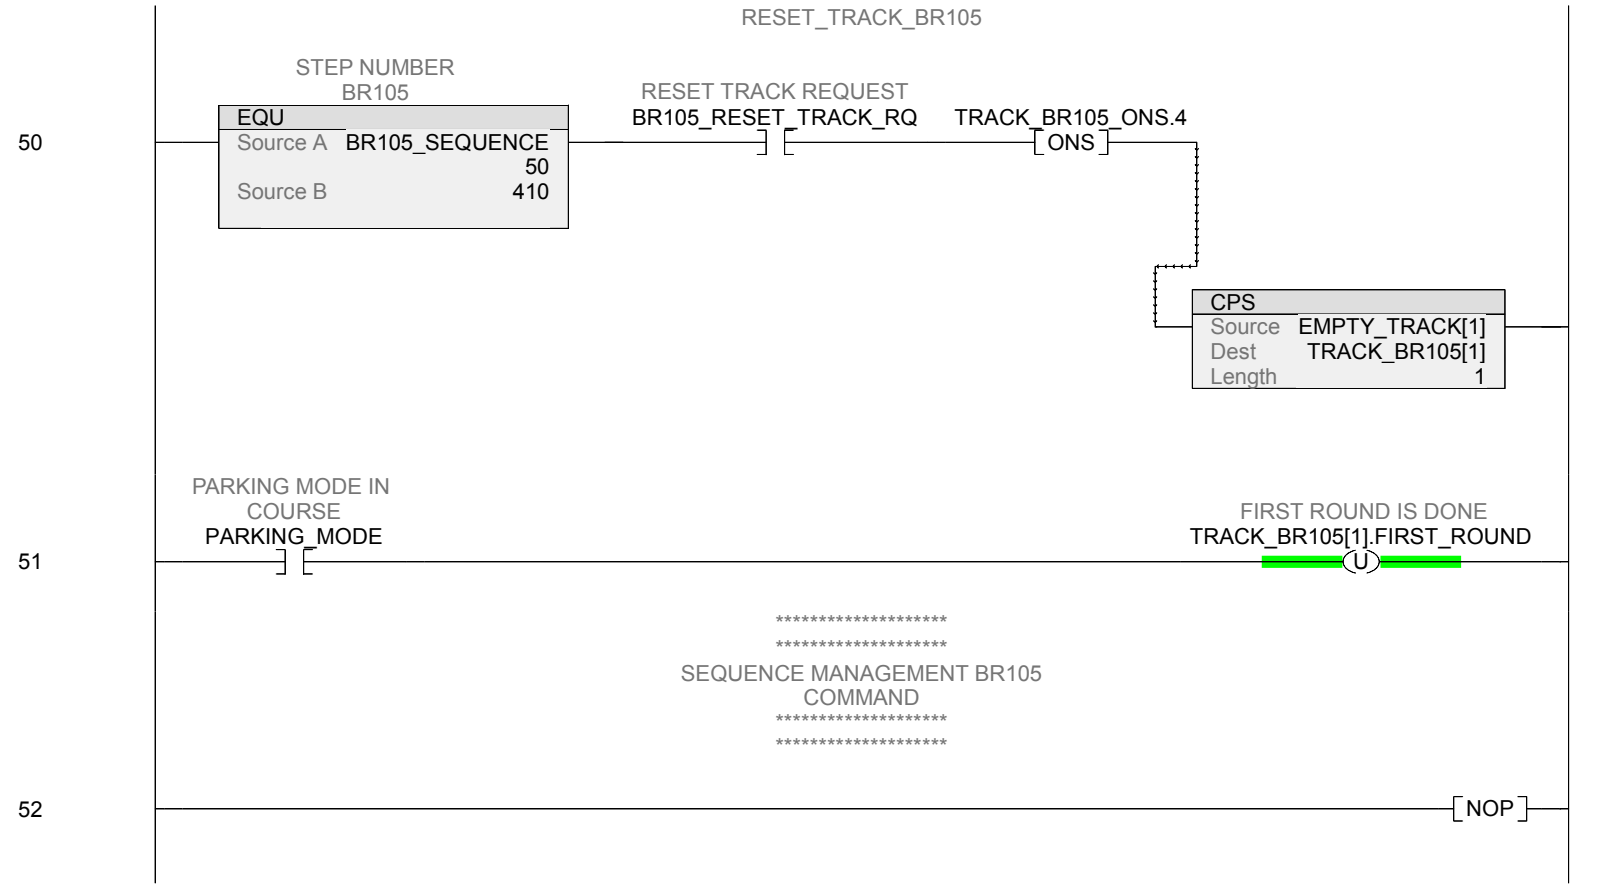



COMMAND BR105_OCL TO OPEN

SECTION 100 IN
AUTOMATIC MODE
SECT100_AUTOSTEP NUMBER
BR105BR105 INIT
BR105_INITMOLD HOIST AXIS AT
POSITION 1 (OPEN)
BR105_OCL_R.POS_1_OK

EQU	
Source A	BR105_SEQUENCE 50
Source B	0

RING NUMBER (LETTER
IN ASCII CODE)RING NUMBER (NUMBER
VALUE)

EQU	
Source A	TRACK_BR105[1].RING_NUMBER_L 66
Source B	0

EQU	
Source A	TRACK_BR105[1].RING_NUMB
Source B	

MOLD HOIST Position
Process Value

GRT	
Source A	BR105_OCL_R.FP.Pos_PV 175.00237
Source B	100

MOLD HOIST Position
Process Value

GRT	
Source A	BR105_OCR_R.FP.Pos_PV 174.96513
Source B	100

STEP NUMBER
BR105

EQU	
Source A	BR105_SEQUENCE 50
Source B	30

STEP NUMBER
BR105

EQU	
Source A	BR105_SEQUENCE 50
Source B	100

STEP NUMBER
BR105

EQU	
Source A	BR105_SEQUENCE 50
Source B	500

COMMAND BR1
OPE
BR105_OCL

