
## File Location

- User can specify the default locations of input and output files on the Configuration tab.
- 1. Clicking the Save button will update the latest assigned data in the tool.

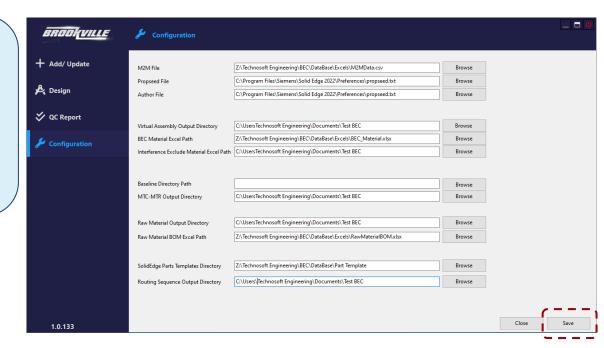

## File Location

- → Refer to the below table to understand the input database which is referred by each tool to get desired outputs
- → User/Admin can only update or add the values if required.
- → Any changes in database template and alignments may cause failure in processing

	BEC							Exclude			Routing
Tool	Material	M2M	Bend	Part	Prop	вом	Hedge	Material	MTC/MTR	RawMaterial	Sequence
	Data	Sheet	Table	Template	Seed	Template	Excel	Excel	Report	вом	Report
Virtual Structure							~				
<b>New Part Creation</b>	✓		>	✓							
Part File Validation	✓		~								
Assembly File Validation	✓		>								
Interference Report								✓			
KPI Report									✓		
MTC MTR Tool		~			~	~					
Raw Material Estimation						✓				V	
Routing Sequence Tool									✓		✓