



Soluna HV battery Active Balancing Instruction



DLG ENERGY


Soluna Battery Storage

DLG Energy Shanghai

2024.0

1, Open battery cover and Disassemble connection of bus positive and bus negative point.

Open battery cover and find the issue module ,disconnect the connecting pad between different modules.

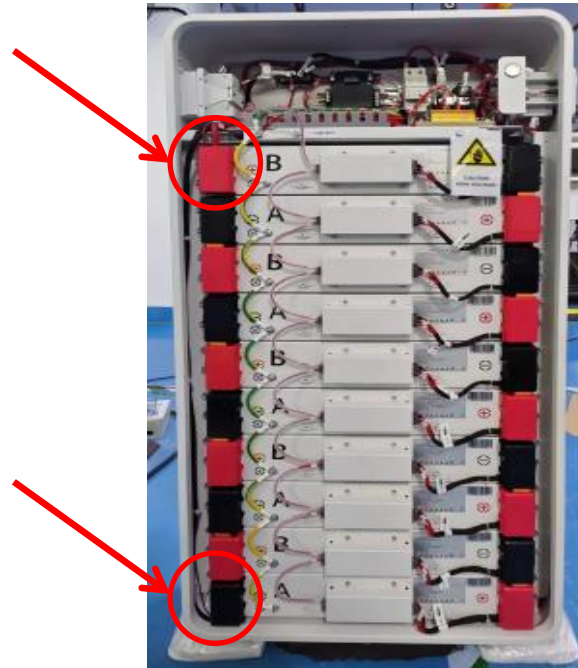

2, Take off the pad cover and disassemble the connecting plate.

For example we need to balance module A




Disassemble plate on both sides of module A
Disassemble plate on both sides of module A/B besides A. ★




3, Disconnect module connector and connect to the balancing board.

Active balancing board

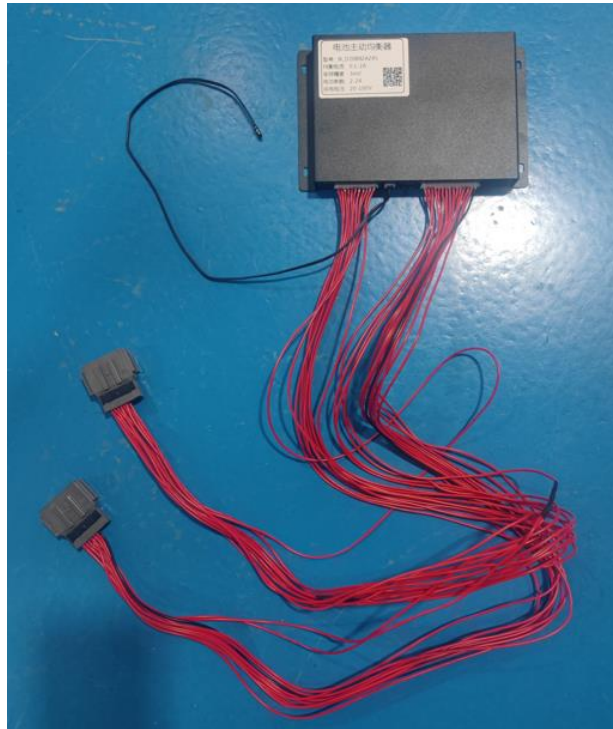

2 connector connect 2 modules

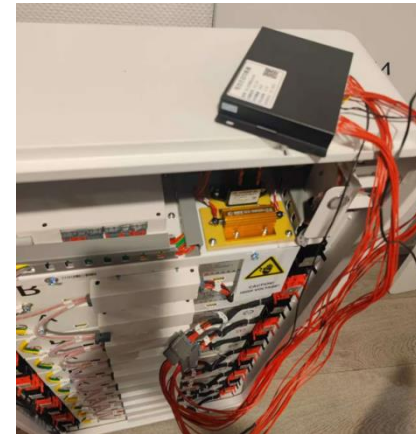


Or take out two modules




4, Download “极空BMS”app

Download app

Before start the app, you must open the position and bluetooth function in your phone, change language first.


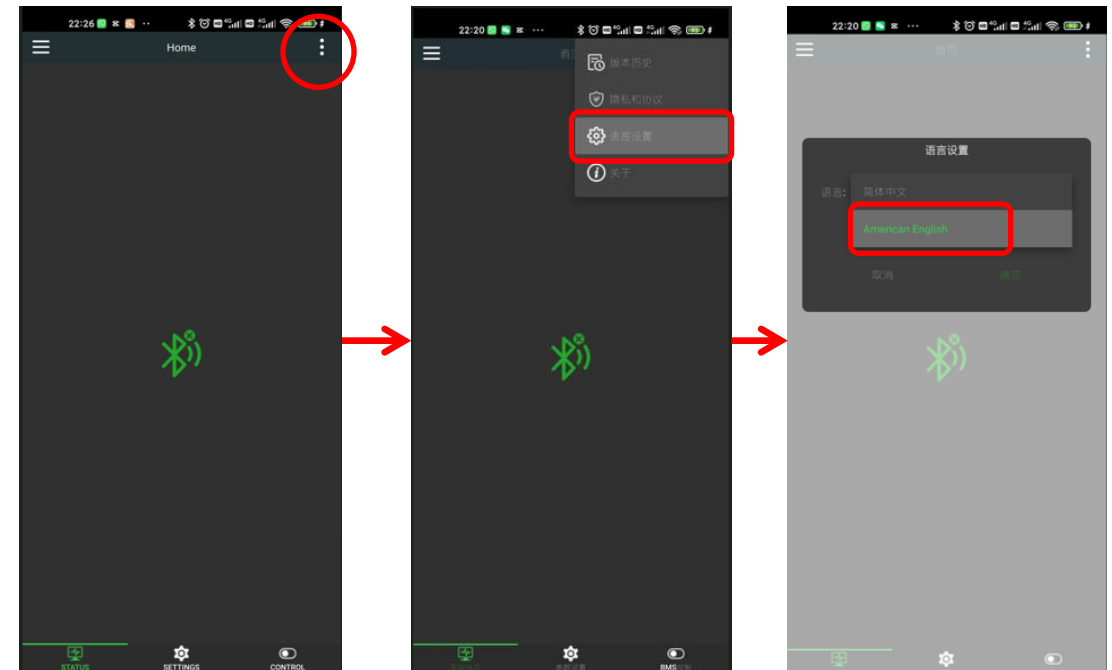


5, Connect Bluetooth with balancing board.

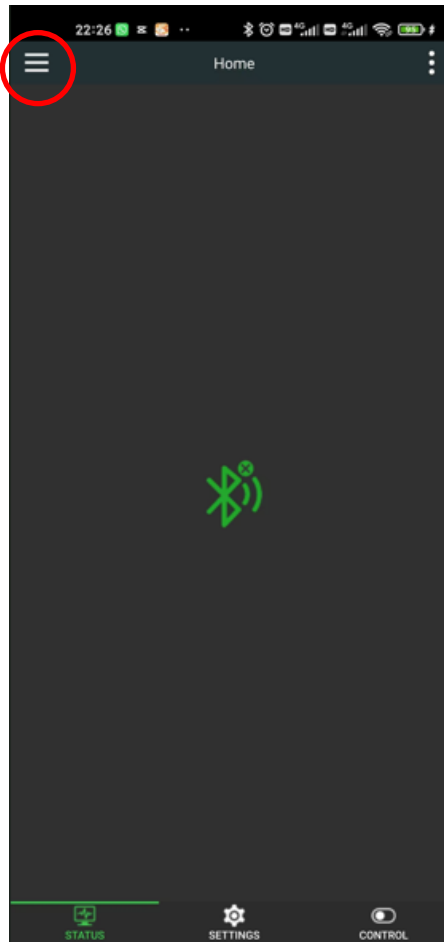


Scan for bluetooth device and connect it, need password in first connection, password:1234

6, Check cells' status and Set up parameters, make sure balance switch is opened.

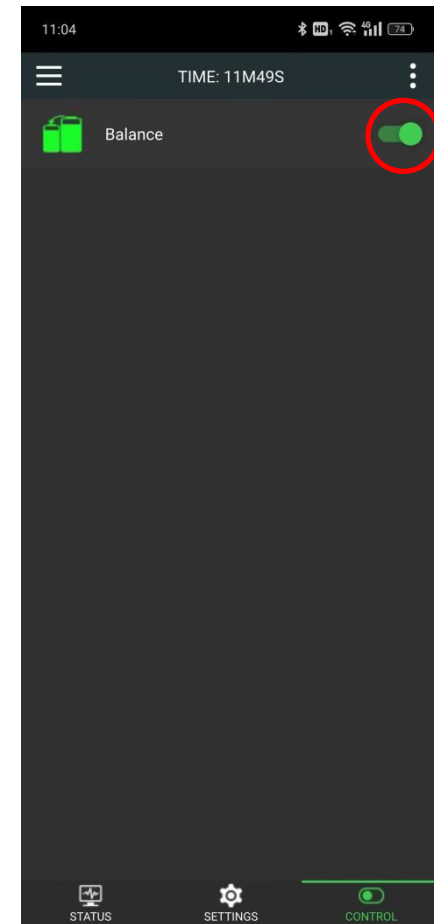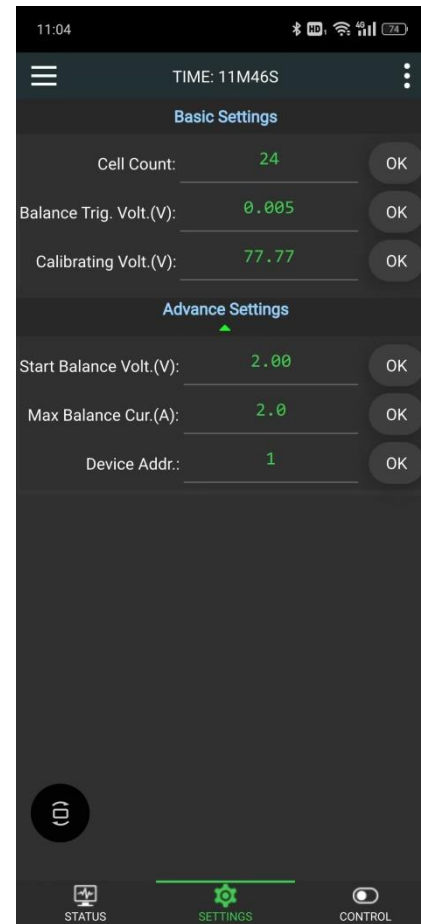

Check total amount of cells in status's page first, then go to setting page to set up balance trigger voltage by 0.005V, finally go to control page check whether balance switch is opened.

7, After several hours balance, when all cells' voltage differences lower than 0.005V and balance current will be 0 ampere, it means balance finished.

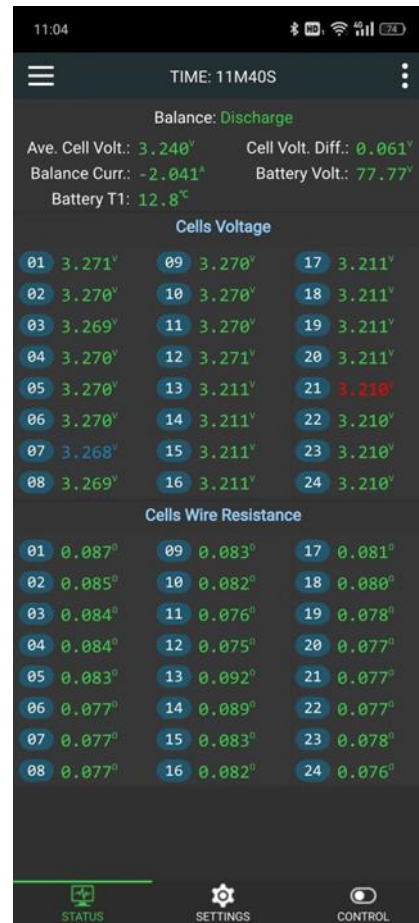

Thank you!

SOLUNA™

www.solunabattery.com

HAVE QUESTIONS? GIVE US A CALL: +86-21-57475835
OR E-MAIL: defu.xu@solunabattery.com
No. 3492 JINQIAN ROAD, SHANGHAI, CHINA 201406