



Gearbox Assembly instructions

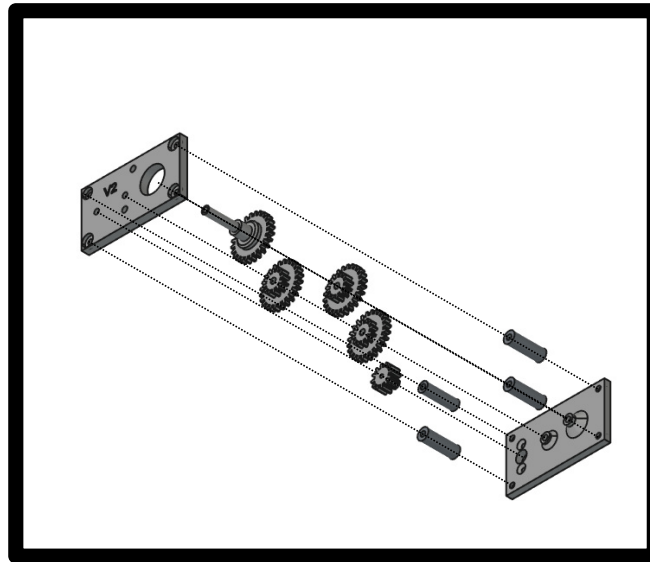


Part list

A




B

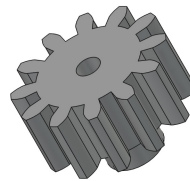


C




D (2x)

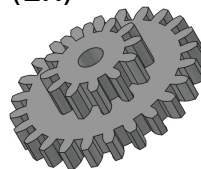


E

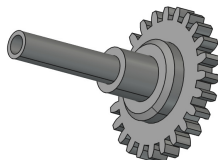


F

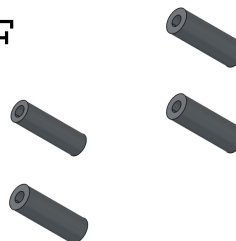

G

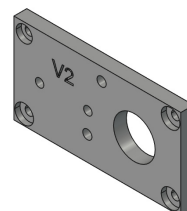


Step 1

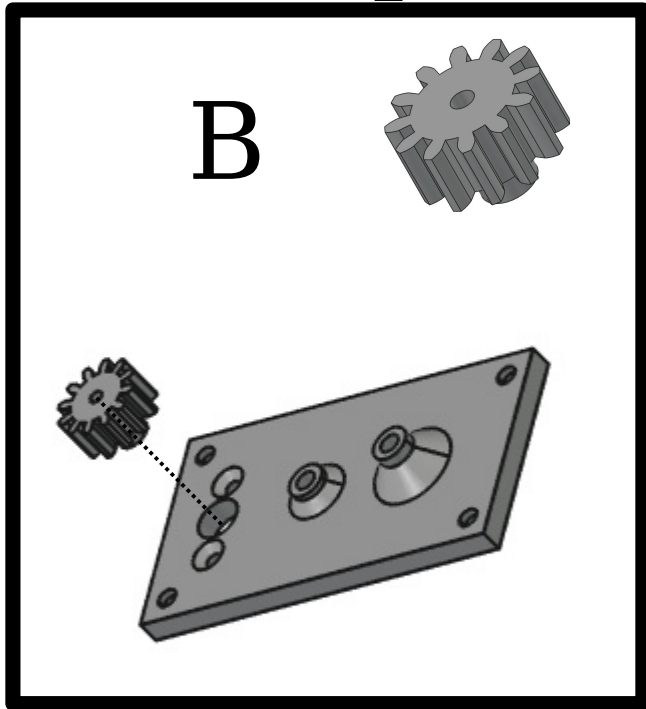

Attach the driving gear (B) to the lowest hole of the base plate


Step 2

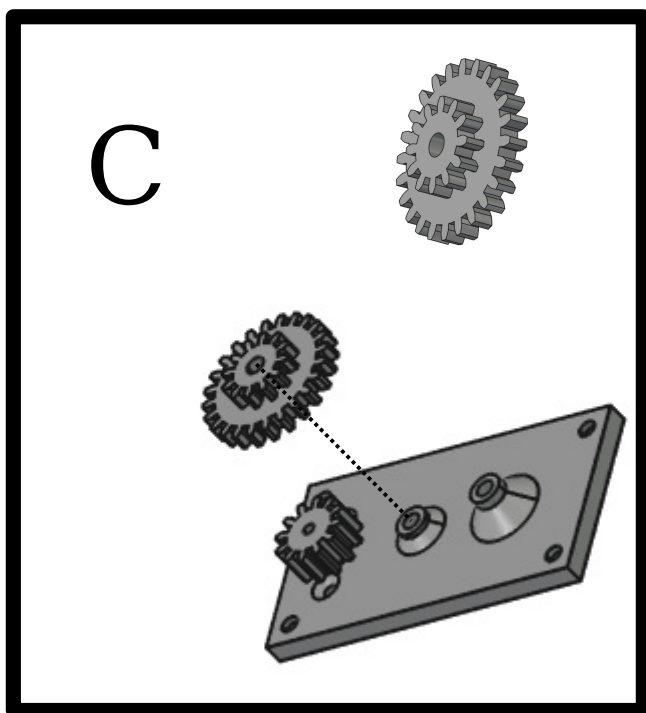

Attach the flatter gear (C) to the middle hole locking the outer gear teeth in with the driving gear

Step 3


D

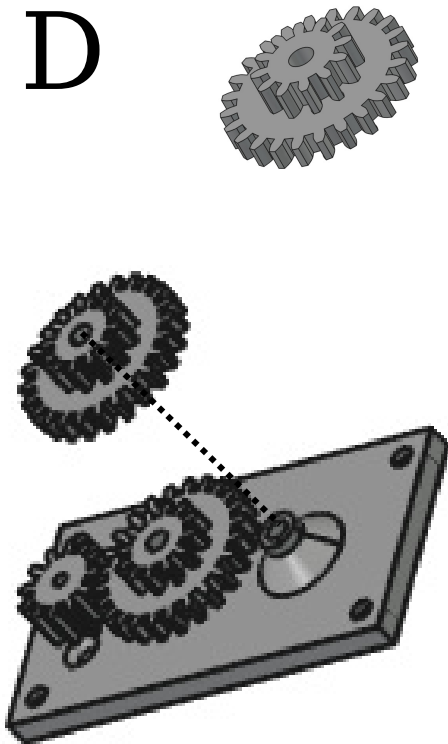

Attach one of the thicker gears (D) onto the leftover hole, locking its outer teeth in with the inner teeth from the previous gear


Step 4

D

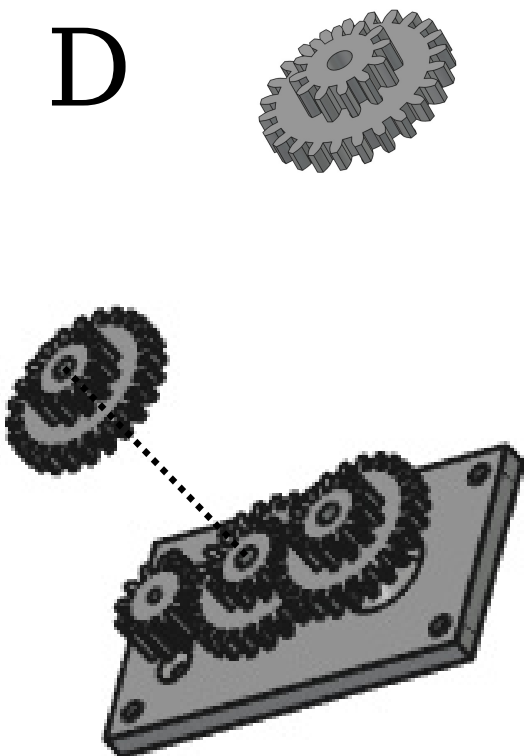


Attach the second thicker gear (D) on the middle gear locking its outer teeth with the inner teeth from the previous gear

Step 5

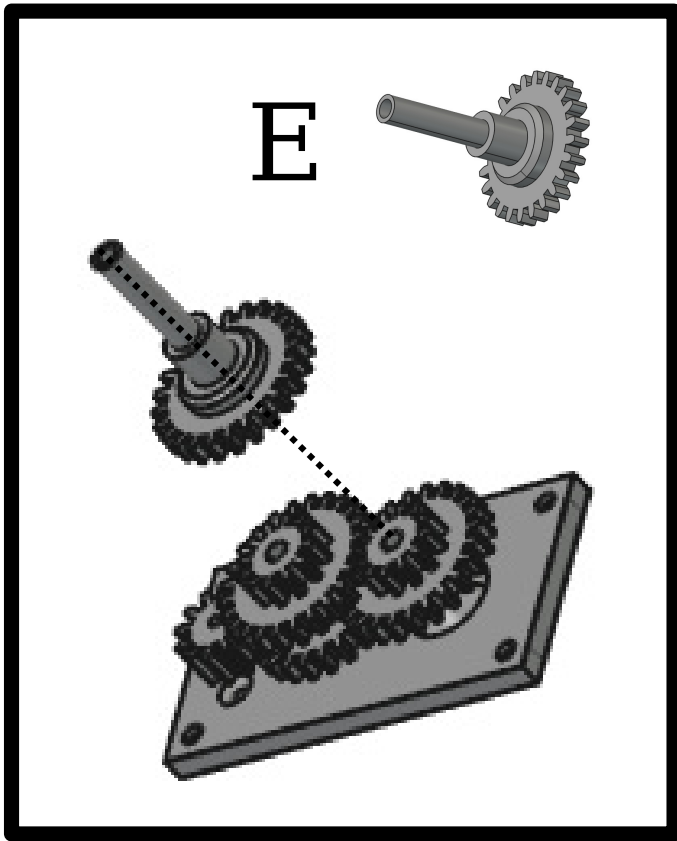

Stack the engaging gear (E) on the right gear locking its teeth with the inner teeth of the previous gear



Step 6

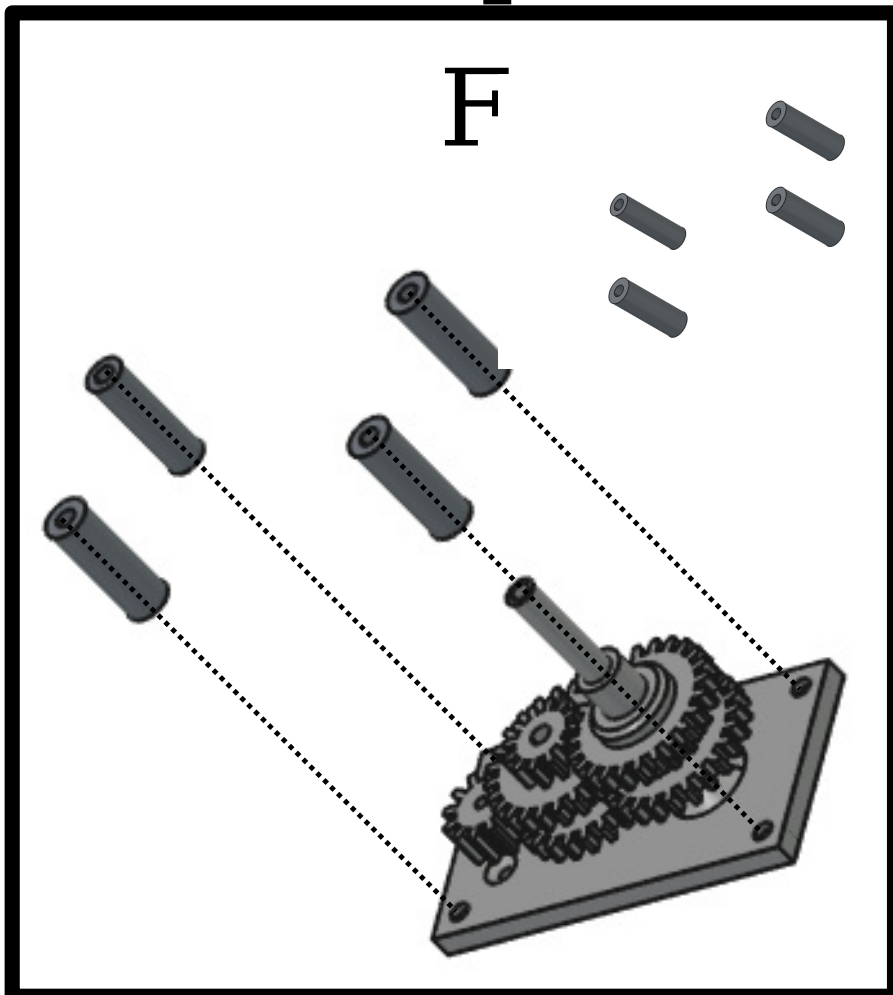

Place the pillars on the corners

Step 7

G

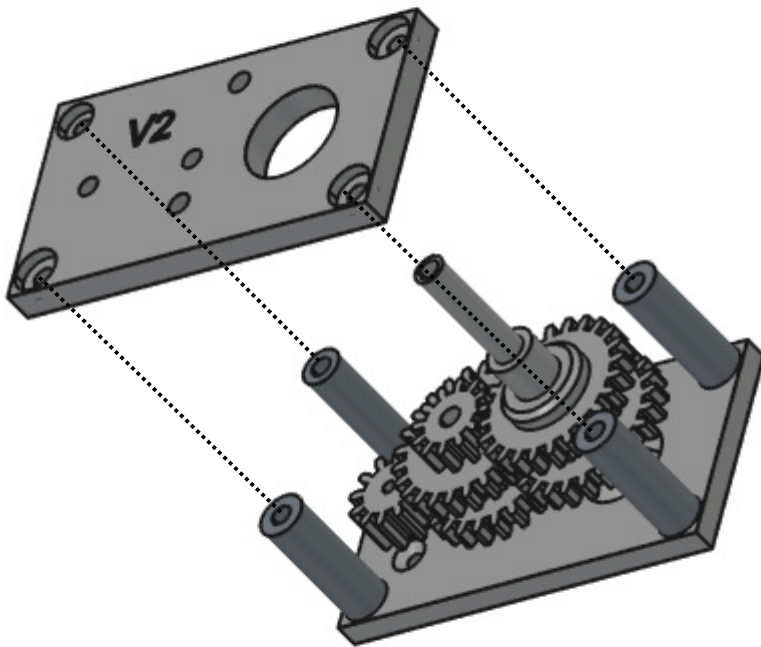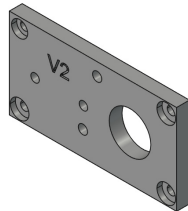

Place the top plate (G) on the pillars and keep all the gears and pillars in place with screws