


Bracing

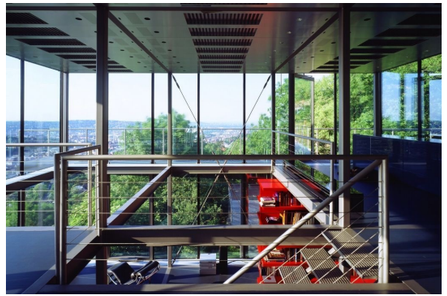


House R128

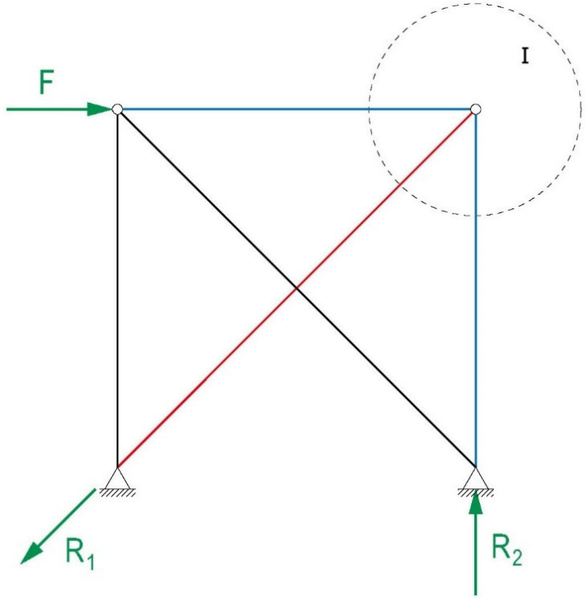

Bracing equilibrium

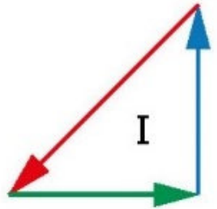

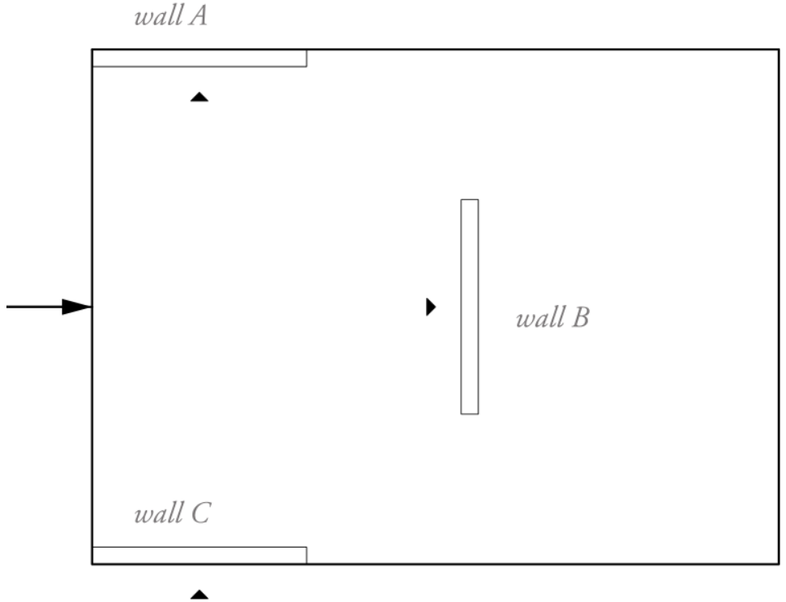

Horizontal load transfer

Transfer the horizontal load through the walls to the supports.