


## 前舱线束(483QB+MT、4G69)

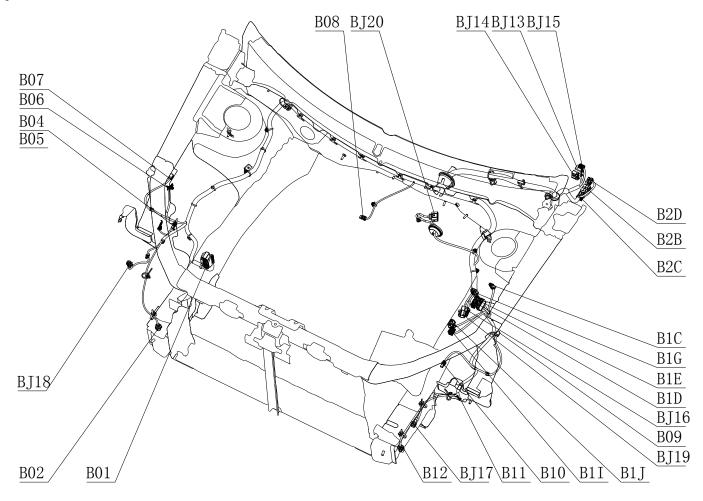



前舱线束									
		名 称							
序号	零件编号	Description		数量	备 注				
No.	Part No.	中 文	英文	Qty	Rem				
		Chinese	English						
B1C	6098.0226	接前舱配电盒C							
DID	DJ7101Y.4.8.21	接前舱配电盒 D							
B1D	/20								
B1E	6098.0255	接前舱配电盒E							
B1G	6098.1104	接前舱配电盒G							
B1I	6098.0249	接前舱配电盒I							
B1J	HD2.5F	接前舱配电盒J							
B2B	6098.3569	接仪表板配电盒B							
B2C	6098.2786	接仪表板配电盒C							
B2D	6098.0156	接仪表板配电盒 D							
B01	1928D01061	接 ABS ECU							
B02	174352.2	接右前碰撞传感器							
B04	6189.0130	接右前大灯调节器							
B05		搭铁							
B06		搭铁							
B07	1.967644.1	接右前轮速传感器							
B08	6189.0322	接制动液位开关							

前舱线束									
序号	零件编号	名 称 Description		数量	备 注				
No.	Part No.	中 文	英 文	Qty	Rem				
		Chinese	English						
B09	1.967644.1	接左前轮速传感器							
B10	6189.0130	接左前大灯调节器							
B11		搭铁							
B12	174352.2	接左前碰撞传感器		1					
ВЈ13	BYDJ7241.1.0. 21	接仪表板线束Ⅰ		1					
BJ14	HD2.5F	接仪表板线束 I		4					
BJ15	174922.7	接仪表板线束 I		2					
BJ16	WPC02FMGY.	接发动机线束							
BJ17	DJ70218Y.2.2. 11 总成	接左前探头配线							
ВЈ18	DJ70218Y.2.2. 11 总成	接右前探头配线							
BJ19	174984.2	接前横梁线束							
BJ20	638245.1	接前雨刮电机							
M13		接 TV 模块							



