



-

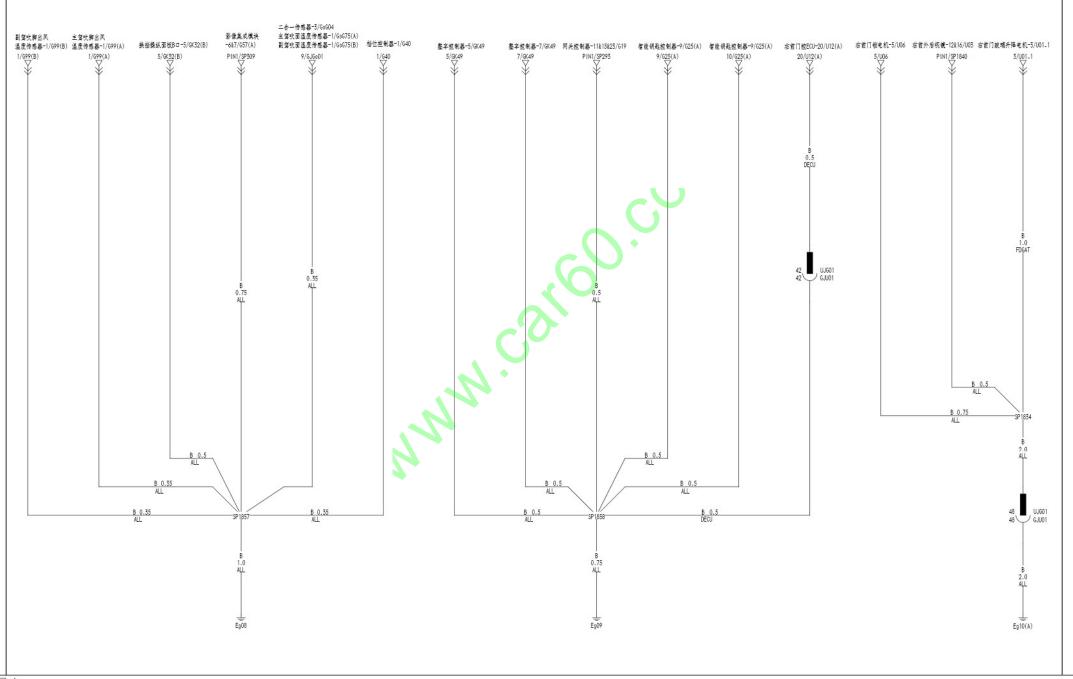

.

## 接地分配

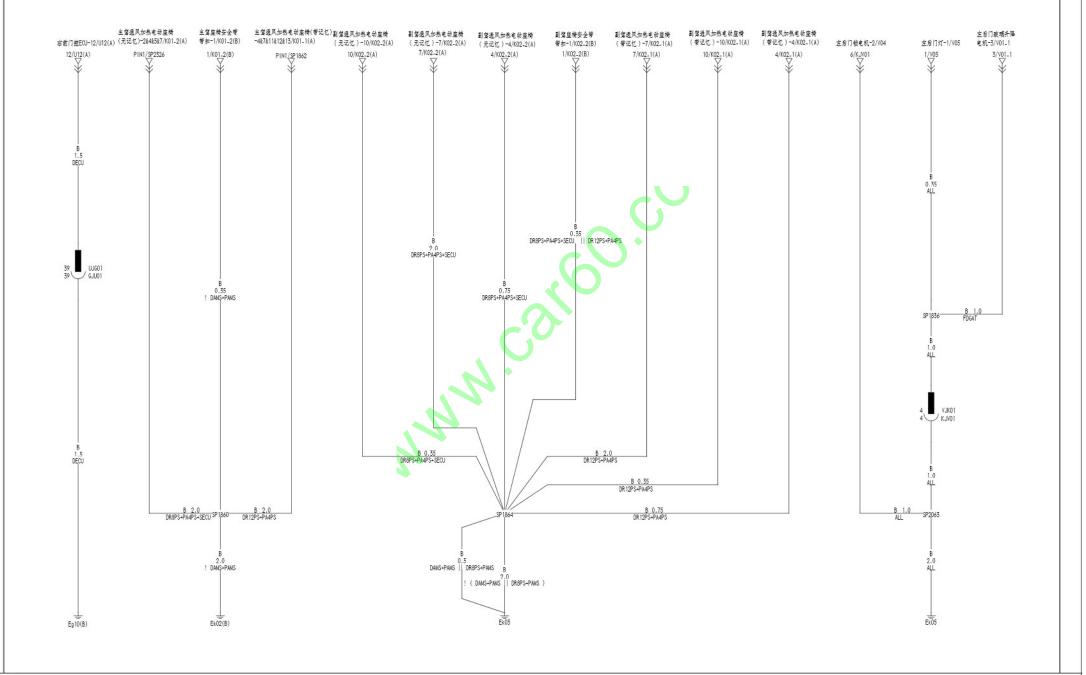


接地分配 后排左中侧安全带来泵 右后门灯-1/M05 右后门玻璃升降电机-3/M01-1 后排中右侧安全带扣-3/K68(B) 后排左侧安全带扣-1/K68(A) 报警传感器-3/K68(C) 报警传感器-2/K68(D) 直流充电互星照明灯-1/K349(A) 脸压模块-2/K35 直流充电插座-1/K853(A) 左后鄉照灯-2/YoK21(A) 左中尾灯-5/YK19-1(A) 右后鄉照灯-2/YoK21(B) 高位制砂灯-1/YK20 右中尾灯-5/YK19-1(B) YJK02 KJY02 B 0.35 ALL SP2328

右后门锁电机-5/W04

B 0.35 ALL SP1837

4 WJK01 4 KJW01

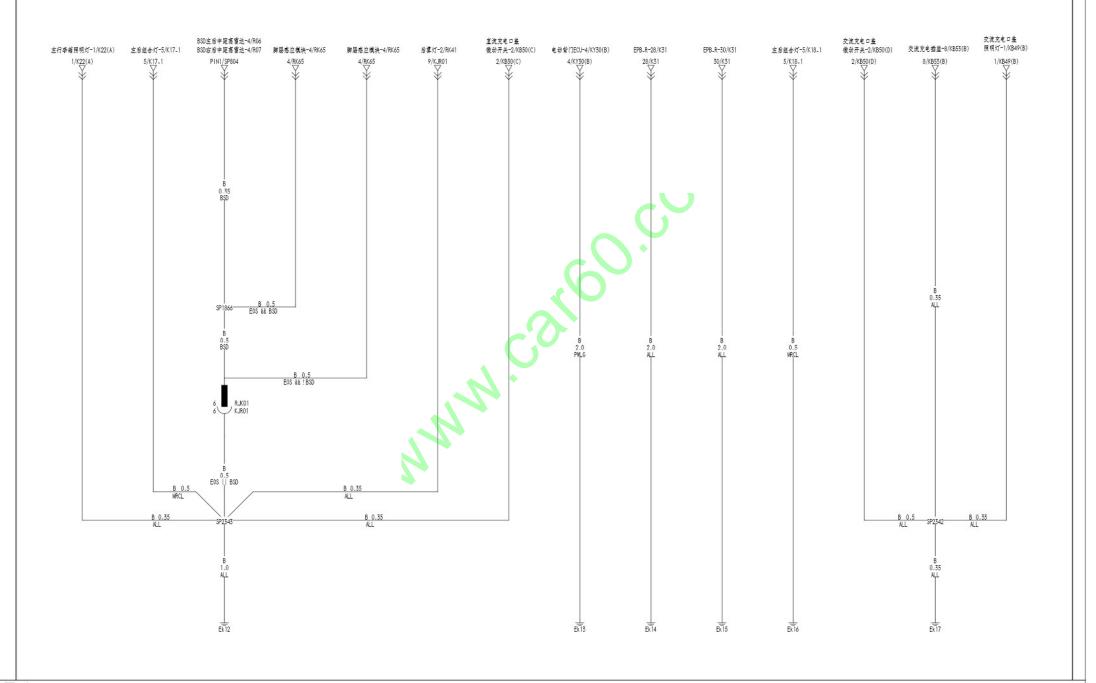

## 接地分配

