

# CAN网络(舒适网)

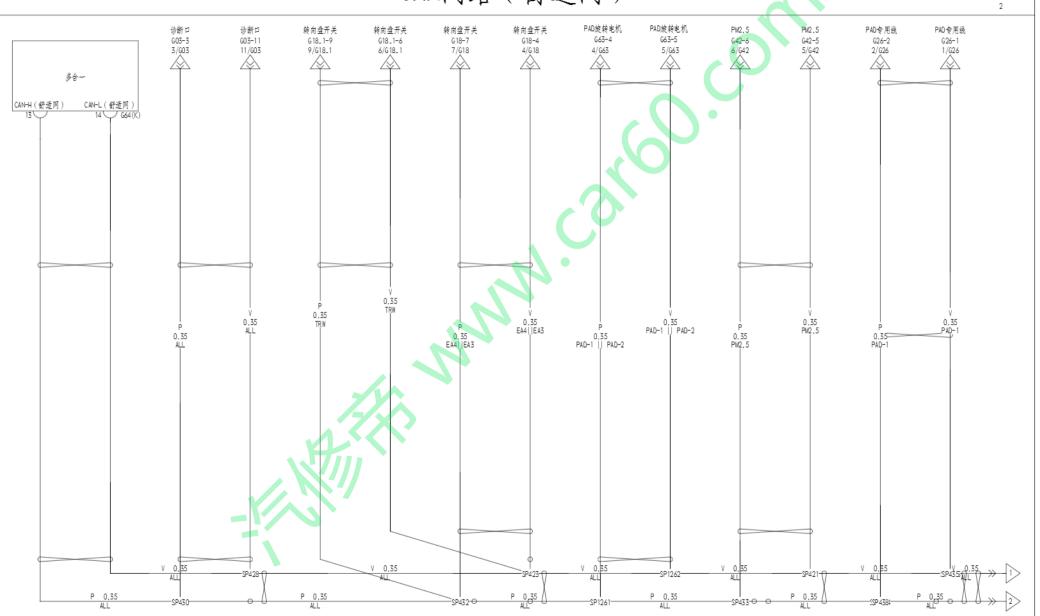


### CAN网络(舒适网)

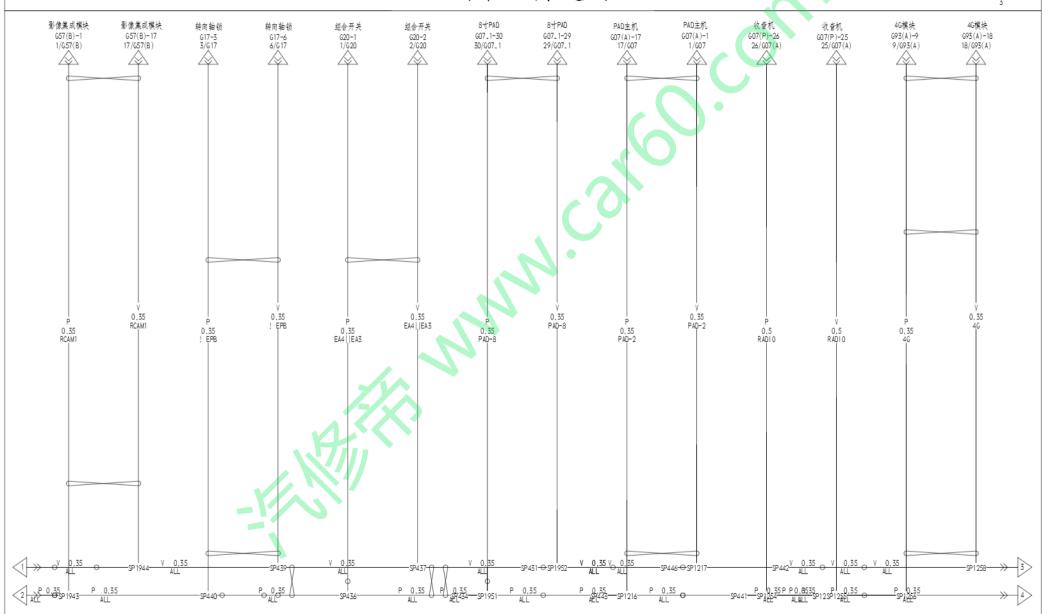


#### CAN网络(舒适网) PTC B34-5 5/B34 功放总成 GK11(B)-4 功放总成 GK11(B)-5 换挡面板总成 KG16(A)-14 14/KG16(A) 左前窗控开关 TO5(B)-18 18/TQ5(B) 左前窗拉开关 TO5(B)-17 17/TQ5(B) 左前窗拉开关 TO5(C)-10 10/TQ5(C) 多合一 G64(K)-13 4/BA17 多合一 G64(K)-14 5/BA17 行率记录仪 P02(B)-5 5/P02(B) 左前窗控开关 T05(C)-11 换挡面板总成 行车记录仪 B34-4 4/B34 KG16(A)-13 13/KG16(A) P02(B)-1 1/P02(B) 4/GK 11(B) 5/GK11(B) $\triangle$ 0,35 ALL 0,35 FDAT 0,35 FDAT 0,35 VDR 0,35 VDR 0,35 DRAT 0,35 PAD-1 0,35 ! DYN 0,35 PAD-1 0,35 ! DYN 0,35 AĻL 0,35 VDR 0,35 FDRAT||FDAT V 0,35 ALL -SP419-( P 0,35 P 0,35 ALL P 0,35 ALL <u>38</u>



### CAN网络(动力网)

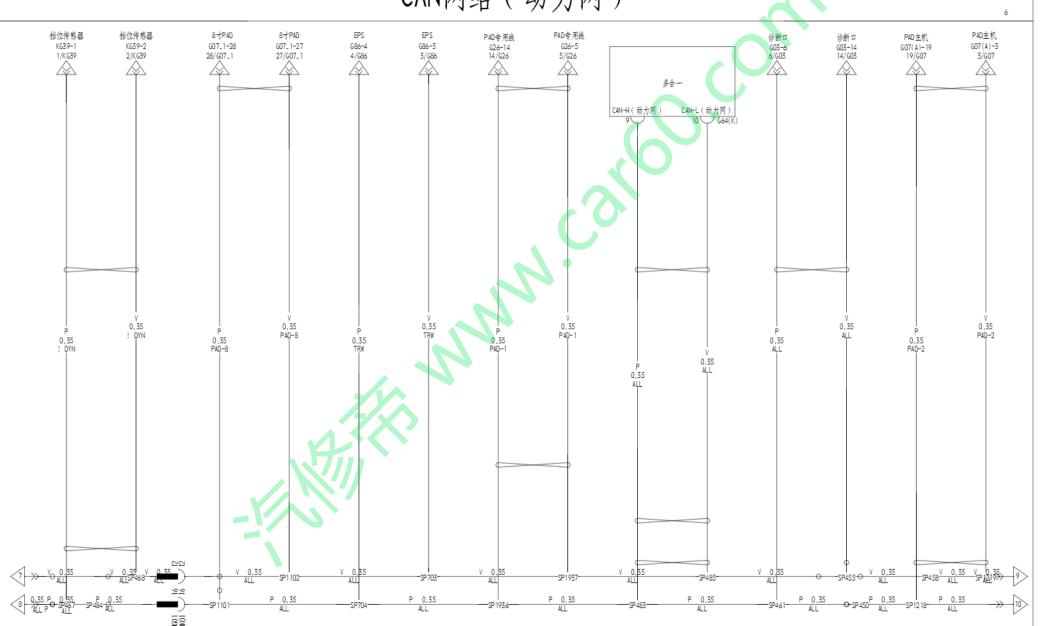

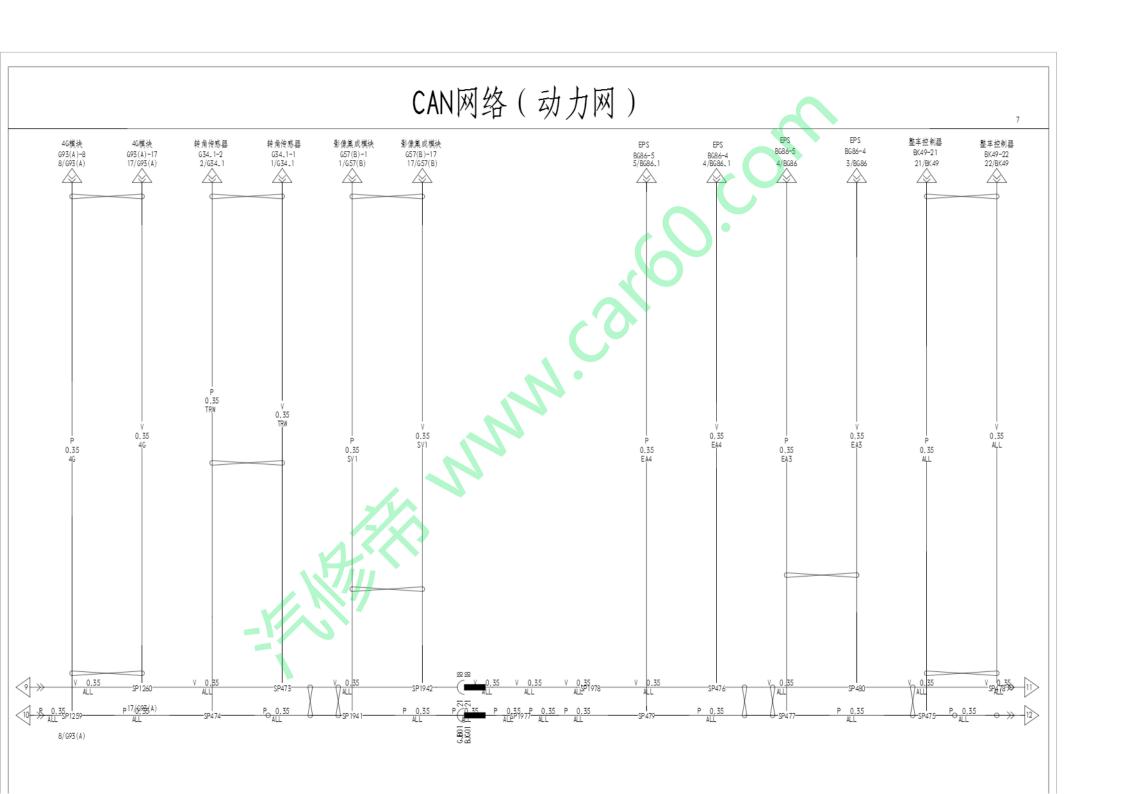

## CAN网络(动力网)

