

比亚迪汽车 5B 轿车维修手册


# 6.1、476 ECM (1)

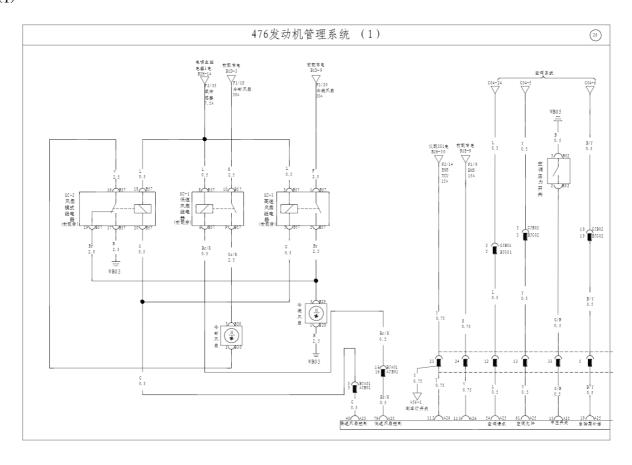

# 6.2、476 ECM

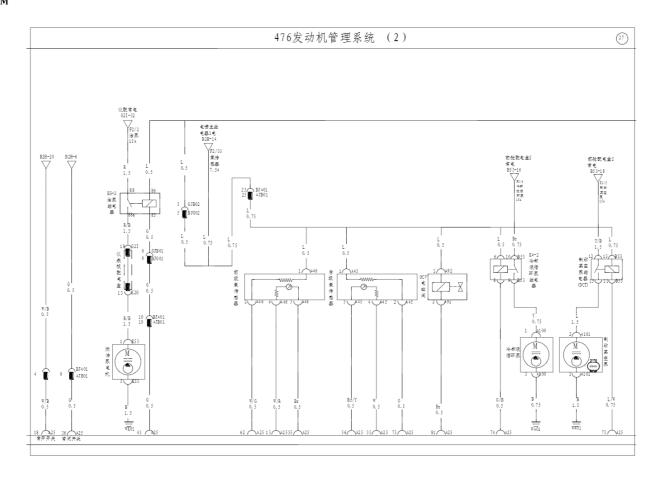


6.3, 476 ECM (3)

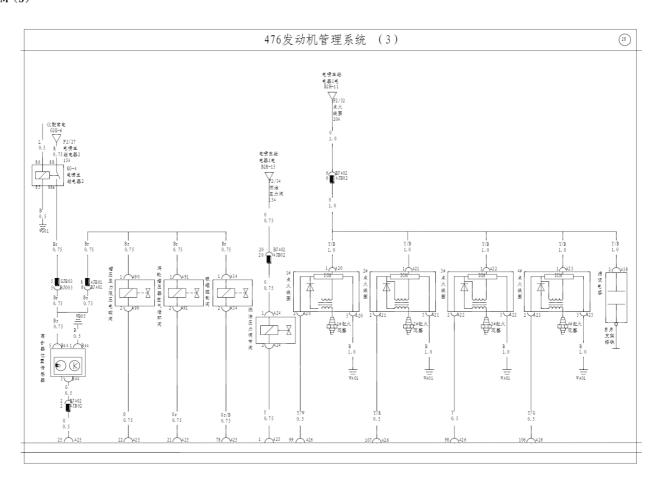


比亚迪汽车 5B 轿车维修手册

# 6.4, 476 ECM (4)

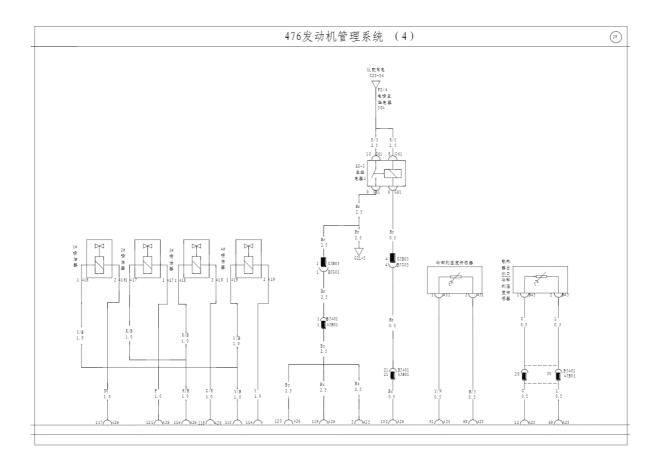


比亚迪汽车

# 6.5, 476 ECM (5)

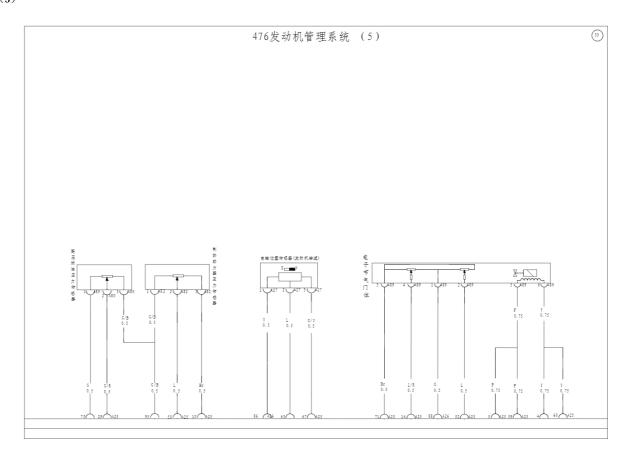

比亚迪汽车

6.6, 476 ECM (6)

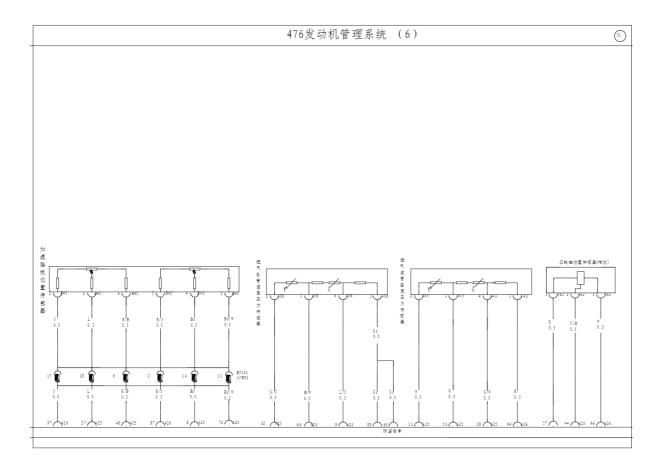

比亚迪汽车 5B 轿车维修手册

# 6.7, 476 ECM (7)

