
第四节 线束布置图

●线束布置图 ----5A 整车线束分布图

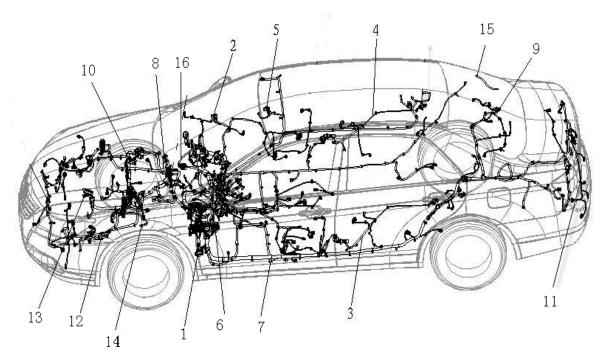

序号	零件编号	名 称	数量	备注
No.	Part No.	Description	Qty	Rem
1	5A-4002100-D1	左前门线束	1	舒适
	5A-4002100A-D1			豪华
2	5A-4002200	右前门线東	1	舒适
	5A-4002200A			豪华
3	5A-4002300	左后门线束	1	标配
4	5A-4002400	右后门线束	1	标配
5	5A-4002800-D1	顶棚线束	1	舒适
	5A-4002800A-D1			豪华
6	5A-4003100-D1	仪表板线束	1	MT 舒适
	5A-4003100A-D1			MT 豪华

	5A-4003100A-D3			MT 尊贵
	5A-4003100-D2			MT 起停舒适
	5A-4003100A-D2			MT 起停豪华
	5AD-4003100			DCT 舒适
	5AD-4003100A			DCT 豪华
	5A-4003100-D1			MT 舒适
	5A-4003100A-D1			MT 豪华
7	5A-4004100-D1	地板线束	1	舒适
	5A-4004100A-D1			豪华
	5A-4004100A-D2			尊贵
	5A-4011100-D1	前舱线束	1	MT 舒适
	5A-4011100A-D1			MT 豪华、尊 贵
	5A-4011100-D2			MT 起停舒适
8	5A-4011100A-D2			MT 起停豪华
	5AD-4011100			DCT 舒适
	5AD-4011100A			DCT 豪华
	5A-4011100-D1			MT 舒适
9	5A-4018700	高位制动灯小线	1	标配
	5A-4001010-D1	发动机线束	1	MT
10	5A-4001010-D2			MT 起停
	5AD-4001010			DCT
11	5A-4013100	后保小线	1	豪华
12	5A-4002912	变速箱搭铁线	1	标配
13	5A-4002911	蓄电池负极线	1	标配
14	5A-4002913	发动机搭铁线	1	标配
15	5A-4002914	后挡风玻璃负极搭 铁线	1	标配
16	5A-4003800	日光、光照强度、 多功能屏小线	1	标配