


Rear module replacement

1


- 1 - Remove the cable adapter and the cable shaft
- 2 - Unscrew the 3x screws

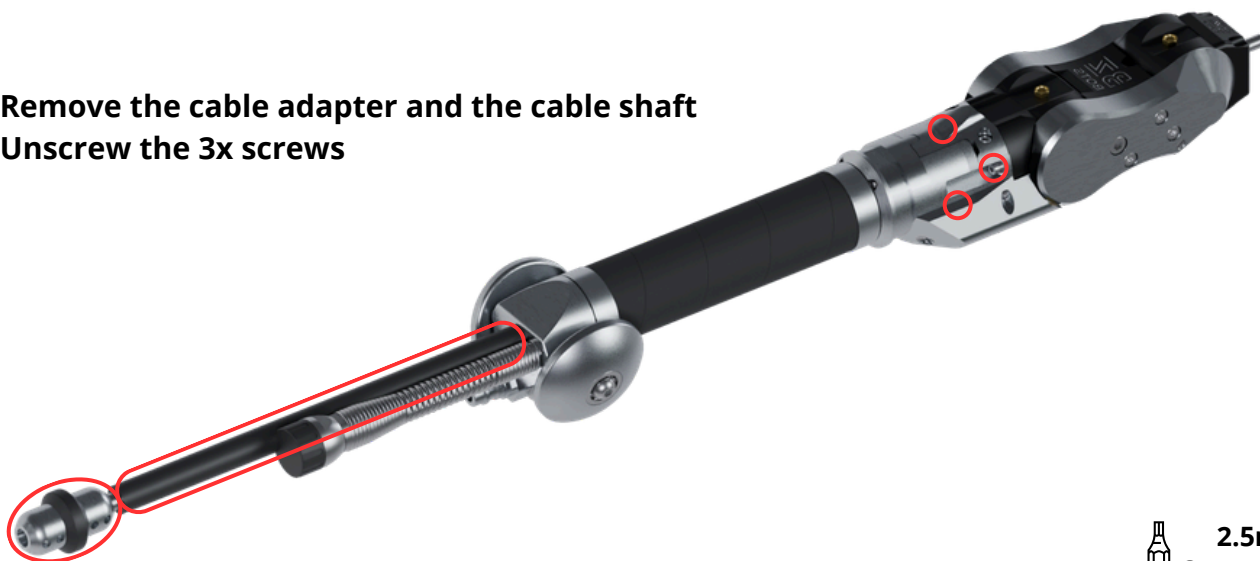

 2.5mm
 3mm

2

Remove the milling module

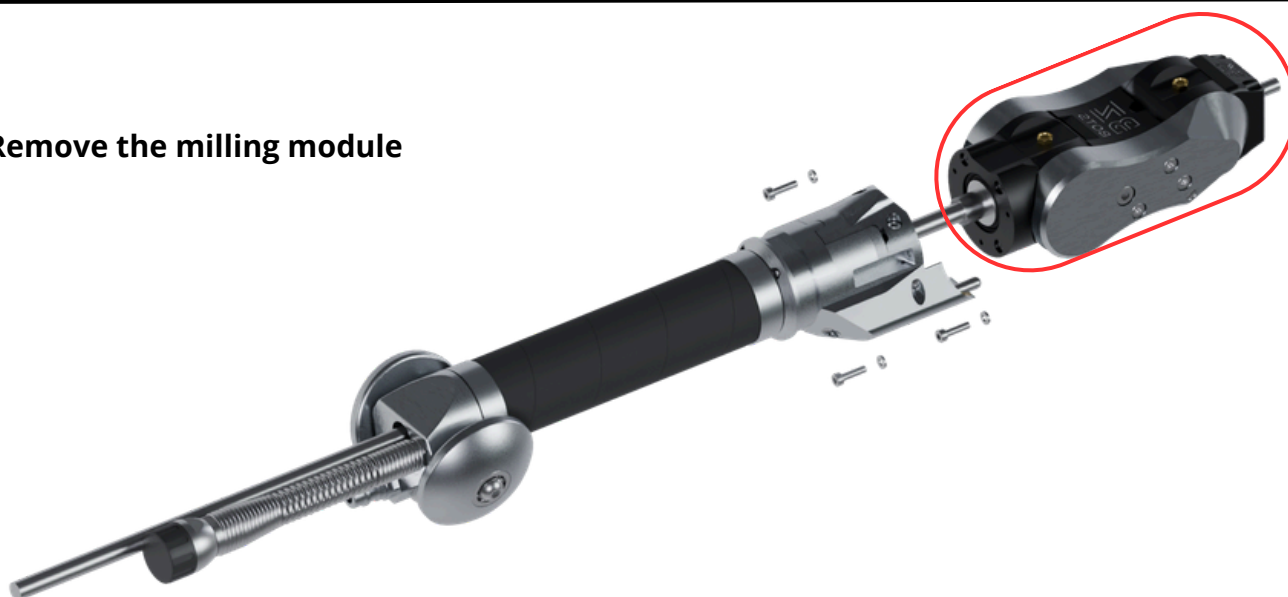

3

- 1 - Unscrew the 2x screws
- 2 - Pull the camera module



 T10

4

Unscrew the 3x screws



 2.5mm

5

- 1 - Remove the rear module
- 2 - To replace the rear module, perform the steps in reverse order

