

1 Before use

Always lubricate the rear connector with a non-conductive grease. Failure to comply with this instruction may result in irreversible damage to the robot.

- Set the Mini-Miller speed to level 5 (2400 rpm). **At speed level 6, the Miller may be damaged.** A speed lower than level 5 would result in a noticeable loss of efficiency.
- Tighten the 8 screws of the Picote adapter securely to prevent any disconnection of the Picote shaft during operation.




 **Always equip the robot with the appropriate centering device to prevent getting stuck in bends.**

■ Tool orientation

Before inserting the robot into the pipeline, you can loosen the **red screw** to pre-orient the tool.

Once the desired position is selected (from 1 to 5), tighten the **red screw** again.

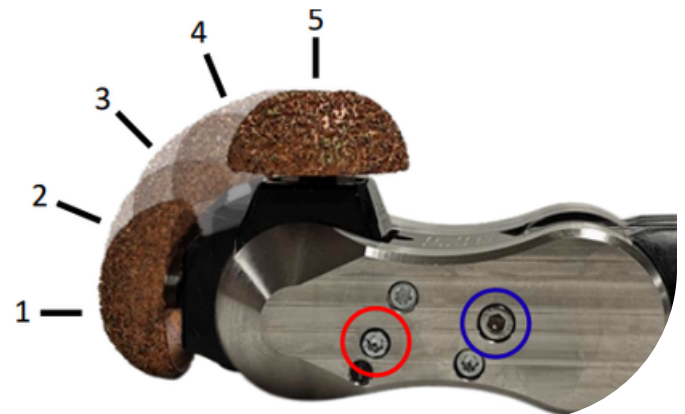


■ Arm lift stop

The stop (**blue area**) limits the arm lift in order to stabilize the tool after passing through the liner.

- Black screw: 35°
- Yellow screw: 46°
- No screw: free lift for difficult bends

■ Tool extension change

To change the output module, loosen the **4 red screws**. Remove the module and replace it with the other module (longer or shorter). Tighten the same **4 red screws** again.

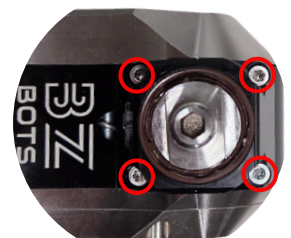

Always check that the O-ring around the gear is correctly in place before reassembling the module.



Quick Start Guide

Tool use cases

Liner reopening



Concrete milling



2 During operation

- Press the green button to raise the arm and the red button to lower it.
- An air camera cleaning system is integrated into the robot. To activate it, raise the arm to the maximum position while holding down the green button on the control handle.
- For finer control of the arm lift, adjust the flow rate (“flow control”) by turning the flow regulator highlighted in orange.



3 After operation

- Thoroughly clean the robot and remove all debris/dust. Pay particular attention to **cleaning the push rods** (highlighted in red) and lubricate them with lithium grease. Apply slight pressure to extend the rods, then manually raise and lower the arm several times.
- Once a month, lubricate the robot shaft (see the operating manual for more information).
- Every two months, remove the grease present in the gearbox and replace it with new, high-quality grease (see the operating manual for more information).

