## **Technical Document**

# **Niagara Linux Supervisor Notes**



## **Niagara Linux Supervisor Notes**

**Tridium, Inc.** 3951 Westerre Parkway, Suite 350 Richmond, Virginia 23233 U.S.A.

#### Confidentiality

The information contained in this document is confidential information of Tridium, Inc., a Delaware corporation ("Tridium"). Such information and the software described herein, is furnished under a license agreement and may be used only in accordance with that agreement.

The information contained in this document is provided solely for use by Tridium employees, licensees, and system owners; and, except as permitted under the below copyright notice, is not to be released to, or reproduced for, anyone else.

While every effort has been made to assure the accuracy of this document, Tridium is not responsible for damages of any kind, including without limitation consequential damages, arising from the application of the information contained herein. Information and specifications published here are current as of the date of this publication and are subject to change without notice. The latest product specifications can be found by contacting our corporate headquarters, Richmond, Virginia.

#### Trademark notice

BACnet and ASHRAE are registered trademarks of American Society of Heating, Refrigerating and Air-Conditioning Engineers. Microsoft, Excel, Internet Explorer, Windows, Windows Vista, Windows Server, and SQL Server are registered trademarks of Microsoft Corporation. Oracle and Java are registered trademarks of Oracle and/or its affiliates. Mozilla and Firefox are trademarks of the Mozilla Foundation. Echelon, LON, LonMark, LonTalk, and LonWorks are registered trademarks of Echelon Corporation. Tridium, JACE, Niagara Framework, and Sedona Framework are registered trademarks, and Workbench are trademarks of Tridium Inc. All other product names and services mentioned in this publication that are known to be trademarks, registered trademarks, or service marks are the property of their respective owners.

#### Copyright and patent notice

This document may be copied by parties who are authorized to distribute Tridium products in connection with distribution of those products, subject to the contracts that authorize such distribution. It may not otherwise, in whole or in part, be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form without prior written consent from Tridium, Inc.

Copyright © 2023 Tridium, Inc. All rights reserved.

The product(s) described herein may be covered by one or more U.S. or foreign patents of Tridium.

## **Contents**

| <b>About this</b>                       | Guide                                 | 5  |
|---|---------------------------------------|----|
| Document change log                     |                                       |    |
| Related documentation                   |                                       |    |
| Chapter 1                               | Linux N4Supervisor Notes              | 7  |
|   | ut installing the Linux N4Supervisor  |    |
| , •                                     | Linux N4Supervisor !/bin contents     |    |
|   | Linux N4Supervisor !/install contents |    |
|   | Linux Supervisor !/uninstall contents |    |
| Chapter 2                               | Silent Installer                      | 13 |
| =                                       | ing silent.properties file            |    |
|   | ning the unattended installer         |    |
| Chapter 3                               | Common tasks                          | 17 |
| Creating a new Linux Supervisor station |                                       | 17 |
| Interacting with the platform daemon    |                                       |    |
| Starting the platform daemon            |                                       |    |
|   | Stopping the platform daemon          |    |
| Reinstalling the platform daemon        |                                       |    |
| Uninstalling the platform daemon        |                                       |    |
|   | stalling the Linux N4Supervisor       |    |
|   | ıbleshooting                          |    |
| Index                                   |                                       | 21 |

#### **About this Guide**

This topic contains important information about the purpose, content, context, and intended audience for this document.

#### **Product documentation**

This document is part of the Niagara technical documentation library. Released versions of Niagara software include a complete collection of technical information that is provided in both online help and PDF format. The information in this document is written primarily for Systems Integrators. To make the most of the information in this book, readers should have some training or previous experience with Niagara software, as well as experience working with JACE network controllers.

#### **Document content**

This document provides installation details specific to the Niagara 4.2 N4Supervisor running on Red Hat Enterprise Linux 7/CentOS distribution on a specific PC platform.

### **Document change log**

Updates (changes/additions) to this *Niagara Linux Supervisor Notes* engineering notes document are listed below.

- July 25, 2023: Added "Silent Installer" chapter (Niagara 4.13)
- December 13, 2016: In the "Linux N4Supervisor Notes" and "Troubleshooting" topics, added content regarding the "Too many files open" exception which can occur if the file descriptor (FD) limit for a distribution is set too low.
- August 5, 2016: Updated for Niagara 4.2. Many changes throughout including the following:
  - Updated the supported version of Red Hat Enterprise Linux to 7.
  - Noted change to the user/group "owning" a station running on a Linux N4Supervisor, it is now niagara/niagara.
  - There are a few changes to the directory structure for the N4.2 Linux N4Supervisor installation file, as well as changes to the contents of the installation directory.
  - Removed information describing installing a 32-bit Linux Supervisor since only 64-bit is supported.
  - Updated questions presented during the installation process.
  - Updated names of various scripts, replacing "AX" with "N4".
  - Added description of the gradelew script to the topic explaining!/bin contents.
  - Added description of the install common.sh script to the topic explaining!/install contents.
  - Added note explaining the need to logoff of the Linux and back on again in order for shortcut to work properly.
  - Added procedure for Using the Linux Supervisor station template.
  - Removed outdated installation examples.
- An earlier version of Linux Supervisor documentation exists as the Linux AX Supervisor Notes.

#### Related documentation

Additional information about Linux Supervisor operation is available in the following documents.

- Niagara Platform Guide
- Linux AX Supervisor Notes

Niagara Linux Supervisor Notes

## **Chapter 1 Linux N4Supervisor Notes**

#### Topics covered in this chapter

♦ About installing the Linux N4Supervisor

Niagara 4.2 supports an N4Supervisor running on Red Hat Enterprise Linux 7/CentOS distribution on a specific PC platform (contact your Tridium sales channel for further PC platform details). This document provides installation details specific to this Linux N4Supervisor. For related details on Niagara 4 platform operation, see the *Niagara Platform Guide* section "Linux-based N4Supervisor."

NOTE: Note that the station running on a Linux N4Supervisor is "owned" by a specially created user/group niagara:niagara, and therefore cannot bind to Linux "root owned" software ports 1-1024. This is not an issue for either of the conventional ports (secure: 5011, or non-secure: 3011) used for a platform connection, but does affect the standard port used by the station's WebService (Http Port), which cannot be used at the default port (80) setting. In addition, other software ports potentially used by various drivers must be adjusted above port 1024.

**NOTE:** Be aware that large Supervisor stations typically require more file descriptors than the default limit set for most distributions allows. The situation may occur where you have many concurrently open files (histories, alarms, etc.) which causes the exception, "Too many files open". This simply means the file descriptor limit is set too low. Use means available to increase the limit to a greater value.

### About installing the Linux N4Supervisor

Once you have obtained the Linux N4Supervisor image, via CD or download, you will initially have a file on your machine named similar to Vykon N4 Supervisor for Linux x64-4.2.n.zip.

You can expand this file to examine its contents. To do that, change to the parent directory and enter the following command:

The command expands the image and produces the directory hierarchy:

| dist              | folder                    |
|-------------------|---------------------------|
| docs              | folder                    |
| install-data      | folder                    |
| javaodc           | folder                    |
| modules           | folder                    |
| overlay           | folder                    |
| install.sh        | shell script              |
| INSTALL           | installation instructions |
| README            | README document           |
| install_common.sh | Tar archive               |

Please review the README and INSTALL files. When you are ready to begin the installation process, type the following at the command prompt:

root@<host>:/home/<user># sudo bash install.sh

**NOTE:** You must type "**sudo** bash install.sh" in order to run the installer since elevated permissions are required to perform some operations during the installation,

This script steps you through the installation process by asking a series of yes/no questions, where the default choice appears in capital letters, that is YES or NO instead of yes or no. Press Enter to accept the default, or type "y" or "n".

Some of the more complicated questions include:

Would you like to configure which users can use Niagara 4 [YES/no]:

If you answer YES to this question, any user you provide will be added to the new group 'niagara', have permissions to start/stop/query the platform service, and have Desktop and Menu Icons installed to their home directory.

If you choose not to configure any users, you'll still be able to run the 'niagarad' software and Niagara 4, but it can only be controlled as 'root'.

If you want to add users later, use the command: usermod -G -a niagara UserNameYouWantToAdd

NOTE: There are also Linux bash scripts that you can run to add and remove users: add\_n4\_user.sh and remove\_n4\_user.sh. These are found in /opt/Niagara/Niagara-<version>/install. These scripts need to be executed with elevated permissions using sudo. For more details, see the *Linux AXSupervisor's !/install contents* topic for description of the bash scripts.

**NOTE:** As a security precaution, only the user "niagara" may start and stop the niagarad process. The file "/etc/sudoers" can be modified to grant all users in the group "niagara" permission to start and stop the niagarad process.

Should the installer make the necessary modifications to "/etc/sudoers"? [yes/NO]:

This is a convenience. If you choose yes, then the <code>/etc/sudoers</code> entry required to allow members of the group 'niagara' to execute '<code>/usr/bin/niagaradctl'</code> as the user 'niagara' is automatically generated and added to the file '<code>/etc/sudoers</code>'. If you choose no, then the necessary entry will still be generated and logged, you will just need to manually modify the '<code>/etc/sudoers</code>' file through vim or visudo.

The remainder of the questions asked by the installer should not require explanation. The installer will ask you to review your choices and then it copies files. If the installer fails at any step, please send an email to Tridium support that specifies your Linux distribution, version, and the install.log file.

**CAUTION:** Important information is included at the end of the installation script. Please take the time to read this information and complete any additional steps it may ask you to do.

**NOTE:** After installation is complete, you must log off of the Linux operating system and then log on again. Only then will the shortcut to launch Workbench work.

Once you have installed Niagara 4.2, the default installation directory is /opt/Niagara/Niagara-4.2.nn/. Note, that you can select a different directory during installation. The following contents are in the installation directory:

| bin        | folder |
|------------|--------|
| cleanDist  | folder |
| conversion | folder |
| defaults   | folder |
| docs       | folder |
| etc        | folder |
| install    | folder |
| jre        | folder |
| lib        | folder |
| logs       | folder |

| modules   | folder |
|-----------|--------|
| security  | folder |
| sw        | folder |
| uninstall | folder |

### Linux N4Supervisor !/bin contents

In the N4Supervisor EC-Net 4.2.n/bin folder, find the following:

#### n4launcher

This file is the shell script responsible for launching Niagara 4 applications. It is used primarily by the Desktop and Menu entries as a means to automate the creation of a suitable runtime environment (that is, env variables); although, a user could use this script from the command line if they choose.

If this file is deleted, Desktop and Menu shortcuts will no longer work. It is not advised to change the contents of this file.

Default attributes are: -r-xr-x- - niagara: niagara

#### gradlew

This file is a shell script responsible for downloading, if necessary, and launching gradle to build Niagara 4 modules. It corresponds to the gradlew.bat file in a Windows environment.

Default attributes are: -rwxr-xr-x niagara: niagara

#### lib\*.so

These files are runtime libraries used by Niagara. They correspond to the \*.dll files in a Windows environment. Deletion of any of these files will result in Niagara run time failure.

Default attributes are: -rwxr-xr-x niagara: niagara

#### .niagara

This file sets up the run time environment needed to run any Niagara 4 binary. It will properly initialize several important variables, such as LD\_LIBRARY\_PATH and NIAGARA\_HOME. This script can be sourced at the command line to allow you to launch Niagara 4 binaries, such as wb, from the command line at a later time. Deletion of this file will prevent Desktop and Menu shortcuts from functioning properly, as well as n4launcher and niagaradctl. Do not modify the contents of this file as it is custom generated at install time for Niagara 4.

Default attributes are: -rwxr-xr-x niagara: niagara

#### niagarad

This file is the niagara daemon, aka platform daemon. It corresponds to the file niagarad.exe in a Windows environment. Do not execute this file manually, as it should only be controlled (e.g, started/stopped) by the script niagaradctl. Deletion of this file will prevent the niagaradctl script from functioning properly and will prevent you from making platform connections to your host in "wb". Do not delete or modify this file in any way.

Default attributes are: -r-x---- niagara: niagara

#### niagaradctl

This file is the control script for niagarad. It is used to start, stop, and query as to the status of niagarad. Symbolic links from /etc/init.d and runlevel directories are made to this file at service installation time. This script may be executed by any users who are configured to use niagarad (done at installation time) to manually start, stop, restart or query the niagarad service. Deletion of this file will prevent niagarad from running as a service, and will prevent niagarad from starting at boot time, and stopping at restart/reboot time. Do not delete or modify the contents of this file in any fashion.

Default attributes are: -rwxr-xr-x niagara: niagara

#### niagaradlog

Executing this script allows you to see any output from niagarad. niagarad is run as a service and therefore his its standard output is redirected to an internal logging service. This script will locate the logs generated by niagarad and print them to the screen. Deletion of this file will prevent you from seeing niagarad output externally from Niagara applications (that is, you'll still be able to see it in "wb").

Default attributes are: -rwxr-xr-x niagara: niagara

#### nre

This file is responsible for launching the Niagara Runtime Environment (NRE). It corresponds to the nre.exe file in a windows environment. Deletion of this file will prevent you from being able to query the NRE externally from other Niagara applications, for example for hostid.

Default attributes are: -rwxr-xr-x niagara: niagara

#### station

This file is responsible from launching Niagara stations on your platform. It corresponds to the station. exe file in a Windows environment. Deletion of this file will prevent you from launching any stations on your local platform, pretty much rendering your N4Supervisor useless.

Default attributes are: -rwxr-xr-x niagara: niagara

#### test

This file is responsible for running predefined test cases against the NRE. It corresponds to the test.exe file in a Windows environment. This file is not critical, but deletion of this file will prevent you from testing the Framework.

Default attributes are: -rwxr-xr-x niagara: niagara

#### wb

This file is responsible for launching wb, that is Workbench. It corresponds to the file  $\mathtt{wb.exe}$  in a Windows environment. Deletion of this file will prevent you from launching wb.

Default attributes are: -rwxr-xr-x niagara: niagara

### Linux N4Supervisor !/install contents

In the N4Supervisor Niagara-4.2.n/install folder, find the following:

#### install\_common.sh

This script contains constants and functions used by other scripts, including but not limited to  $add_n4$ \_user.sh and install\_service.sh. This script should not be executed. Do not delete or modify the contents of this file in any fashion.

Default attributes are: -r-xr-x- - - niagara: niagara

#### add\_n4\_user.sh

This script is responsible for adding users on this platform to the user group that is eligible to start and stop the Niagara 4 daemon. This process is also available when initially running <code>install.sh</code> but this standalone script permits the addition of users after installation has taken place. This script needs to be executed with elevated permissions using "sudo".

Default attributes are: -r-xr-x- - - niagara: niagara

#### install\_service.sh

This script is responsible for installing the Niagara 4 Platform Service, also referred to as "niagarad". You will need root privileges to successfully run the script. It can be run as a stand-alone installer and does not

require or rely on install.sh at all. When run, the script will install (but not start) the platform daemon of that version of Niagara 4, overwriting any other Niagara 4 daemon currently installed on that platform.

This means you can use this script to switch between Niagara 4 installations on your platform. Once completed, you may start the service from the command line or simply reboot. The script relies on niagarad\_generic, and as such, might fail to function properly if that file is significantly modified. If deleted, you will be unable to switch the platform daemon between multiple Niagara 4 installations on your machine. Aside from the fact that this script does not start the daemon upon completion, it corresponds to the **Install Platform Daemon** command available in a Windows environment. For details, see "Installing the platform daemon".

Default attributes are: -r-xr-x- - niagara: niagara

#### niagarad\_generic

This file is a cache of the original code used to generate <code>niagaradctl</code> used by <code>install.sh</code>. The contents of this file are concatenated to <code>niagaradctl</code> at its creation following the generation of platform dependent code during <code>install.sh</code> and <code>install\_service.sh</code> runtime. Deletion of this file, or more than trivial modification will prevent you from successfully reinstalling the platform service, i.e. <code>install service.sh</code>.

Default attributes are: -rwxrwxr-x niagara:niagara

#### remove\_n4\_user.sh

This script is responsible for removing users on this platform from the user group that is eligible to start and stop the Niagara 4 daemon. This process is also available when running uninstall.sh but this standalone scripts permits the removal of users without completely uninstalling Niagara 4. This script needs to be executed with elevated permissions using "sudo".

Default attributes are: -r-xr-x- - - niagara: niagara

#### **Linux Supervisor !/uninstall contents**

In the Supervisor Niagara 4.2.n/uninstall folder, find the following:

#### uninstall service.sh

This script is responsible for uninstalling the Niagara 4 Platform Service, aka niagarad. You need root privileges to successfully run the script. It can be run as a standalone uninstaller, and will not remove the complete Niagara installation from your platform, just the service. This script is provided as a convenience for users who would like to prevent niagarad from starting at boot-time, or would like to disable the Niagara installation temporarily, rather than remove it completely. Modification of this file may prevent it from successfully completing. For details, see "Uninstalling the platform daemon".

Default attributes are: -r-xr-x- - - niagara: niagara

#### uninstall.sh

This script is responsible for completely removing the Linux N4Supervisor from your platform. In a Windows environment, this script corresponds to uninstall.exe. You will need root privileges to successfully run the script. It steps you through the uninstallation process via a series of yes or no questions. In order to safely and efficiently remove Niagara 4, it uses a configuration file generated at installation time named uninstall.conf. For details, see "Uninstalling the Linux N4Supervisor." However, if this file is missing, the uninstaller can still be executed successfully (but it may ask unnecessary questions, and/or report incorrect information). If this file is significantly modified, you may be unable to remove Niagara via an automated process—and you just have to do it manually file by file.

Default attributes are: -r-xr-x- - niagara: niagara

#### uninstall.conf

This file is created at installation time based on the configuration of Niagara 4 (install service, doc, dist, etc.) you chose to install. The key/value pairs in this file are used to efficiently remove Niagara when running the script uninstall.sh by asking questions tailored for your platform. Modification or deletion of this file will

not prevent you from uninstalling Niagara, but it might cause the script uninstall.sh to ask questions, and attempt to remove items, not tailored for your platform.

Default attributes are: -r--r--niagara:niagara

## Chapter 2 Silent Installer

#### Topics covered in this chapter

- ◆ Editing silent.properties file
- ◆ Running the unattended installer

## Editing silent.properties file

In the silent.properties file, you have the following configuration options (presented in four sections) for the silent installation. It runs a windowless installation and no user input is required.

#### Prerequisites:

- You have uninstalled the previous version using its uninstall.sh file or you have removed the files manually.
- You have root admin rights.

#### NOTE:

You can uninstall the previous standard version using its uninstall.sh file or you can remove the files manually. The silent.properties file allows you to configure the installation directory. If you do not change the default configuration settings, the installation will result in a new directory with the applicable Niagara version number. As a consequence, it will not overwrite any existing installation. If you run the Silent Installer a second time on the same device, it will overwrite files.

#### Step 1 No editing needed in following section of the silent.properties file.

```
# Configure options for unattended installation.
# sudo bash install.sh silent.properties

# The license agreement acceptance is provided by the following "acceptLicense"
property.
# Any value except "yes" will cause the installer to exit.
acceptLicense=yes
```

## Step 2 Edit the passphrase in the following section of the silent.properties file if the system passphrase value has not been previously configured on the host.

```
# The system passphrase value here is used only if one does not already exist
  on the install target host ID.
# Your passphrase must contain:
# at least 10 characters
# at least 1 lower case character
# at least 1 upper case character
# at least 1 digit
systemPassphrase=Password10
```

#### Step 3 To override the default installation directory, set the installDirectory to a file path.

```
# Set the "installDirectory" to a path to override the default installation directory.
# Example: installDirectory=/opt/Niagara/Niagara-%version%
installDirectory=
```

#### Step 4 Review the following section of the silent.installer file.

```
# Set "createInstallDirectory" to "true" to create the install directory
if it does not exist.createInstallDirectory=yes
# Set "addUsers" to "yes" to configure which users can use Niagara 4.
addUsers=
```

```
# If "addUsers" = "yes", the list of existing users to add to the new group 'niagara'
which will have
# permissions to start/stop/query the platform service, and have desktop and menu icons
# installed to thier home directory. User names should be separated by a space character
users=
# Set "modifySudoers" to "yes" to grant all users in the group 'niagara'
permission to start
# and stop the niagarad process.
modifySudoers=no
# Set "installService" to "true" to install the Niagara daemon as a service.
installService=yes
# Set "installDesktopShortcuts" to "true" to install Linux desktop shortcuts.
installDesktopShortcuts=yes
# Set "installMenuShortcuts" to "true" to install the Linux menu shortcuts.
installMenuShortcuts=yes
```

### Running the unattended installer

The following sections describes how to execute the Silent Installer.

#### **Prerequisites:**

You have edited the silent.properties file.

- Step 1 Copy the silent.properties file under the root of the installation directory.
- Step 2 Launch the Linux Terminal and in the command prompt change directory to the root folder of the installation.
- Step 3 Enter the filename (possibly the full file path depending on where the file is located) as a parameter to the install.sh script. Linux installer does not automatically look for the properties file in any specific location. Running install.sh file does require root or sudo permissions.

While the process is running, the unattended installation outputs information to the terminal window. The difference to using the install.sh file without the silent.properties file is that the script uses the parameters from the file to answer the questions which would normally pause the installation process waiting on user input to proceed.

The output of the installer provides the same information regardless of manual or unattended execution. The following text is from the installation output and indicates tasks that you still need to complete.

```
You will need to source the .niagara script at /opt/Niagara/Niagara-4.13.0.184/bin/.niagara
```

before you will be able to use Workbench or Nre from a terminal. We advise linking this script to your home directory and including it in the execution of your .bash profile and .bashrc scripts.

"Sourcing" the script is accomplished by typing

. /opt/Niagara/Niagara-4.13.0.184/bin/.niagara

at the prompt.

You will also need to allow UDP traffic on port 1911 and TCP traffic on ports 4911, 5011 and 8443 to pass through your local firewall if you intend to

connect to the local Niagara Daemon and Niagara Station.

```
iptables -A INPUT -p udp -m state --state NEW --destination-port 1911 -j ACCEPT iptables -A INPUT -p tcp -m state --state NEW --destination-port 4911 -j ACCEPT iptables -A INPUT -p tcp -m state --state NEW --destination-port 5011 -j ACCEPT iptables -A INPUT -p tcp -m state --state NEW --destination-port 8443 -j ACCEPT
```

Add the following if you wish to redirect traffic for port 443 to port 8443:

```
iptables -t nat -A PREROUTING -p tcp -m tcp --destination-port 443 -j REDIRECT --to-ports 8443
```

If you intend to make IPv6 connections to Niagara instances, please modify your IPv6 firewall, using the "ip6tables" command, as well.

If you selected to create desktop shortcuts, the installation output indicates there are additional steps required to enable (trust) the shortcuts for each user.

```
Adding GNOME desktop shortcuts for user james... WARNING
```

Could not programmatically trust desktop shortcut 'Workbench 4.13.0.184.desktop' for user 'james'.

#### Please run:

```
'gio set "/home/james/Desktop/Workbench 4.13.0.184.desktop" "metadata:: trusted" yes'or right click "Trust and Launch" or "Allow Launching" this desktop icon.
```

WARNING

Could not programmatically trust desktop shortcut 'Alarm Portal 4.13.0.184.desktop' for user 'james'.

#### Please run:

```
'gio set "/home/james/Desktop/Alarm Portal 4.13.0.184.desktop" "metadata::trusted" yes'
```

or right click "Trust and Launch" or "Allow Launching" this desktop icon.

## Chapter 3 Common tasks

#### Topics covered in this chapter

- ◆ Creating a new Linux Supervisor station
- ♦ Interacting with the platform daemon
- ◆ Starting the platform daemon
- ◆ Stopping the platform daemon
- ◆ Reinstalling the platform daemon
- ♦ Uninstalling the platform daemon
- ◆ Uninstalling the Linux N4Supervisor
- **♦** Troubleshooting

This topic describes tasks that are commonly used working with Linux Supervisor.


Common tasks are described in the following topics.

### Creating a new Linux Supervisor station

Niagara provides a Linux Supervisor station template. This procedure describes the steps to create a new Linux Supervisor station.

Prerequisites: The latest version of Niagara is installed.

- Step 1 In Workbench, click **Tools→New Station**.
- Step 2 In the New Station wizard, click the NewSupervisorStationLinux.nptl template and click OK.

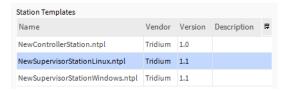

The wizard walks you through the process of creating the station.

- Step 3 In the new station's **Services** node, expand **WebServices** and confirm configuration of the following port settings:
  - HTTP = 8080
  - HTTPS = 8443
- Step 4 In your network's firewall, set up rules to do the following:
  - redirect HTTP port 80 (external) to port 8080 (internal)
  - redirect HTTPS port 443 (external) to port 8443 (internal)

This makes it appear to a remote client that the web server is running on port 80, but the framework redirects all requests sent to port 80 to port 8080 where the web server is listening for them. Similarly, the framework redirects requests sent to port 443 to port 8443.

## Interacting with the platform daemon

Once Niagara has been installed, you will be able to control the platform daemon, 'niagarad', through the control script niagaradctl. This script can be found in the !/bin directory of your Niagara installation or from the symbolic link '/usr/bin/niagaradctl'.

Step 1 At the command line, type niagaradctl, as shown:

```
<user>@<host>:/usr/bin# niagaradctl
Usage: n4d {start|stop|restart|status}
```

Where 'n4d' stands for "Niagara 4 Daemon", and it is the name presented to the operating system to associate with this service (niagarad). As you can see, with this script, you will have the ability to start, stop, restart and query the platform daemon.

## Starting the platform daemon

This procedure describes commands to start the LinuxN4Supervisor platform daemon and to verify that it is running.

Step 1 Type the following at the command line to start the platform daemon on a Linux N4Supervisor:

```
<user>@<host>:/usr/bin# niagaradctl start
Starting Niagara Daemon: [ OK ]
```

Step 2 Type the following at the command line to verify that the daemon has started:

```
<user>@<host>:/usr/bin# niagaradctl status
niagarad (pid 4815162342) is running...
```

The platform daemon is now running on your platform and can accept platform connections.

## Stopping the platform daemon

This procedure describes commands to stop the Linux N4Supervisor and to verify that it is not running.

**NOTE:** You rarely stop the platform daemon (and station) on any N4Supervisor, except immediately before installing a new point release (an upgrade).

Step 1 At the command line, type the following to stop the platform daemon.

```
<user>@<host>:/usr/bin# niagaradctl stop
Stopping Niagara Daemon: [ OK ]
```

Step 2 Type the following at the command line to verify that the daemon has stopped:

```
<user>@<host>:/usr/bin# niagaradctl status
niagarad is stopped
```

## Reinstalling the platform daemon

To reinstall the platform daemon on a Linux N4Supervisor for a particular version of Niagara 4 you will have to execute the script 'install\_service', found in the Niagara "install" directory. It is not necessary to execute this script after a successful Niagara 4 installation, as that process will automatically install the platform daemon.

#### Prerequisites:

You need to be acting as root to accomplish this task.

The main reasons for executing this file are:

- You have accidentally broken your Niagara environment and you want to repair it.
- You have two versions of Niagara installed on your platform, and you want to change which platform daemon is started/controlled by '/usr/bin/niagaradctl'.

Step 1 To change to the target release's install directory, type the following:

```
root@<host>:/usr/bin# cd <targetNiagaraReleaseDirectory>/install
```

Step 2 To issue the install service.sh command, type the following:

```
root@<host>:/opt/Niagara/Niagara-4.n.nn/install# bash install_service.sh
```

The platform daemon (service) is installed, but not started. See "Starting the platform daemon".

**NOTE:** After installation is complete, you must log off of the Linux operating system and then log on again. Only then will the shortcut to launch Workbench work.

## Uninstalling the platform daemon

To disable the platform daemon at start up, that is remove the Niagara 4 scripts in /usr/bin and /etc/init.d, you have to execute the uninstall\_service script, found in the /uninstall directory. It is not necessary to execute this script prior to running main Niagara 4 uninstallation script, as it will uninstall the service, and more, on its own.

#### Prerequisites:

- You need to be acting as root to accomplish this task.
- Step 1 To change to the target release's uninstall directory, type:

```
root@<host>:/usr/bin# cd <targetNiagaraReleaseDirectory>/uninstall
```

Step 2 To issue the uninstall service.sh command type:

```
root@<host>:/opt/Niagara/Niagara-4.2.n/uninstall# bash uninstall service.sh
```

The platform daemon (service) is uninstalled. The service can be safely reinstalled using the install service.sh command. See "Installing the platform daemon".

## Uninstalling the Linux N4Supervisor

This procedures describes the commands to completely uninstall a version of Niagara from your Linux N4Supervisor machine, by executing the uninstall.sh script found in the Niagara 4!/uninstall directory.

#### Prerequisites:

- You need to be acting as root to accomplish this task.
- Step 1 To change to the target release's uninstall directory, type:

```
root@<host>:/usr/bin# cd <targetNiagaraReleaseDirectory>/uninstall
```

Step 2 To issue the uninstall.sh command, type:

```
root@<host>:/opt/Niagara/Niagara-4.2.nn/uninstall# bash uninstall.sh
```

The uninstallation procedure is very similar to that of the Windows environment, and the script steps you through the process. Once finished, please make sure you read and following any additional instructions that were not automated by the script.

## Troubleshooting

Tips for troubleshooting issues that you may encounter when installing or running a Linux N4Supervisor:

error while loading shared libraries

This error can happen with any of shared libraries in NiagaraAX: libnre.so, libplatform.so, or libjvm.so. Although these libraries are probably installed on your machine, the shared library loader cannot locate them. This mostly likely means you have not sourced the script '.niagara'.

As user root, from your installation's /bin directory, type the following:

root@<host>:/opt/Niagara/Niagara-3.8.n/bin#../.niagara

Then try whatever command you used to produce this error again (wb, nre, niagarad, station).

#### • java.net.BindException

This error can happen when starting a station. In the Linux OS, ports 1-1024 are "root ports," meaning only an application running with root privileges may bind to them. Since 'station' is running as the user 'niagara' (who does not have root privileges), it cannot bind to port 80. If you have not configured your station to start on a port above 1024, you will see this error.

To fix this error, configure your station to start its WebService bound to port 8080, or another port above 1024.

**NOTE:** In N4.2, the Linux Supervisor station template is provided which creates a new station with the WebService already configured for HTTP on port 8080 and HTTPS on port 8443. You will still need to setup firewall rules to redirect port 80 to 8080, and port 443 to 8443.

#### too many files open exception

Large Supervisor stations typically require more file descriptors than the default number set for most distributions. The situation may occur where you have many concurrently open files (histories, alarms, etc.) which causes the exception, "Too many files open". This simply means the file descriptor (FD) limit is set too low. Use means available to increase the limit to a greater value.

## Index

| C   | station template                |
|---|---------------------------------|
| controlling platform daemon17   | Linux Supervisor                |
| E   | т                               |
| Editing silent.properties file  | troubleshooting                 |
|   | U                               |
| F folder contents   | uninstalling Linux Supervisor19 |
| folder contents       !/bin       9         !/install       10         !/uninstall       11   | uninstalling platform daemon19  |
| I   |                                 |
| installation directories  |                                 |
| L   |                                 |
| Linux N4Supervisor about installing   |                                 |
| N   |                                 |
| N4Supervisor notes7   |                                 |
| P   |                                 |
| platform daemon       17         controlling       18         installing       18         starting       18         stopping       18         uninstalling       19 |                                 |
| R   |                                 |
| Running the unattended installer14  |                                 |
| S   |                                 |
| starting platform daemon18  |                                 |