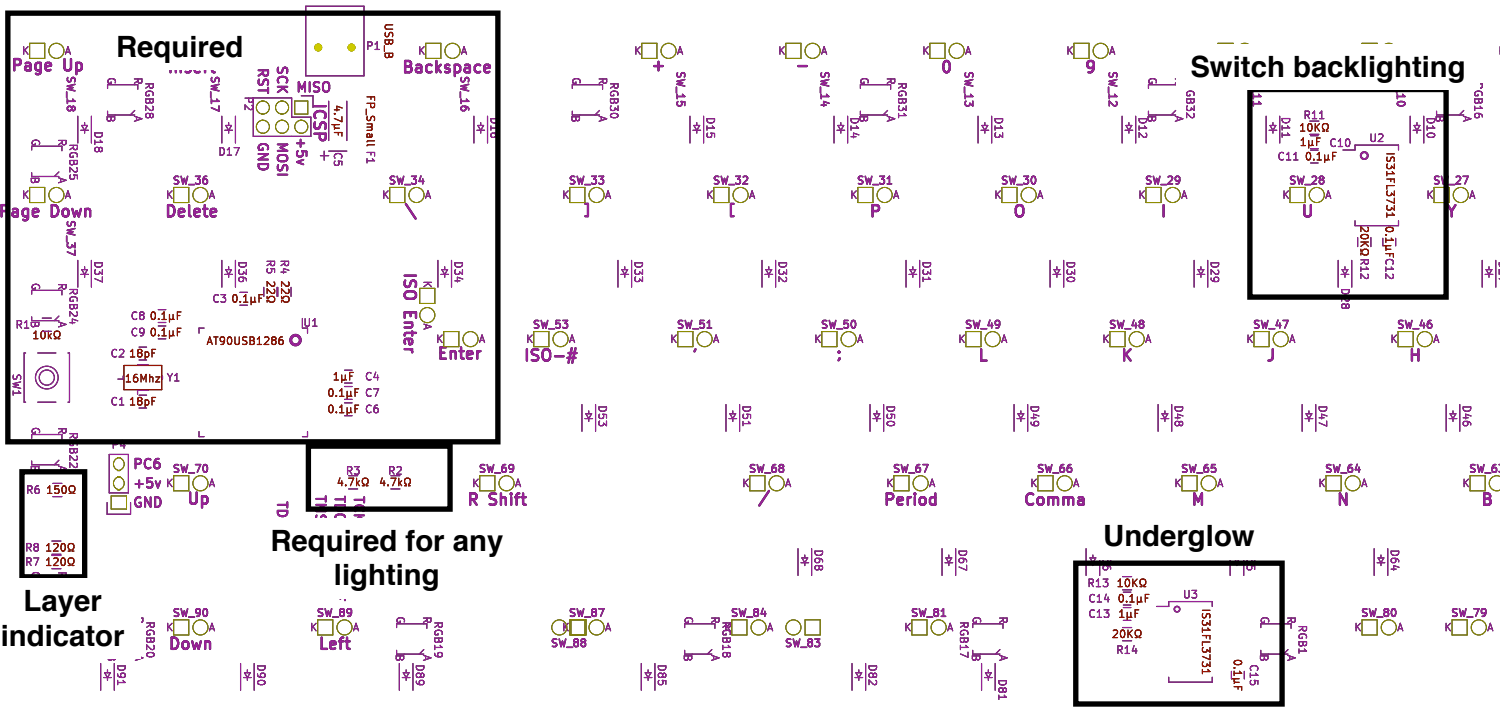
Required
Switch backlighting
Underglow
Required for any lighting
Layer indicator
Page Up
Backspace
Page Down
Delete
ISO Enter
Enter
ISO-#
Up
R Shift
Period
Comma
Down
Left
AT90USB1286
16Mhz
USB_B
MISO
SCK
RST
MOSI
GND
+5v
PC6
IS31FL3731