

自动封边系列使用说明书

Automatic edge banding series user's manual



1 站式定制家具方案

精准开料 | 高速裁板 | 自动封边 | 数控钻铣

CNC Router Machine | Computer Beam Saw | Edge Banding Machine | CNC Drilling Machine

Contents

1 Overview	6
2 Documents Included With The Machine	7
3 Safety Information	3
3.1 Operating Procedures	3
3.2 Labels & Symbols	4
4 Technical Information	8
4.1 Machine Description	8
4.2 Model Description	8
4.3 Main Components	9
4.4 Technical Parameters	10
4.5 Nameplate	11
5 Safety Devices	12
6 Working Device Introduction	13
7 Transport And Lifting	7
8 Equipment Installation	18
9 Dust Collection System Conditions	18
10 Power Usage Conditions	9
11 Pneumatic Use Conditions	9
12 Debugging And Assembly	20
12.1 Feed Guide Adjustment	20
12.2 Pressure Beam Height Adjustment	20
12.3 Bevel Edge Crushing Device	21
12.4 Panel Bevel Width Adjustment	23
12.5 Pre-milling Device	25
12.6 Oblique Gluing Device	28

12.7 Gluing And Tape Feeding Device	30
12.8 Quick Melt Device (Optional)	35
12.9 Pressing Device	37
12.10 Oblique Pressing Device	40
12.11 Bevel Edge Fine Trimming Device	42
12.12 End Cutting Device	46
12.13 Straight Edge Fine Trimming Device	49
12.14 Corner Rounding Device	53
12.15 Scraping Device	59
12.16 Front And Rear Cleaning Device	61
12.17 Buffing Device	62
12.18 Off-cut Device (Optional)	64
12.19 Flat Scraping Device (Optional)	65
12.20 Simple Flat Scraping Device (Optional)	67
12.21 Main Operation Panel	70
13 Software Operation	71
13.1 Control Interface Introduction	71
13.2 Start Menu Interface Introduction	72
13.3 Parameter Setting Interface	72
13.4 Troubleshooting Interface	73
14 Power on and off	78
14.1 Equipment Startup Inspection Process	78
14.2 Power on	78
14.3 Shutdown	79
14.4 Bevel Edge Banding Function Selection Operation Process	80
14.5 Straight Edge Banding Function Selection Operation Process	81
15 Maintenance Manual (See Maintenance Manual for Details)	82
16 List of Wearing Parts	83
17 Appendix	85

17.1 Packing List.....	85
17.2 Pneumatic System Diagram.....	85
17.3 Circuit Diagram.....	85
17.4 Maintenance Manual.....	85
17.5 Equipment Warranty Card.....	85
17.6 Product Certificate.....	85

1 Overview

This operating manual contains the information required for operating and debugging this machine, which will help you understand and master the operation of this equipment to a great extent .

Due to factors such as machine upgrades, the description of some components may differ from the actual product, but it will not affect your operation and debugging of the machine .

The following marks in the operating instructions require special attention:



This symbol is used to indicate an issue of particular importance that must not be ignored.



This symbol indicates extremely dangerous content, and special attention should be paid to its contents to avoid serious accidents.

Manual code: FB-509R-001
Version: REV.1.1

2 Documents Included With The Machine

During the use of the machine, ensure that the accompanying documents of the machine are delivered to the customer intact. Any operator of the equipment must check the accompanying documents of the machine during the transportation, installation, commissioning and maintenance of the equipment. Keep the documents in an appropriate place for easy access by operators and maintenance personnel.

The documents accompanying the machine include:

1. User Manual: According to the type of machine, it provides detailed instructions on equipment safety, usage information and software operation, and is divided into several chapters according to the complexity of the operation.
2. Packing list: detailed description of machine components and tool accessories.
3. Pneumatic system diagram: According to the type and model of the machine, illustrate the principle of the equipment's gas circuit (appendix operating instructions) .
4. Circuit system diagram: According to the type and model of the machine, provide a graphic illustration of the circuit principle of the equipment (appendix: operating instructions) .
5. Maintenance manual: detailed instructions for daily maintenance, lubrication and cleaning of the equipment.

3 Safety Information

3.1 Operating Procedures

1. The operator must be familiar with the machine's performance, purpose, and precautions before operating. It is strictly forbidden for personnel who have not received systematic training to operate the machine alone.
2. Check whether the ground wire is intact and reliable.
3. There should be sufficient lighting for night work.
4. It is strictly forbidden to operate the machine while wearing gloves, necklaces, ties, etc.
5. It is strictly forbidden to operate the machine when you are sick, drunk, or taking drugs (which affects the reaction speed) .
6. This machine must be used by one person only and may not be used without permission.
7. Wear work clothes, goggles and masks, and check whether your personal clothes are "three tight": tight collar, tight clothes, and tight hem of the top.
8. Check whether there is any debris in the work area to prevent slips and trips.
9. Before starting the machine, check whether the safety cover is securely positioned and whether there are any tools or foreign objects placed on the components.
10. Before operation, check whether the tool is deformed or broken, whether the tool edge is clean, and whether the tool is completely locked.
11. When the tool is running, do not set the tool speed to exceed the maximum speed.
12. After the machine is maintained, all safety devices must be installed before it can be restarted.
13. If a fault occurs during machine operation, the machine must be stopped immediately, the power supply must be turned off after the machine stops, and warning signs must be set up. Non-professional maintenance personnel are not allowed to dismantle the equipment without authorization.
14. When the operator leaves his post for some reason, he must shut down the machine first.
15. During the operation of the machine, do not approach or touch the rotating or moving components.
16. Dust and debris must be cleaned regularly.
17. After the operation is completed, turn off the machine switch button, cut off the power supply, and wait for the machine to stop completely and wait for at least 2 minutes before approaching electrical equipment.

3.2 Labels & Symbols

Depending on the structure of the machine tool, the following lists the danger signs and instruction signs that may appear on the machine.





3.2.1 Warning labels

Symbol	Symbol Description
	Caution! Hot surface!
	Caution! Cutter Running in High Speed!
	Watch your hand!
	Watch out for the chain pinch!
	Caution! Collision!
	Watch out for the saw blade!
	Watch your hand!







Labels & Symbols

Symbol	Symbol Description
	Danger! Electric Shock
	Danger



3.2.2 Command labels

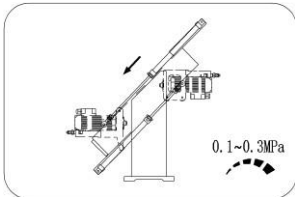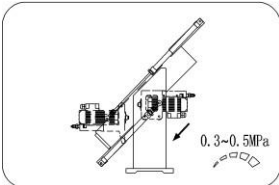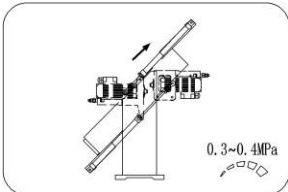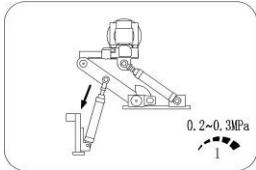Symbol	Symbol Description
	Front end cutting downward sign
	Rear end cutting downward sign
	Rear end cutting upward sign
	Lower corner rounding downward sign

Labels & Symbols

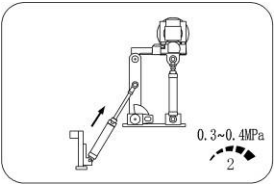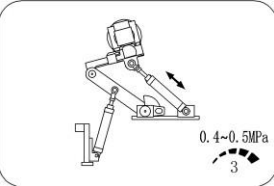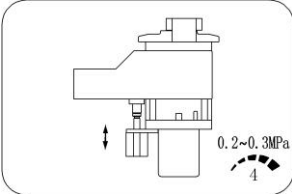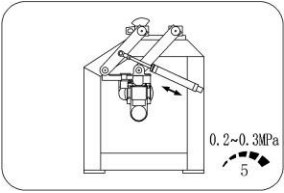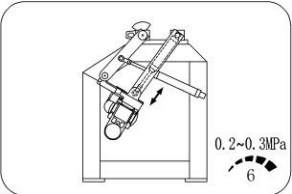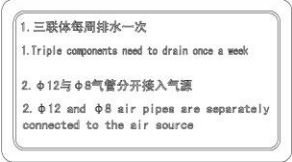Symbol	Symbol Description
	Lower corner rounding upward sign
	Lower corner rounding upward sign
	Upper corner rounding forward & backward sign
	Upper corner rounding upward sign
	Upper corner rounding and flip down sign
	Triplet drainage instructions

Labels & Symbols

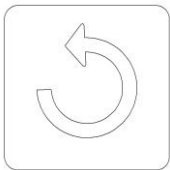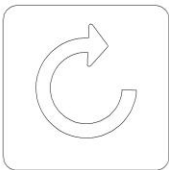Symbol	Symbol Description
	Right-handed direction of pre-milling milling cutter
	Left-handed direction of pre-milling milling cutter
	Gas storage tank drainage instructions

4 Technical Information

This chapter mainly describes the machine type, main components, equipment parameters, safety devices and working devices.

4.1 Machine Description

HH5 The series edge banding machines are mainly used for edge banding of solid wood boards, fiberboards, sandwich panels and plywood. The edge banding types are mainly

PVC , melamine paper and thin wood veneer, etc. The specific type mainly depends on the construction of the working device.



The following materials cannot be processed:

1. Gypsum board
2. Plexiglas, polycarbonate foam
3. Glass
4. Metal
5. Plastic board

This is not a complete list; please contact the manufacturer for specific processing requirements.



1. Illegal applications are prohibited. Unauthorized use may affect device stability and may even cause malfunctions and damage, potentially endangering the health and life of operators.

2. The manufacturer/supplier assumes no responsibility for any losses resulting from illegal use.

4.2 Model Description

5 0 9 R L P K Q

Optional Units

Q: Pneumatic D: Off-cut Unit G: Double scraping P: Flat scraping
H: Lower grooving unit T: Upper grooving unit S: Horizontal grooving unit

K: Quick melt

P: Flat scraping

L: Double gluing unit (no L means single gluing unit)


R: With corner rounding unit (no R means no corner rounding unit)

9: Bevelling machine

5: Double trimming device


4: Single trimming device

4.3 Main Components

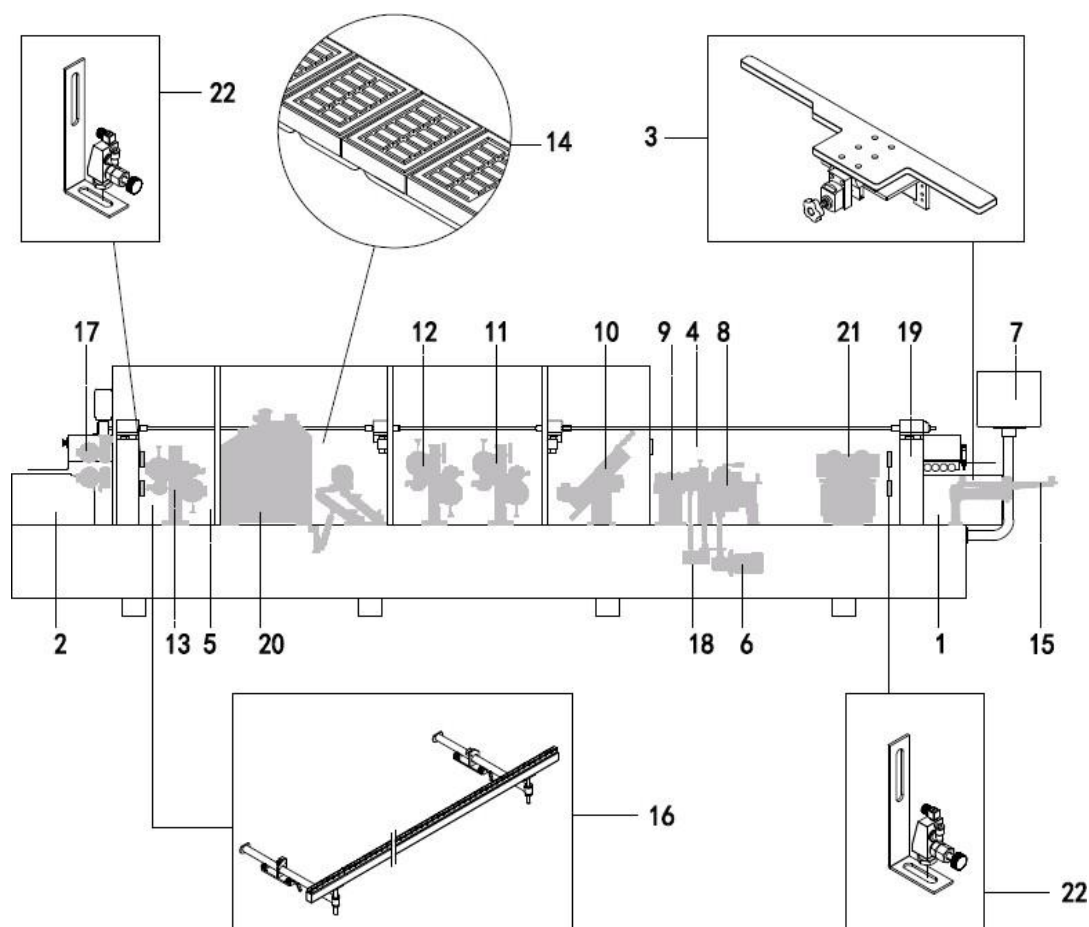

Serial number	Name	Serial number	Name
1	Front sprocket components	12	Fine trimming components
2	Rear sprocket components	13	Scraping components
3	Pre-milling backing plate components	14	Conveyor chain components
4	Upper beam components	15	Edge banding tape pallet components
5	Lower beam components	16	Feeding rack components
6	Gluing motor components	17	Buffing components
7	Display screen electrical box components	18	Gearbox components
8	Gluing tape feeding components	19	Pressure beam lifting components
9	Pressing components	20	Tracking trimmed components
10	End cutting components	21	Pre-milling components
11	Rough trimming components	22	Separate cleaning components


4.4 Technical Parameters

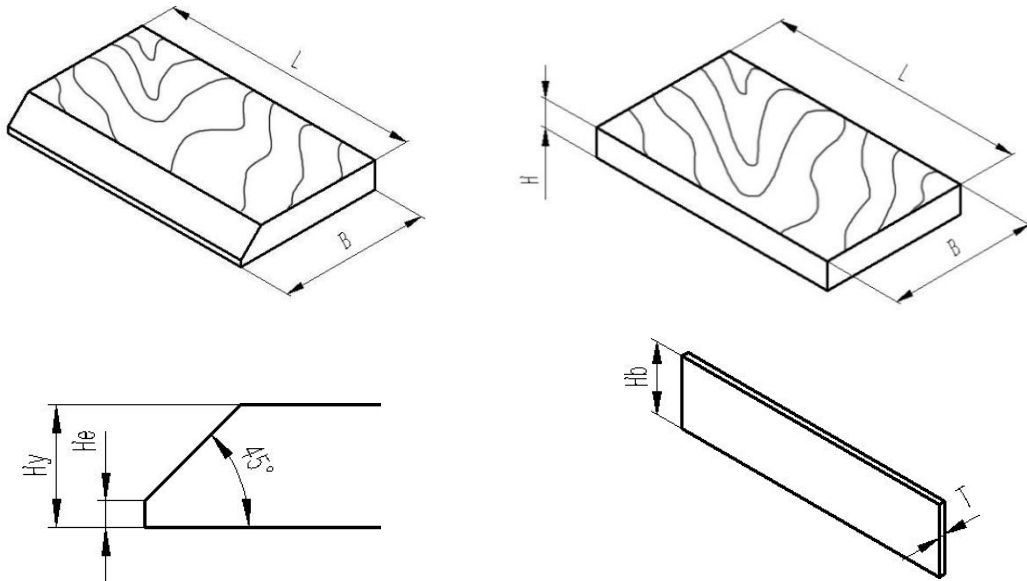

Panel width B	Min. 160mm
Workpiece length L	Min. 160mm
Panel thickness (straight edge) H	10-50mm
Panel thickness (bevel edge) Hy	15-25mm
Partial slope height (bevel edge) He	Min. 5mm
Bevel edge angle	45° (not adjustable)
Edge band thickness (straight edge) T	0.4- 3mm
Edge band thickness (bevel edge) T	1.0mm
Edge band height (straight edge) Hb	Min. 14mm - Max. 54mm
Edge band height (bevel edge) Hb	Min. 25mm - Max. 35mm
Straight edge feed speed	18m/min
Bevel edge feed speed	15m/min
Machine power	26.8KW
Working pressure	0.65Mpa
Dimensions	9300*900*1600mm
Weight	3000kg

Nameplate

4.5 Nameplate

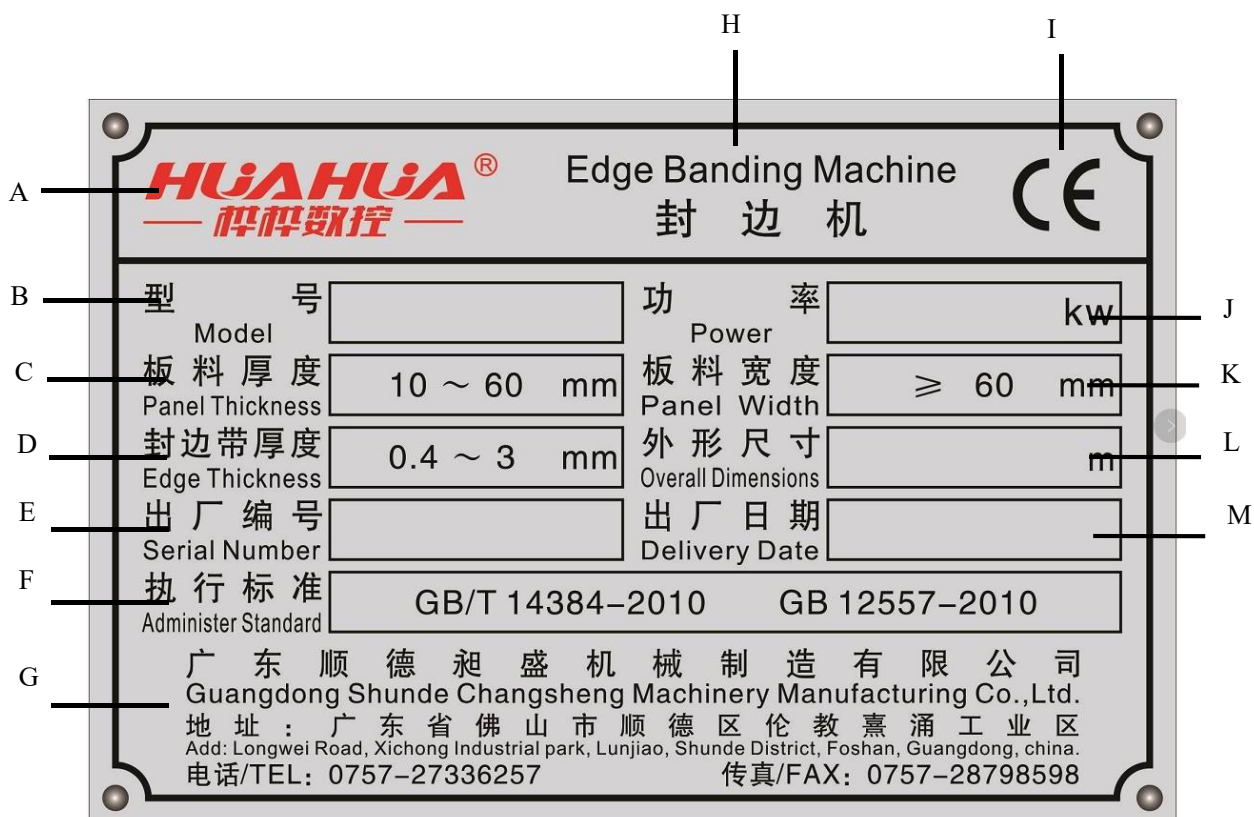

A Brand Logo

H Device Name

B Model

I Execute CE standard

C Panel Thickness

J Power

D Edge Thickness

K Panel Width

E Serial Number


L Overall Dimensions

F Administer Standard

M Delivery date


G Company Name and Address

Nameplate

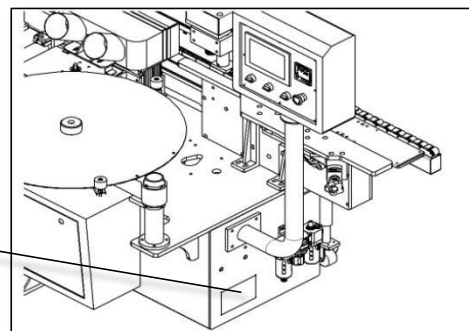

5 Safety Devices

Illustrations and descriptions of the main safety devices

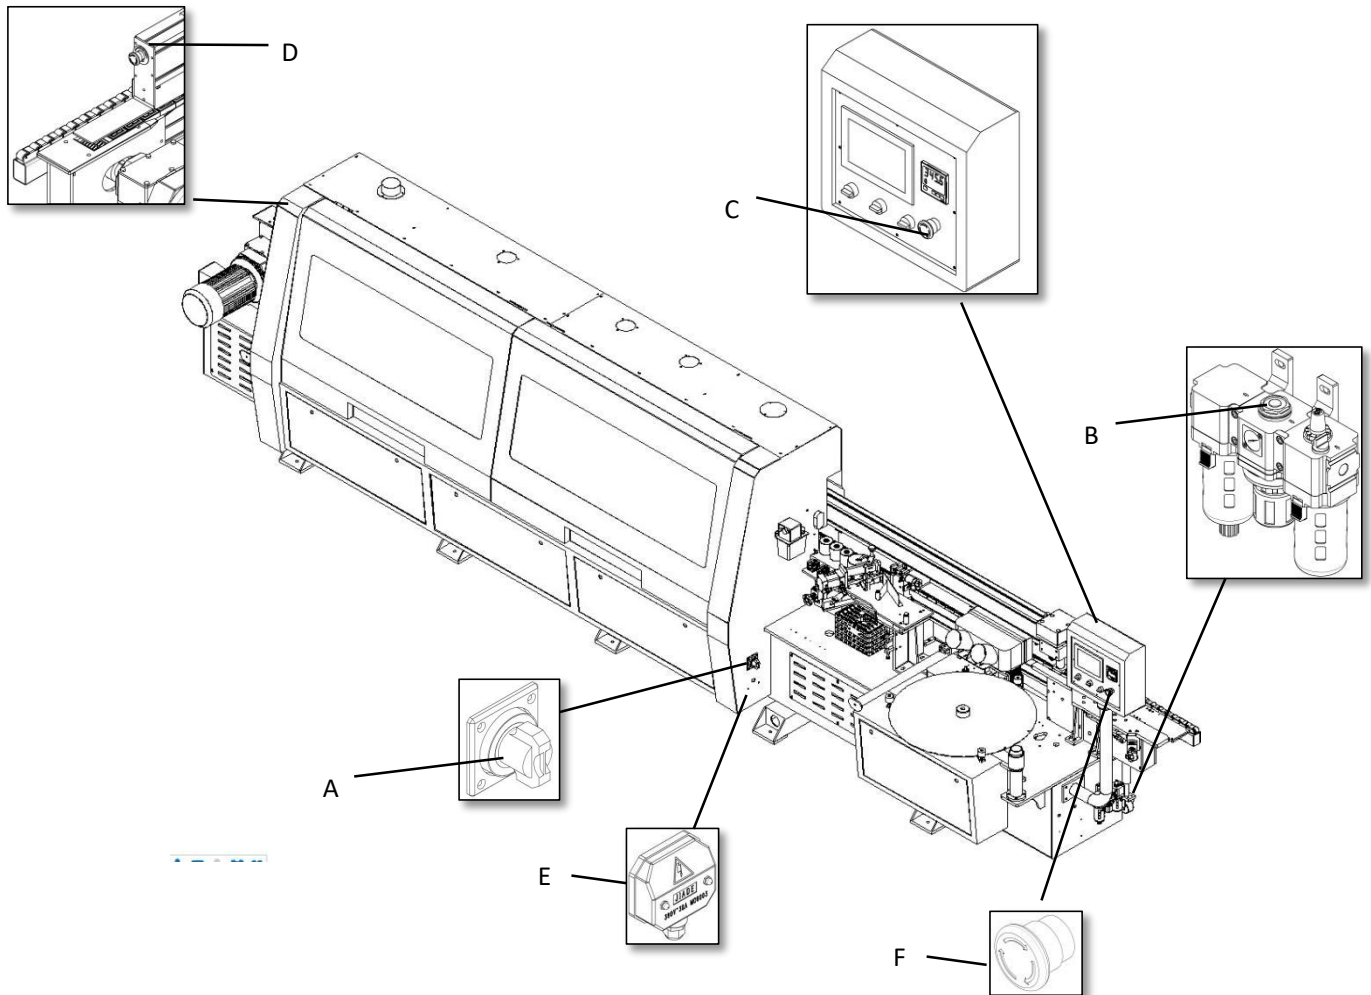

A Main power switch

B Total air source processor


C Electric box emergency stop

D Emergency stop button at the end of discharge

E Main junction box


F Emergency stop button on the operation panel

6 Working Device Introduction

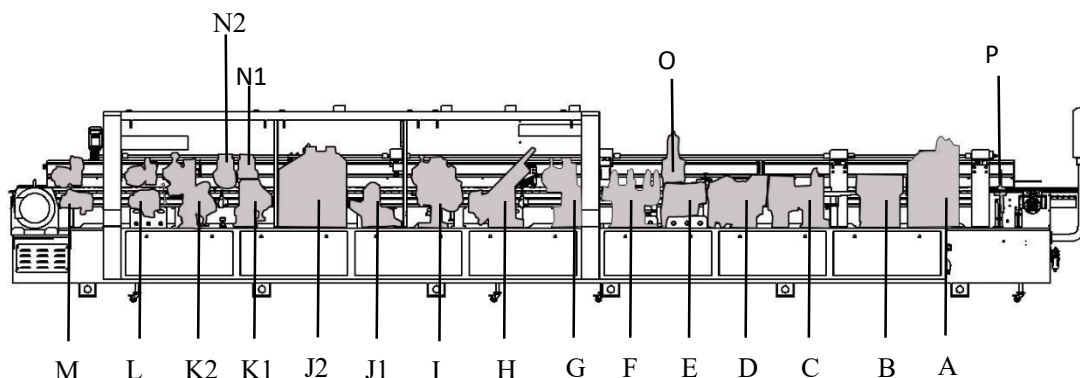


A. Front cleaning device (optional)

The separator is sprayed evenly to the edge of the plate by negative pressure, forming a protective film on the edge of the plate to separate and protect the plate.

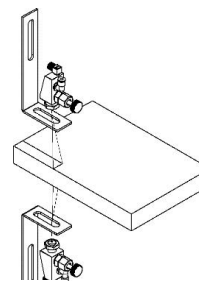


A. Bevel edge crushing device

Use a crushing knife to mill the plate into a partial bevel

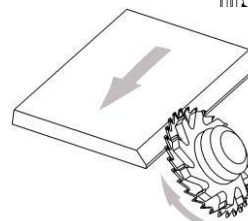


B. Pre-milling device

It is used to mill the sides of the panel because the sides of the panel are uneven or the edges are broken after sawing.

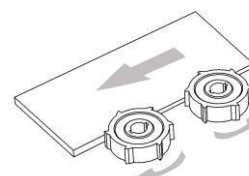


C. Bevel edge gluing device

Apply glue to the bevel edge after milling

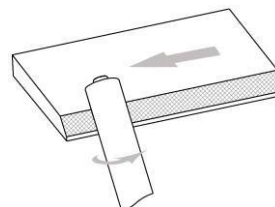

D1. Straight edge gluing device


The gluing shaft evenly spreads the glue in the glue box on the edge of the panel to be sealed.

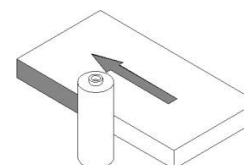


Working Device Introduction

D2. Tape feeding device


The edge banding tape is delivered to the panel by a power pressure wheel.

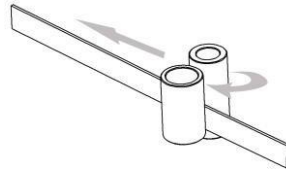**D3. Grooving device**


The grooving saw blade grooves the edge banding tape.

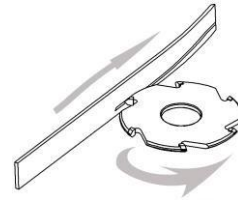**E. Straight edge pressing device**


The pressing wheel presses the edge banding tape and the straight edge of the panel together.

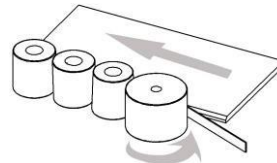**F. Oblique pressing device**


The oblique pressing wheel presses the edge banding tape and the panel oblique edge together.

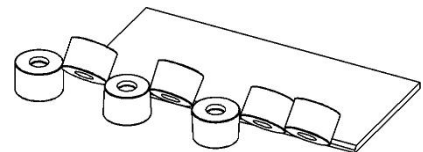**G. Straight edge fine trimming device**

Remove excess edge banding tape from the upper and lower edges of the panel, leaving a certain amount of margin.

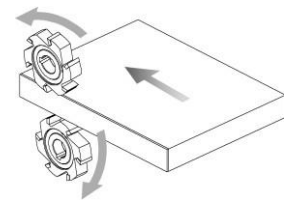
**F. End cutting device**

Remove excess edge banding tape before and after the panel.

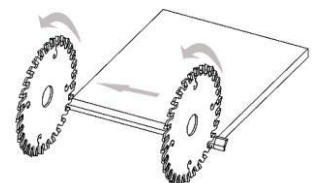


H. Fine trimming device


Fine trim the upper and lower edge banding tape of the panel.

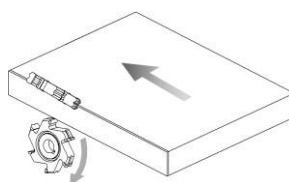**I1. Lower corner rounding device**


The lower edge banding tape on the front and rear components of the panel are rounded.

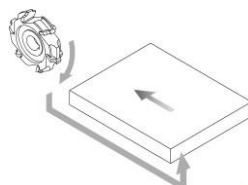**I2. Upper corner rounding device**


The upper edge banding tape on the front and rear components of the panel are rounded.

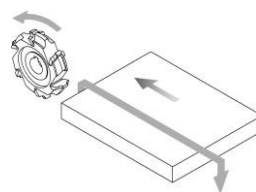**J. Scraping**


Scrape off the knife marks produced by fine trimming on the upper and lower edges of the panel.

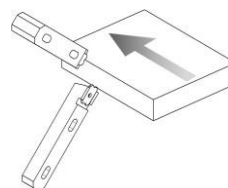**K. Off-cut (optional)**

Remove the filamentous edge banding scraps left on the panel after scraping.

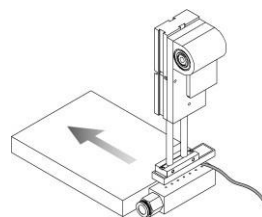**L. Flat scraping**


Scrape off the residual glue between the edge banding tape and the panel on the upper surface of the panel.

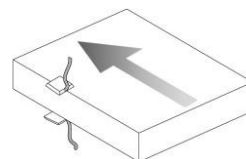


Working Device Introduction

M. Cleaning


Spray cleaning liquid on the upper and lower surfaces of the panel to facilitate buffing and removing residual glue.

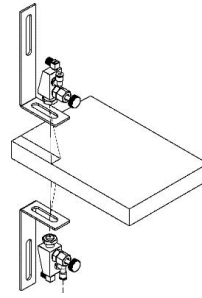**N. Buffing device 1**

Buffing edge banding tape.

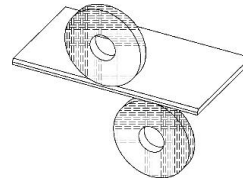
**O. Edge band heating device**

Heating the edge band facilitates bevel edge forming

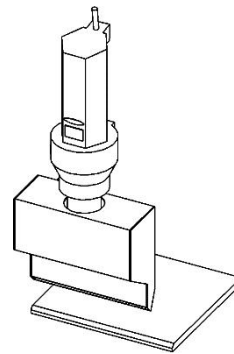

7 Transport And Lifting

Equipment hoisting diagram

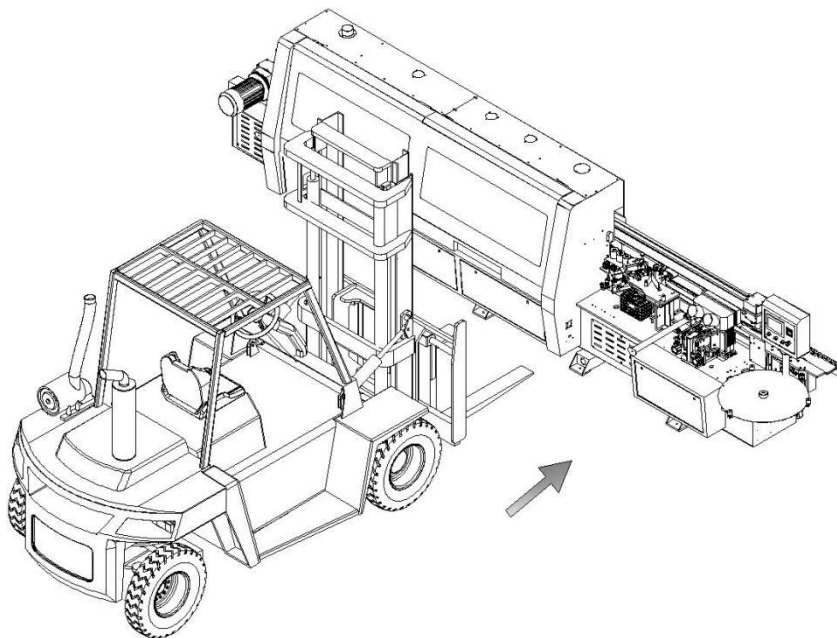


1. All movement and lifting of this machine must be performed by qualified personnel and in accordance with these guidelines.
2. The forklift used must have a load capacity appropriate for the machine. The weight of the machine should be based on the weight of the respective model.



1. Before lifting, ensure the forklift is positioned so that the weight of the equipment is evenly distributed to prevent tipping due to uneven loads.
2. When moving the equipment, avoid sudden movements. Unsteady operation may cause damage and instability.


Model hoisting parameters		
Model	Overall dimensions (length * width * height) (meters)	Reference weight
HH509R	9.3*0.9*1.6	3000KG

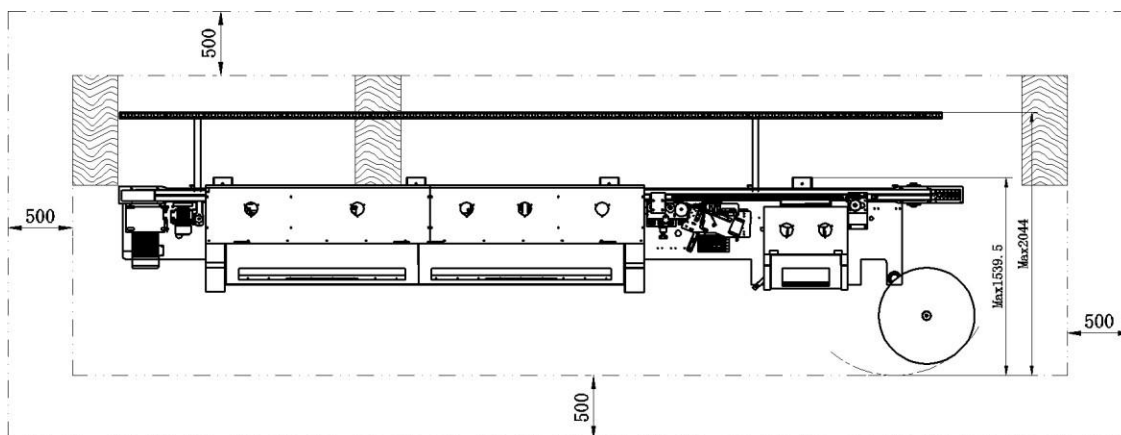

- ⓘ

 1. Machine installation must be performed by professional technicians.
 2. Before installing the machine, ensure that all components are free of damage from impact.
 3. During installation, consider the working dimensions of adjacent equipment components.
 4. It is recommended to maintain a safe distance around the machine's operating area to prevent collisions and other injuries.

9 Dust Collection System Conditions

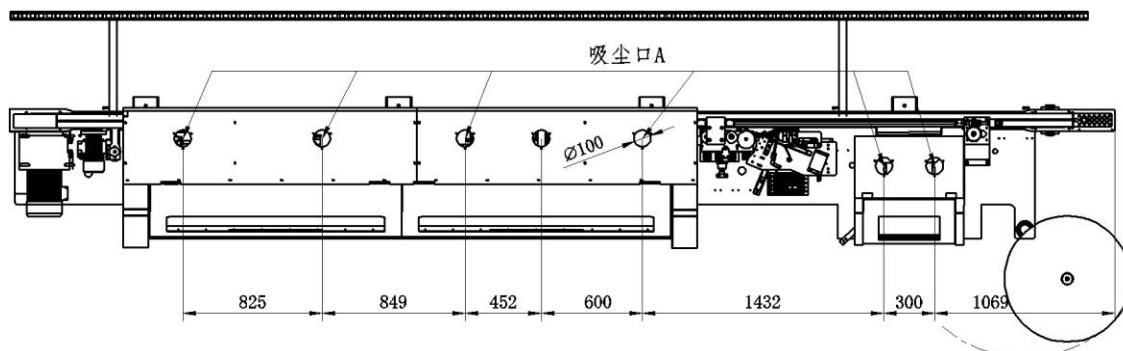


Arrange the dust collection system according to the location of the equipment dust collection port and ensure a speed of 30m/s minimum flow rate.

-  Insufficient dust collection effect may endanger health and affect edge banding effects.

10 Power Usage Conditions

Lead the three-phase power line from the switch box, pay attention to the working voltage and power connection parameters, and check the three-phase UVW Phase sequence, ensure that the motor selection direction meets the use requirements.

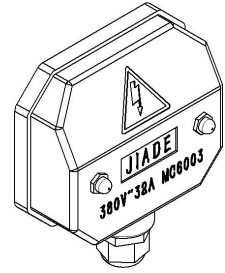

Before starting the equipment, you need to ensure that the power grid can meet the power requirements on the nameplate.




1. The powered equipment is in an electrified state. Abnormal operation poses a risk of personal injury.
2. Maintenance and servicing must be carried out on machines that are disconnected from power to avoid personal danger.

Model power parameters

Model	Power (KW)	Bus wire diameter (mm ²)
HH509R	31.3	8

11 Pneumatic Use Conditions

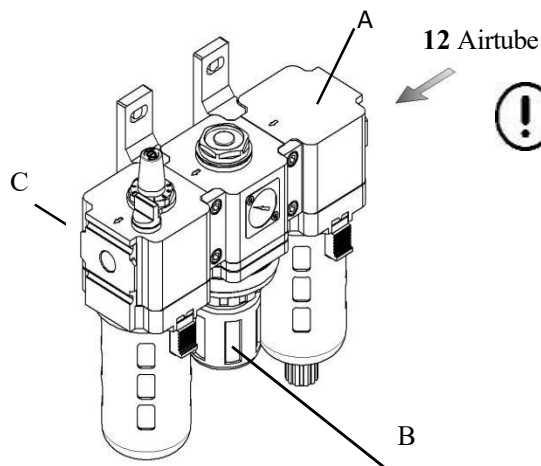


1. The total compressed air source pressure should be 0.6-0.8 MPa.
2. Compressed air must be dried in a cooling dryer or other similar equipment before being fed into the triplex to prevent moisture from causing mechanical failure.
3. Drain the triplex drain cup daily before starting the machine.
4. Check the triplex oil level. If it is less than 1/3 full, add 32# anti-wear hydraulic oil to the 2/3 mark. If the hydraulic oil is thick, increase the oil level; if it is thin, reduce the oil level.

A Filter B Pressure regulating valve C Lubricator

12 Debugging And Assembly

12.1 Feed Guide Adjustment

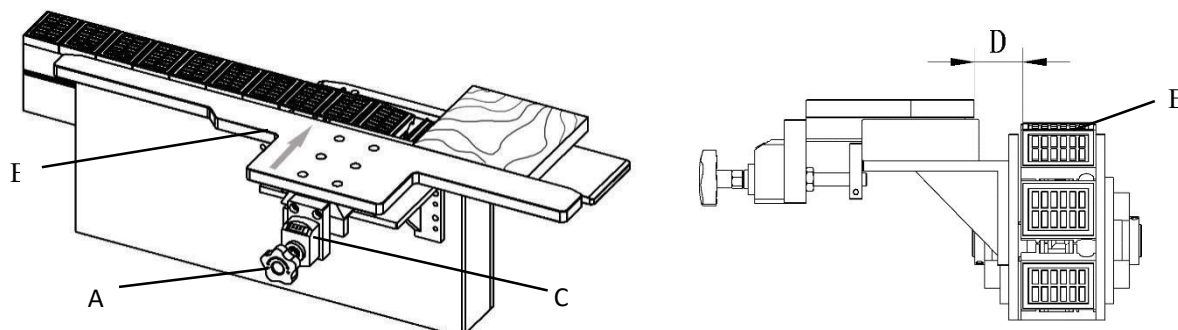


Turn off the machine, turn knob A, adjust guide plate B and chain block E. The distance D between them is based on the counter C. The numerical value determines the pre-milling amount.



1. The standard initial distance D is 3mm.
2. The value on counter C indicates the pre-milling amount. It is factory-set to zero, indicating a pre-milling amount of "0" for the panel.
3. During adjustment, ensure that the guide plate B and the chain block E are parallel in their directions of motion.

12.2 Pressure Beam Height Adjustment

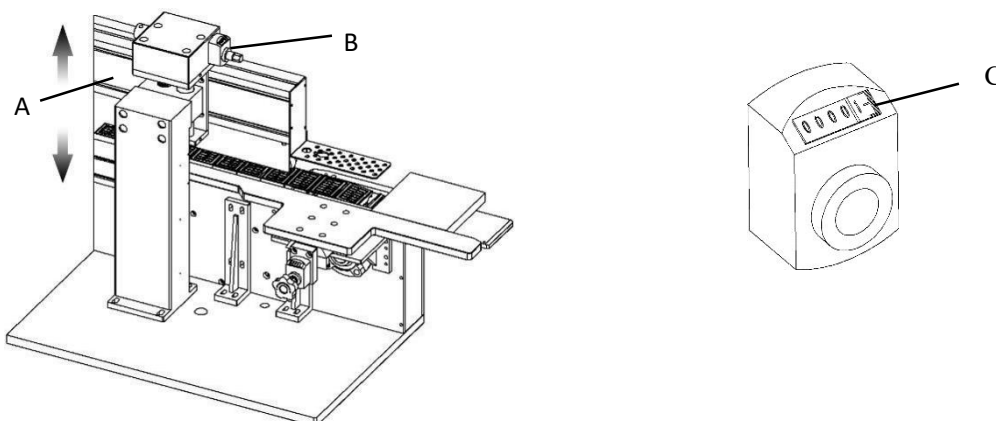


Press the "Beam Up" or "Beam Down" button on the operation interface to control beam A and Set the panel thickness value of C on counter B according to the panel thickness.




1. The minimum unit of the C value on counter B is 0.1mm (for example, if the panel thickness is 18mm, set the C value to 00180).
2. The rise and fall of pressure beam A must be smooth. If there is any significant delay during the rise or fall, the machine must be stopped for inspection.

12.3 Bevel Edge Crushing Device

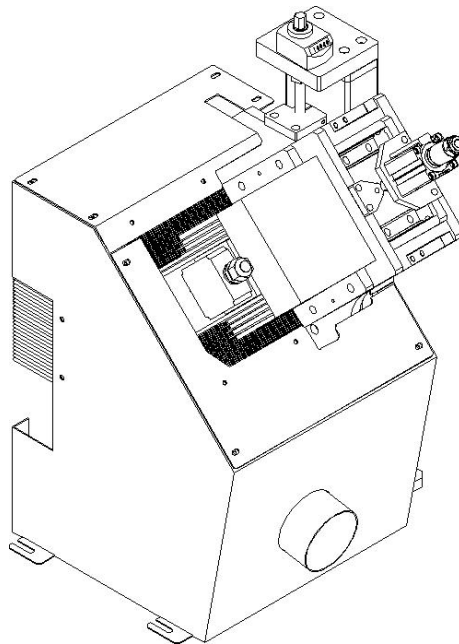


12.3.1 Working Principle

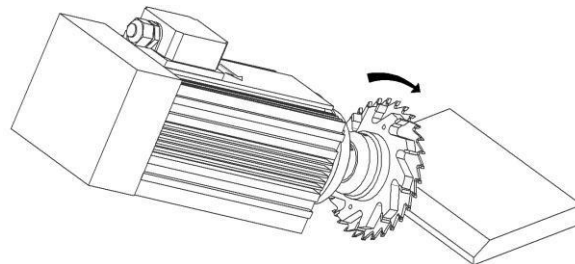

The rotating spindle motor drives the compound saw blade milling cutter at the front end to mill the edge of the panel and eventually form a bevel edge.

12.3.2 Adjustment Device

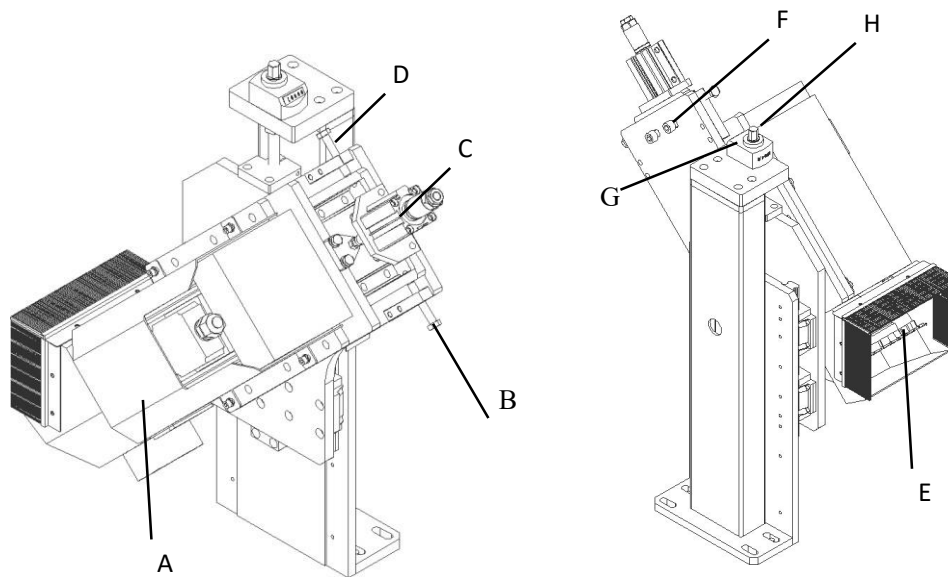

A- Milling cutter motor
C- Forward and backward cylinders
E- Milling cutter
G- Counter


B- Milling cutter swing adjustment screw1
D- Milling cutter swing adjustment screw2
F- Swing plate locking screw
H- Lifting adjustment screw

12.3.3 Bevel Edge Milling Parameters (Standard Model)

Knives	Crushing knife $\phi 160 \times \phi 46 \times 15$
Motor parameters	5.5KW 380V 200HZ 12000rpm
Motor shaft	$\phi 30 \times 40$


12.3.4 Height Adjustment of Bevel Edge Milling Cutter for Different Panel Thicknesses

By adjusting the lifting screw H, the crushing milling cutter E Move up and down to adjust the value of counter G to the corresponding panel thickness.

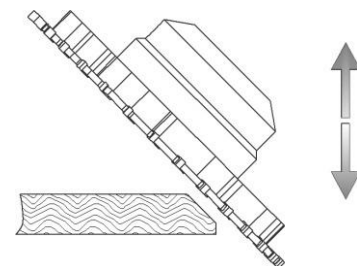

In order to make the edge banding fit the panel better, the minimum straight edge is 5mm

12.4 Panel Bevel Width Adjustment

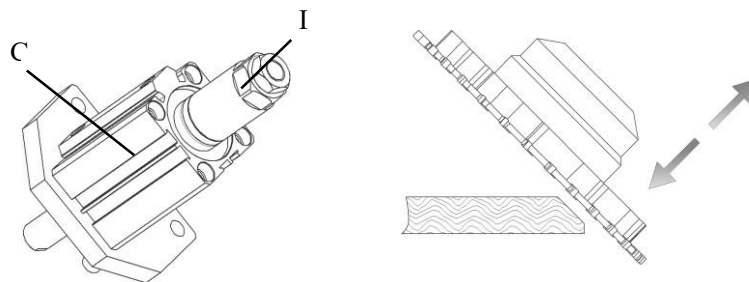


By adjusting the forward and backward cylinder C The adjusting nut I at the tail end enables the crushing milling cutter E to move radially along the inclined surface of the plate, ultimately reaching the required width of the inclined surface .



1. To ensure the edge banding fits the panel better, the minimum straight edge should be 5mm.
2. After adjustment, tighten the nut at the end of the cylinder.

12.4.1 Milling Cutter Angle Adjustment

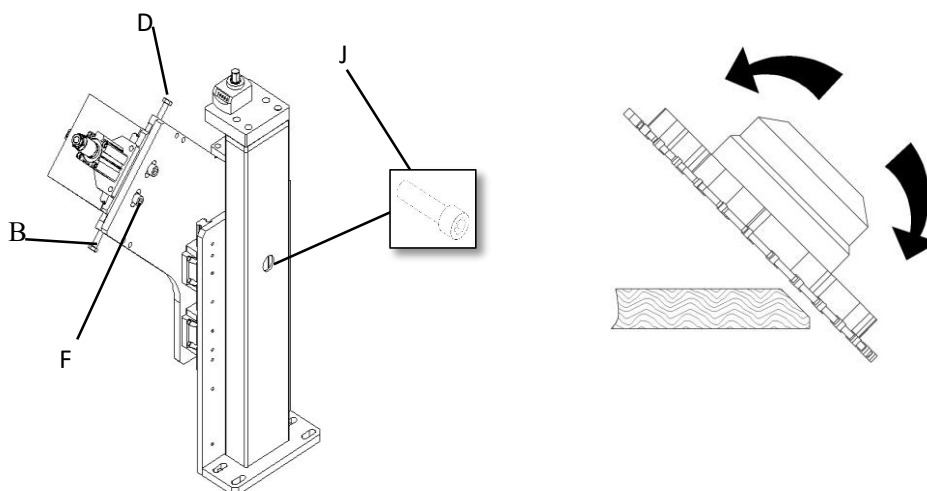


During the use of the equipment, the plate is milled by the crushing milling cutter, and the bevel angle of the plate does not meet 45°. When the milling cutter reaches the desired degree, slightly loosen the screw J , loosen the swing plate locking screw F , and adjust the milling cutter swing adjustment screw 1 and the milling cutter swing adjustment screw 2 , eventually reaching 45° Hypotenuse Angle



1. Before trial cutting the panel, confirm the tool's operating status to ensure that the tool does not collide with other parts

12.4.2 Crushing Tool Replacement

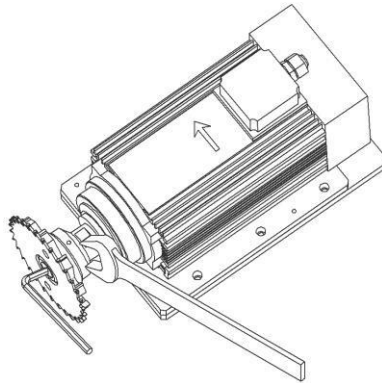


Remove the outer cover and use an open-end wrench and an Allen wrench to disassemble the tool as shown in the figure.



1. The metal shield of the crushing device effectively prevents wood chips from flying during the panel processing and protects against injuries caused by the high-speed rotating tools. It is strictly prohibited to remove the metal shield and start the device, as this may result in serious injuries.
2. If the tool is not securely fixed, it may cause the tool or its components to fly out, posing a danger.
3. During the operation of the crushing device, it is strictly forbidden to bring hands or any body parts close to the high-speed rotating tools.


12.5 Pre-milling Device

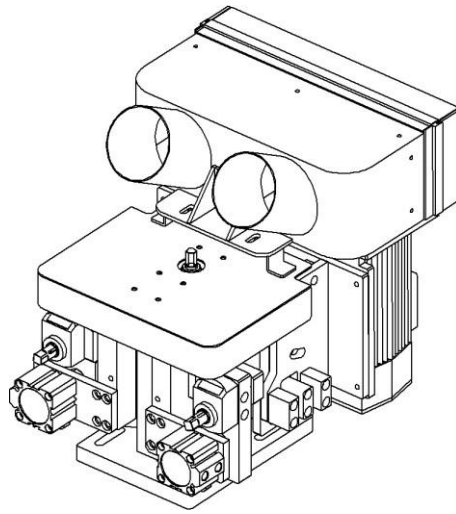


12.5.1 Working Principle

After the panel is processed by the CNC router machine, computer beam saw and cutting machine, the panel edge may have wavy lines, burrs or verticality. After the pre-milling mechanism mills the edge of the panel to be sealed, various defects on the edge to be sealed can be eliminated, so that the edge banding strip fits the panel more closely and the edge banding effect of the panel is better.

Pre-milling process:

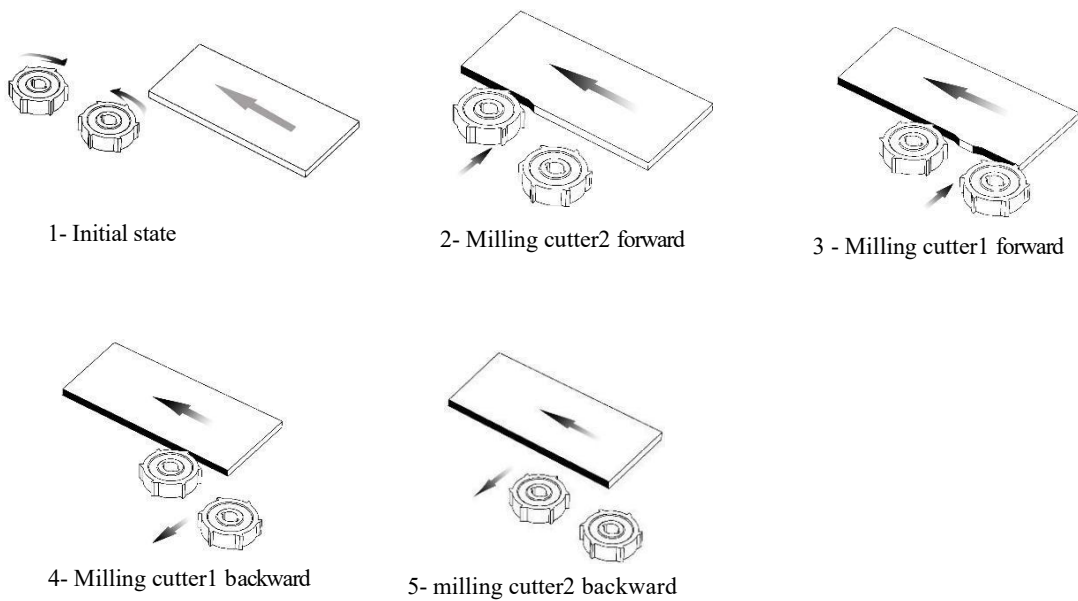

12.5.2 Adjustment Components

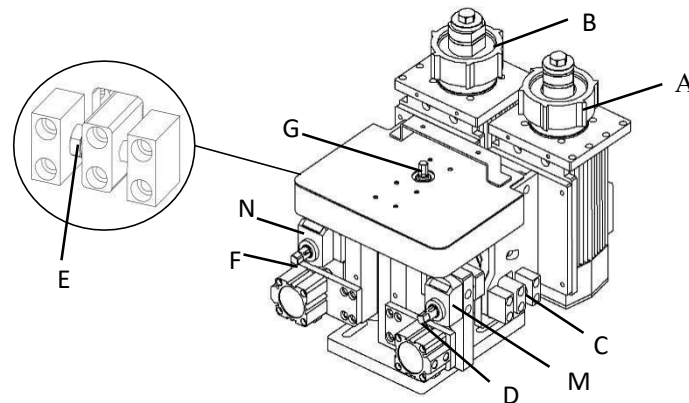


- A - Milling cutter 1 B - Milling cutter 2 G - Double milling cutter lifting adjustment axis
 C - Milling cutter 1 angle adjustment lever D - Milling Cutter 1 Milling amount adjustment axis M -
 Milling cutter 1 position counter E - Milling cutter 2 angle adjustment lever
 F - Milling cutter 2 Milling adjustment axis N - Milling cutter 2 position counter

12.5.3 Pre-milling Parameters (Standard Model)

Knives	H40x125
Motor parameters	2.2KW 380V 200HZ 12000rpm
Motor shaft	φ 30x68

12.5.4 Milling Cutter Height Adjustment


By turning the double cutter lift adjustment axis G, raise the lower cutting edges of cutters 1 and 2 approximately 2 mm beyond the lower edge of the panel.

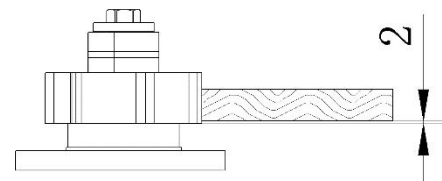

Milling cutters of different widths are required for milling wood boards of different thicknesses. For wood boards less than 18mm, a 35mm width milling cutter is generally used.

12.5.5 Milling Cutter Angle Adjustment

After the panel passes through milling cutter 1 (milling cutter 2), use the knife edge angle ruler to check the verticality between the milling surface and the upper and lower surfaces of the panel. Adjust milling cutter 1 according to the gap between the knife edge angle ruler and the panel. Angle adjustment rod C (milling cutter 2 angle adjustment rod E), finally the milling surface is perpendicular to the upper and lower surfaces of the panel.

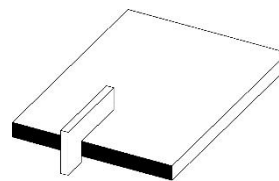

12.5.6 Milling Cutter Milling Position Adjustment

Guaranteed milling cutter 1 and milling cutter 2 The milling amount is consistent, milling cutter 1 Position counter M and milling cutter 2 The position counter is set to "0". If necessary, adjust the milling adjustment axis D of milling cutter 1 and the milling adjustment axis F of milling cutter 1 simultaneously.



1. The relative positions of cutter 1 and cutter 2 are factory-calibrated. The position counters M for cutter 1 and N for cutter 2 are reset to zero. Do not arbitrarily adjust the cutter 1 milling adjustment axis D and the cutter 1 milling adjustment axis F to prevent uneven milling.
2. For pre-milling of panel, simply adjust the feed guide plate counter. The pre-milling amount should not exceed 0.5mm.

12.5.7 Daily Maintenance

Maintenance Project	Frequency	Lubricants
Guide rail slider lubrication	Once /2 months	Lubricating oil


12.5.8 Troubleshooting

Fault	Reason	Measure
The upper side of the panel is not milled to	Wrong milling cutter angle	Adjust the milling cutter angle
The cutting depth of the panel is inconsistent	The milling positions of milling cutter 1 and milling cutter 2 are inconsistent	Adjust the cutting depth of the milling cutter




1. The metal shield on the pre-milling device effectively prevents wood chips from flying during the panel processing and protects against injuries caused by the high-speed rotating tools. It is strictly prohibited to remove the metal shield and start the device, as this may result in serious injuries.
2. If the tool is not securely fixed, it may cause the tool or its components to fly out, posing a danger.
3. During the operation of pre-milling, it is strictly forbidden to bring hands or any body parts close to the high-speed rotating tools.

12.6 Oblique Gluing Device

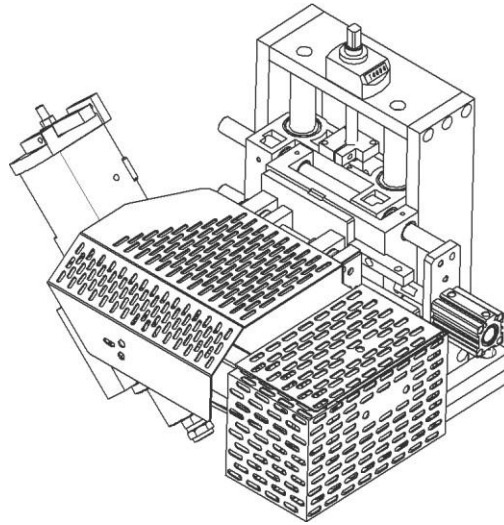


12.6.1 Working Principle

Heat the solid glue until it melts, and then apply glue to the bevel surface of the workpiece to be sealed.

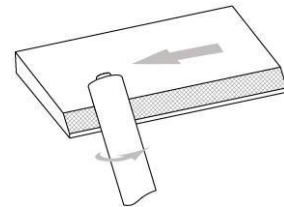

12.6.2 Adjustment Device

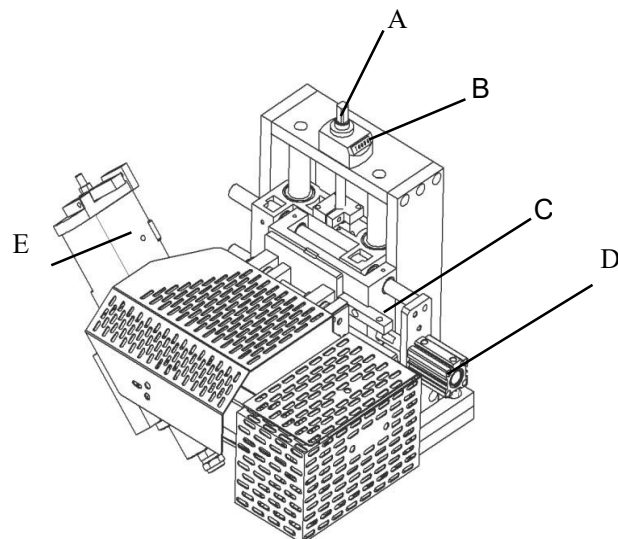


A – Gluing height adjustment lever
D- Gluing forward and backward cylinder

B – Counter
E – Gluing components

C Gluing angle adjustment screw

12.6.3 Gluing Shaft Height Adjustment

By adjusting the glue height
adjustment lever A , the counter B
Adjust to the required panel
thickness

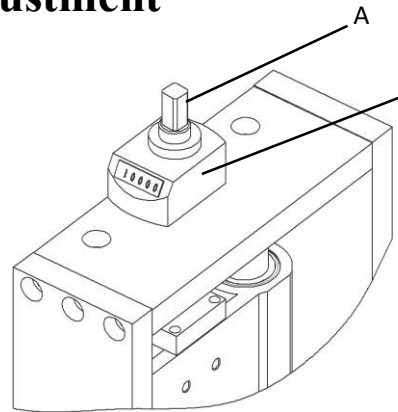

12.6.4 Adjustment Of The Distance Between The Gluing Shaft And The Workpiece

Same as gluing and tape feeding device (see 12.6.3 for details)

12.6.5 Gluing Quantity Adjustment

Same as gluing and tape feeding device (see 12.6.4 for details)


12.6.6 Gluing Shaft Pressure Adjustment

Same as gluing and tape feeding device (see 12.6.5 for details)

12.6.7 Gluing Axis Angle Adjustment


Same as gluing and tape feeding device (see 12.6.7 for details)

12.7 Gluing And Tape Feeding Device

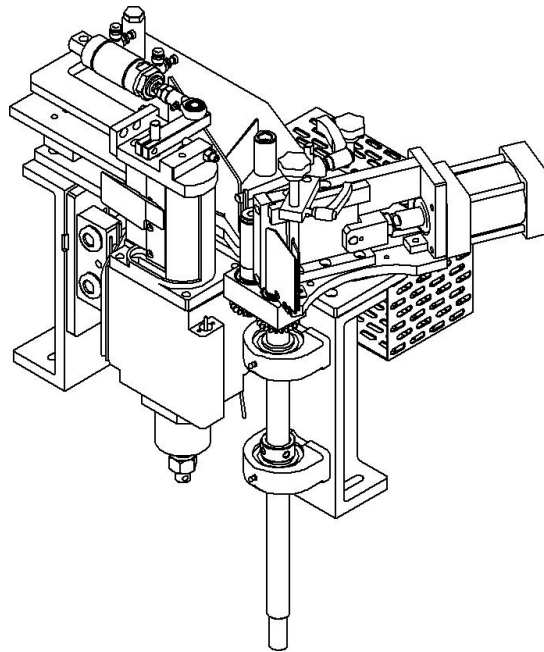


12.7.1 Working Principle


Heat the solid glue until it melts, then apply the glue to the edge-banding surface of the workpiece, and pull the edge banding tape to the surface of the workpiece. Under the action of the glue, they are bonded together, and the edge banding tape is cut after the workpiece passes.

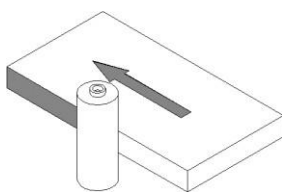

1- Gluing

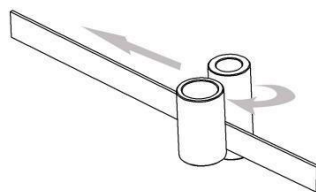


2- Feeding tape

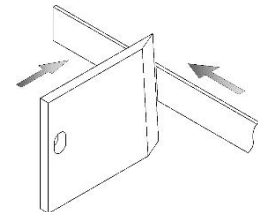


3- Cutting

12.7.2 Adjustment Component

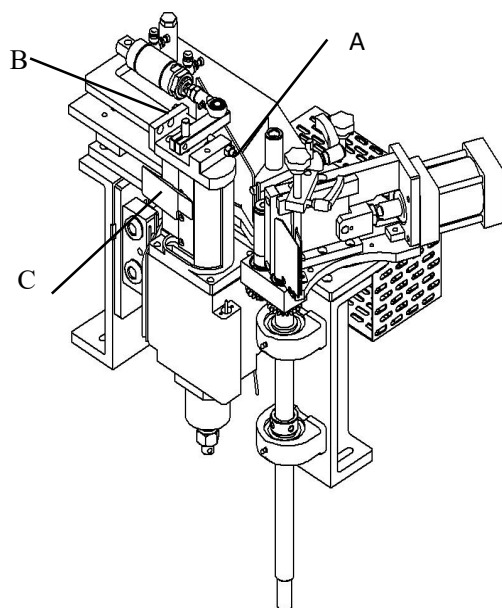

A/B - Glue door adjustment screw
 H - Edge banding tape out adjustment handle
 J - Guide plate adjustment screw

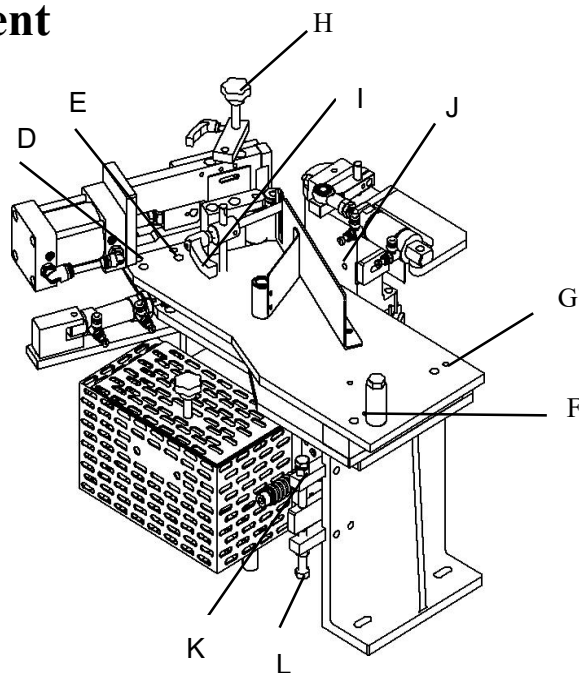


D/E/F/G - Tabletop adjustment screws
 I - Edge band pressure adjustment handle
 K/J - Gluing shaft angle adjustment screw

12.7.3 Adjustment Of The Distance Between The Gluing Shaft And The Workpiece

Using the M6 screw J to adjust the glue application guide C, position the gap between the outer surface of the glue application roller N and the surface of the workpiece at 0.5.




The gap varies depending on the material of the edge banding tape and the panel.

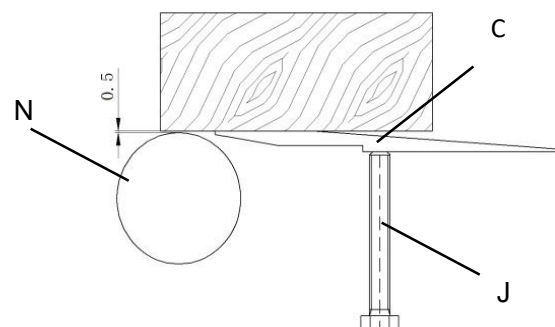


12.7.4 Glue Quantity Adjustment

M8 screw A adjusts the glue volume.
 Screw B is the limit screw for the glue door, preventing damage to the glue shaft during operation.


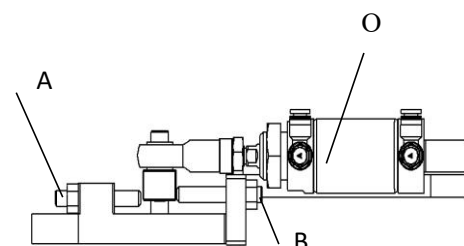


12.7.5 Gluing Shaft Pressure Adjustment

Loosen screw Q and adjust screw P By adjusting the distance of the glue shaft moving forward and backward, the pressure of the glue roller on the workpiece can be adjusted.

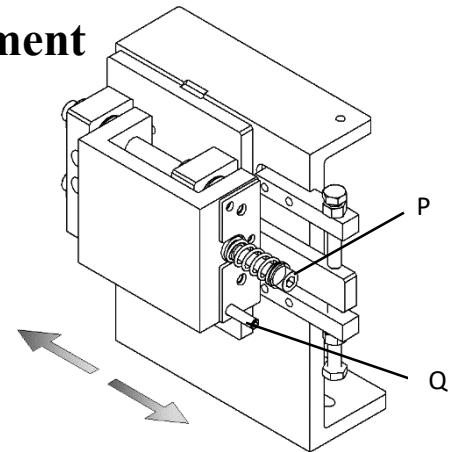


12.7.6 Gluing Axis Angle Adjustment

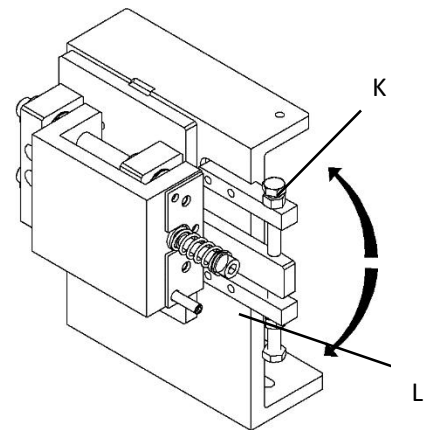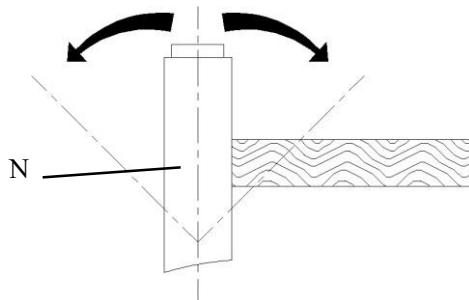


The inclination angle of the gluing axis N is achieved by adjusting screws K and L, ultimately achieving the effect of uniform contact between the gluing shaft N and the panel.

12.7.7 Adjustment Of The Contact Position Between Edge Banding Tape And Panel

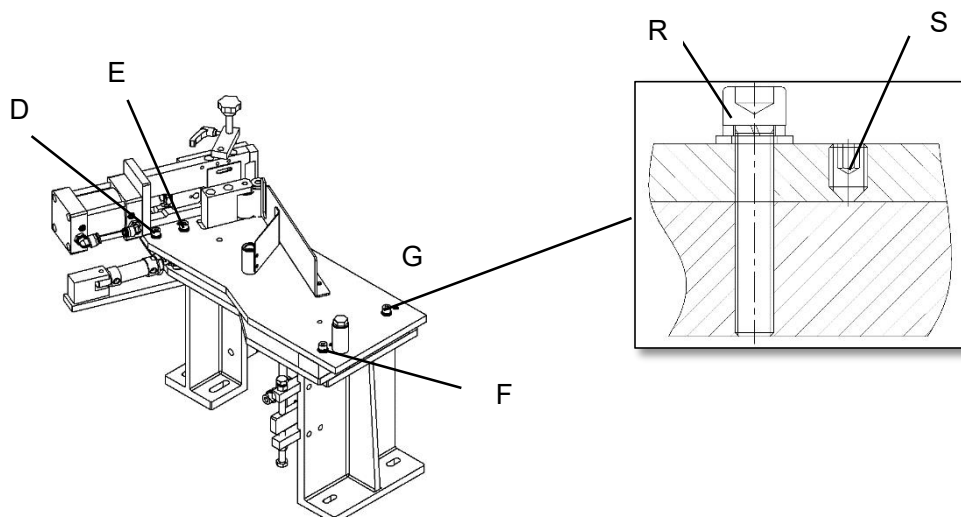

Loosen the bolts R at locations D, E, F, and G on the feeder table. Adjust the machine gauges S at locations D, E, F, and G so that the relative position between the edge banding and the board is K (typically 1.5 mm). Tighten the bolts R on the table top.

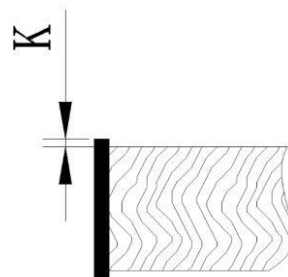


After adjustment, ensure that the entire tape feeding panel is level.

12.7.8 Factors Affecting Tape Feeding

A Height of edge banding tape adjustment rod


By adjusting the tape pressing rod T on the tape feeding table
The distance from the edge banding is guaranteed to be 0.5mm

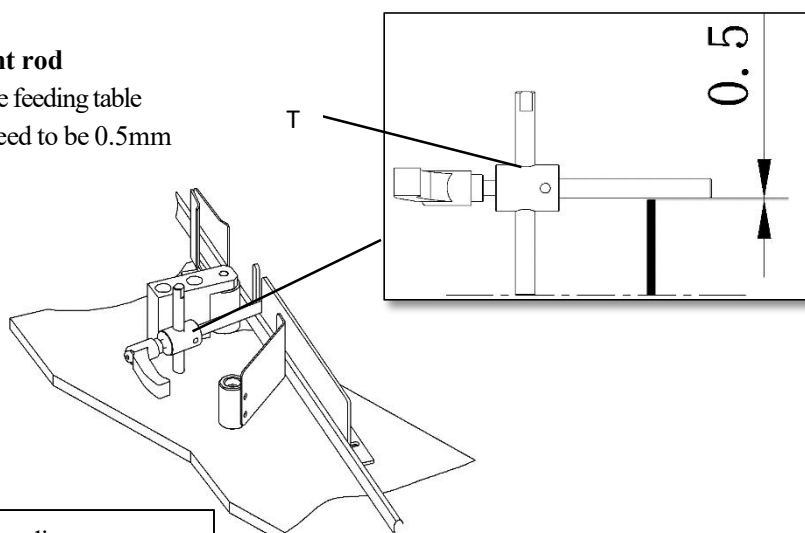

Need to readjust after replacing edge banding tape


B Height of tape out adjustment rod

By adjusting the unloading table pressing rod U
The distance from the edge banding is guaranteed to be 0.5mm

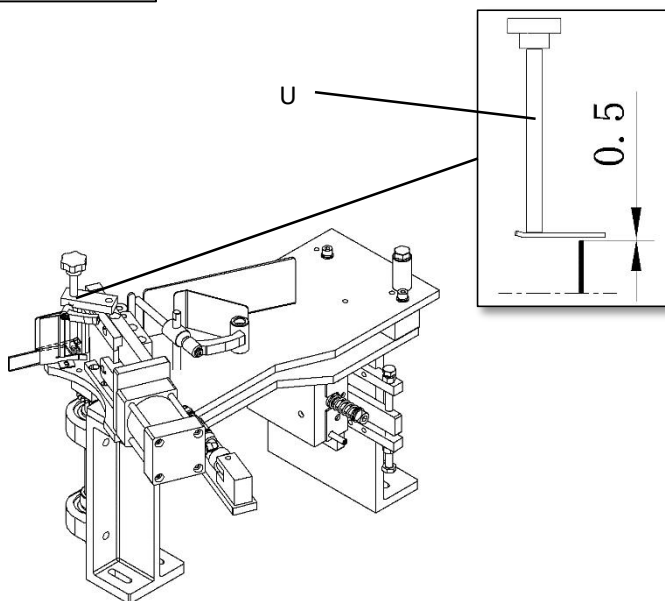

Need to readjust after replacing edge banding tape

C Distance between tape feeding wheel and knife edge

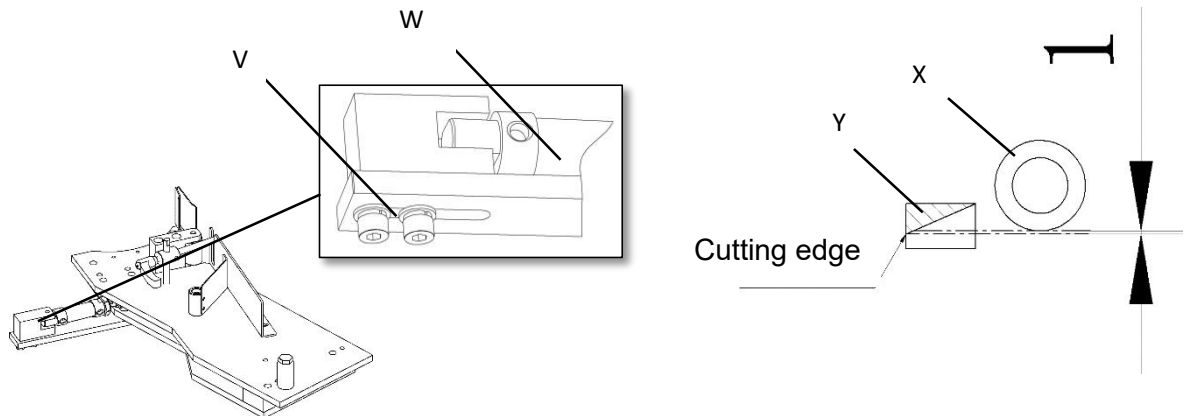


Adjust the fixing screw V of the tie rod cylinder W, move the tape feed wheel X, and adjust the distance between the tape feed wheel X and the cutting tool holder Y to ensure it is 1mm.

⚠ Re-adjustment is required after changing edge banding of different thicknesses

12.7.9 Daily Maintenance

Maintenance Project	Frequency	Lubricants
Gluing universal coupling lubrication	Once /1 week	Lithium grease 3 Number

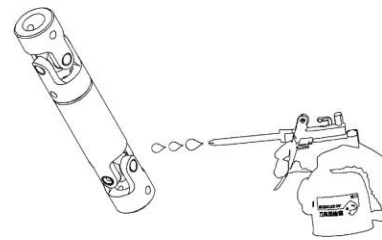


⚠ Deposits such as burnt glue residues and edge banding chips must be removed regularly



1. Some components of this unit may have high surface temperatures. Do not touch hot components during operation or maintenance to prevent severe burns.
2. Heating the pellets may generate toxic vapors that may cause respiratory damage. Wear a safety mask during operation to avoid inhaling vapors and maintain good ventilation in the operating environment.


12.8 Quick Melt Device (Optional)

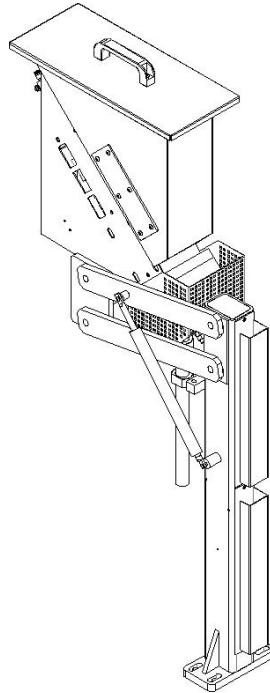

12.8.1 Working Principle



The quick melt mechanism is suitable for continuous operation. When a certain amount of glue in the glue pot is used up, the quick melt component can quickly add glue to the glue pot, which can realize continuous operation without stopping the machine. Compared with the edge banding machine without quick melt mechanism, it reduces the time of stopping for adding glue and heating .

12.8.2 Adjustment Components

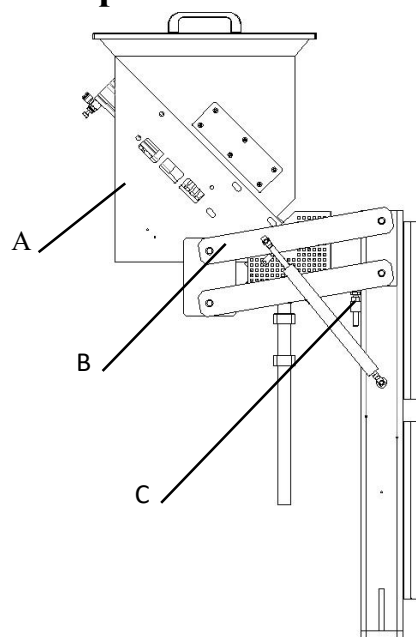

A- Quick melt box B- Quick melt adjustment strip C- Fixing bolt

12.8.3 Quick Melt Box Lifting Adjustment

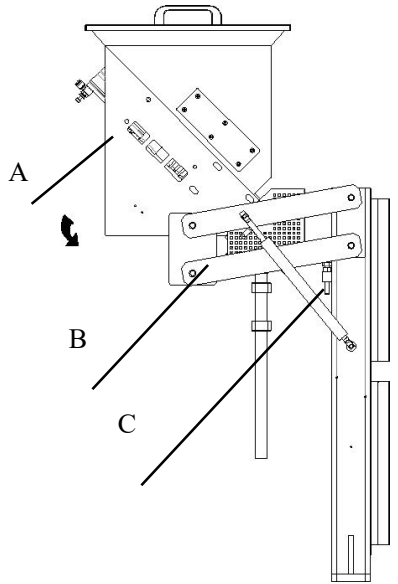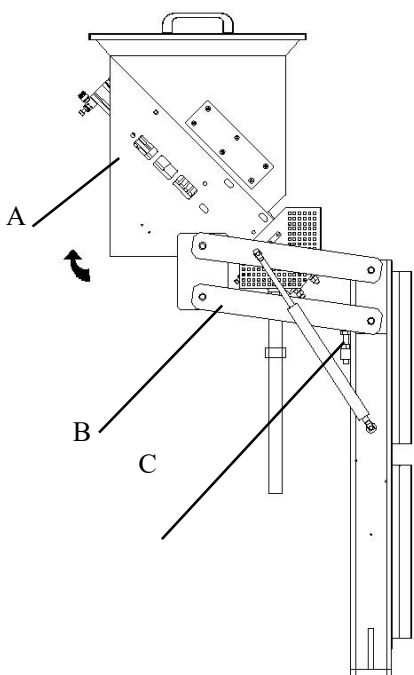
Institutional Status	State
	a. Operating state When using the quick melt mechanism, loosen the set screws and lower the quick melt box A by rotating the quick melt adjustment strip B. Once the mechanism is in working state, tighten the set screws.
	b. Raise state When the quick melt mechanism is not in use, loosen fixing bolt C and raise the quick melt box by rotating the quick melt adjustment levers A/B. Adjust the mechanism to the raise state and tighten fixing screw C.

12.8.4 Manual / Automatic Mode

Manual mode: After adjusting the quick melt to the working state and turning on the quick melt mechanism, when the liquid level amplifier indicator light is red, press the manual glue adding button to add glue manually once, and stop when the liquid level amplifier indicator light turns green.

Automatic mode: After adjusting the quick melt to the working state and turning on the quick melt, press the automatic glue adding button. Whenever the liquid level amplifier indicator light turns red, the quick melt mechanism will add glue to the glue pot, and stop adding glue when the liquid level indicator light turns green.


12.9 Pressing Device

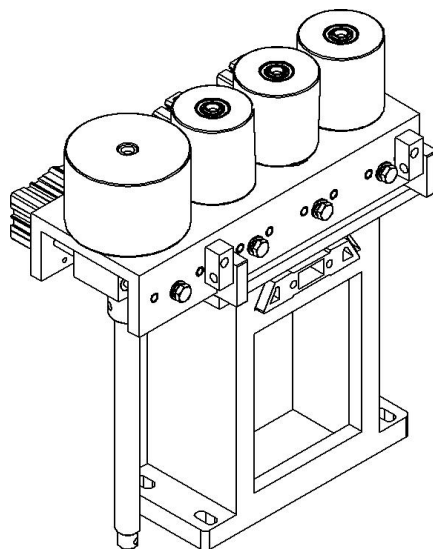

12.9.1 Working Principle

The edge banding is fitted to the panel through the active large wheel, and is closely fitted to the panel through two staggered inclined wheels and one straight wheel .

12.9.2 Adjustment Components

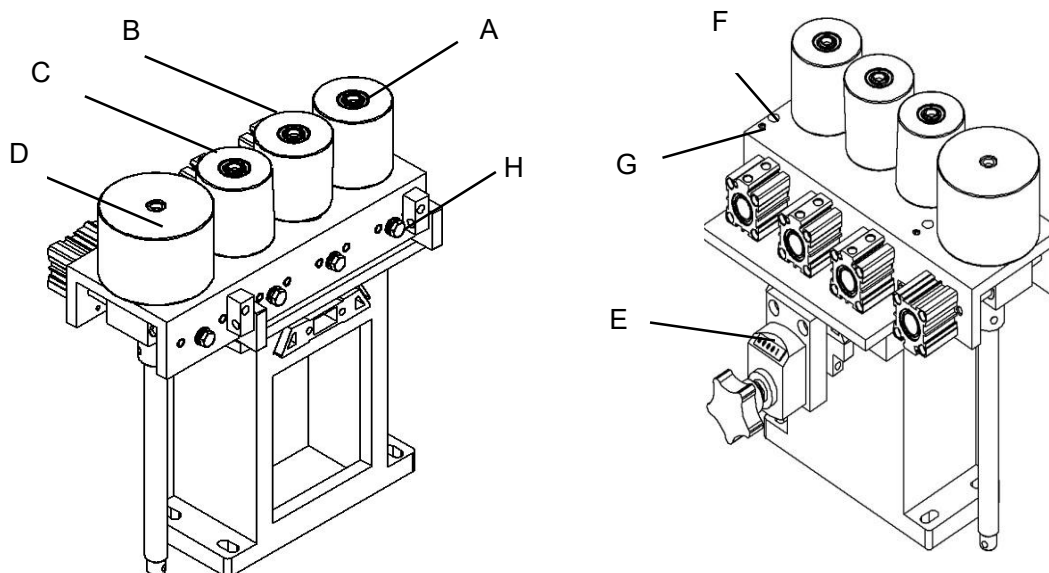

A – Small pressing wheel

D – Large pressing wheel

G – Adjusting screw

B – Inclined pressing wheel


E – Counter

H – Pressing wheel limit screw

C – Inclined pressing wheel

F – Screws

12.9.3 Pressing Wheel Position Adjustment

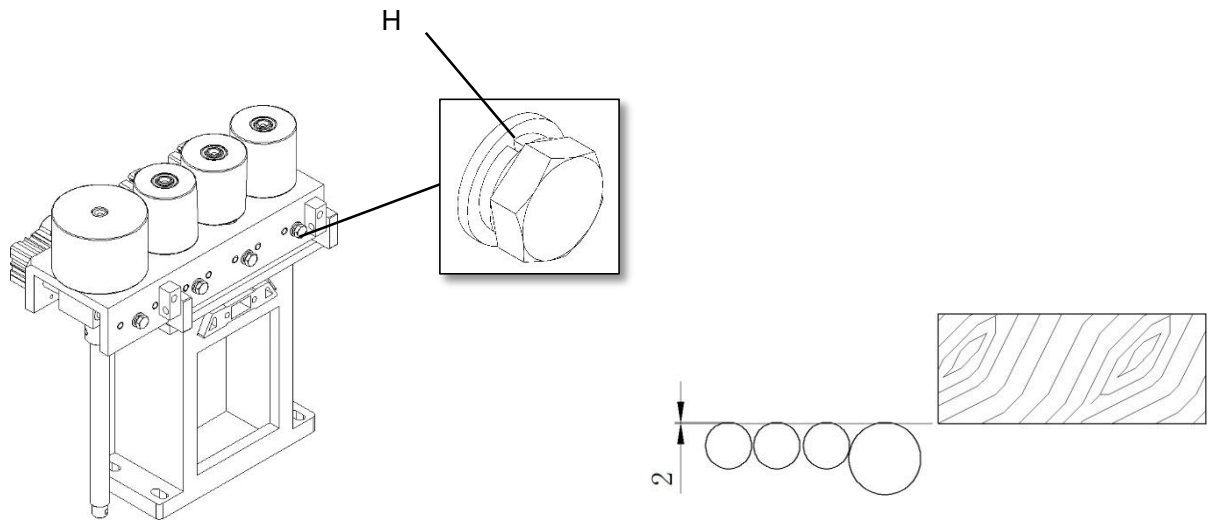


H of each pressing wheel , the relative position of each pressing wheel to the plate is 2mm when working and standing by .


12.9.4 Pressing wheel working pressure adjustment

Each pressing wheel is set in the initial test, and the pressure regulating valve I is adjusted by adjusting each pressing wheel. The working pressure can be further adjusted according to the thickness of the edge banding, generally within the following range.

Edge band thickness (mm)	0.4 ~ 1	1 to 2	2-3
Working pressure (MP)	0.1	0.2	0.3

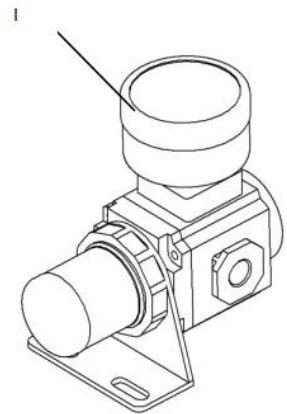

12.9.5 Pressing Wheel Angle Adjustment

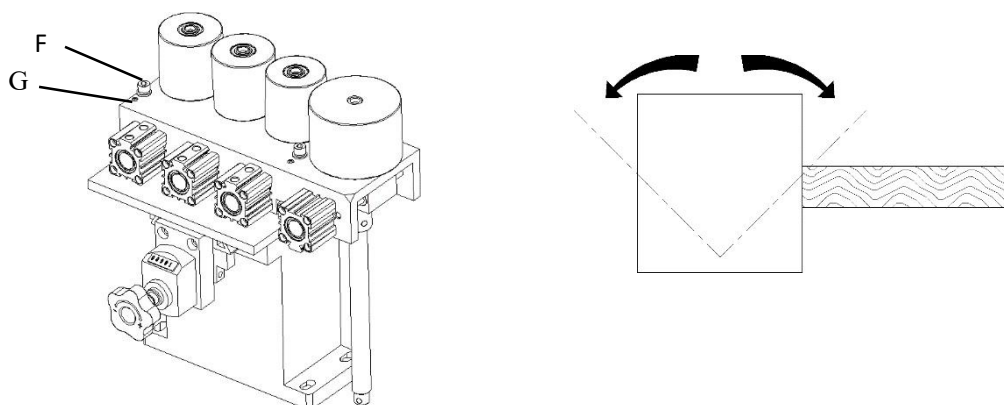

First loosen screw F, use screw G Adjust to the required angle and tighten screw F. That's it.




When the pressing mechanism is in normal working condition, to change to edge banding tape of different thicknesses, simply adjust the counter reading to correspond to the edge banding tape thickness.

12.9.6 Daily Maintenance

Maintenance Project	Frequency	Lubricants
Linear guide lubrication	Once / 1 month	Lubricating oil
Blowing dust	Once / day	Air gun
Cleaning the pressure roller	Once / day	Alcohol
Universal coupling lubrication	Once / week	Lithium grease 3 Number


12.10 Oblique Pressing Device

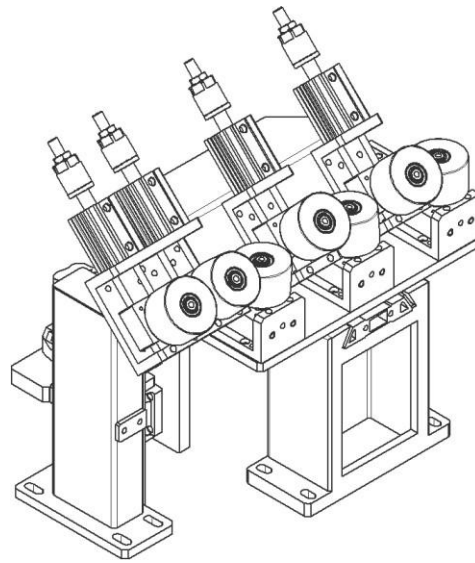

12.10.1 Working Principle

Through multiple rows of alternating oblique and straight pressing wheels, the edge banding and the board are tightly fitted, so that the edge banding fits tightly to the beveled edge of the panel.

12.10.2 Adjustment Components

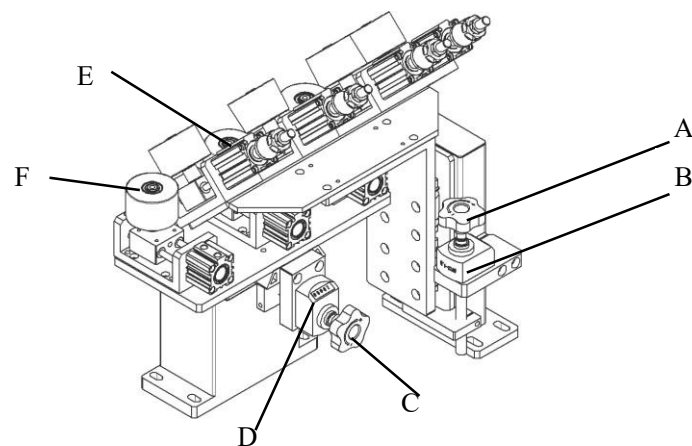

A – Press lift adjustment knob

C – Pressing front and rear adjustment knob


E – Oblique pressure cylinder

B – Counter

D – Counter before and after pressing

F – Pressing wheel

12.10.3 Height Adjustment of the Inclined Wheel

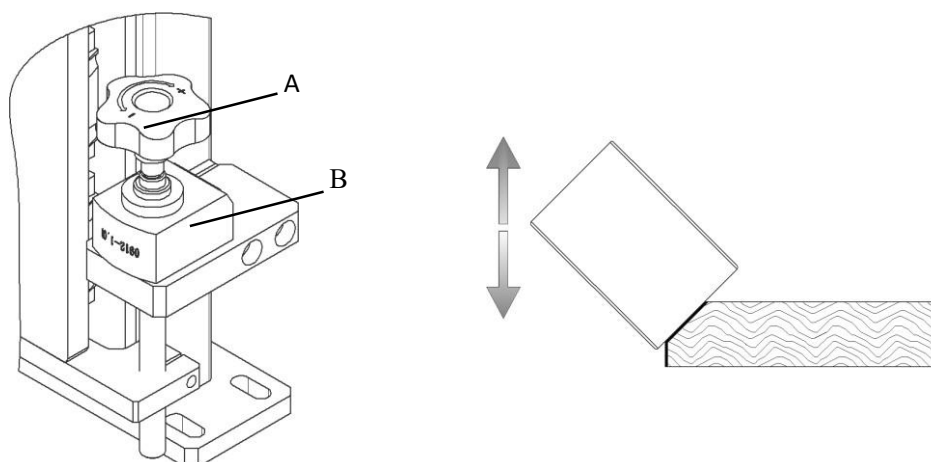


By adjusting the pressure adjustment knob A , the counter B Adjust to panel thickness.

12.10.4 Daily Maintenance


Maintenance Project	Frequency	Lubricants
Linear guide lubrication	Once per month	Lubricating oil
Blowing dust	Once per day	Air gun
Cleaning the pressure roller	Once per day	Alcohol

12.11 Bevel Edge Fine Trimming Device

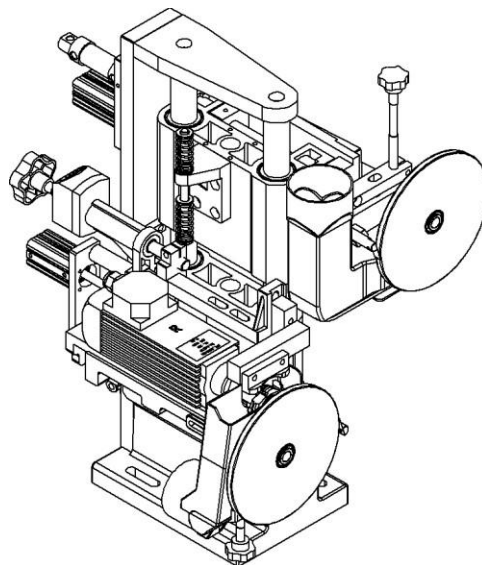


12.11.1 Working Principle

Mill and trim the excess edge banding tapes on the upper and lower edges of the beveled edge, and mill the curved edge on the lower edge of the panel.

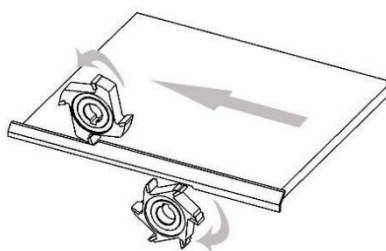

12.11.2 Adjustment Components

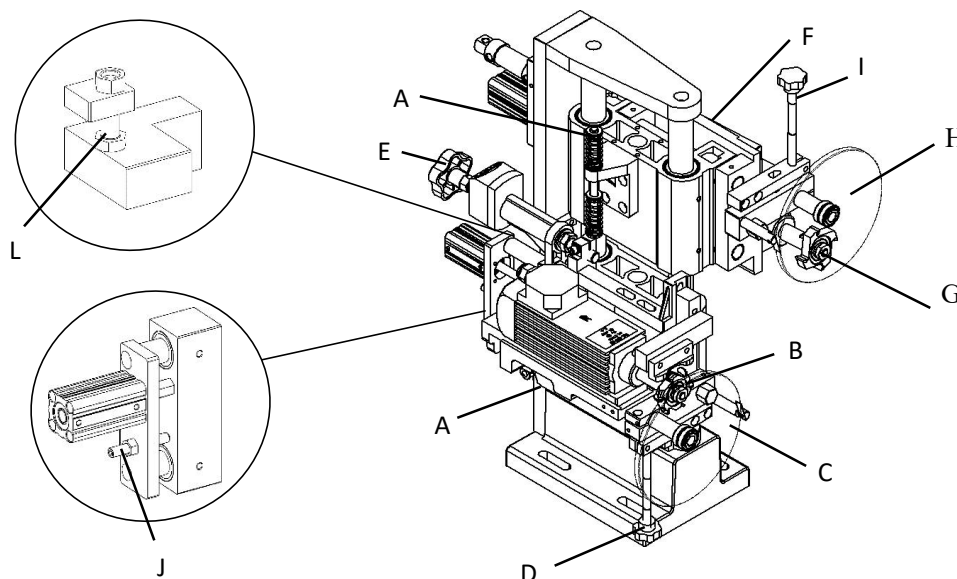

A-Lower fine trimming motor

C-Lower trimming disc

E-Lower stop adjustment rod

G - Upper fine trimming milling cutter

I - Upper disc adjustment rod

K -Profile alignment

B-Lower fine trimming milling cutter

D-Lower disc adjustment rod

F-Upper fine trimming motor


H -Upper trimming disc

J - Lower trimming horizontal limit screw

L - Lower trimming limit bolt


12.11.3 Trimming Disc Adjustment

The beveled panel passes through the lower finishing disc C , and the nut on the trimming hanger is adjusted until the upward floating amount of the disc is 1mm .

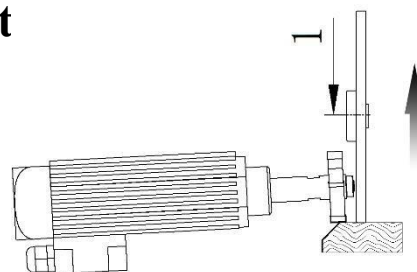


Moving direction of upper fine trimming disc

The beveled panel passes through the lower trimming disc C , and the lower trimming limit bolt L is adjusted until the downward floating amount of the disc is 1mm.

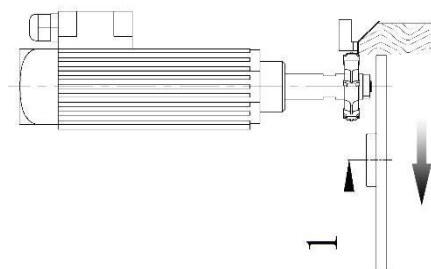

Moving direction of lower fine trimming disc

12.11.4 Profile Alignment Adjustment

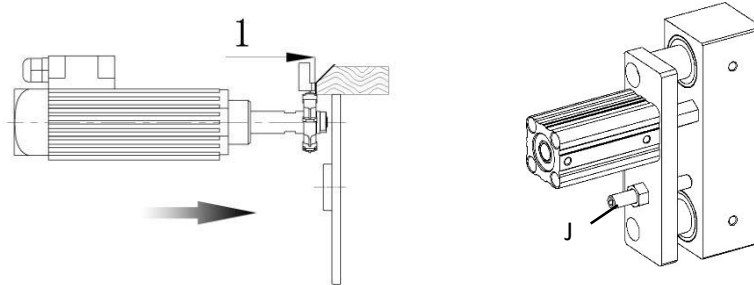

Adjust the coarse trimming contour stop until the contour stop K Just after touching the board, adjust the lower trimming horizontal limit screw J to make the profiling stop K press the board 1mm . After the board leaves the profiling stop K , the profiling stop K floats 1mm forward and backward .


12.11.5 Trimming Disc Pressure Adjustment

A Upper and lower trimming amount adjustment

Adjust the lower disc adjustment lever D so that the lower trimming disc C Make a slight movement until 0.5mm-0.8mm is reserved on the upper edge . Adjust the upper disc adjustment rod I so that the upper trimming disc G Make a slight movement until 0.5mm-0.8mm is reserved on the upper edge .




1. The trimming position varies depending on the thickness of the beveled panel. To adjust the trimming amount, select the corresponding panel thickness on the control panel before adjusting the trimming amount.
2. The upper beveled trimming milling cutter has two limit points: 15-18mm and 25mm.
3. For the trimming position of other beveled panel thicknesses, please consult the manufacturer.

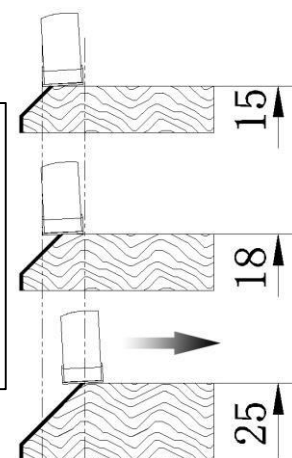


B R Angle adjustment

Plate bottom edge R The angle must be adjusted according to the thickness of the edge banding. Adjust the lower adjustment lever E and read the counter value. The larger the counter value, the larger the R angle, and the smaller the counter value, the smaller the R angle.

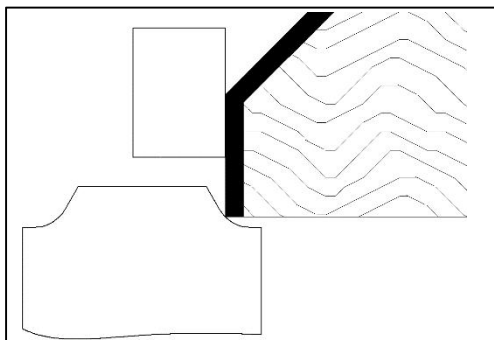

state1

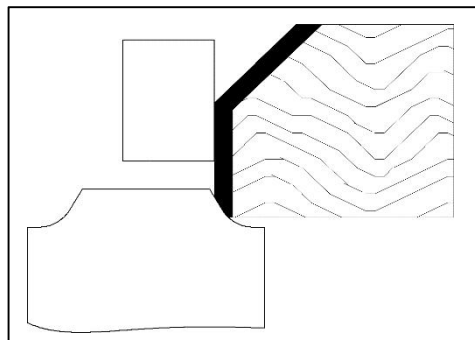

Status2


State 1 : Initial state

State 2 : Turn the lower gear adjustment lever E clockwise , the counter value increases, and the lower edge of the panel R Angle enlargement

12.11.6 Daily Maintenance

Maintenance Project	Frequency	Lubricants
Air Gun Cleaning	Once /8 hours	
Removing residual glue from the contour wheel	Once /40 hours	Alcohol


12.12 End Cutting Device

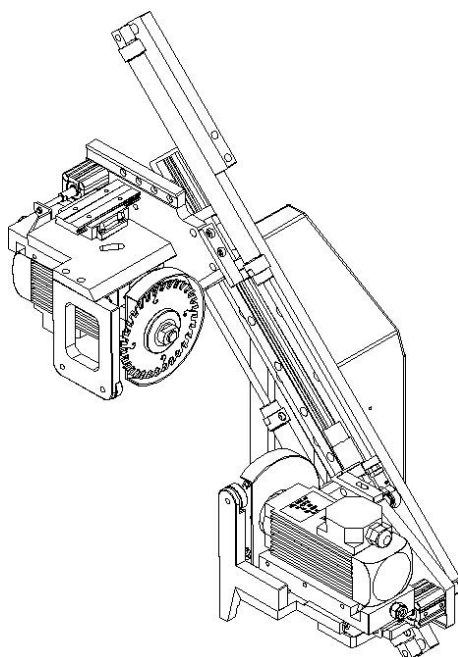


12.12.1 Working Principle

The workpiece is transported by the conveyor belt, and after it touches the travel switch, the trimming mechanism enters the working state. The workpiece moves with the conveyor belt, the lower mechanism descends, and the excess edge band at the front end of the workpiece is cut off; the workpiece continues to be transported forward, the upper mechanism begins to descend, and the guide is close to the upper surface of the workpiece. At the moment the guide leaves the workpiece, the mechanism descends to cut off the excess edge band at the tail of the workpiece, and the trimming process ends, and the mechanism resets.


12.12.2 Operation Process

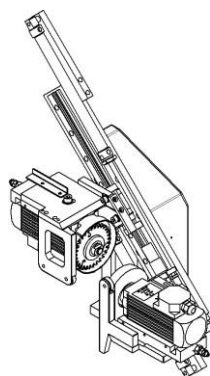


Initial State
Both ends are in the falling state.

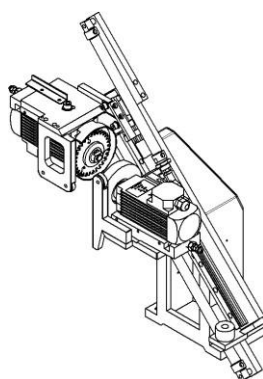

Work Preparation State
Both ends are in the rising state .

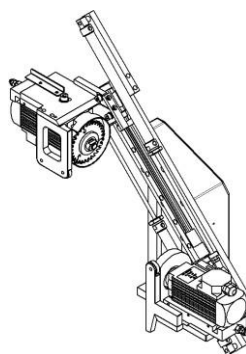

Front End Cutting Work
Push panels drop and cut front edge banding tape




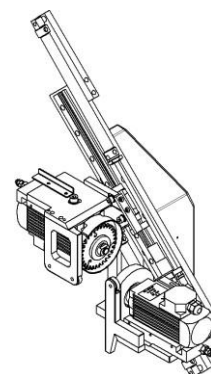


Rear End Cutting Work
Push panels drop and cut rear edge banding tape





12.12.3 End Cutting Parameters

Saw Blades	104*3.2*22*30T
Motor parameters	0.37KW 380V 200HZ 12000rpm

12.12.4 Overcut Adjustment Method 1

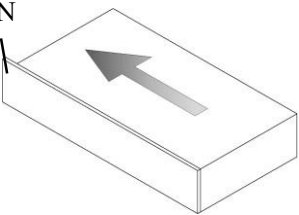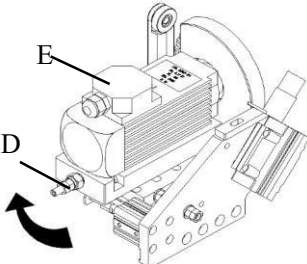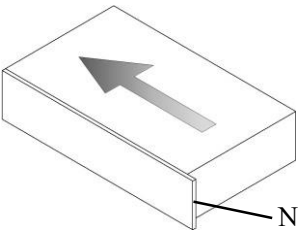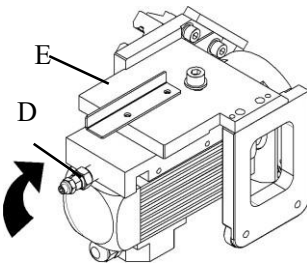		Front cutting edge banding tape is too long
		Rear cutting edge banding tape is too long


After front cutting and rear cutting are completed, if there is still residual edge banding at point N as shown in the figure, rotate screw D clockwise. Motor E will move forward. Repeat this fine adjustment until a satisfactory end cutting effect is achieved.

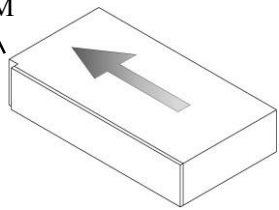
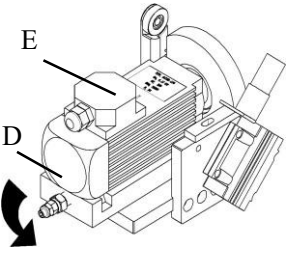
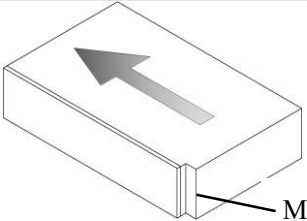
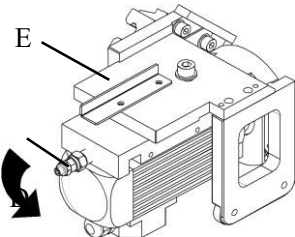
		Front cutting edge banding tape overcut
		Rear cutting edge banding tape overcut

After front cutting and rear cutting are completed, If the edge banding tape at M point is overcut as shown in the figure, rotating screw D counterclockwise, motor E will move backward. Repeat this fine adjustment until a satisfactory end cutting effect is achieved.

12.12.5 Overcut Adjustment Method 2

By slightly loosening screw F with a hex wrench and adjusting the angle between motor E and guide rail F, results A and B can be achieved.

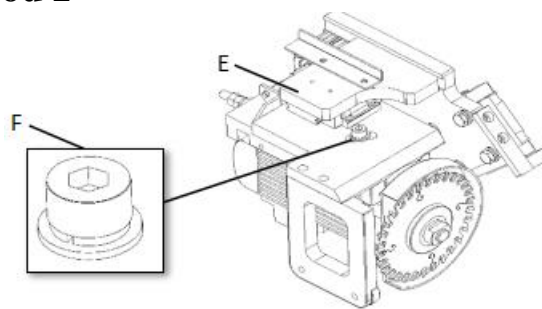

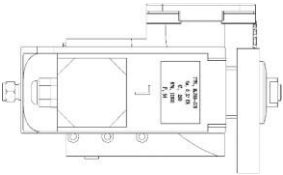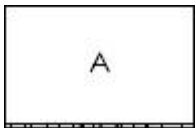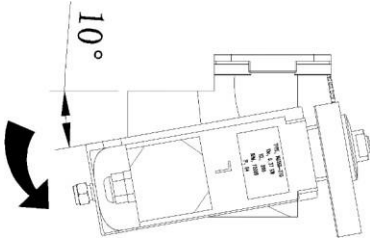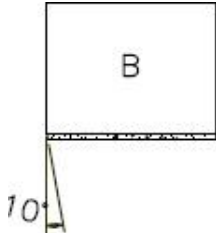
		Before swing: Saw blade at right angles to the edge of the panel
		After swing: The saw blade is at an angle to the edge of the panel

12.12.6 Oil Pump

The oil pump is mainly used to lubricate the end cutting slider and guide rail.

When the lubricating oil in the oil tank is lower than the minimum height, the filling pump will alarm and display the alarm information on the display screen.



If you want to fill up the oil, please unscrew the top cover of the oil pump and inject 32# anti-wear hydraulic oil.

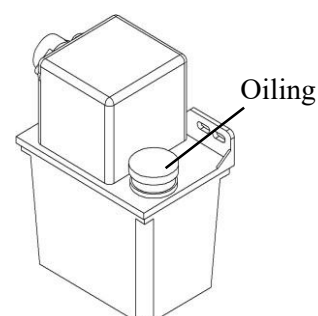

12.12.7 Daily Maintenance

Maintenance Project	frequency	Lubricants
Guide rail lubrication	Once per month	Lubricating oil
Slider lubrication	Once /10 Hours	Lubricating oil
Blowing dust	Once per day	Air gun

12.13 Straight Edge Fine Trimming Device

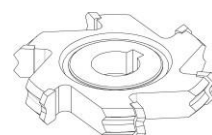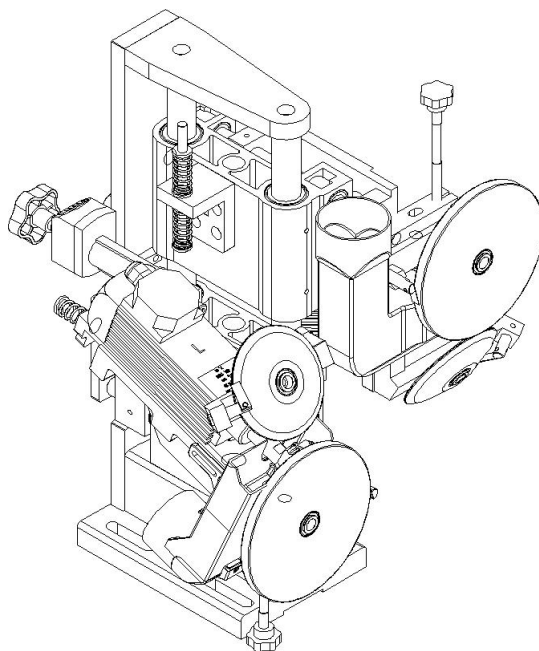


R-shaped
trimming tool

12.13.1 Working Principle

Mill and trim the excess edge strips on the upper and lower edges of the panel . The angle milling cutter mills the curved edges on the upper and lower edges of the panel.

12.13.2 Adjustment Components

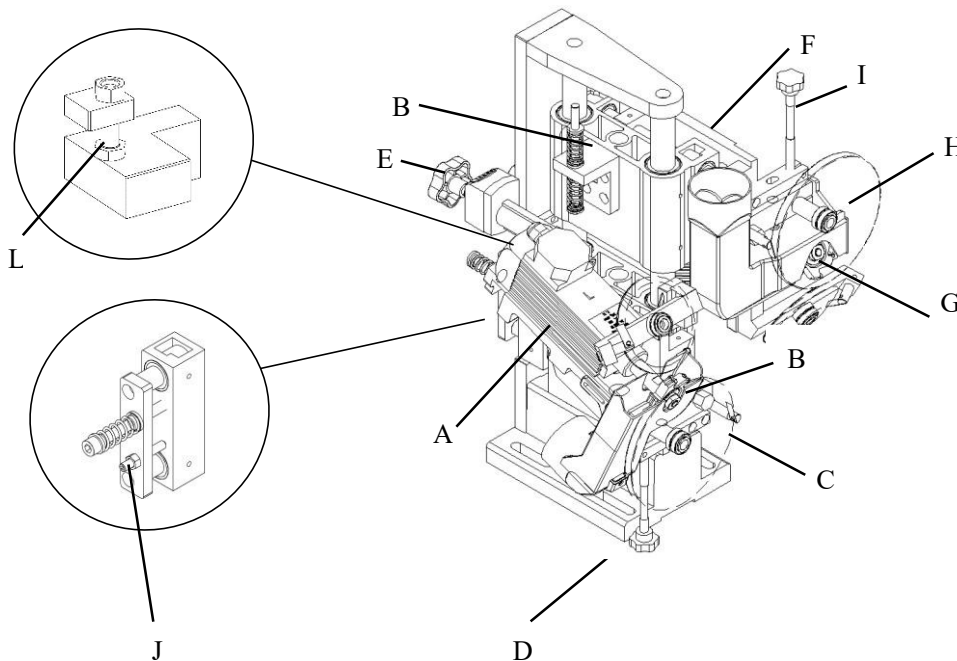

- | | | | |
|-------------------------------|---|---------------------------|-------------------------------|
| A-Lower fine trimming motor | B-Lower fine trimming cutter | C-Lower trimming disc | D-Lower disc adjustment lever |
| E-Lower stop adjustment lever | F-Upper fine trimming motor | G-Upper fine trim milling | H-Upper trimming disc |
| I-Upper disc adjustment lever | J-Lower trimming horizontal limit screw | K-Small disc | L-Lower trimming limit bolt |


12.13.3 Fine Trimming Parameters

Rough trimming tool	56*16*6Z
Motor parameter	0.75KW 380V 200HZ 12000rpm

12.13.4 Fine Trimming Large Disc Floating Adjustment

Upper fine trimming disc adjustment


The panel passes through the upper fine trimming disc H , and the nut on the trimming hanger is adjusted until the upward floating amount of the disc is 1mm .

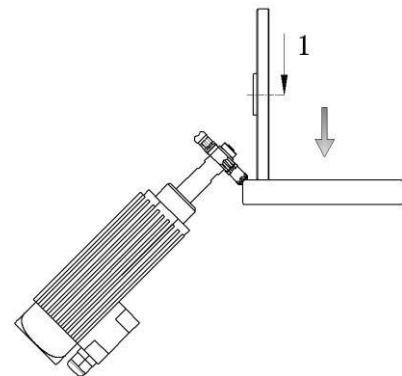

Moving direction of upper fine trimming disc

Lower fine trimming disc adjustment


The plate passes through the lower trimming disc C , and the lower trimming limit bolt L is adjusted until the downward floating amount of the disc is 1mm .

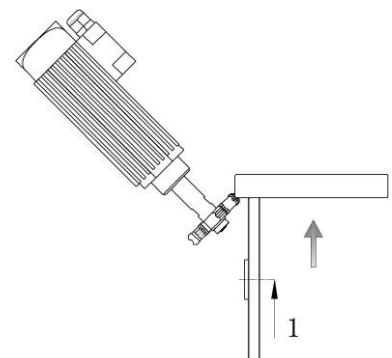


Moving direction of lower fine trimming disc

12.13.5 Fine Trimming The Small Disc Floating Amount Adjustment

Adjust the rough trimming contour stop until the contour stop K Just after it touches the board , adjust the trimming horizontal limit screw J to make the trimming disc press the board 1mm . Finally, fine-tune the floating amount of the small disc K to 1mm before and after .

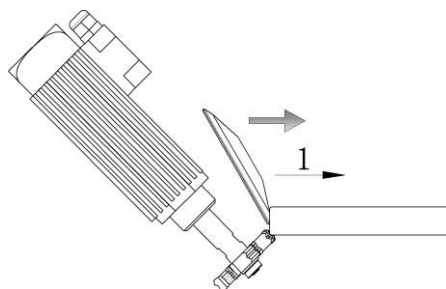


By adjusting the bolt O To change the tension of the spring to obtain the appropriate pressure on the trimming disc.

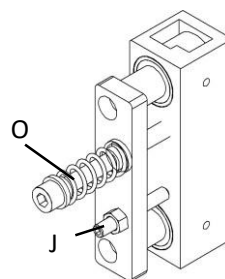


12.13.6 Trimming Disc Pressure Adjustment

By adjusting the upper trimming hanger nut M To change the tension of the spring to obtain the appropriate pressure of the upper trimming disc H.

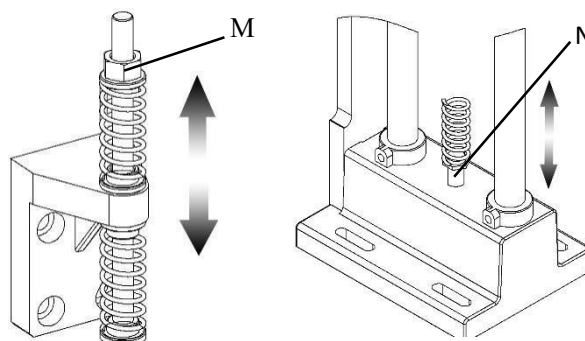

By adjusting the lower trimming bolt N To change the tension of the spring, in order to obtain the appropriate pressure of the lower trimming disc C.


12.13.7 Upper And Lower Trimming Amount And R Angle Adjustment

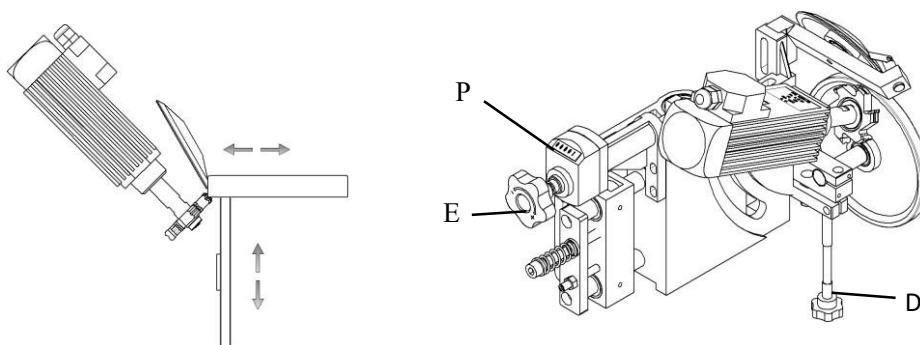

Use the fine trimming device to trim the edge R To adjust the angle, just adjust the counter P of the upper and lower fine-tuning. By Five Star Handle E Set it to match the thickness of the edge band, and then use the five-star handle D with fine trimming up and down to make fine adjustments.

If the edge banding tape is 2mm thick, adjust the counter to the value 00020.

12.13.8 Tool Replacement

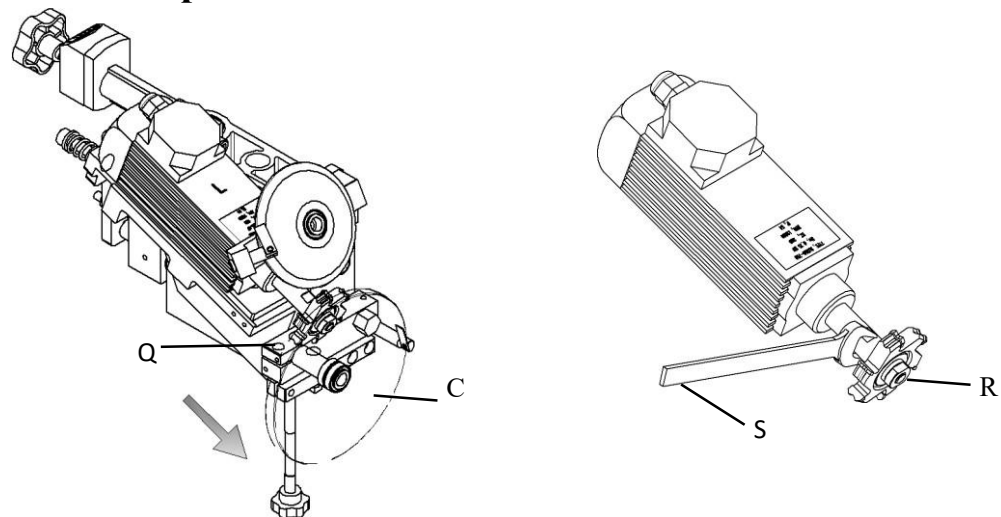

Remove the dust cover of the upper and lower finishing, loosen the lower finishing screw Q , pull out the trimming disc in the direction of the arrow, clamp the milling cutter nut R with a 17- inch hexagonal wrench , and tighten it with a 17-inch hexagonal wrench. Hexagon wrench S Lock the motor position as shown in the figure, take out the trimming knife and replace it with a new one. (The tool replacement method of the upper finishing device is the same)





1. After replacing the fine trimming tool, confirm the tool's rotation direction.
2. After replacing the fine trimming tool, check for any collisions between the tool and other components such as the dust hood.
3. During the trimming process, if the tool is damaged or makes excessive noise, replace the tool immediately.

12.13.9 Daily Maintenance

Maintenance Project	Frequency	Lubricants
Air Gun Cleaning	Once /8 Hours	
Remove residual glue from trimming disc	Once /40 Hours	Alcohol

12.14 Corner Rounding Device

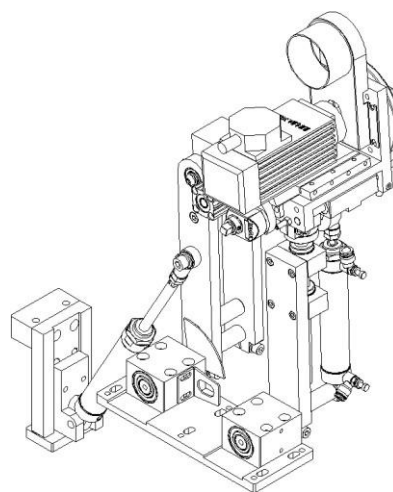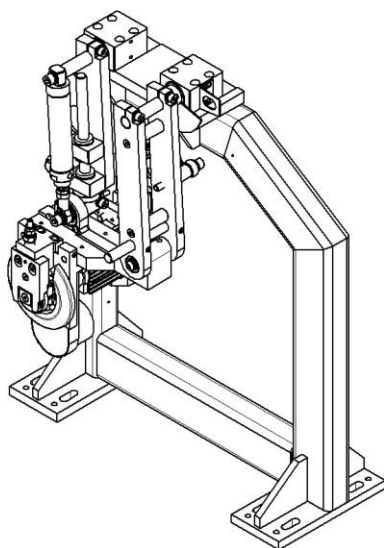





12.14.1 Working Principle


The function of the tracking trimming mechanism is that the motor follows the movement of the wooden board to mill the two ends of the edge banding on the wooden board into arcs at right angles, making the edge of the wooden board more beautiful and smooth after sealing.

12.14.2 Sensor State


To ensure that the tracking unit works properly, it is necessary to confirm that the sensor status of the upper and lower tracking units in different states is normal.

Institutional State	Sensor State
	Lower corner rounding standby state Sensor switch O1 : Off state sensor switch O2 : On state

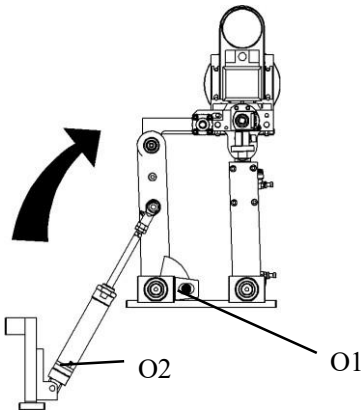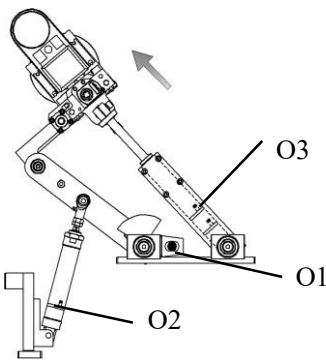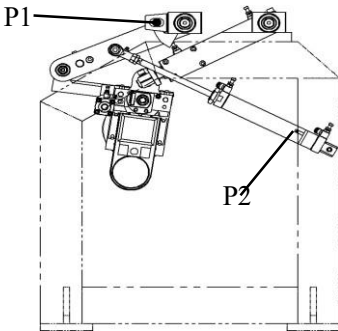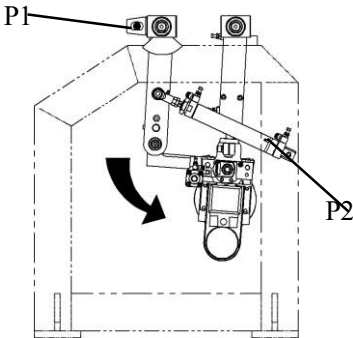Institutional State	Sensor State
	Lower corner rounding working state (lower left corner) During the working process, the cylinder pushes the connecting rod mechanism to swing to the upper right and finally maintain it, tracking the lower left corner of the panel. Sensor switch O1 : On state sensor switch O2 : Off state
	Lower corner rounding working state (lower right corner) After the lower corner rounding completes the lower left corner rounding action, when the panel passes by , the motor swings under the push of the cylinder belt to complete the lower right corner rounding. Sensor switch O1 : Off state sensor switch O2: On state sensor switch O3 : On state
	Upper corner rounding standby state Sensor switch P1 : On state sensor switch P2 : Off state
	Upper corner rounding working state During the working process, the cylinder pulls the connecting rod mechanism to swing to the lower right and finally maintain it. Sensor switch P1 : Off state Sensor switch P2 : On state

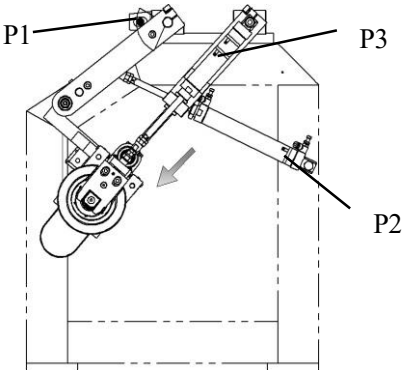Institutional State	Sensor State
	Upper corner rounding working state (upper right corner) After the upper corner rounding completes the upper left corner rounding action, after the panel passes by, the motor swings under the push of the cylinder belt to complete the right upper corner rounding. Sensor switch P1 : On state Sensor switch P2 : disconnected state Sensor switch P3 : connected state

12.14.3 Adjustment Components

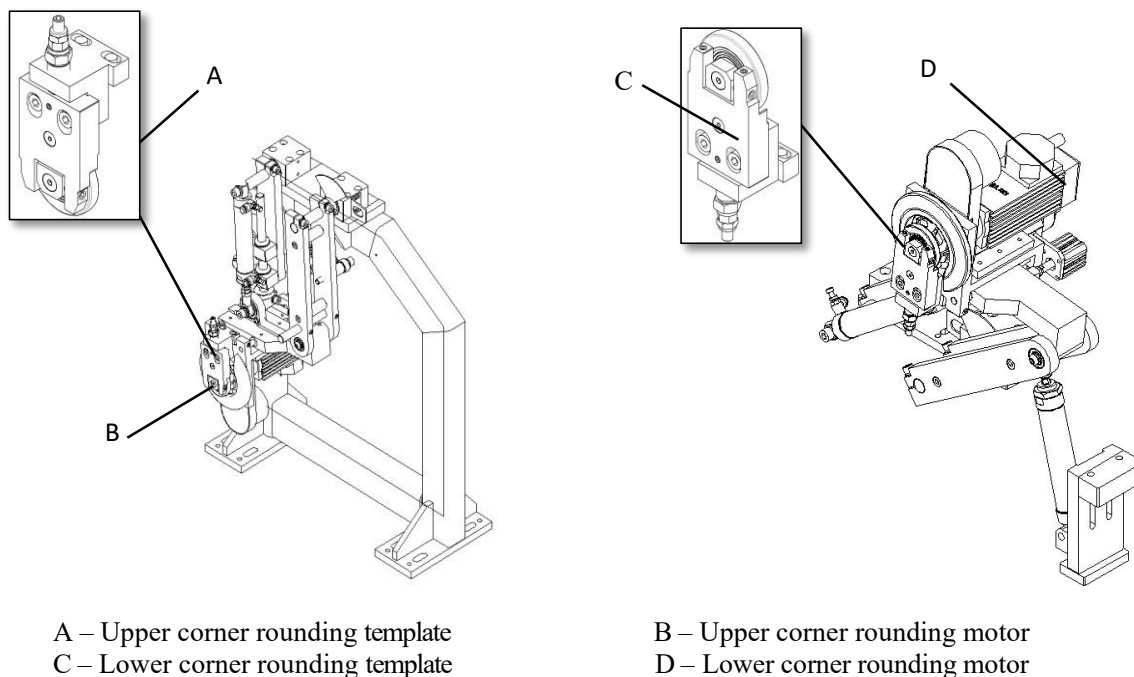


12.14.4 Corner Rounding Parameters

Corner rounding tool	68*16*6Z*R2.5
Motor parameters	0..37KW 380V 200HZ 18000rpm

12.14.5 Milling Amount Adjustment







To ensure the right-angled arc is consistent, the contour wheel F needs to be adjusted. With corner rounding cutter head E Concentricity. By adjusting the screw G of the corner rounding unit, the profiling wheel F and the corner rounding cutter head E can be finally made concentric.

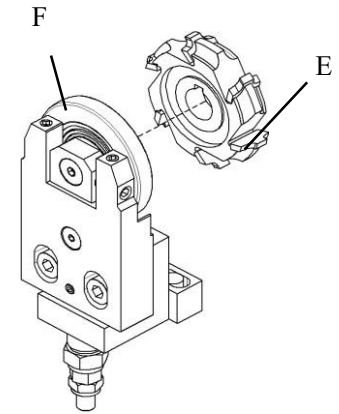

Adjust the corresponding screw G according to the trimming status of the lower corner rounding unit.

Lower corner rounding bottom left corner 1 adjust	
Lower corner rounding adjustment	
Lower right corner adjustment	


According to the trimming status of the upper corner rounding unit, corresponding screw G Adjustment

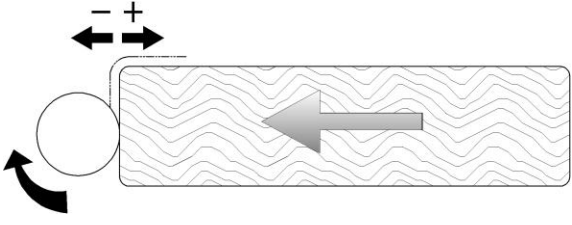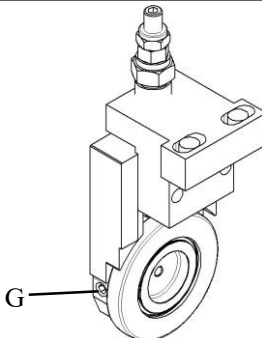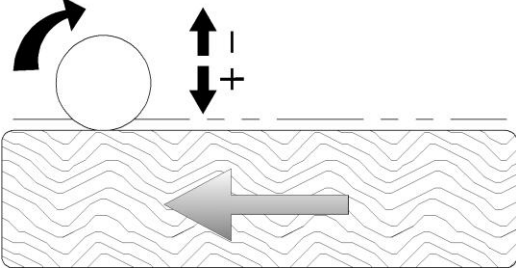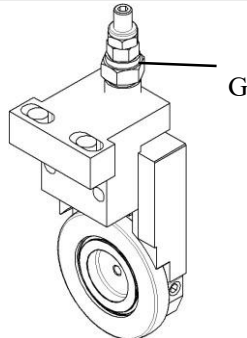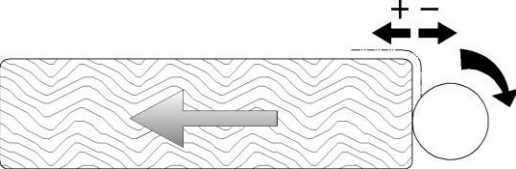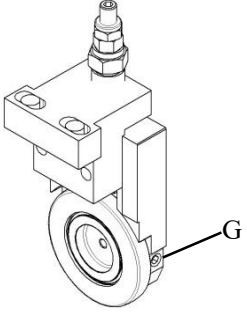Upper corner rounding upper left corner 1 adjustment 	
Upper corner rounding adjustment 	
Upper corner rounding upper right corner adjustment 	

⚠ In the upper and lower corner rounding adjustment screws G, clockwise rotation is for positive adjustment, and counterclockwise rotation is for negative adjustment.

12.14.6 R Angle Adjustment



When the mechanism is in the normal working position, replace different edge bands, adjust the screw H, and push the motor J to move so that the reading of the counter I is consistent with the thickness of the edge band used.

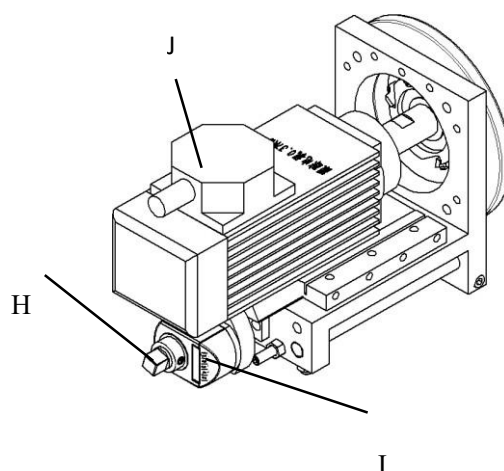

The corner rounding and trimming function can only be used when the edge banding tape thickness is greater than or equal to 1.5 mm.

12.14.7 Corner Rounding Motor Swing Angle Aadjustment


Induction switch N For the work end sensor, induction switch M Adjust the sensor for the rotation angle of the working motor . Keep away from sensor switch N When the induction switch M Proximity sensor switch N , the motor 's rotation angle decreases.

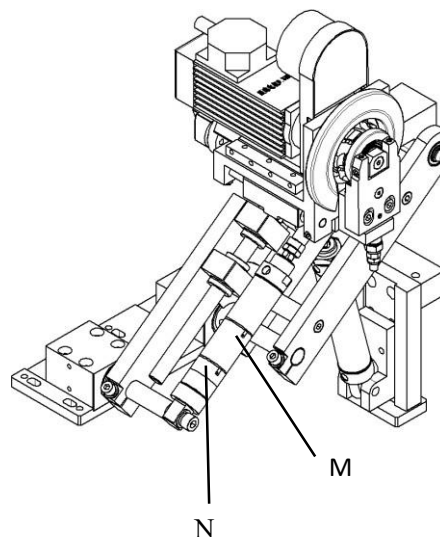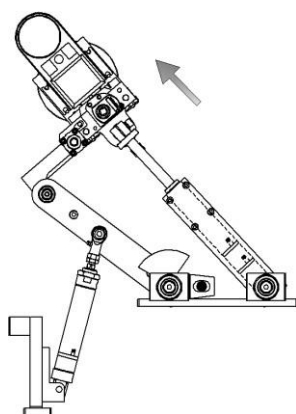

12.14.8 Daily Maintenance

Maintenance Project	Frequency	Lubricants
Air gun cleaning	Once/8 hour	
Guide rod lubrication	Once/1 month	Lubricating oil


12.15 Scraping Device

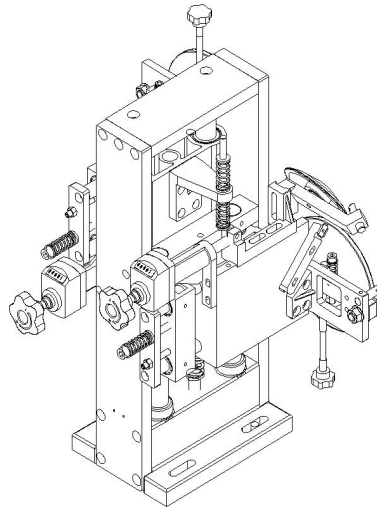

12.15.1 Working Principle


Mainly remove the knife marks left by the trimming knife and fine-tune R Round corners, blow away the scraping tape through the blowing device on the scraping device.

12.15.2 Adjustment Components

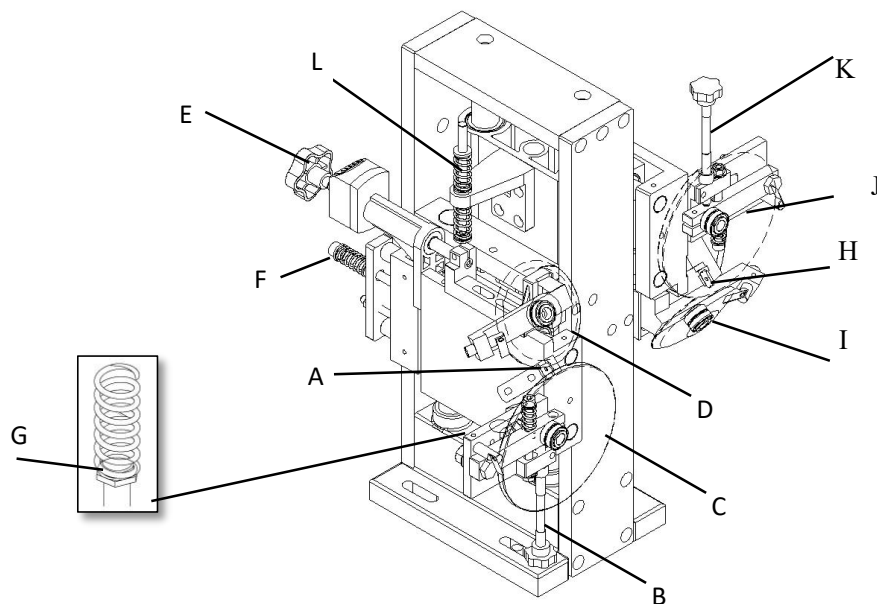

- | | |
|---|--|
| A – Lower scraper blade | B – Lower disc adjustment lever |
| C – Lower scraping large disc | D – Lower scraping small disc |
| E – Lower scraping small disc adjustment lever | F – Lower scraping small disc pressure lever |
| G – Large round pressure rod for lower scraping | H – Upper scraping blade |
| I – Upper scraping small disc | J – Upper scraping large disc |
| K – Upper disc adjustment rod | L – Upper scraping large disc pressure rod |

12.15.3 Horizontal Scraping Amount Adjustment

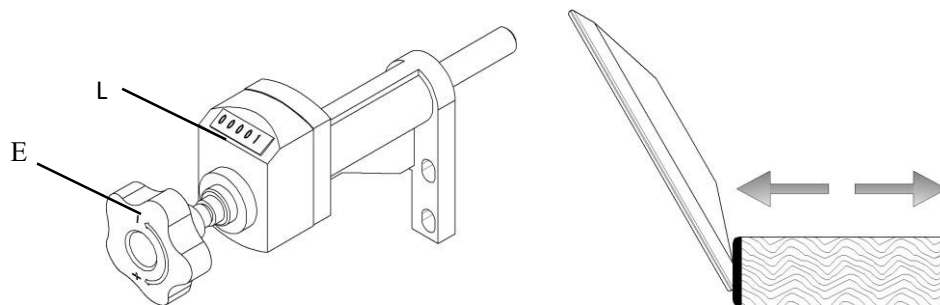


According to the thickness of the edge band, adjust the horizontal knob E and read the counter L. The number is used to finally adjust the advance and retreat amount of the small disc.



Under normal conditions, if the scraps are thick, then reduce the amount of scraping. If the scraper cannot reach the workpiece, then increase the amount of scraping

12.15.4 Vertical Scraping Amount Adjustment

By adjusting the scraper screw B, the advance and retreat amount of the large disc can be finally adjusted.

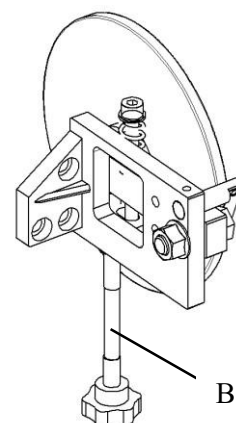


12.15.5 Scraping And Blowing Device

The scraps are blown away by the air nozzle to prevent them from being workpiece and the guide wheel and affecting the processing quality.




Poor dust removal can lead to residual threads of the edge banding tape remaining on the blade, resulting in wave marks.

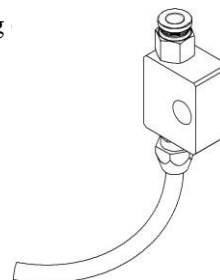

12.15.6 Daily Maintenance

Maintenance Project	Frequency	Lubricants
Air gun cleaning	Once/8 Hour	
Guide rod lubrication	Once/month	Lubricating oil


12.16 Front And Rear Cleaning Device

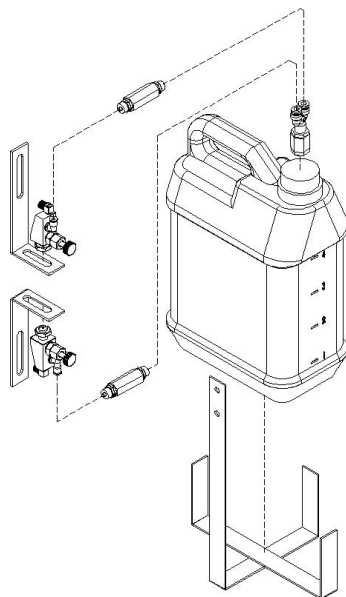

12.16.1 Working Principle


The front and rear cleaning devices use negative pressure to evenly spray the separator and cleaning agent onto the edge of the plate, forming a protective film on the edge of the plate, which has the effect of separating and cleaning the plate.

12.16.2 Adjustment Components

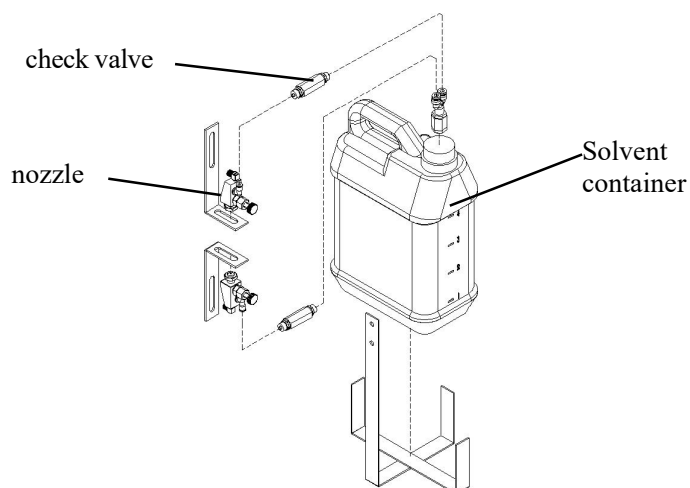

The pressure for front and rear cleaning and pressure regulating valve is generally set at 0.1 - 0.2 MPa.


12.17 Buffing Device

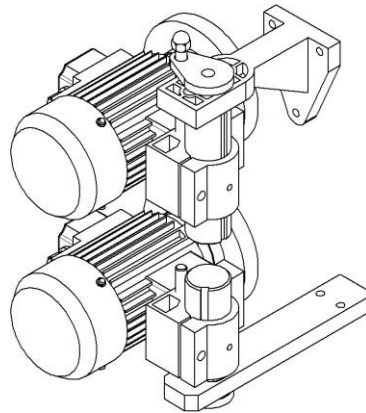


12.17.1 Working Principle

The buffing motor drives the polishing wheel to rotate, polishing the edge surface of the workpiece to increase the smoothness of the panel.

12.17.2 Adjustment Components

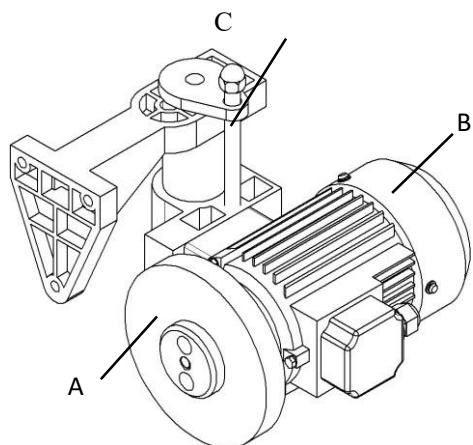


A – Upper buffing wheel
C – Upper buffing adjustment lever
F – Lower buffing motor

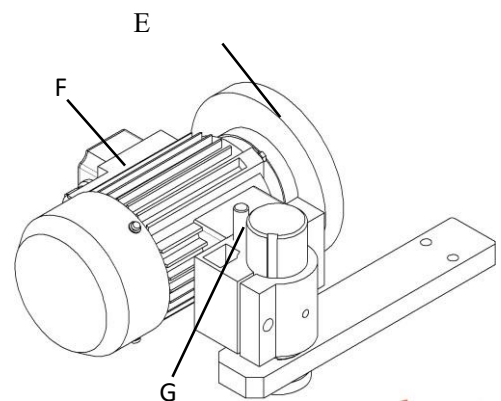

B Upper buffing motor
E – Upper buffing wheel
G – Lower buffing adjustment lever


12.17.3 Buffing Wheel Angle Adjustment

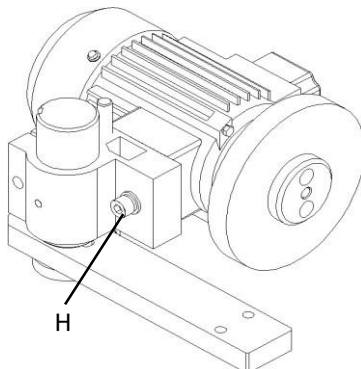

Loosen screw H and adjust the angle between the motor and the upper and lower surfaces of the workpiece so that the angle between the polishing wheel and the workpiece surface is 10-15 Between degrees .

12.17.4 Buffing Wheel Replacement

Loosen screw I , remove fixing cover J, remove the old cloth wheel, replace with a new polishing wheel, and tighten screw I.

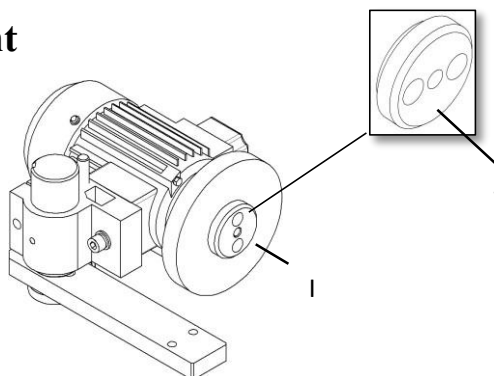


⚠ The buffing wheel is a wear-prone component. It should be replaced promptly when the buffing effect significantly deteriorates.

12.17.5 Daily Maintenance

Maintenance Project	Frequency	Lubricants
Air gun cleaning	Once/8 Hour	
Clean the residual glue of the buffing wheel	Once/month	

12.18 Off-cut Device (Optional)

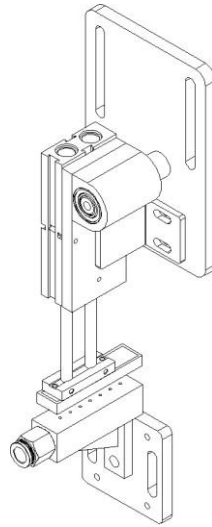


12.18.1 Working Principle

The remaining filamentary edge banding after scraping is separated from the board to prevent the wire from being entangled with the board on the polishing wheel and to prevent the polishing wheel from being damaged due to excessive load. The upper and lower pressing surfaces of the broken wire do not contact the board. The lower pressing surface is equipped with a blowing device to blow away the broken wire in time. The upper pressing surface adopts collision prevention to ensure that the board is not collided to the greatest extent.

- ① The set value of off-cut blowing pressure regulating valve is between 0.2 and 0.4 MPa.
- ① It is strictly prohibited to place any objects such as hands on the off-cut surface during operation to avoid compression injuries!


12.19 Flat Scraping Device (Optional)

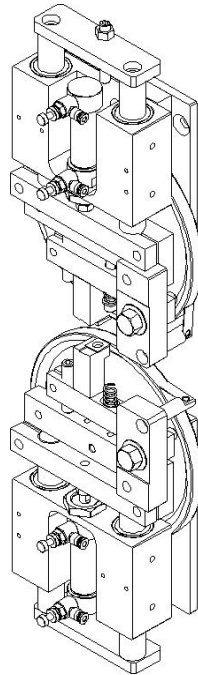

12.19.1 Working Principle

After the edge is sealed with glue, there is still glue line at the junction of the edge band and the board. In order to obtain a more ideal edge sealing effect, the upper and lower flat scrapers of the flat scraper device are used to remove the remaining glue line, and finally achieve the ideal edge sealing effect.


12.19.2 Adjustment Components

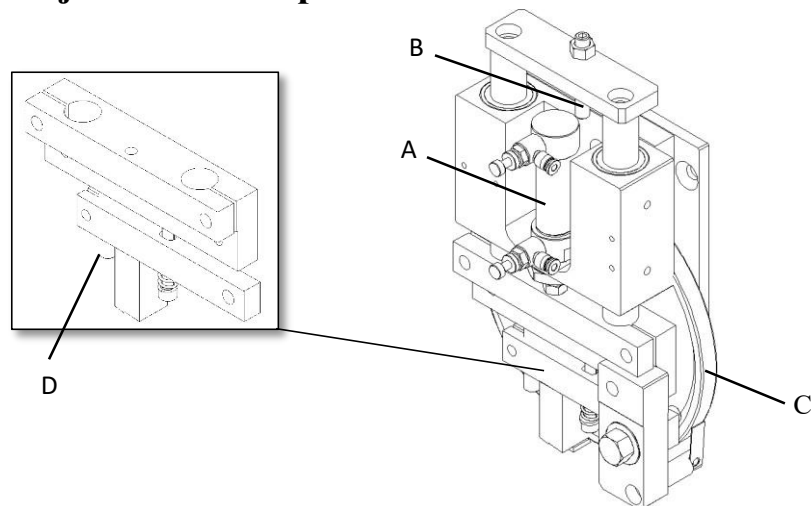

A – Cylinder B – Cylinder limit screw C – Flat scraping disc D- Scraper amount adjustment screw


12.19.3 Height Adjustment of Flat Scraping Device

By adjusting the extension of the limit screw B , the overall height of the flat scraper device can be adjusted to obtain the ideal distance L between the flat scraper blade and the plate .

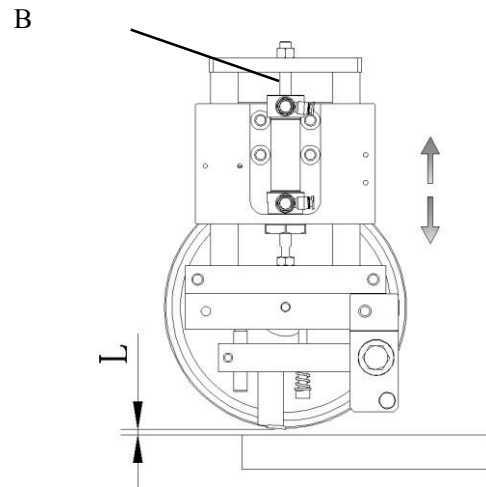

12.19.4 Flat Scraping Amount Adjustment


Adjust the scraper adjustment screw D so that the flat scraper blade F Around the bearing E swing left and right to adjust the flat scraper to the flat F The scraper amount with the panel.

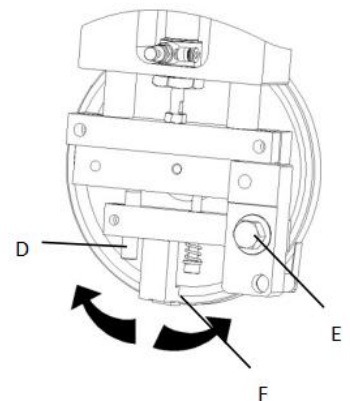


- ①
1. After removing the remaining glue lines with the flat scraper, if there is damage to the panel, the adjusting screw D for the edge scraping amount should be unscrewed to reduce the amount of flat scraping.
 2. After removing the remaining glue lines with the flat scraper, if there is still some glue left unremoved, the adjusting screw D for the scraping amount should be screwed in to increase the amount of flat scraping.

12.19.5 Cylinder Pressure Regulation

Through the pressure regulating valve G Control the cylinder pressure at 0.1- 0.3MPa

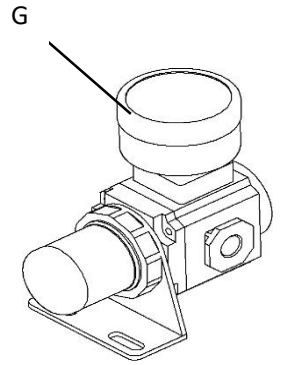


12.20 Simple Flat Scraping Device (Optional)

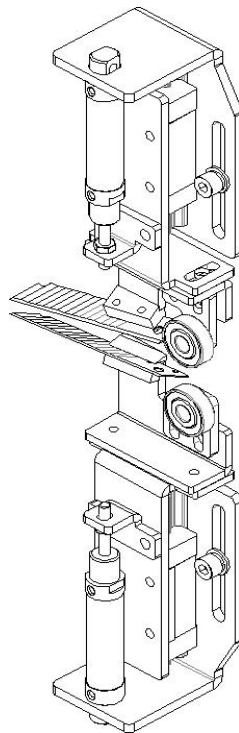

12.20.1 Working Principle

After the edge is sealed with glue, there is still glue line at the junction of the edge band and the board. In order to obtain a more ideal edge sealing effect, the upper and lower flat scrapers of the flat scraper device are used to remove the remaining glue line, and finally achieve the ideal edge sealing effect.


12.20.2 Adjustment Components

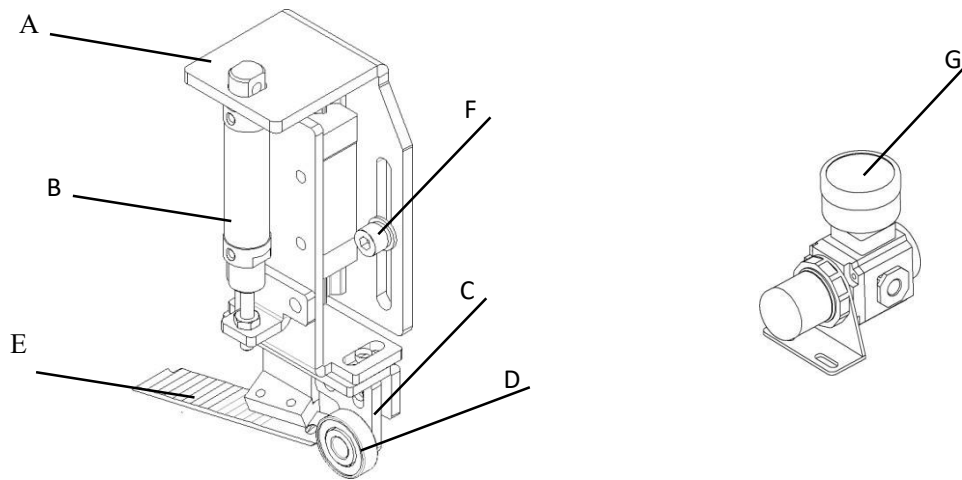

A- Base B- Cylinder C- Following bearing support D- Bearing
E- Blade F- Adjusting screw G- Pressure regulating valve


12.20.3 Simple Flat Scraping Height Adjustment

By adjusting the screw F Adjustable base
A The overall height of the simple flat scraper
can be adjusted by adjusting the position to
obtain the ideal distance L1 and L2 between
the flat scraper blade and the plate .

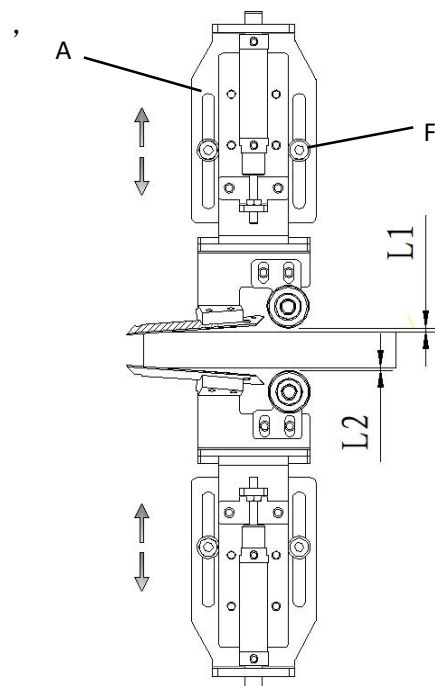

12.20.4 Flat Scraping Amount Adjustment

By adjusting the fixing screws of the following bearing support C, the bearing D can be moved up and down relative to the blade E, thereby adjusting the scraping amount of the flat scraper E on the panel.

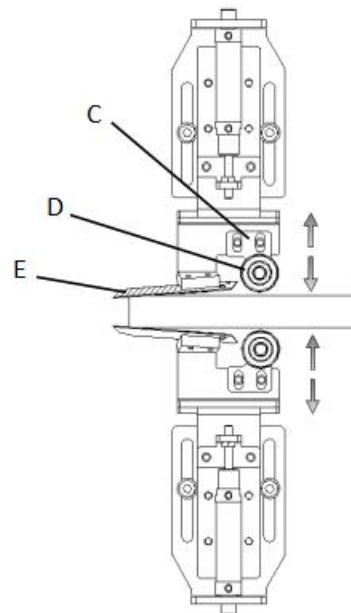


1. After removing the remaining glue lines with the flat scraper, if the panel is damaged, the bearing support C should be moved downward to reduce the amount of flat scraping.
2. After removing the remaining glue lines with the flat scraper, if there is still some glue that has not been cleared, the bearing support C should be moved upward to increase the amount of flat scraping.

12.20.5 Cylinder Pressure Adjustment


Control the cylinder pressure at 0.1- 0.3MPa through the pressure regulating valve F

12.21 Main Operation Panel

12.21.1 HH509R Main Operation Interface

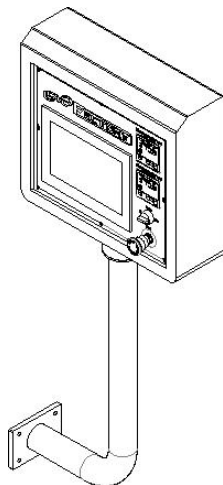

Button Commands

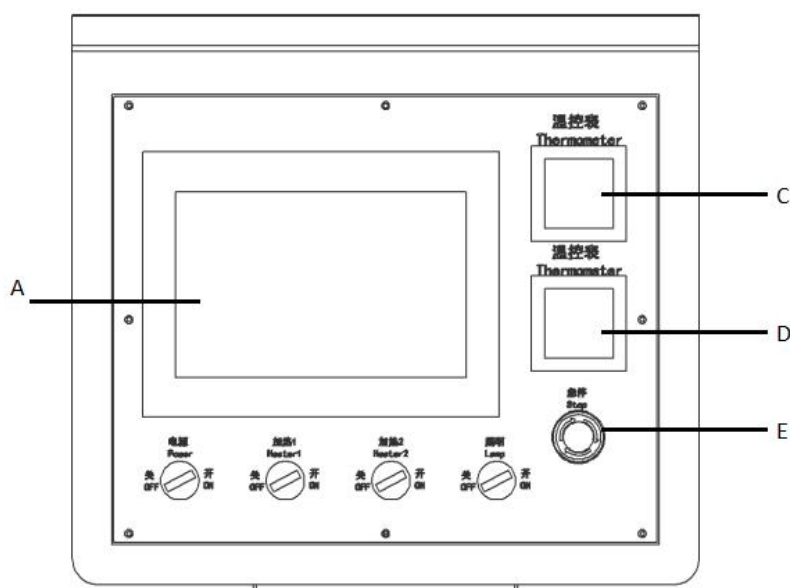

A Display screen : machine operation interface

B Power switch: Device power start button

C Temperature control meter 1 : Display glue pot 1 Temperature (when the temperature of the temperature control meter is lower than 180° , the screen will display an alarm)


D Temperature control table 2 : Display glue pot 2 Temperature (when the temperature of the temperature control meter is lower than 180° , the screen will display an alarm)

E Emergency stop button: In case of emergency, press this button to stop the equipment

13 Software Operation

13.1 Control Interface Introduction

13.1.1 509R Control Interface

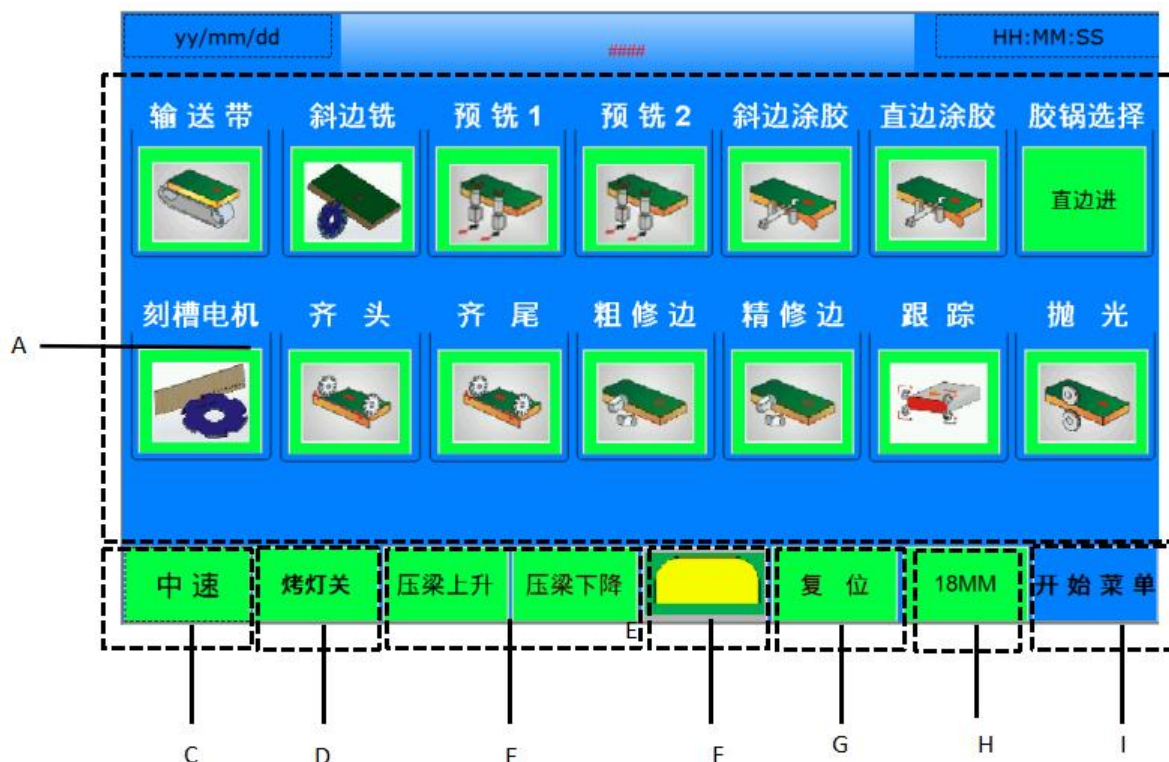

A Function selection area : Select according to the machine configuration function

C Speed selection area : You can choose between high speed and low speed (high speed 25m/min , low speed 15m/min)

D Heating lamp selection area : used to turn on the bake lamp equipment

E Pressure beam lifting area : Select pressure beam lifting and lowering according to actual use needs

F Corner rounding unit area : When debugging the device, select the tracking style according to the corner rounding requirements. This button is not used in normal production.

G Reset: After troubleshooting, the device needs to use this area to reset the fault.

H Bevel finishing plate thickness selection function: For different plate thickness

bevel finishing device selection function (usually 18 and 25)

I Start menu : Enter the system parameter unit.



Due to differences in equipment configuration and functions, there may be some variations in the function selection area in the control interface. The button items within the function selection area should be based on the actual operation panel.

13.2 Start Menu Interface Introduction

In the control interface, press the [Start Menu] button to enter the system parameter setting unit.

开始菜单



A Boot screen: Display the boot interface

B Control interface: Return to the control interface (see 13.1 for details)


C Parameter setting and troubleshooting: Displays the parameter setting and troubleshooting screen (13.3 and 13.4)

D Close: Return to the startup interface.



Due to differences in equipment configuration and functions, there may be some variations in the function selection area in the control interface. The button items within the function selection area should be based on the actual operation panel.

13.3 Parameter Setting Interface

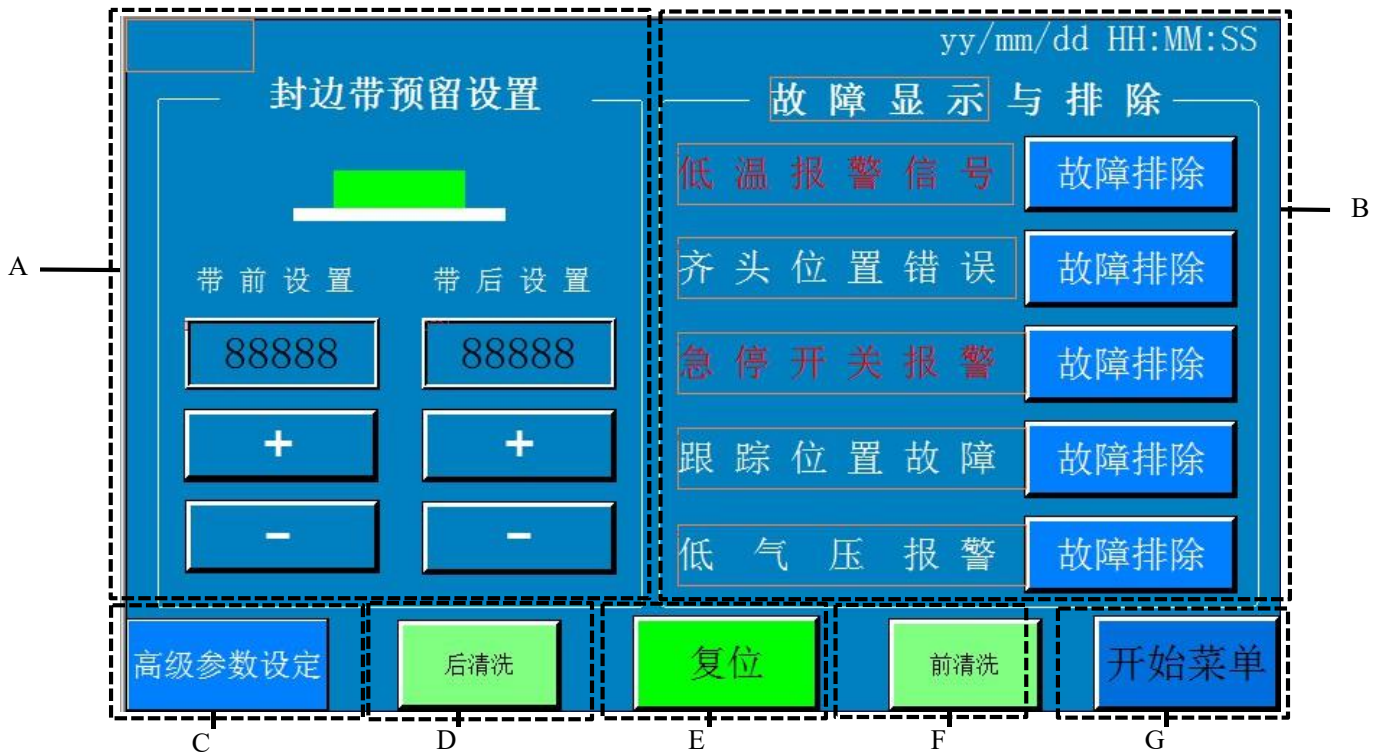

A Front and rear edge band setting area: used to set the reserved length of the front and rear edge bands of the panel.



1. According to actual usage requirements, [+] indicates an increase in the length of the front and rear edge banding tape, and each press counts as an increase of 1.
2. According to actual usage requirements, [-] indicates a decrease in the length of the front and rear edge banding tape, and each press counts as a decrease of 1.

B Fault alarm area: This area is used for troubleshooting. When a device fails, the corresponding fault will be displayed in red and flash as a reminder. Press the corresponding [Troubleshooting] button and the screen will prompt the troubleshooting method in the form of pictures and text.

C Advanced parameter setting: This button is used to set advanced parameters of the device. It is not necessary to use it during normal operation of the device.

D Front Cleaning: This button is used to turn on the [Rear Cleaning] function.

E Reset: After troubleshooting, the device needs to use this area to reset the fault.

F Rear cleaning: This button is used to turn on the [Front-cleaning] function.


G Start menu: Enter the system parameter units

13.4 Troubleshooting Interface

13.4.1 Low Temperature Alarm Signal

When the temperature of the glue box does not reach the set temperature, the parameter setting interface

[Low temperature alarm signal] A The display is red and flashing . Press the [Troubleshooting B] button to display the troubleshooting guide process screen.

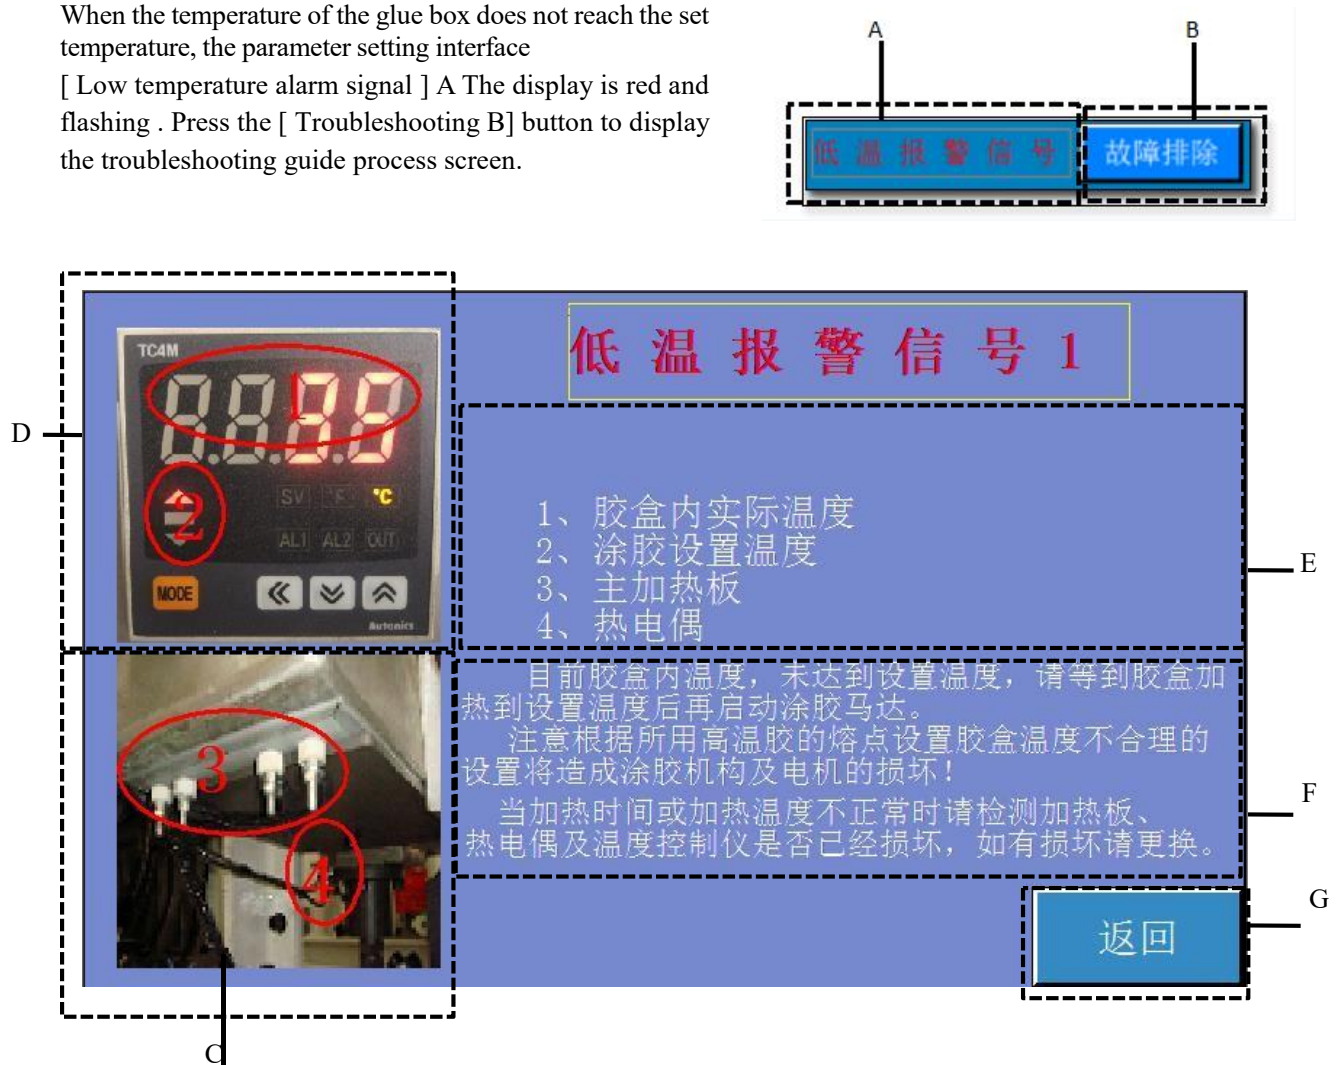

C Troubleshooting Diagram 1 : Guide to troubleshooting areas

D Troubleshooting Diagram 2 : Guide to troubleshooting areas


E Troubleshooting process: Brief process for troubleshooting low temperature alarm

F Troubleshooting Notes: Important precautions and possible fault sources during low temperature alarm troubleshooting.

G Return: Return to [Parameter Setting Interface]

13.4.2 End Cutting Position Error

When the front and rear end cutting positions are incorrect, [end cutting position error] A The display is red and flashing . Press the [Troubleshooting B] button to display the troubleshooting guide process screen.

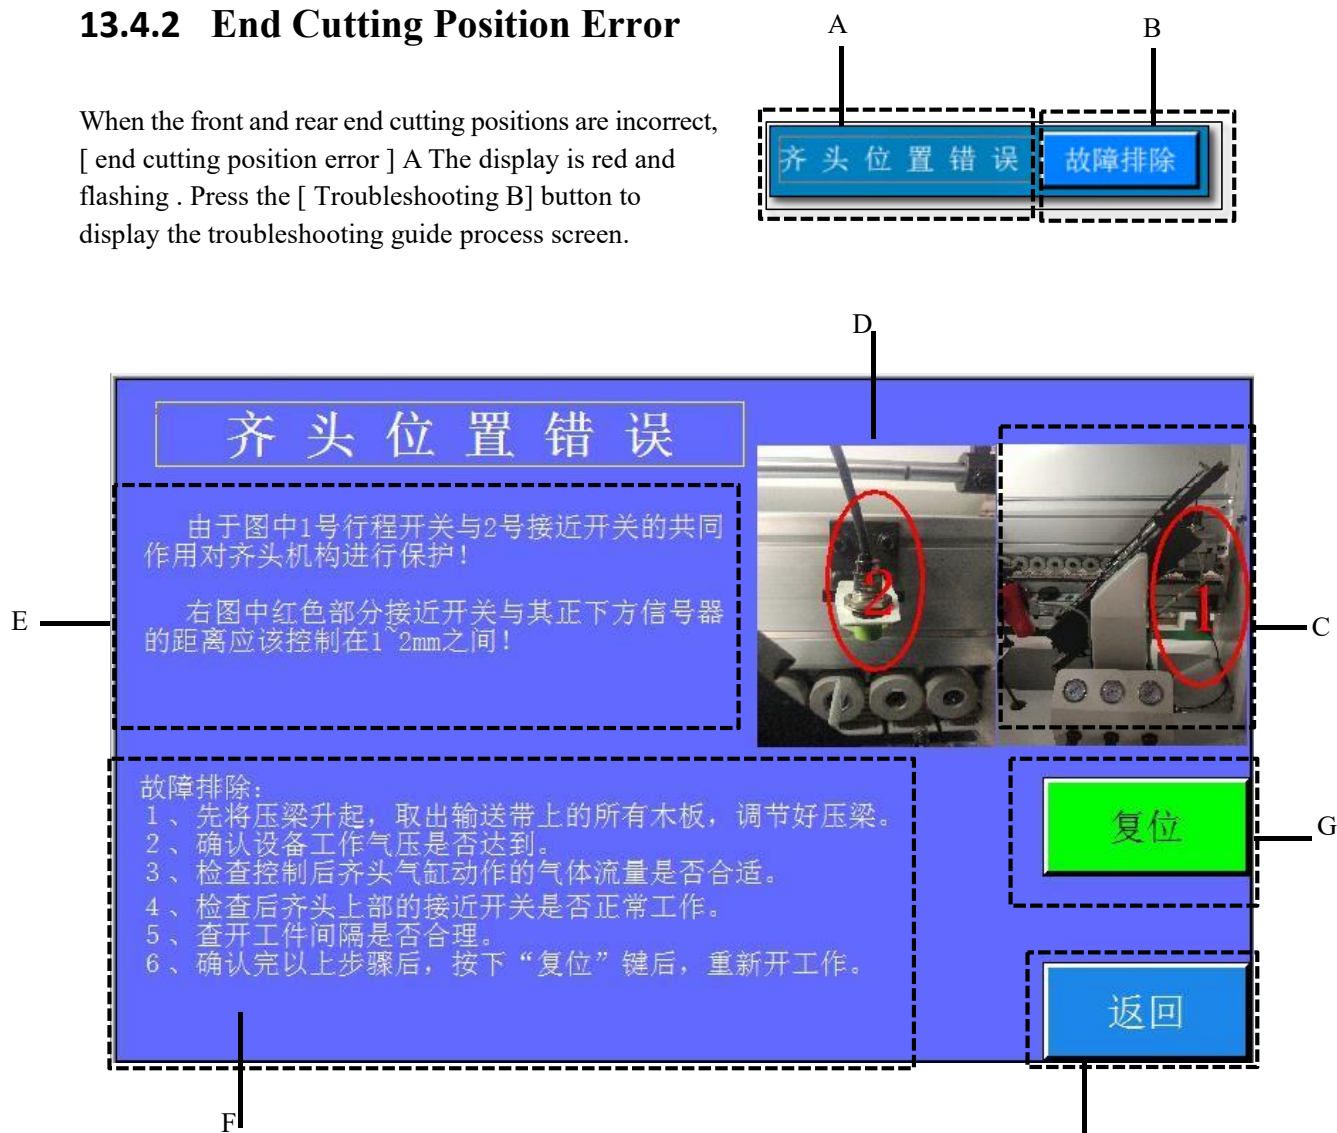

C Troubleshooting Diagram 1 : Guide to troubleshooting areas

D Troubleshooting Diagram 2 : Guide to troubleshooting areas

E Troubleshooting process: Important considerations and possible sources of troubleshooting when troubleshooting the alignment head position.

F Troubleshooting Notes: A brief process for troubleshooting alignment head position.

G Reset: After the head-to-head position fault is eliminated, reset is required.


H Return: Return to [Parameter Setting Interface]

13.4.3 Emergency Stop Switch Alarm

When the emergency stop button on the operation panel of the electric box and the emergency stop button at the end of the equipment discharge are pressed, the [Emergency Stop Switch Alarm] A in the parameter setting interface

Displays red and flashes , press [Troubleshooting] B

Button prompts troubleshooting guide process screen

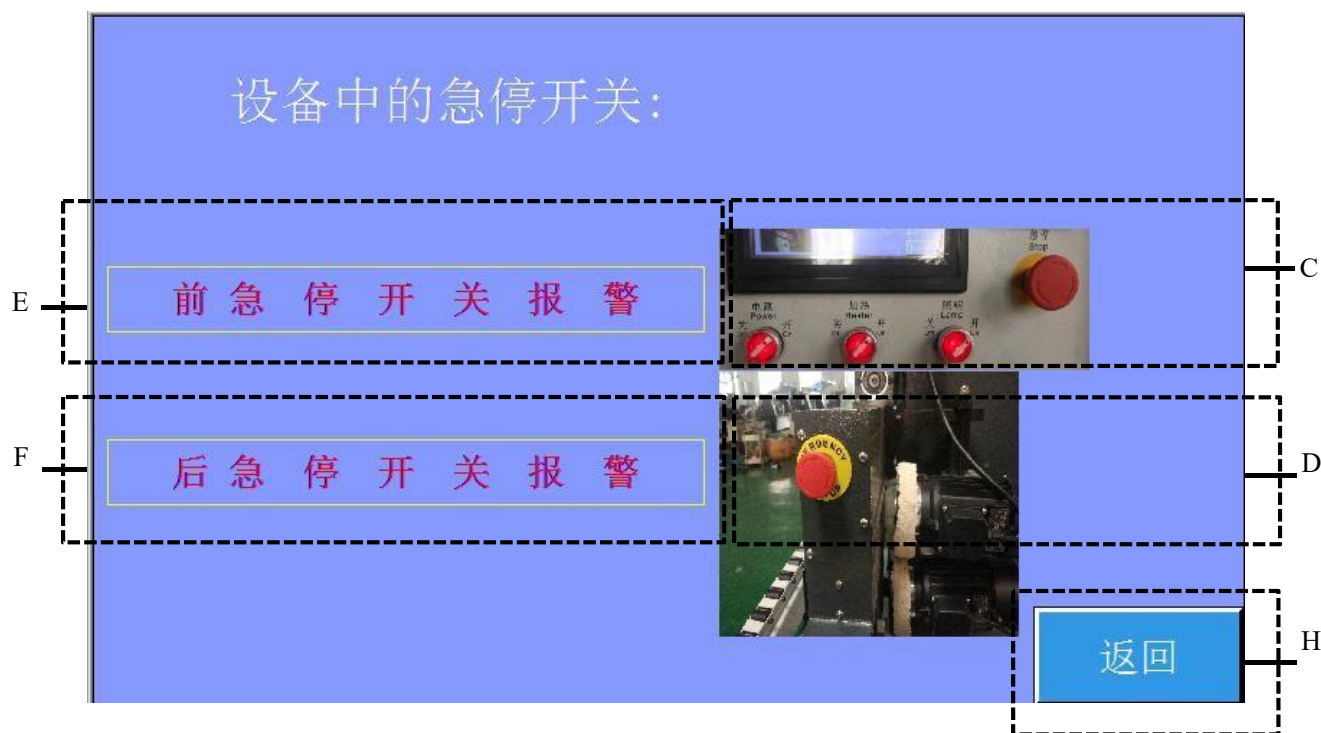

C Troubleshooting Diagram 1 : Guide to troubleshooting areas

D Troubleshooting Diagram 2 : Guide to troubleshooting areas


E Troubleshooting instructions 1 : Front emergency stop switch alarm indicator

F Troubleshooting Instructions2 : Rear emergency stop switch alarm indication

H Return: Return to [Parameter Setting Interface]

13.4.4 Corner Rounding Position Fault

[Corner Rounding Position Fault] A in the parameter setting interface displays red and flashes . Press the [Troubleshooting] B button to prompt the troubleshooting guidance process screen

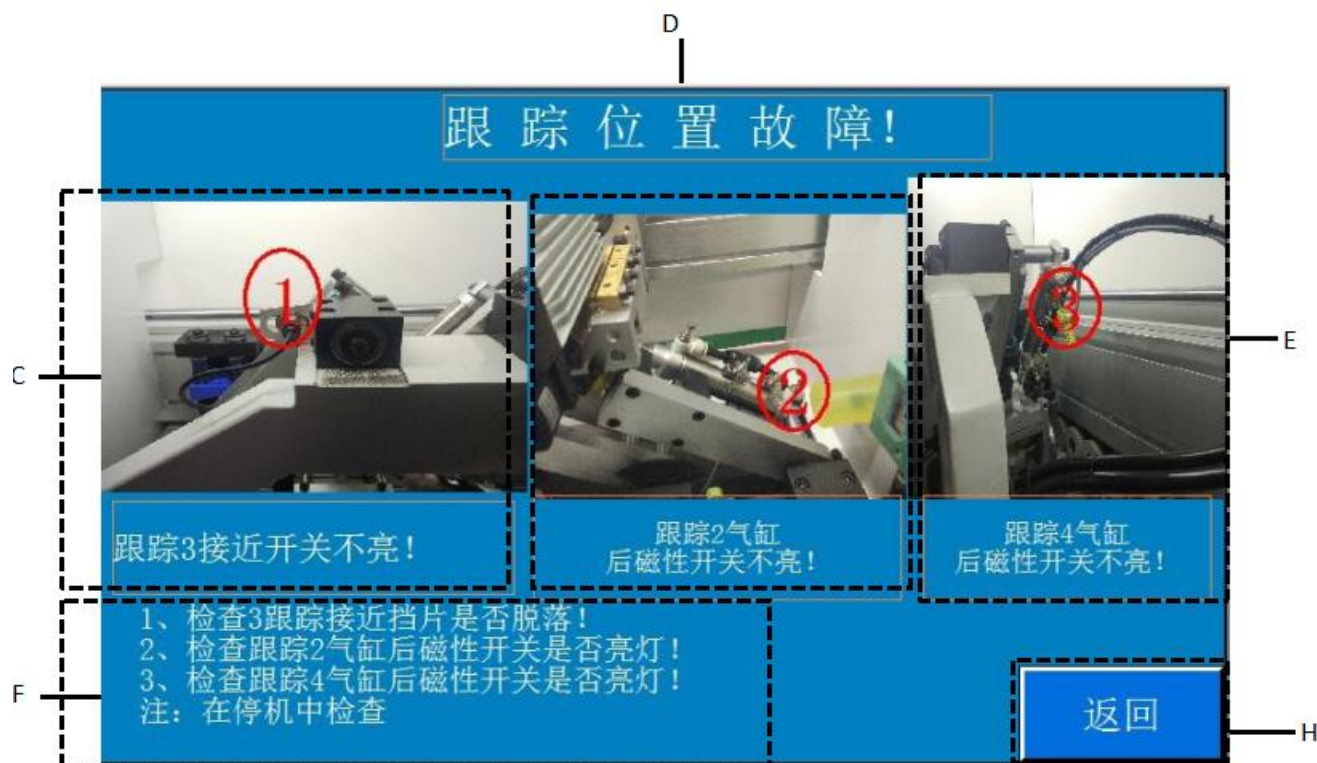

C Troubleshooting Diagram 1 : Guide to troubleshooting areas

D Troubleshooting Diagram 2 : Guide to troubleshooting areas


E Troubleshooting Diagram 2 : Guide to troubleshooting areas

F Troubleshooting process: A brief process for troubleshooting tracking location problems

H Return: Return to [Parameter Setting Interface]

13.4.5 Low Air Pressure Alarm

When the pneumatic source pressure is insufficient, the [Low Pressure Alarm] A in the parameter setting interface will display red and flash . Press the [Troubleshooting] B button to display the troubleshooting guidance process screen.

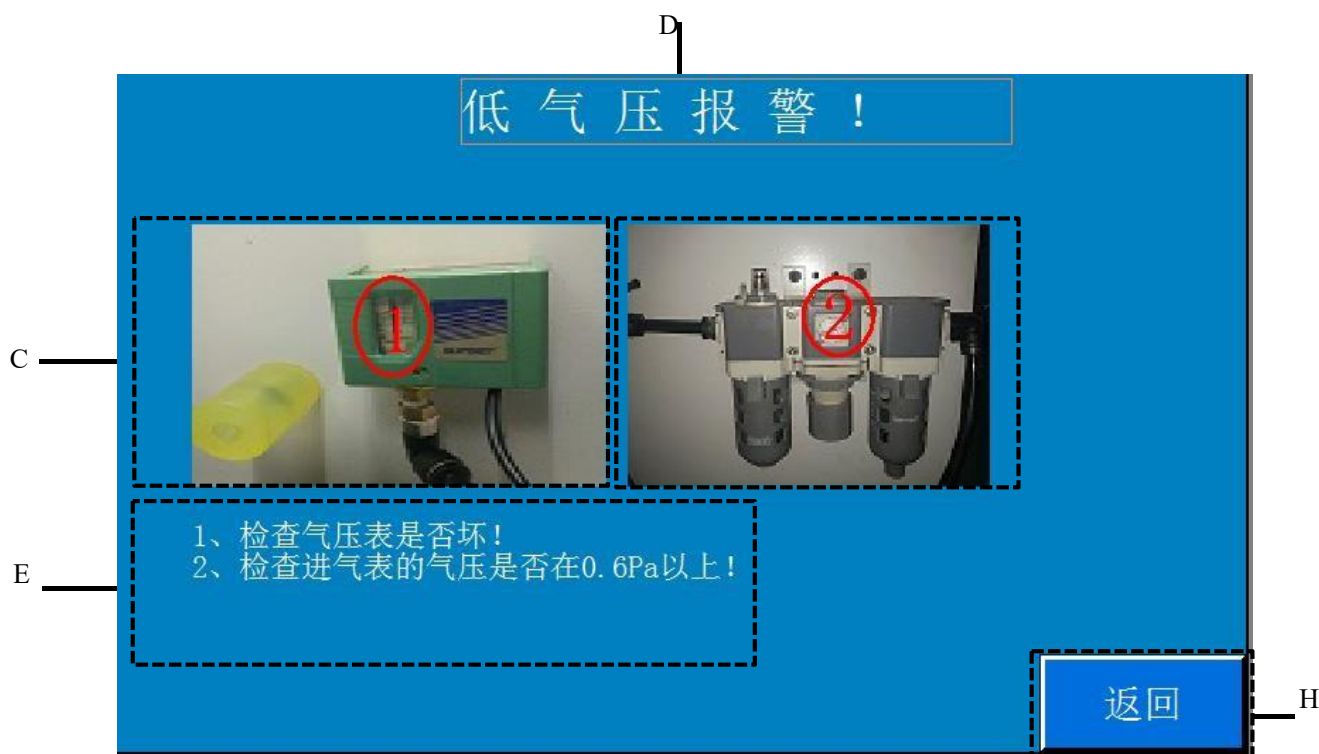

C Troubleshooting Diagram 1 : Guide to troubleshooting areas

D Troubleshooting Diagram 2 : Guide to troubleshooting areas

E Troubleshooting Diagram 2 : Guide to troubleshooting areas

F Troubleshooting source: Description of possible fault sources for low air pressure alarm

H Return: Return to [Parameter Setting Interface]

14 Power on and off

14.1 Equipment Startup Inspection Process


1. Check whether the air pressure and lubricating oil on the air source triplex are within the normal range.
2. Check whether the machine has any abnormality
3. Check whether there is any debris on the machine work surface
4. Check that the machine input power cord is connected correctly



Before powering on the equipment, please strictly follow the power-on inspection procedure to avoid any injuries caused by equipment malfunctions.

14.2 Power on

1. Turn the main power switch to [ON Location] .

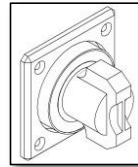

2. Turn on the power switch (12.17.2.1) on the control panel (12.17). B) Turn to [ON] position and the power switch indicator light will light up.



3. Turn on the power switch (12.17.2.1) on the control panel (12.17). B) Turn to the [On] position, the heating switch indicator light will light up and the glue pot is heating.



4. Observe the temperature control meter (12.17.2.1) on the control panel (12.17.2.2) H) and wait until the glue pot is heated to the specified temperature.
(When the glue pot temperature does not reach the specified temperature, the touch screen prompts an alarm) .



5. Observe the touch screen (12.17.2.1) on the control panel (12.17). A) Check if there is any alarm information. Enter [Parameter Setting Troubleshooting] (13.4) to check the faults one by one. After ensuring that there is no fault, enter [Control Interface] (13.1).

参数设置

6. In the [Control Interface] (13.1), select [Function Selection Area] (13.1 A) Functional block unit, equipment functional unit device enters working state.



After the functional blocks within the function selection area are selected, the corresponding device will enter the working state.

7. The device is started up.

14.3 Shutdown

1. Before shutting down the machine, make sure that all edge banding panels have been processed and that there are no panels on the conveying table.

2. Enter the [Control Interface] (13.1), cancel all the selected function block units in the [Function Selection Area] (13.1 A), and the device function unit device enters the standby state.




3. Turn on the power switch (12.17.2.1) on the control panel (12.17). F) Turn to the [Off] position, the heating switch indicator light goes out and the glue pot heating is turned off.



4. Turn on the power switch (12.17.2.1) on the control panel (12.17). B) Turn to the [OFF] position.



5. Turn on the power switch (12.17.2.1) on the control panel (12.17). B) Turn to [OFF]

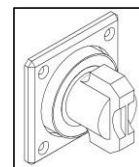

6. Clear the site and put the tools back in place.



Power on and off

14.4 Bevel Edge Banding Function Selection Operation Process

In the [Control Interface] (13.1) select [Function Selection Area] (13.1 A) Function block unit, equipment function unit device enters working state, select the following function keys



When bevel edge banding, cancel the selection  function and select the following functions according to the bevel edge requirements.

Icon	Functional description	Remark
	Enable the conveyor belt	
	Used to turn on the bevel crushing function	
	Enable pre-milling function	
	Enable the bevel gluing function	
	Enable straight edge gluing function	
	Enable sideband notching	
	Enable front and rear cutting function	
	Enable the bevel rough trimming function	
	Enable the bevel edge buffing function	

Power on and off

14.5 Straight Edge Banding Function Selection Operation Process

In the [Control Interface] (13.1) select [Function Selection Area] (13.1 A) Function block unit, equipment function unit device enters working state, select the following function keys



When straight edge banding, select the function and choose the following functions according to the straight edge requirements

icon	Functional Description	Remark
	Enable the conveyor belt	
	Enable pre-milling function	
	Enable straight edge gluing function	
	Enable front and rear cutting function	
	Enable the straight edge fine trimming function	
	Enable corner rounding	
	Enable the bevel edge buffing function	

维护保养手册（详见保养手册）

15 Maintenance Manual (See Maintenance Manual for Details)

Category	Maintenance Project	Frequency	Measure
Wear	Pre-milling cutter	Once a day	Check and replace if damaged or worn.
	Cutting knife		
	End cutting saw blade		
	Rough trimming knife		
	Fine trimming knife		
	Scraping knife		
	Corner rounding knife		
	Chain block		
	Cloth wheel		
Lubrication	Pre-milling guide rails	Once a day	32# if necessary Anti-wear hydraulic oil
	End cutting guide rail		
	Conveyor chain	Once a month	Add universal lithium-based grease No.3
	Pressing universal coupling	Once a week	Check for rust and add general lithium-based grease No. 3
	Gluing universal coupling		
Cleaning	Glue box	Once a day	Clean up in time
	Chain block	Monthly	Clean up in time
Pneumatic	Gas tank	Once a week	Timely drainage
	Triplet	Once a day	Drain water in time and check the oil level of the triplex in time. If it is less than 1/3 , add 32# anti-wear hydraulic oil to 2/3 .

16 List of Wearing Parts

Serial number	Name	Material code	Part	Picture	Remark
1	Chain Block	H0308F01218	Conveyor chain components		
2	FLK011 Press Roller Grade A	H0308F00685	Upper beam part		
3	Buffing wheel	H0308F00527	Buffing components		
4	Rough trimming knife	H0305F04631	Rough trimming components		
5	Fine trimming knife	H0305F00214	Fine trimming components		
6	Right end cutting saw blade	H0305F01215	End cutting components		
7	Left end cutting saw blade	H0305F00218	End cutting components		
8	Universal joint	H0302F00530	Gluing motor components		
9	Alloy A grade scraper	H0305F06872	Scraping components		
10	Bracket wheel	H0308F00686	Feeding rack components		
11	Glue door shaft	H0302F01038	Gluing motor components		
12	Imported diamond pre-milling cutter	H0305F06741	Pre-milling components		
13	Imported diamond pre-milling cutter	H0305F06740	Pre-milling components		
14	Corner rounding knife	H0305F00217	Corner rounding components		

List of Wearing Parts

List of Wearing Parts

Serial number	Name		Material Code	Part	Picture	Remark
15	Glue shaft assembly	High temperature bearings	H0304F00979	Gluing motor components		
16		Deep groove ball bearings	H0304F00980			
17		Gluing nut	H0302F01034			
18		Universal joint	H0302F01035			
19		High temperature sealing ring	H0304F00982			
20		Gluing flange	H0302F01069			
twenty one		High temperature seal	H0304F00983			
twenty two		High temperature bearings	H0304F00981			
twenty three		Gluing shaft	H0302F01071			



Due to factors such as product updates and upgrades, the material codes in the list of wearing parts may change. The final information shall be subject to that provided by the manufacturer.

17 Appendix

17.1 Packing List

17.2 Pneumatic System Diagram

17.3 Circuit Diagram

17.4 Maintenance Manual

17.5 Equipment Warranty Card



17.6 Product Certificate

HUAHUA Edge Banding Machine

Maintenance Manual

To ensure the edge banding machine operates in good condition, extends its service life, and guarantees normal production, regular inspections should be conducted during equipment use. If any problems are found, they need to be addressed promptly to ensure proper machine operation. The following section, categorized by component, outlines the items that require inspection.


I. Glue, pressing component

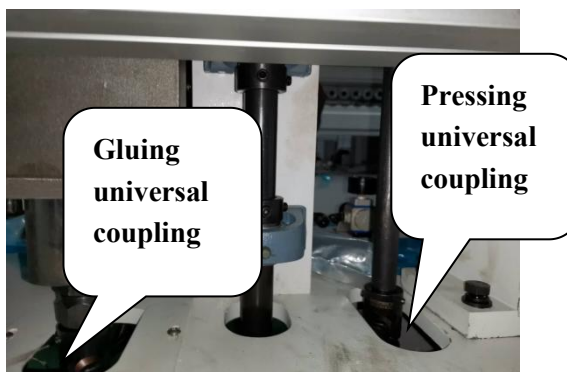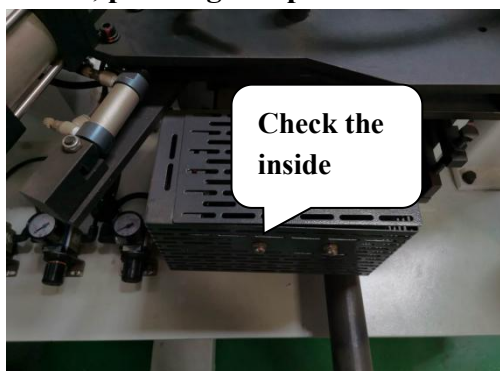

1. Before starting the machine each day, check the inside of the glue box for cleanliness. Too many impurities will affect the glue application effect.
2. During use, be careful not to let the glue temperature get too high, as this will cause the glue to burn.



There are universal couplings at the glue application and pressing points. Clean any rust promptly and apply grease to the sleeve end joints and shaft end joints.

II. End cutting component

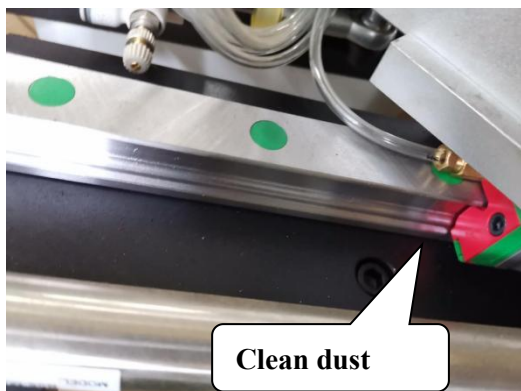


1. Check and clean the dust from the saw blade guide rails daily, and add lubricating oil as needed.
2. Pay attention to the wear condition of the saw blade and replace it promptly.

III. Trimming and scraping component

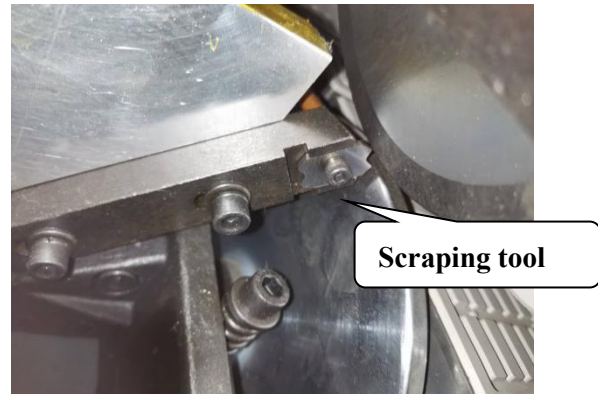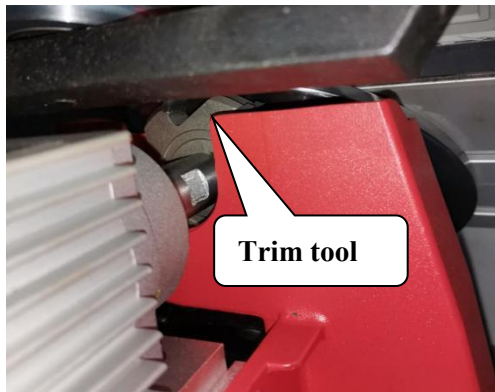


Check the wear of the cutting tools daily and replace them promptly.

IV. Corner rounding component

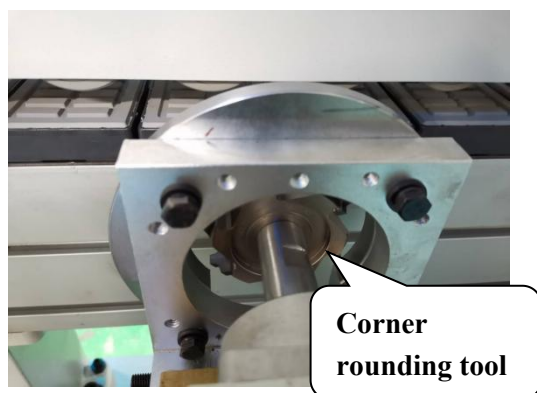

The corner rounding tool is prone to wear and tear; please replace it promptly.

V. Cutting component

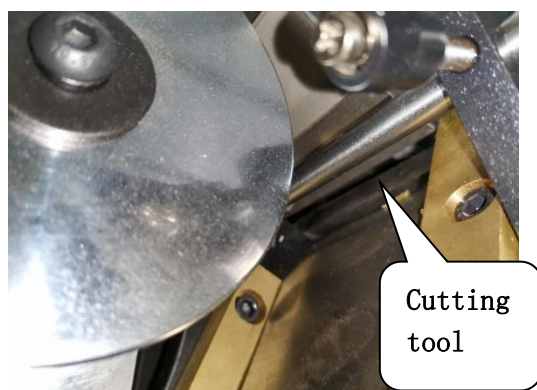

Cutting knives should be replaced promptly.


VI. Buffing component



Buffing cloth wheels wear out easily, so be sure to replace them in time.

List of Wearing Parts


VII. Pneumatic component

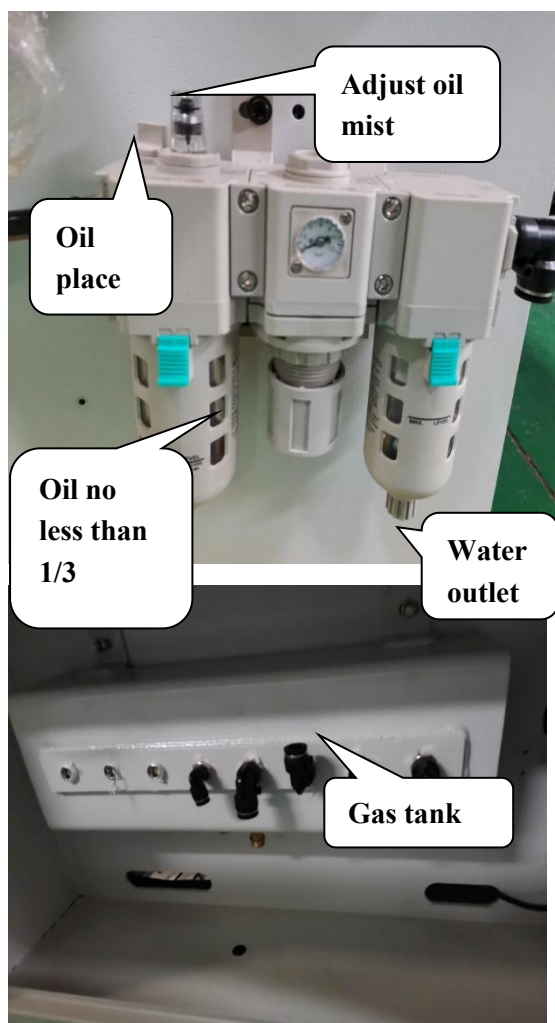

1. Before starting the machine each day, drain the water from the triple-unit drain cup and check the triple-unit oil level. If it is below 1/3, add 32# anti-wear hydraulic oil to 2/3. Increase the oil level if the hydraulic oil is thick, and decrease the oil level if it is thin.

2. Drain the air tank once a week.

VIII. Transmission component

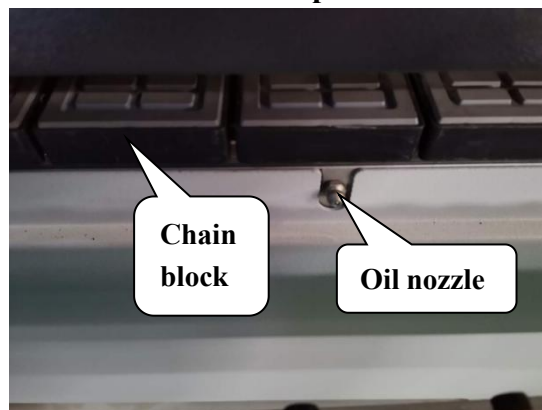

1. The chain blocks and the chain beneath them should be cleaned monthly, and grease should be injected into the grease fittings.

2. Chain blocks are prone to wear; replace them promptly.

Type	Maintenance part	Frequency	Measure
Wear-related	Pre-milling tool	Once a day	Check to see if there are any damages or severe wear and tear. If so, replace it promptly.
	Cutting tool		
	End cutting saw blade		
	Rough trimming tool		
	Fine trimming tool		
	Scraping tool		
	Corner rounding tool		
	Chain block		
	Cloth wheel		
Lubrication-related	Pre-milling guide rail	Once a day	Clean the dust. If necessary, add 32# anti-wear hydraulic oil.
	End cutting guide rail		
	Conveying chain	Once a month	General lithium-based lubricating grease NO, 3
	Pressing universal coupling	Once a week	Check for rust and apply General Lithium Base Lubricant No. 3.
	Gluing universal coupling		
Cleaning-related	Glue box	Once a day	Clean in time
	Chain block	Once a month	Clean in time
Pneumatic-related	Gas tank	Once a week	Drain in time
	Three-joint assembly	Once a day	Drain the water in time and check the oil quantity of the three-way valve promptly. If it is less than 1/3, add 32# anti-wear hydraulic oil to the position of 2/3.

Attention

1. After work every day, the debris on the machine must be blown dry with an air gun.
2. All maintenance work must be carried out when the power is off and the gel box has cooled down.
3. Customers are prohibited from disassembling or modifying the machine without authorization. Any damage to the machine caused by unauthorized disassembly or the use of non-original parts shall be the responsibility of the customer.





Product Certificate

Product Name:

Product Model:

Production Number:

This product has been inspected and found to meet all quality standards and technical requirements before being released from the factory.

Inspection Supervisor:

Guangdong Shunde Changsheng Machinery Manufacturing Co., Ltd.

Inspection date :

Warranty Policy

1. The warranty period of this product is one year.
2. During the warranty period, any faults that occur during normal use according to the instruction manual will be repaired free of charge.
3. During the warranty period, if any of the following situations occurs, the product must be repaired for a fee:
 - A. Unable to provide this warranty and valid purchase receipt.
 - B. Failure and damage caused by incorrect use and improper repair.
 - C. Failure and damage caused by transportation, moving and falling by the user.
 - D. Failure and damage caused by other unavoidable external factors.
 - E. Damage caused by water or other solutions entering the equipment due to improper use.
 - F. Damage caused by using power supply and voltage beyond the instructions.
 - G. Damage caused by human operation that is not in compliance with equipment usage.
 - H. Loss of wearing components.
4. Only the above warranty is given, and no other express or implied warranty (including implied warranty of merchantability, rationality and adaptability to a particular application, etc.) Whether in contract, civil negligence or other aspects, the company shall not be responsible for any special, incidental or indirect damages .



Product warranty card

Product Name_____

Product Model_____

Factory number_____

Date of manufacture _____Year_____Month_____Day

Customer Name :_____

Contact Number :_____

Customer Address :_____

1) Warranty Content:_____ After-sales:_____

Customer Signature:_____ ☐ satisfy ☐ Dissatisfied

2) Warranty Content:_____ After-sales:_____

Customer Signature:_____ ☐ satisfy ☐ Dissatisfied

3) Warranty Content:_____ After-sales:_____

Customer Signature:_____ ☐ satisfy ☐ Dissatisfied

4) Warranty Content:_____ After-sales:_____

Customer Signature:_____ ☐ satisfy ☐ Dissatisfied



国家高新技术企业



-微信公众号-



-公司小程序-

广东顺德昶盛机械制造有限公司

GUANGDONG SHUNDE CHANGSHENG MACHINERY MANUFACTURING CO., LTD.

地址：广东省佛山市顺德区伦教熹涌工业区龙威路9号

Add: Longwei No.9 Road, Xichong Industrial Park, Lunjiao Town, Shunde Dist., Foshan, Guangdong, China

电话/Tel: 0757-27336257 网址/web: www.huahuacnc.com

传真/Fax: 0757-28798598 邮箱/E-mail: sales@huahuacnc.com

广东顺德昶盛机械制造有限公司

CHANGSHENG MACHINERY MANUFACTURING CO., LTD.

地址：广东省佛山市顺德区伦教熹涌工业区龙威路尾

电话：0757-27336257 网址：www.huahuamgix.com

传真：0757-28798598 邮箱：dghh5983538@126.com

