


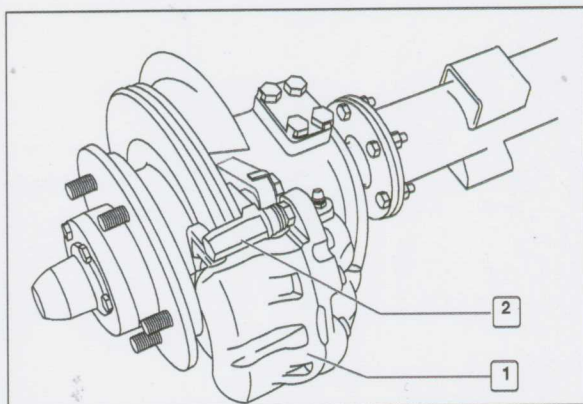


BRAKE DISC SUBSTITUTION

Removal

- 1) Remove wheel (see 3F-4).
- 2) Disconnect brake caliper (1) from its support, taking it away from hose and remove support (2).

NOTE:


- Do not act on the brake pedal till the new brake caliper has been fully installed.
- While carrying out this task, the brake caliper must be kept out-of-the-way adequately; do not allow it to stay hanging from the brake hose.

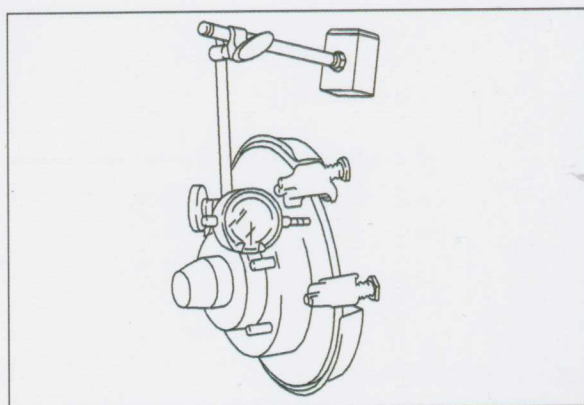

- 3) Install a dial gauge fixing it to the axle housing and with measuring tip resting at about two millimetres approximately from the outer edge of the disc.
- 4) Left brake disc rotate and check there is no a deflection higher than indicated.

Brake disc maximum deflection: 0.15 mm

- 5) If deviation is higher proceed to mechanically rectify the brake disk without exceeding the service limit.

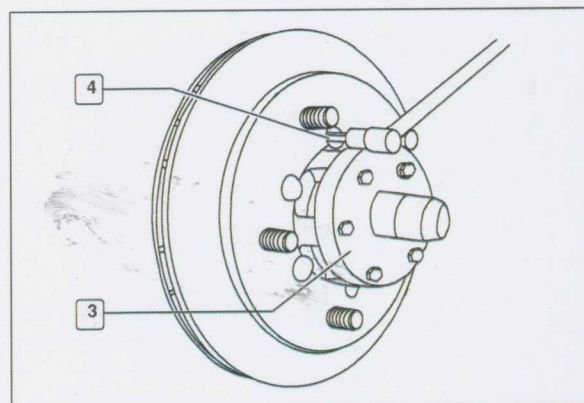


6. Remove driving flange and half shaft (6 hex head bolts) (3) on drawing, and lay aside

7. Remove hub thus:

- (a) fold back locking tabs on bearing/ hub retaining nut
- (b) remove two bearing hub nuts (2"/ 50mm AF approx) and tab washer.
- (c) remove outer bearing roller race and thrust washer noting position of washer for replacement.
- (d) Remove hub and disc.

- 8 Strake / mark disc /hub (no idea why this is required when fitting a new disc!!)

- 9 Remove 6 allen key bolts. (I found it best to hold the disc tightly in the vice and use a breaker bar to shift these. They were tight and needed to be wound out **all the way** with some effort. I think liberal application of thread lock had been applied in the factory)

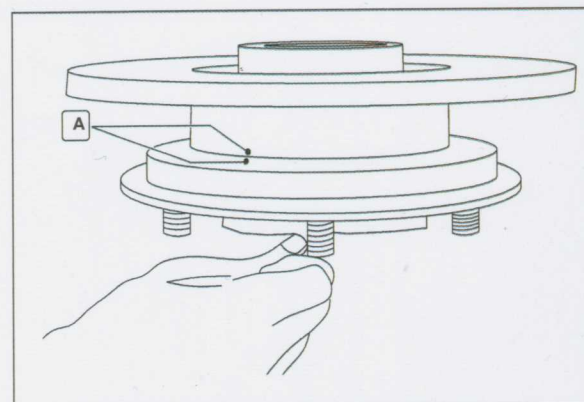

10. Separate the disc from the hub. (I used two pairs of 10mm bolts , 2nd pair longer than the first, to jack the disc off the hub) [see photo]

Installation:

Recommend that the hub is thoroughly cleaned of rust and debris with a wire brush, so that the new disc runs true with the hub face. (The hub could be set up in the lathe and checked with a dial test indicator (DTI), and the new disc then fitted, and also checked with the DTI.

Reverse above to install back on vehicle. Use of thread lock at owners discretion

