



Arduino Nano – Atmega 328P

() = Pin is free


(X) = Pin is occupied

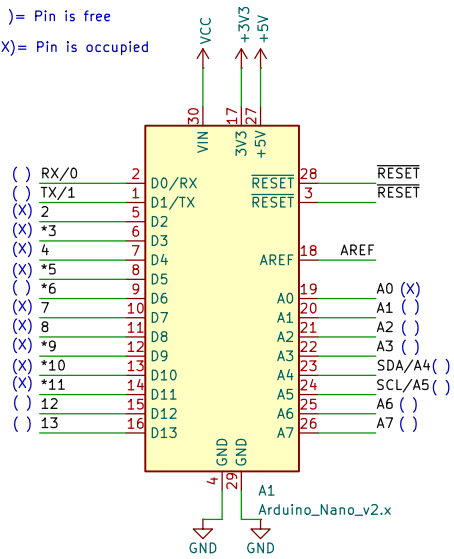


4X– Ultrasonic sensors – Pins 2,4,5,7,8,10

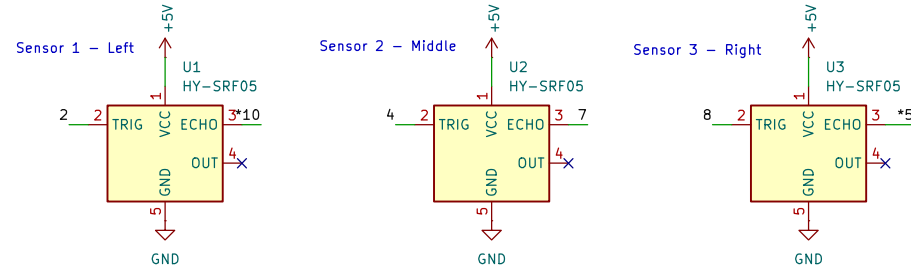


Servo – Steering – Pin 9 (Timer 1, 16-bit)

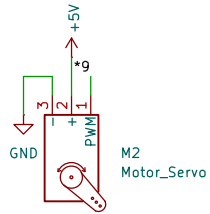

Start module, remote sets A0 high which triggers start.

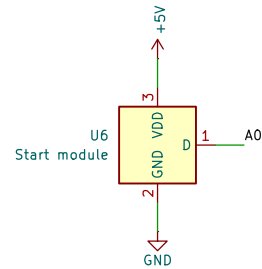

Battery & motor – Pin 3,11 PWM Timer 2 (8-bit)
7.4 V battery connected to VCC

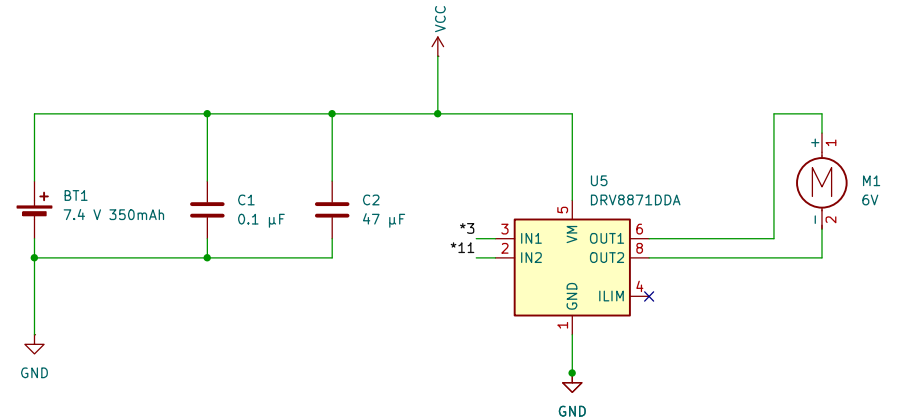

* Indicates a PWM-capable pin