
CHEAT SHEET

The following 2 pages are a printable Cheat Sheet for quick reference while you're using Gliss.

To create your Gliss Cheat Sheet:

1. Print the pages double-sided, and in the same orientation
2. Crease along the fold lines on the back
3. Fold like a pamphlet, with the Gliss diagram on the cover

** If you're using Gliss 1U, rotate the cheat sheet counter-clockwise by 90 degrees, so the green Mode Selector is on the left.

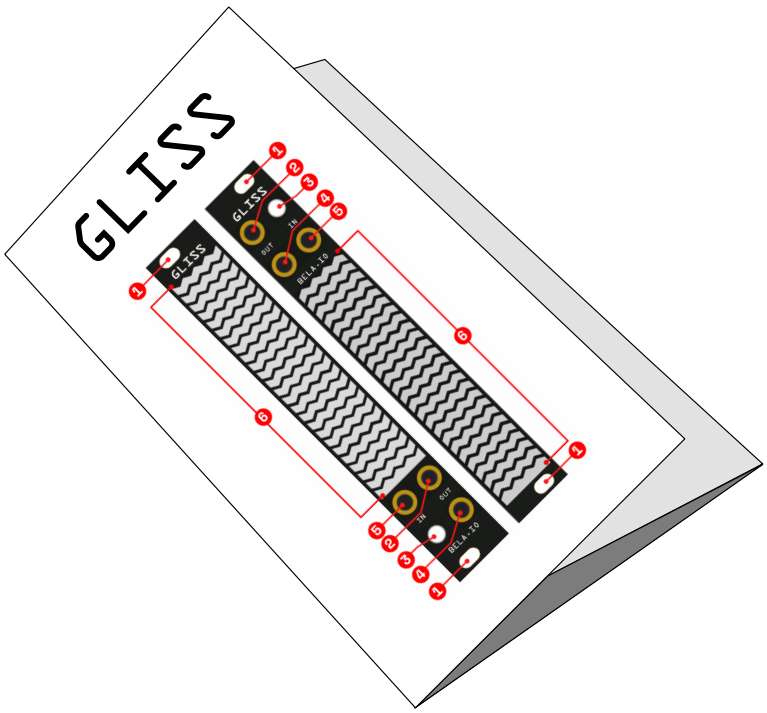



Mode 1:
CONTROL

Control gestures in real time, using your finger position, touch size, or both.

SELECTOR 1: TOUCH INPUT
- Single Slider
- Dual Slider
- Dual Touch
- Slider + Touch

SELECTOR 2: LATCHING
- Unlatched
- Latched
- Latch Position

SELECTOR 3: SLEW RATE
Tap to customise the attack and release of both inputs via a sub menu



Mode 3:
SIGNAL

Scale, smooth, clip and visualise your incoming signals.

SELECTOR 1: INPUT SIGNAL
- Control Voltage (DC Coupled)
- Audio Signal (AC Coupled)

SELECTOR 2: OUTPUT TYPE
- Signal/inverted signal
- Signal/envelope
- Envelope/inverted envelope

SELECTOR 3: ENVELOPE DECAY
- Continuous; tap and slide point to adjust.



Mode 2:
RECORD

Record gestures up to 150 seconds long. Play them back in various ways, as LFOs or envelopes.

SELECTOR 1: TOUCH INPUT
- Single Slider
- Dual Slider
- Dual Touch
- Slider + Touch

SELECTOR 2: PLAYBACK
- Loop
- Trigger
- Clock
- Wavetable
- Waveshaper



Mode 4:
NOTES

5 tunable notes to play as a keyboard or step sequencer.

SELECTOR 1: PLAY TYPE
- Keyboard
- Sequencer

SELECTOR 2: QUANTISATION
- On
- Off

SELECTOR 3: VARIABLE
- Continuous; tap and slide point to adjust.

In KEYBOARD: Vibrato depth
In SEQUENCER: Glide

Global Settings

The Global Settings menu is for adjusting general behaviours of Gliss.

To enter Global Settings:

1. Hold the Button
2. Tap the Touch Strip with 3 fingers
3. Release the Button



TOUCH SENSITIVITY
Continuous; tap then slide point to adjust.

LED BRIGHTNESS
Continuous; tap then slide point to adjust.

MENU ANIMATION
Hold to toggle on/off

MODULE ORIENTATION
After changing your faceplate, hold and drag to desired position to reorient your module.

The Mode Menu

The Mode Menu - or Menu - is where you can customise the Mode you're in, and move between Modes.

To enter the Menu:

1. Hold the Button
2. Tap the Touch Strip with 2 fingers
3. Release the Button



MODE SELECTOR
Tap to move to the next Mode.

SETTINGS SELECTORS
Up to 3. Each represents a group of related settings. Tap to step through.

VOLTAGE RANGE
Tap to customise the voltage range of the Input and Outputs for the current Mode.

FOLD HERE

bela.io/gliss


Brought to you by

bela.io

FOLD HERE

GLISS

A touch controller for modular synth

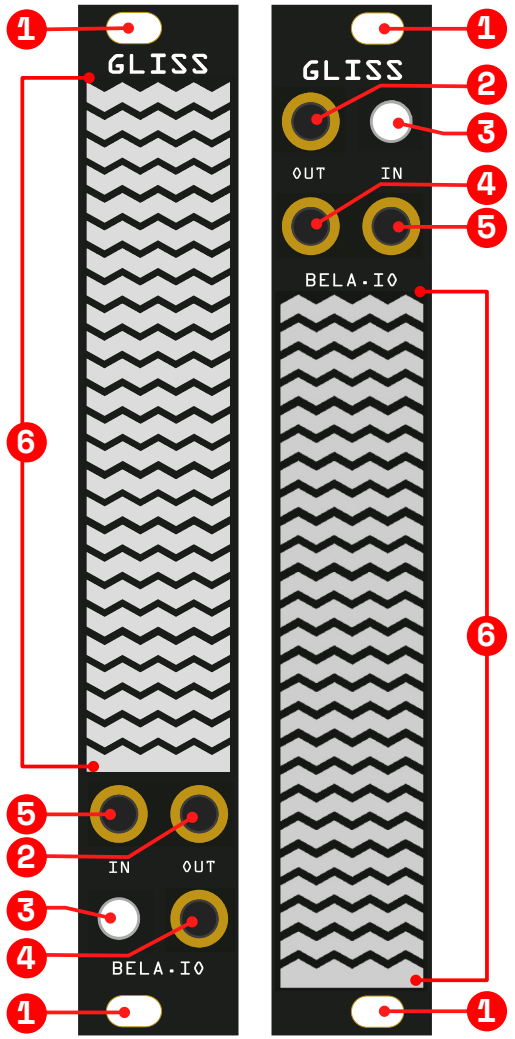

1 Mounting Hole
2 Top Output
3 Button
4 Bottom Output
5 Input
6 Touch Strip

There are 3 available faceplates - 2 for Gliss 4HP as well as Gliss 1U - so you can choose the layout that's right for your system.