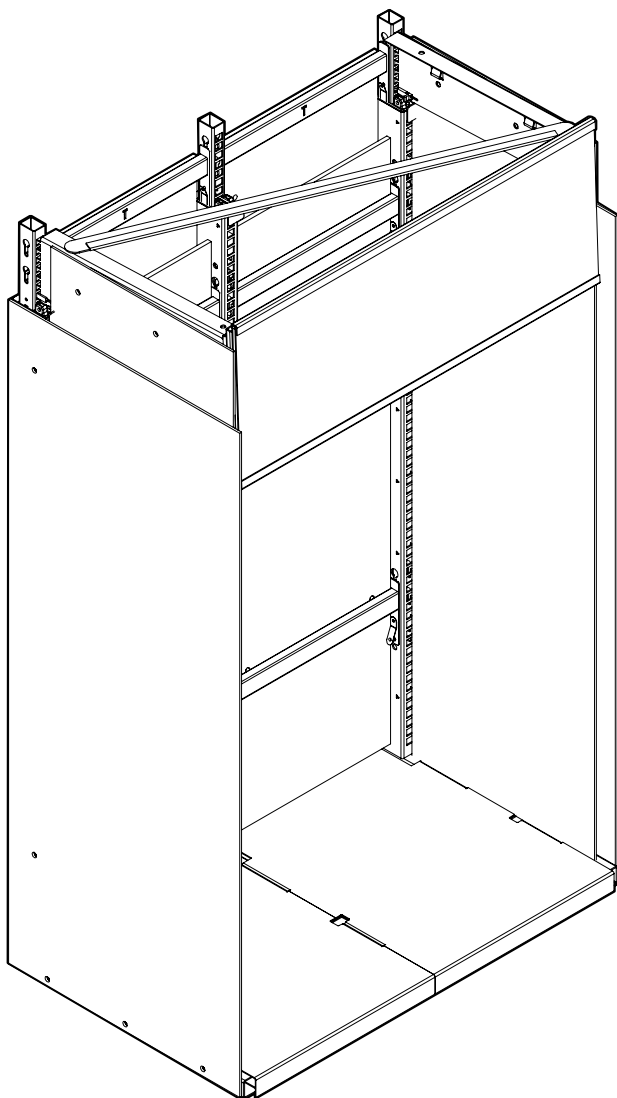


4.0 Tobacco Fixture

ASSEMBLY INSTRUCTIONS



**CAUTION!
ATTACH
ASSEMBLED
UNIT TO WALL**

For Video Instructions Visit:


<https://www.benchmarc.com/swedishinstructions/>

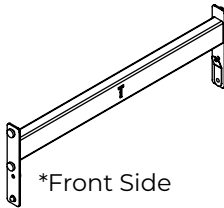
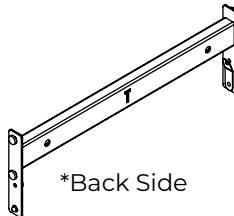


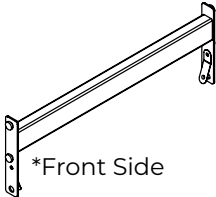
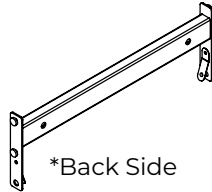
 **BENCHMARC®**
We Invent Displays

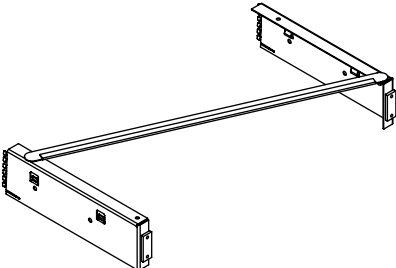
PARTS INCLUDED - Quantities may vary depending on fixture size

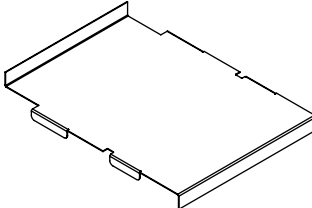
2216

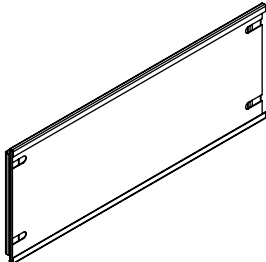
Uprights 	Display Length	Part Quantity
	1ft	2
	2ft	3
	3ft	4
	4ft	5

Top crossbar  *Front Side  *Back Side	Display Length	Part Quantity
	1ft	1
	2ft	2
	3ft	3
	4ft	4

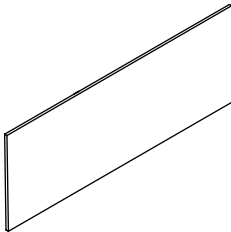
Bottom crossbar  *Front Side  *Back Side	Display Length	Part Quantity
	1ft	3
	2ft	6
	3ft	9
	4ft	12


Foldable Header 	Display Length	Part Quantity
	1ft	1
	2ft	1
	3ft	1
	4ft	2

Base Panel 	Display Length	Part Quantity
	1ft	1
	2ft	2
	3ft	3
	4ft	4

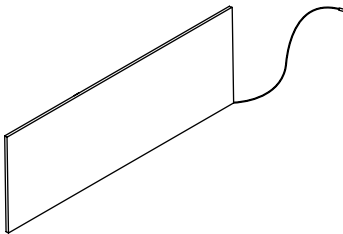
Header Face 	Display Length	Part Quantity
	1ft	1
	2ft	1
	3ft	1
	4ft	2

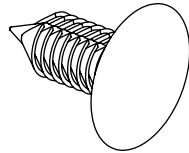
Back Panel 	Display Length	Part Quantity
	1ft	1
	2ft	2
	3ft	3
	4ft	4

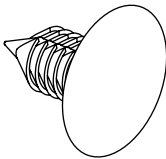
Graphic 	Display Length	Part Quantity
	1ft	1
	2ft	1
	3ft	1
	4ft	2

Upper Side Panel 	Display Length	Part Quantity
	1ft	2
	2ft	2
	3ft	2
	4ft	2

Lower Side Panel 	Display Length	Part Quantity
	1ft	2
	2ft	2
	3ft	2
	4ft	2

Light Panel 	Display Length	Part Quantity
	1ft	1
	2ft	1
	3ft	1
	4ft	2

Christmas Tree Clip Long 	Display Length	Part Quantity
	1ft	14
	2ft	14
	3ft	14
	4ft	14

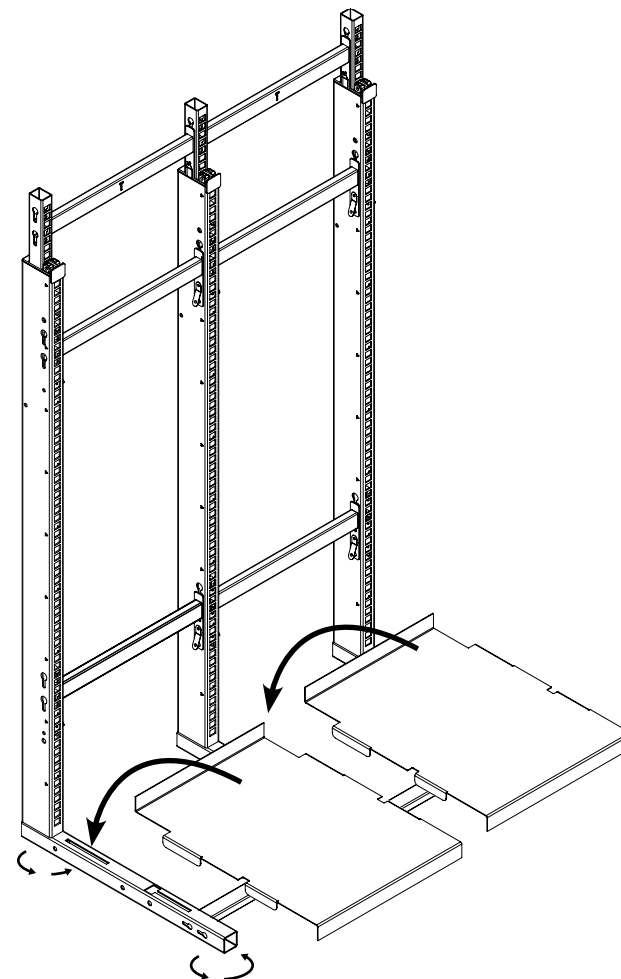
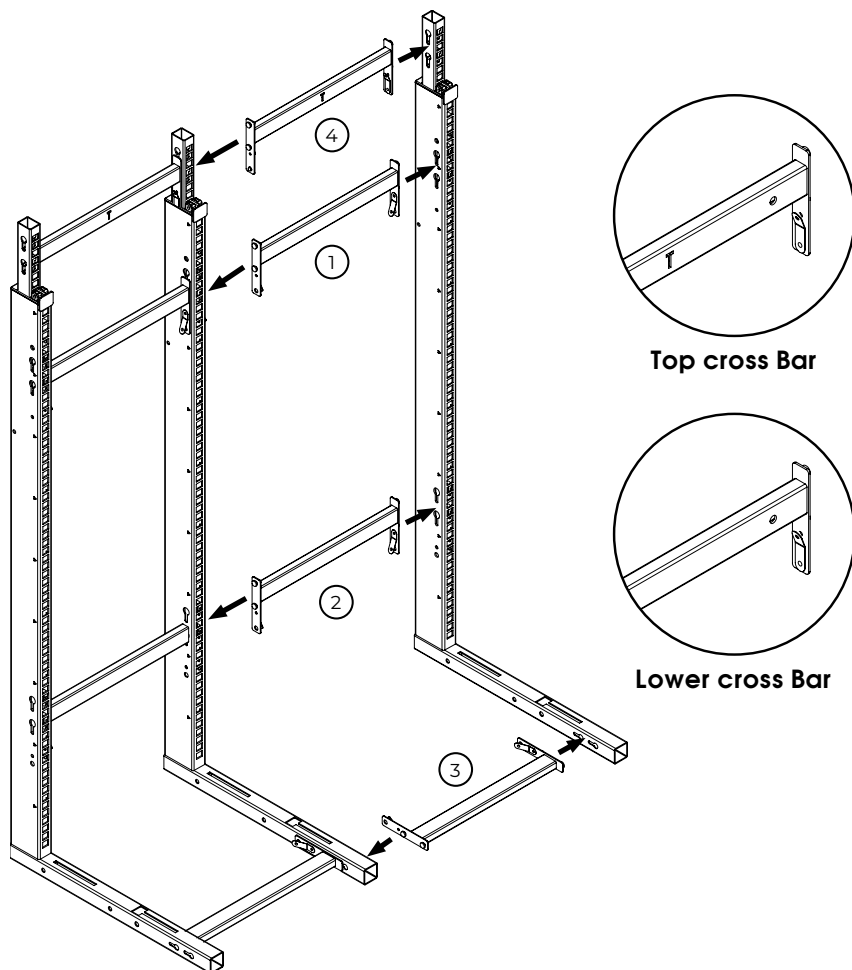
Short 	Display Length	Part Quantity
	1ft	4
	2ft	8
	3ft	12
	4ft	16

1 Make sure the telescoping locks are **NOT** engaged.

Attach cross bars to leg uprights. **Have hole side face away from you.** Starting with lower cross bars. ①
Top cross bar last.

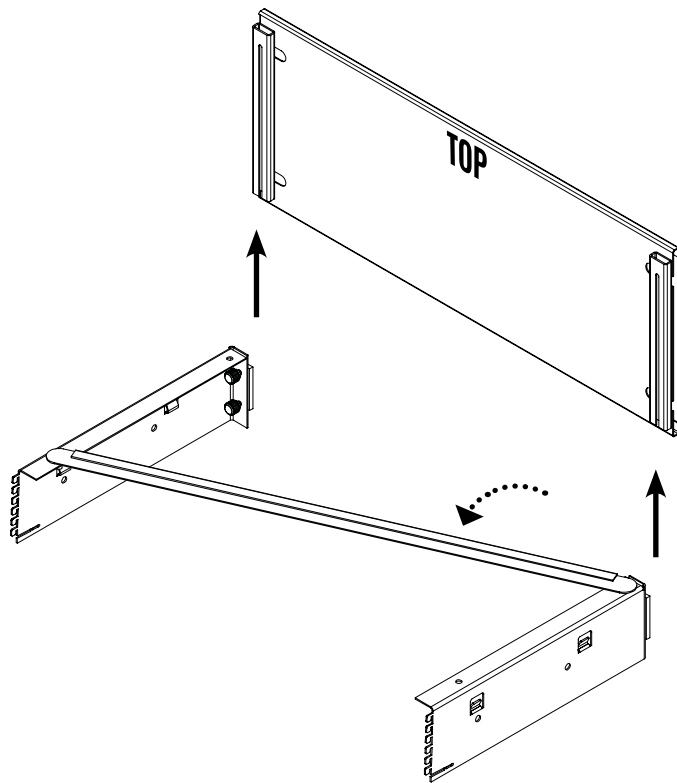
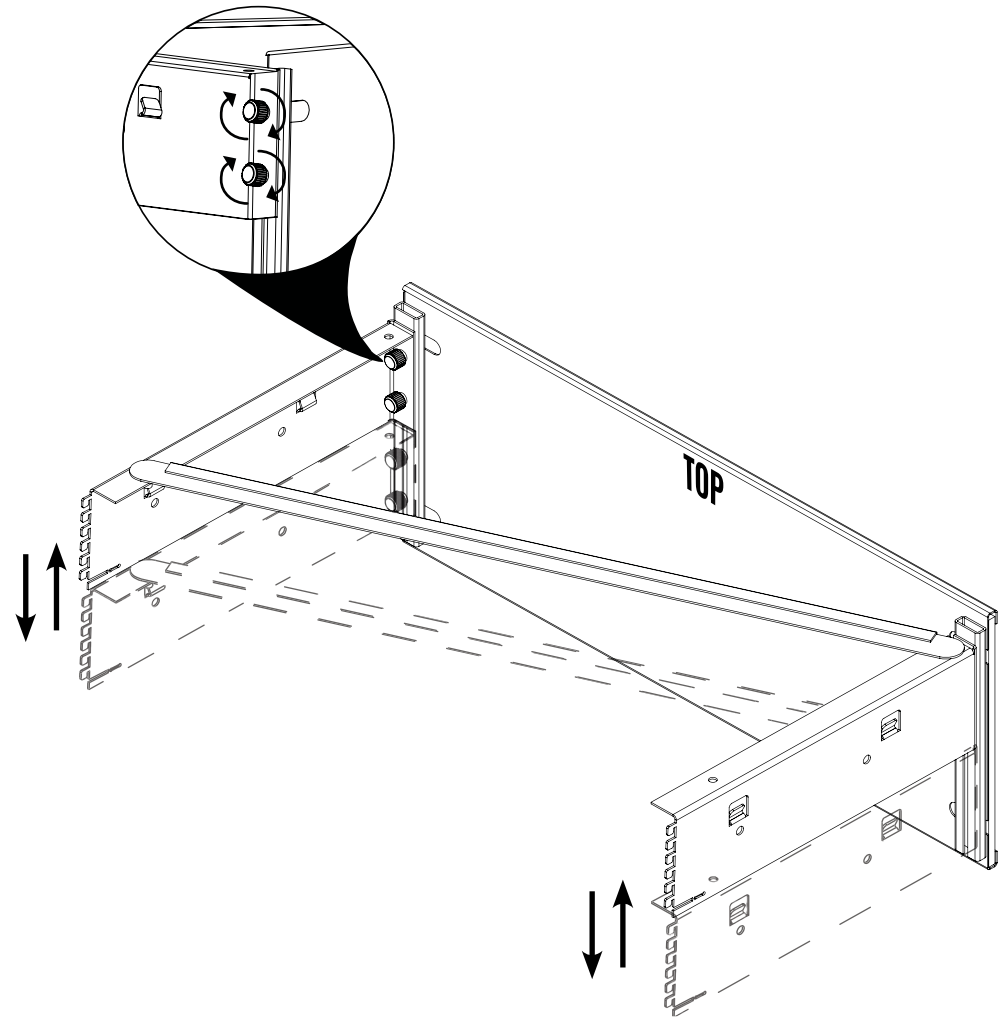
Top cross bars are marked with a “T” while the lower cross bars are blank.

2 Adjust leveler feet. Insert bases into leg slots.

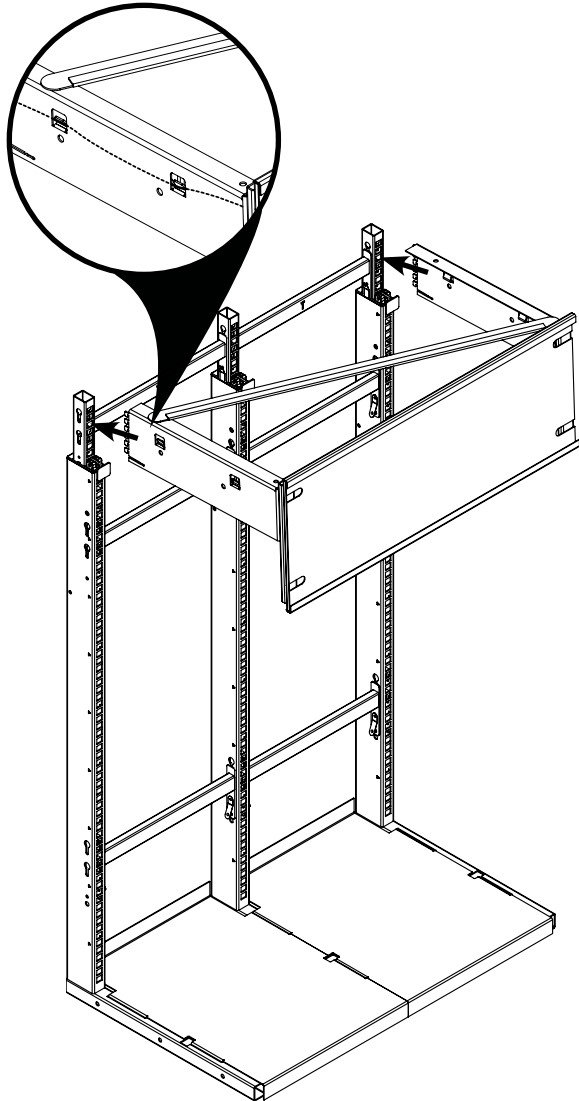


3 Attach header bracket to front header face.

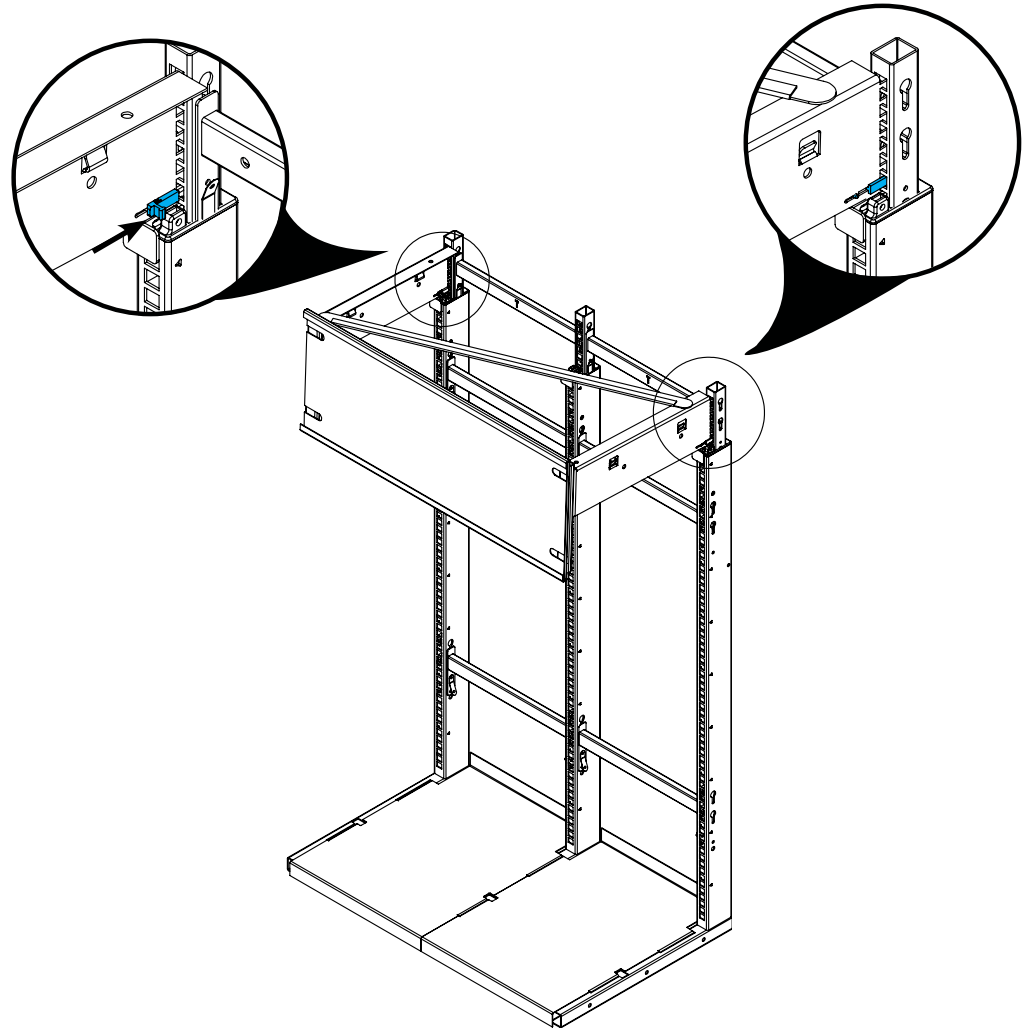
Make sure bracket is oriented with the cross bar on the top.

**4** Position as needed. Tighten thumb screws to secure position.

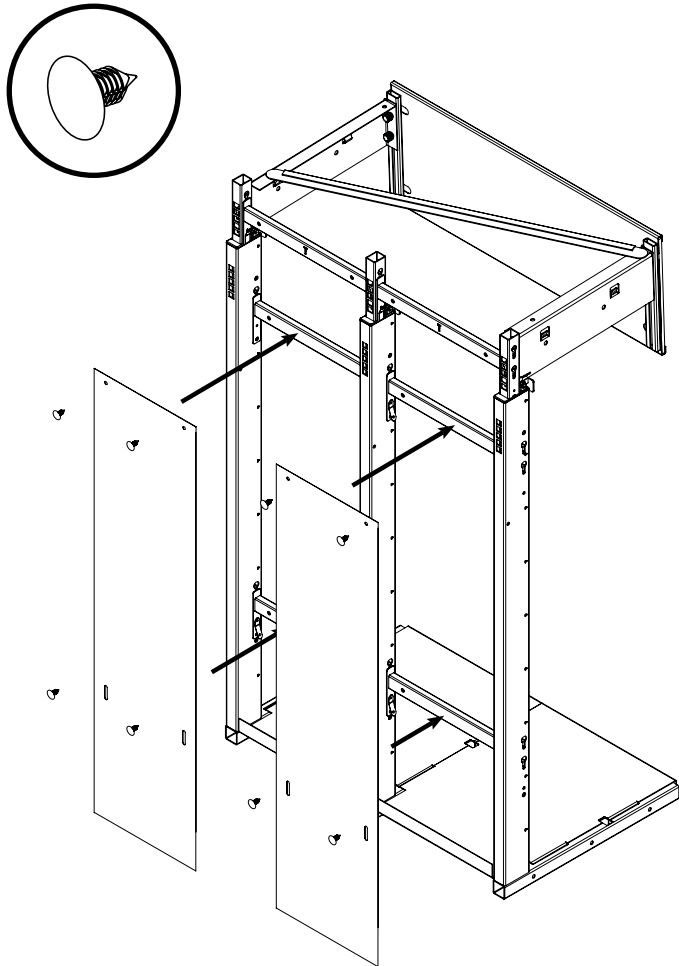
5 Attach header to uprights. Feed led light cable through the bracket.



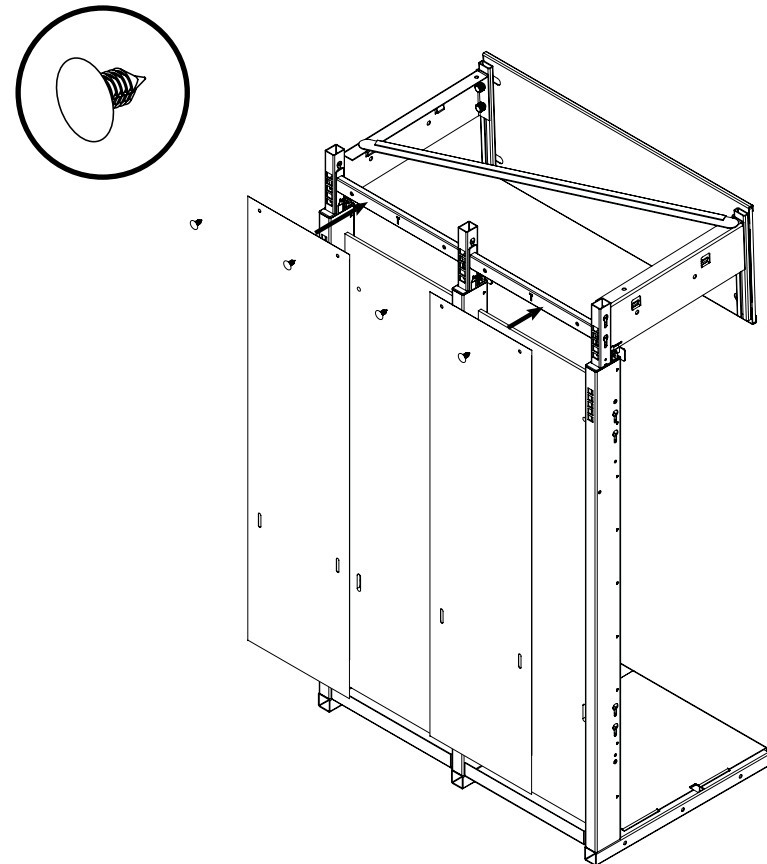
6 Engage the Locks.



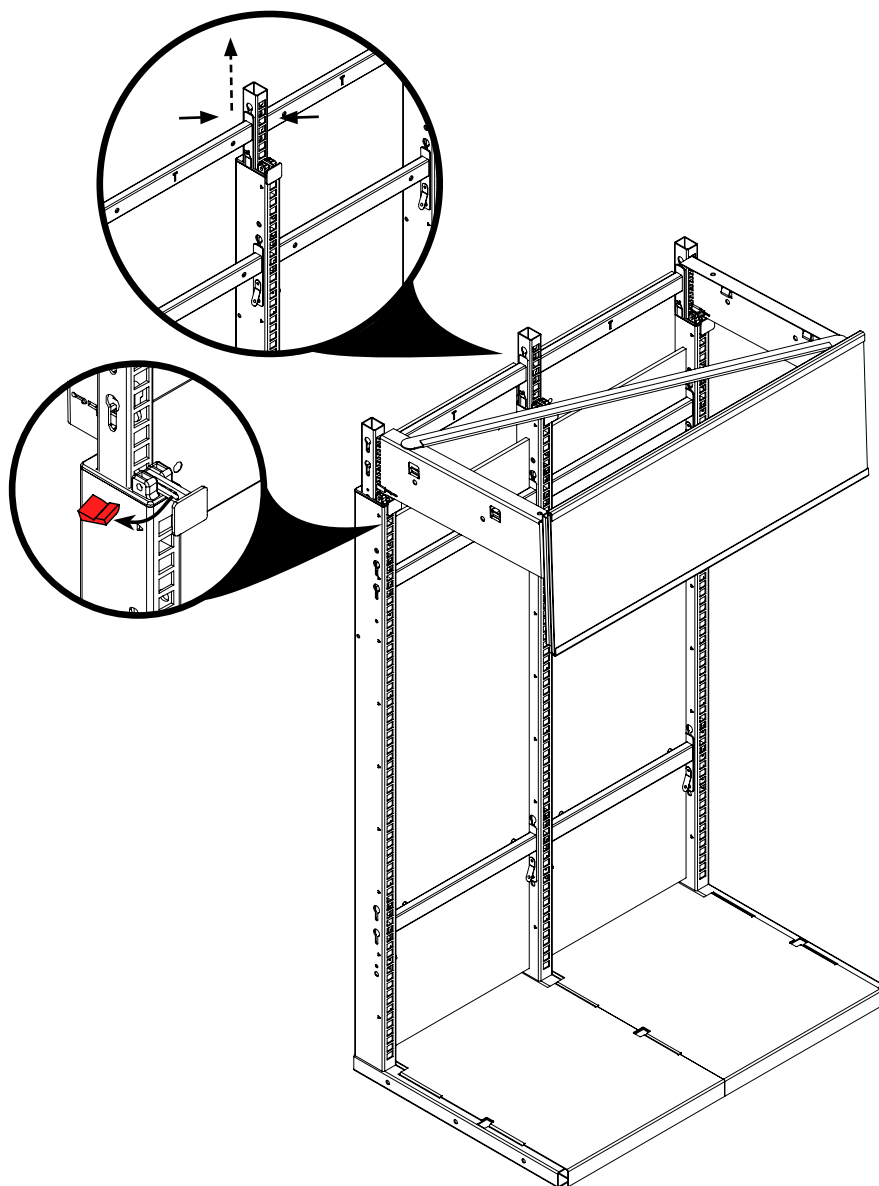
7 Attach backdrop to middle and bottom cross bars with short christmas tree clips.



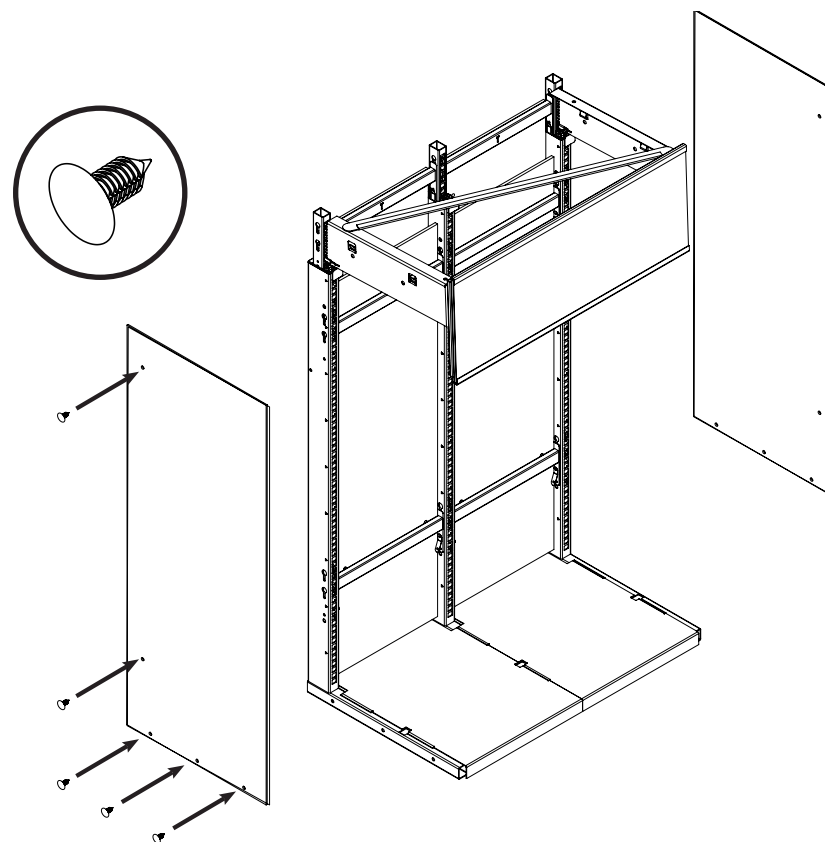
8 Attach secondary backdrop to the top cross bar with short christmas tree clips.



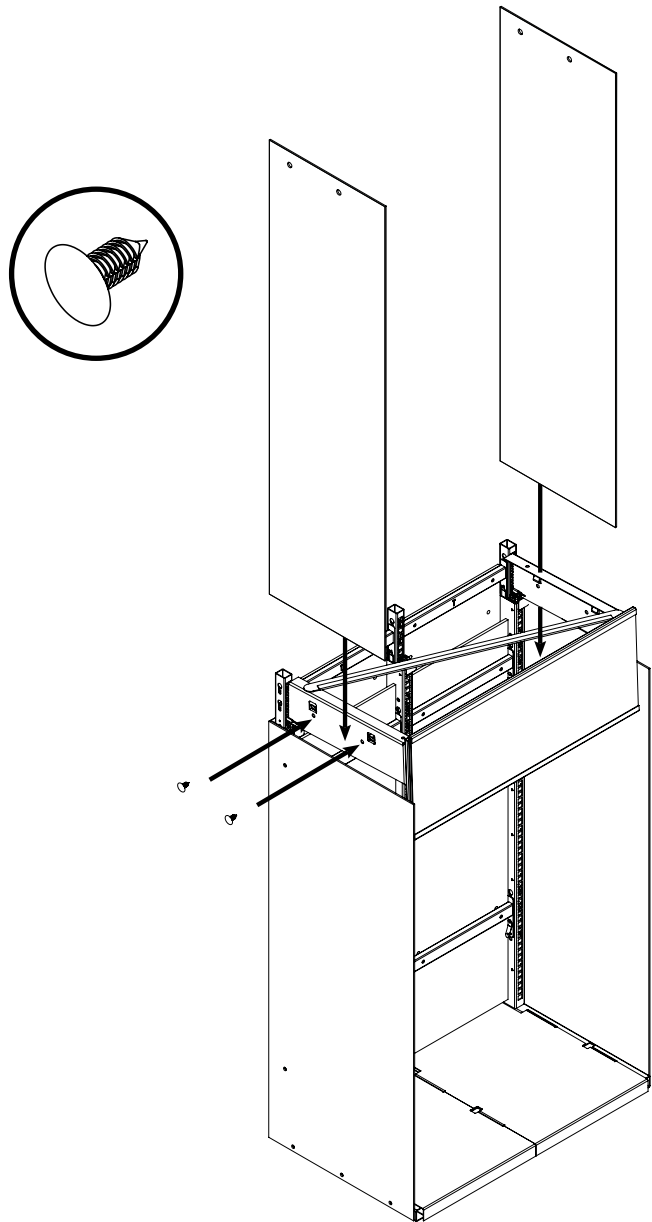
9 Remove lock stoppers and pull up on the uprights to adjust the height. Push in locks to secure in place



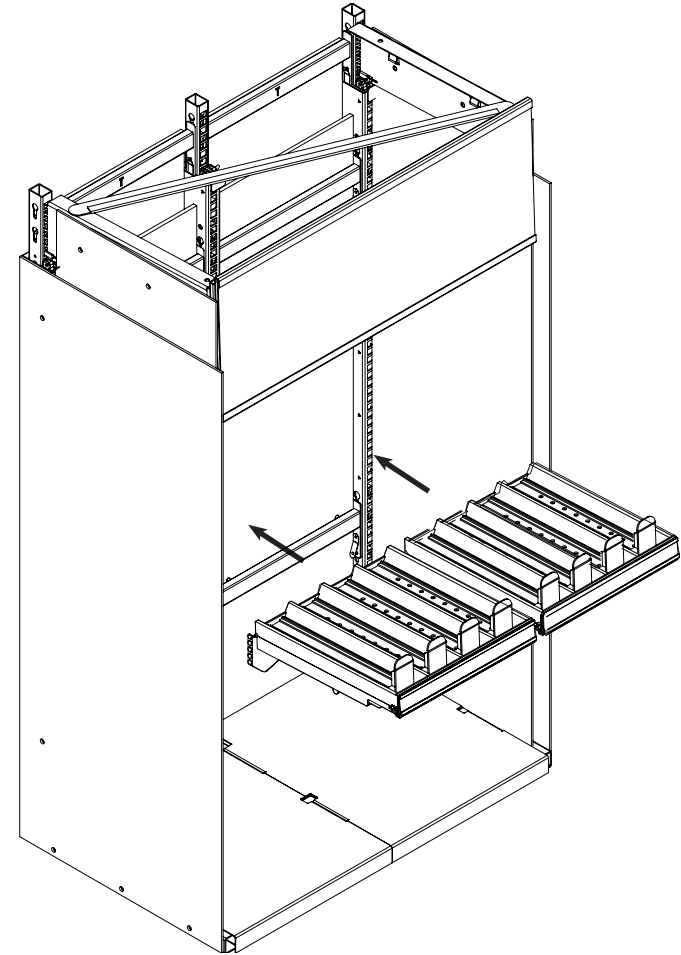
10 Attach lower side panels with long christmas tree clips.



11 Attach upper side panels with long christmas tree clips.



12 Add Shelves.



4.0 Attaching Header Panels

To secure two header panels, secure wing nut to bolt in the center of the two racks to complete assembly.

