

ZYN X FLOOR & COUNTER


SPECIFICATION AND INSTRUCTIONS

For Video Instructions Visit:


<https://www.benchmarc.com/swedishinstructions/>




 **BENCHMARC®**
We Invent Displays

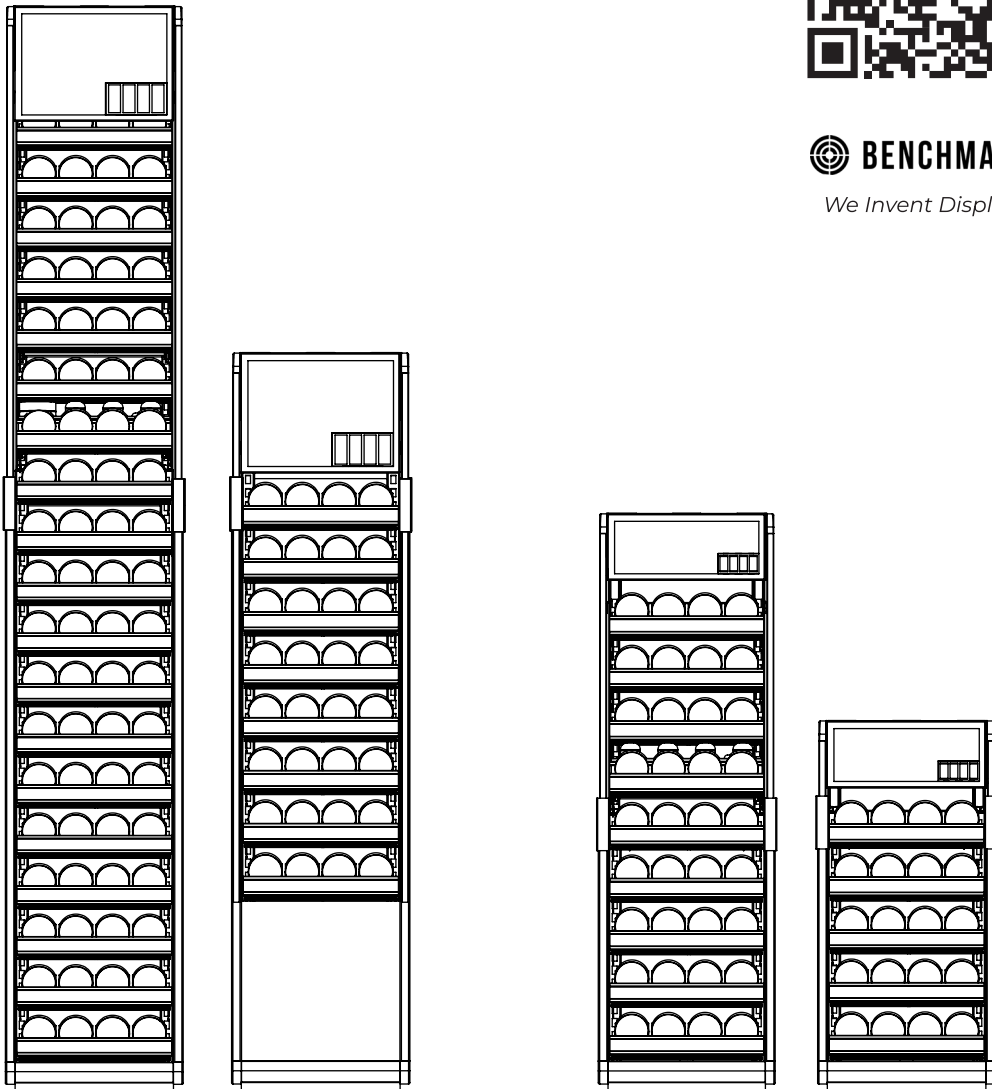


Can or Roll Shelves
(Can be used interchangeably)

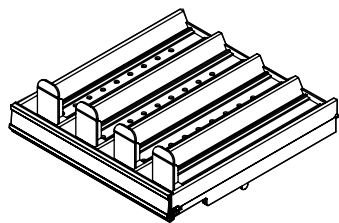


Jumper Cables

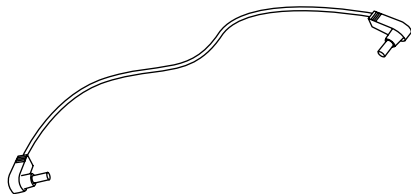


Power Supply

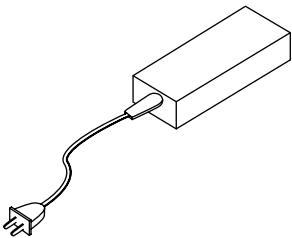

ZYN X Display

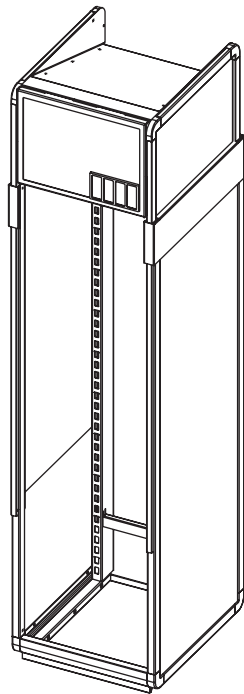

Step 1: To adjust the header, loosen the wing nuts and slide header up or down. Tighten at desired location.

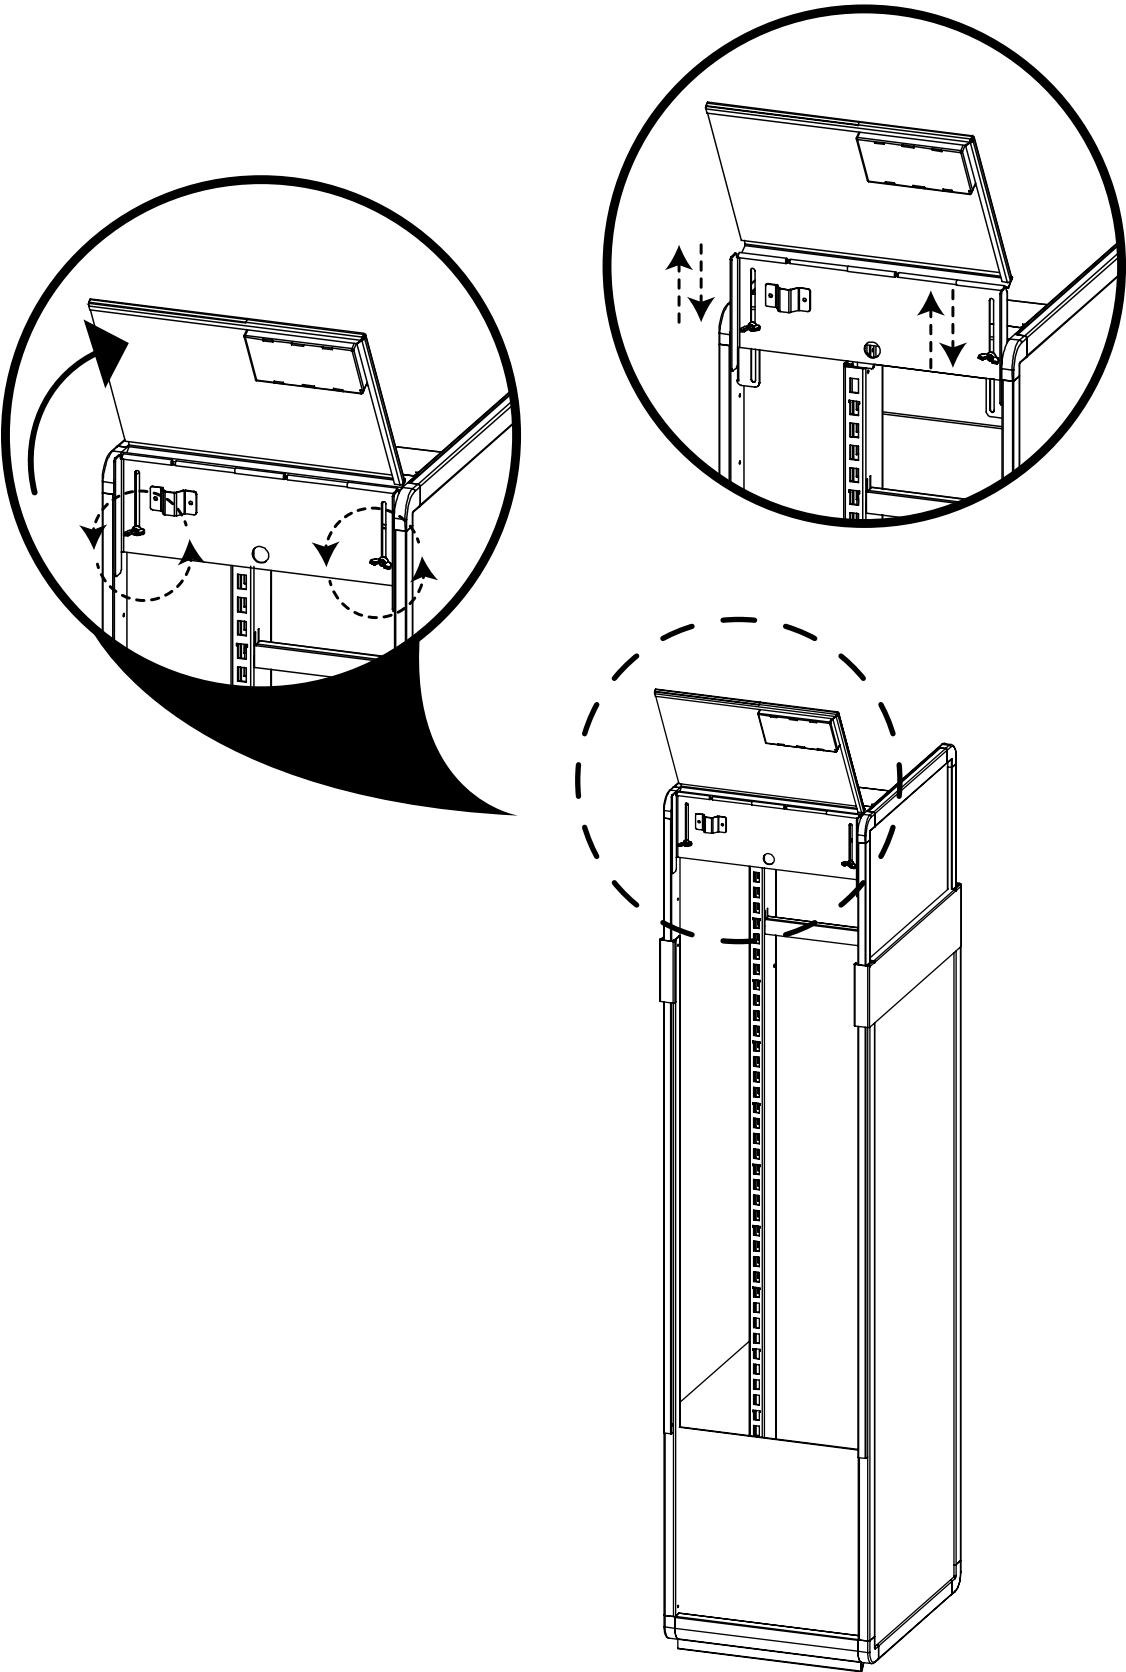


REMOVING THE PANEL

2211


NOTE : FLOOR MODEL COMES WITH FILLER PANEL, COUNTER MODEL DOES NOT

Step 2: To add additional room for shelves, remove the bottom panel. Flex the panel inward.

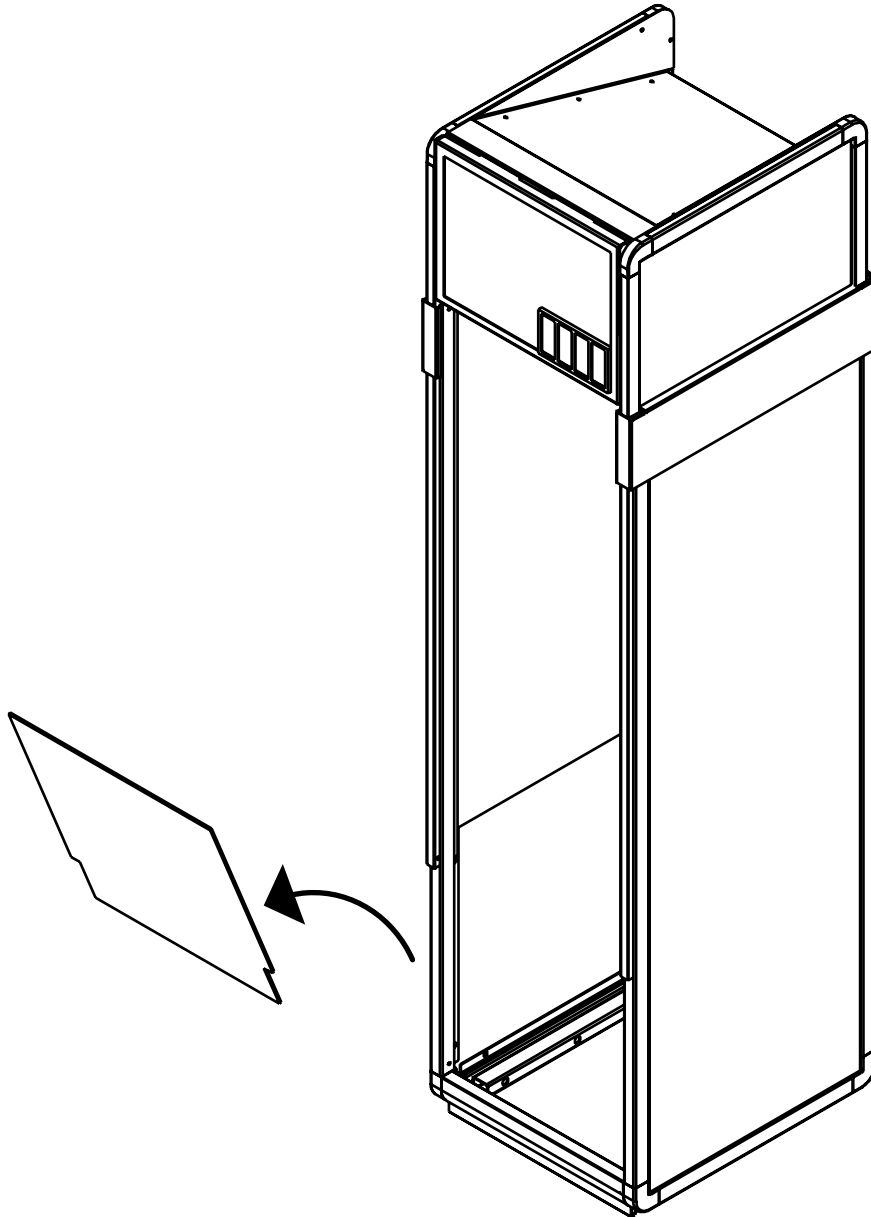


Step 3: Remove red lock pins

To lock the display in place, chose a “T” shaped slot and push in the metal lock. There is a “T” every four slots. This allows for even shelf spacing.

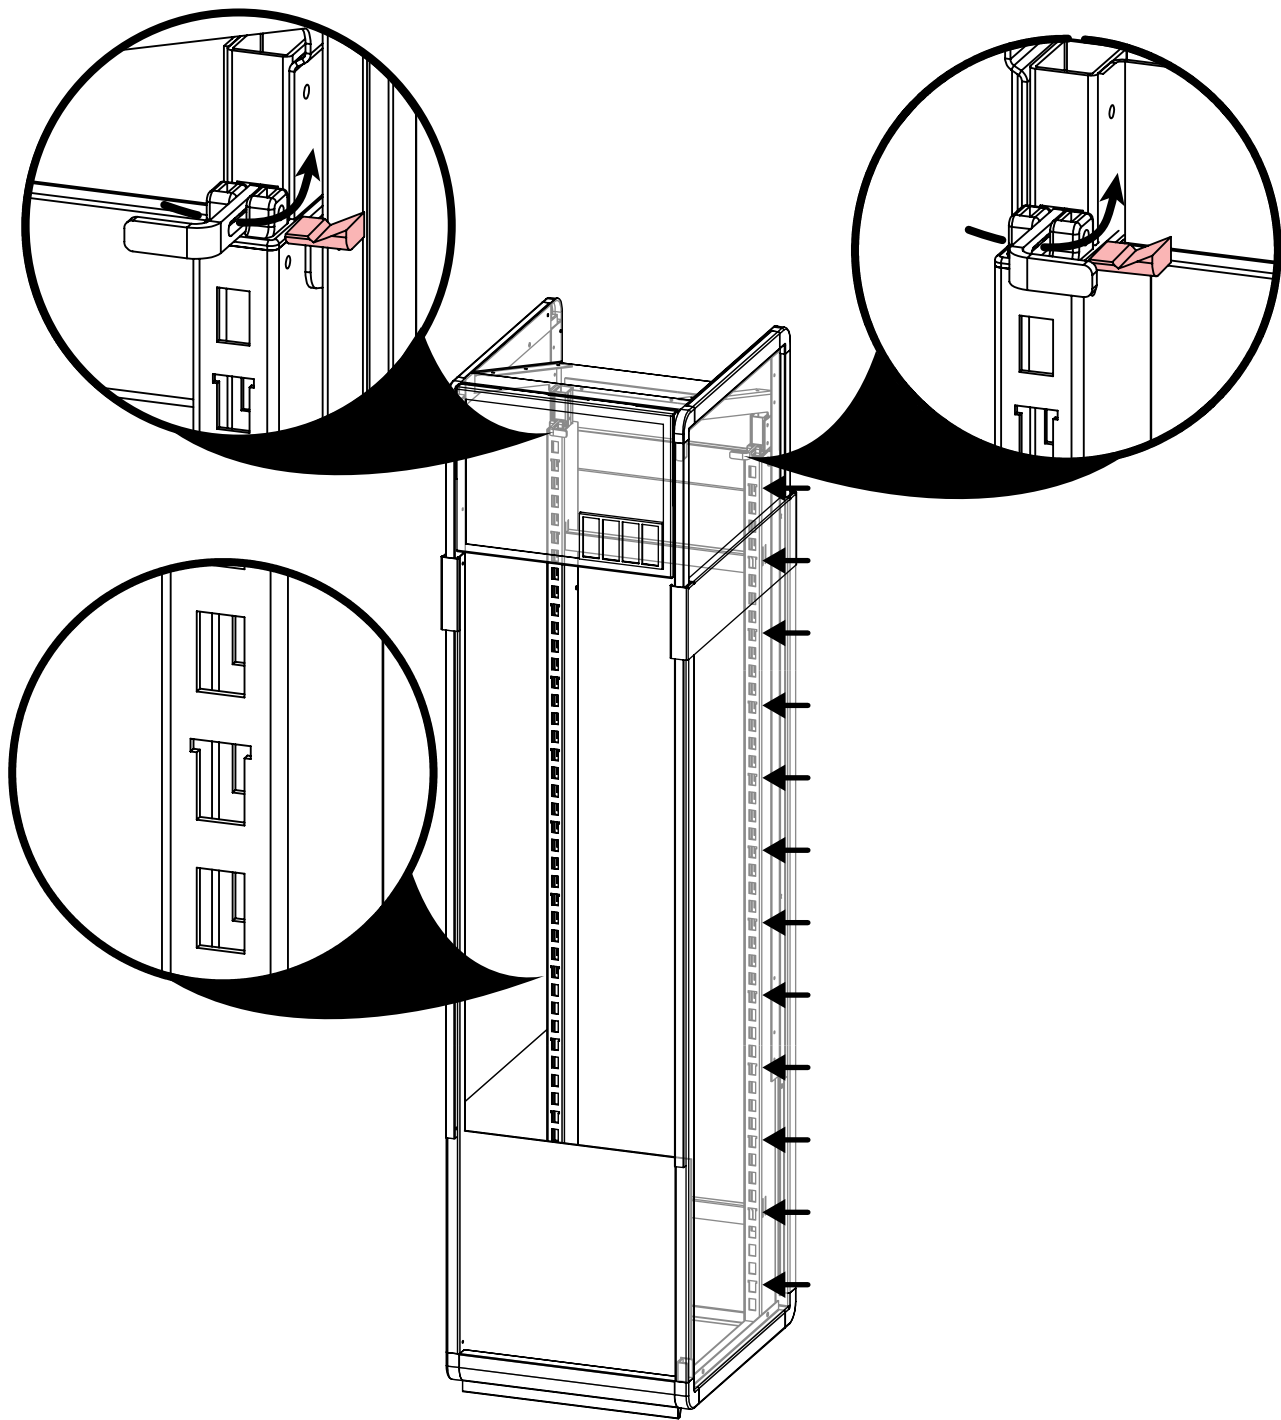


Step 4: To adjust the display, unlock the locks and push against the roof. Lock in one the of the “T” shaped slot in desired location.

Adjust lever feet.

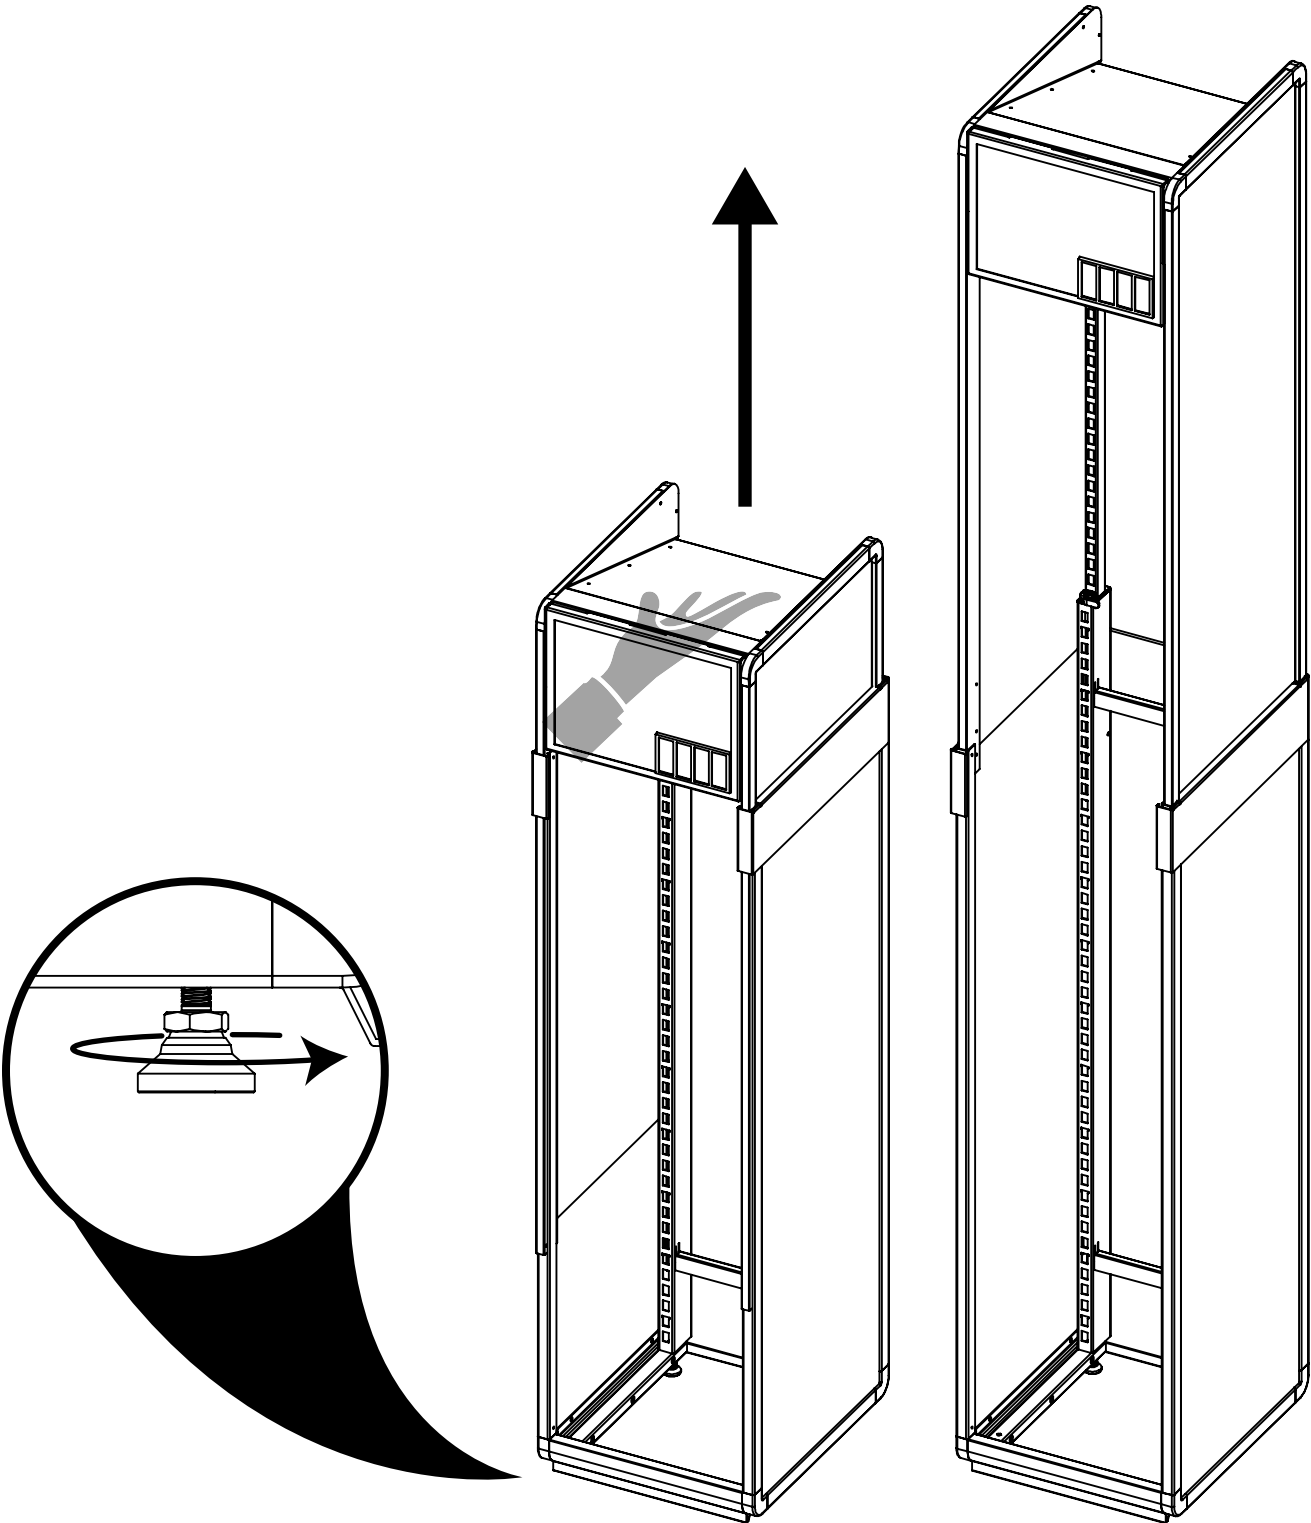

Step 5: To power the display, feed power cord through the back. Plug power cord to the first bottom shelf. Use jumper cables to connect shelves together. Connect the top shelf to the header plug.

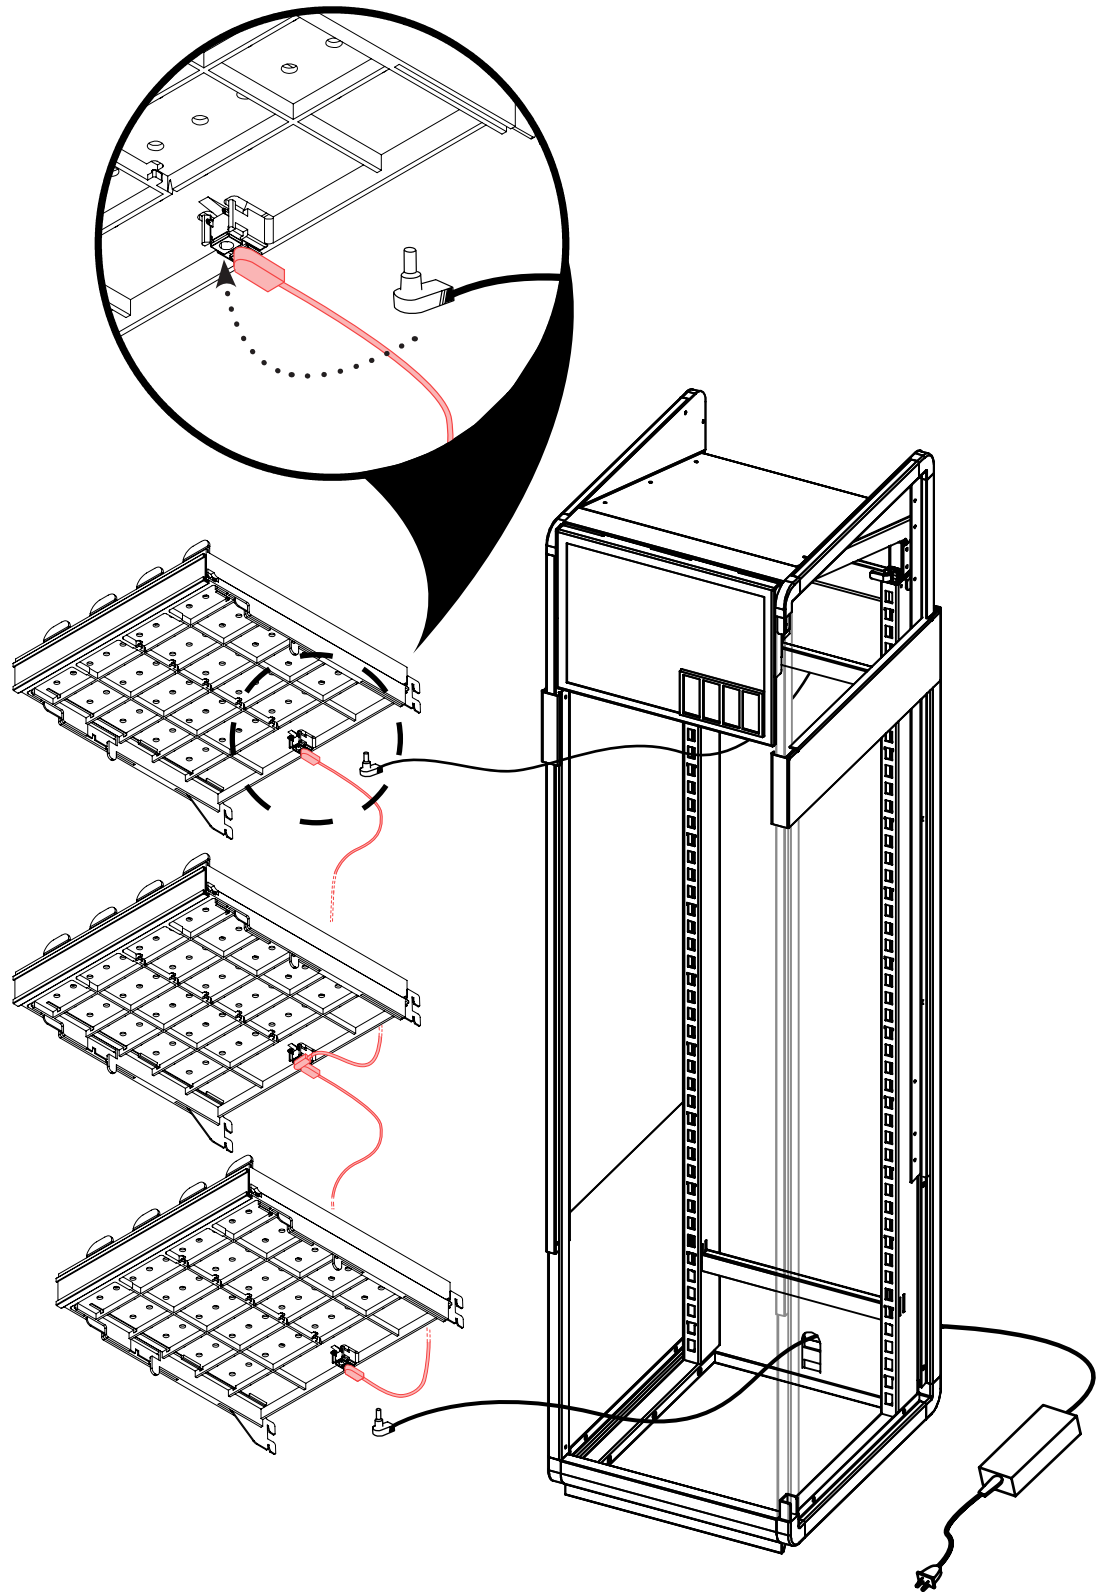

Step 6: Make sure all the shelves are placed in the desired locations. Adjust as needed.

