HELMPY User's Guide

Tulio Molina — Juan Ortega

June 12, 2019

Contents

1	Intr	roduction	2	
	1.1	License and Terms of Use	2	
2	Power Flow 2			
	2.1	Modeling	2	
	2.2	Algorithms	3	
		2.2.1 HELM	3	
		2.2.2 Newton-Raphson	3	
		2.2.3 Convergence criteria		
3	How to use HELMPY			
	3.1	Software requirements	6	
	3.2	Input case	6	
		3.2.1 Obtaining a case from MATPOWER	6	
		3.2.2 Creating a case:		
	3.3	Functions		
	3.4	Output files	9	
	3.5	Running HELMPY		
	3.6	Comparing results	10	
4	Mis	cellaneous	11	

1 Introduction

HELMPY is an open source package of power flow solvers developed on Python 3 [1]. This package contains the Holomorphic Embedding Load-flow Method (HELM) [2] and the Newton-Raphson (NR) algorithm. The intention of HELMPY is to support research, especially on the HELM, and to contribute with the development of open source code related to this subject. The developed code is properly commented and organized so it would be easy to understand and modify. This package was developed by Tulio Molina and Juan José Ortega as a part of their thesis research to obtain the degree of Electrical Engineer at Universidad de los Andes (ULA) in Mérida, Venezuela.

1.1 License and Terms of Use

The code is distributed under the GNU Affero General Public License v3.0 or later [3] (AGPL-3.0-or-later). The full text of the license can be found in the LICENSE.txt file.

2 Power Flow

The solution to the power flow problem consists in calculating the voltage at each bus of a power system under steady-state and balanced conditions, and this is carried out by solving a set of nonlinear equations that arises with the well known power balance equations. Power systems modeling and algorithms implemented in HELMPY for solving the power flow problem are explained below.

2.1 Modeling

The power flow solvers included in HELMPY implement the standard π branch model, which models transmission lines, phase-shifting transformers and off-nominal tap transformers. Shunt admittances for modeling capacitors or reactors banks in parallel to buses are also considered. Besides, reactive power limits at generators are as well taken into account, in exception for the slack's bus generator.

2.2 Algorithms

2.2.1 HELM

The HELM, firstly proposed by Antonio Trias [2], is a power flow method based on the study of complex analysis. The method is fully implemented in HELMPY. The theory, fundamentals and practical implementations used as guide to implement this method are described and presented in [4], [5] and [6]. The method is developed considering two different models for PV buses, as the ones described in [4].

HELM, seen solely as a numeric method, consists in recursively solving a linear matrix equation of the form $\boldsymbol{A}\,\boldsymbol{x}=\boldsymbol{B}$ and, after each time this system is solved, performing analytic continuation on a group of power series that represent voltages at buses; this process continues until convergence is reached or divergence is detected. The matrix \boldsymbol{A} remains constant, so it should be factorized. The vector \boldsymbol{B} is computed before each time the system is to be solved. As a result, vector \boldsymbol{x} contains a new coefficient of each voltage power series.

Figure 1 on the following page contains the flowchart that exposes the procedure of the method (solely as a numeric method) and shows the respective and relevant functions and code lines that execute those steps.

2.2.2 Newton-Raphson

The extensible used Newton-Raphson algorithm to solve the power flow problem is fully implemented using its rectangular form.

Figure 2 on page 5 contains the flowchart that exposes the procedure of the method (solely as a numeric method) and shows the respective and relevant functions and code lines that execute those steps.

2.2.3 Convergence criteria

Considering a maximum mismatch error, the managed convergence criteria for the NR implementation is based on checking active and reactive power mismatch error at each bus, according to the bus type. On the other hand, the managed convergence criteria for implementations based on the HELM consists in checking whether the difference between the magnitudes and phase angles of two consecutive voltages (obtained through analytic continuation of power series) at each bus is less than the mismatch error.

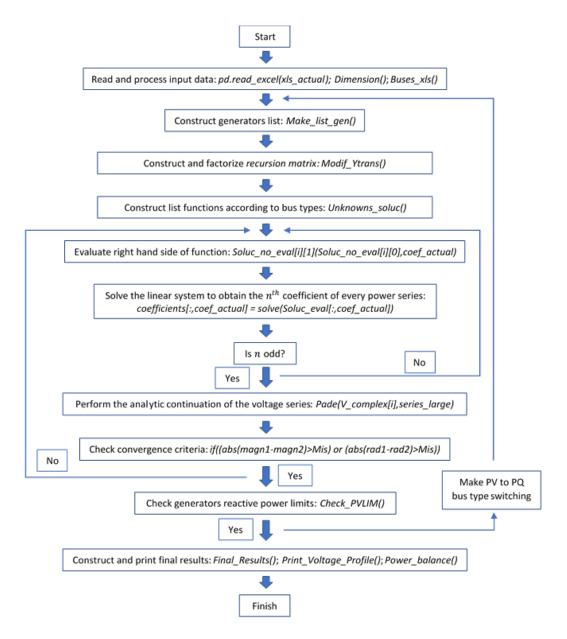


Figure 1: HELM flow chart

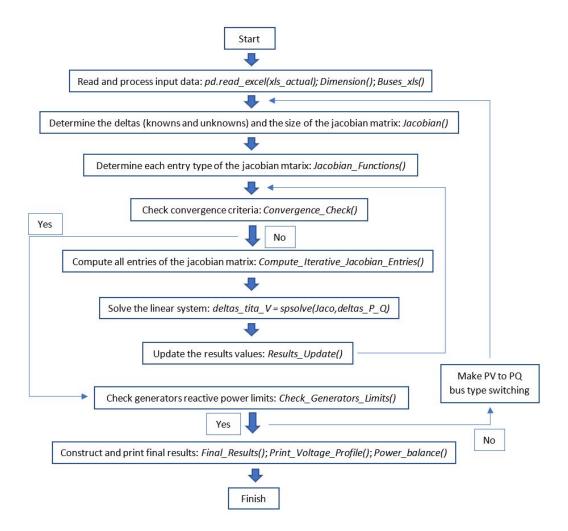


Figure 2: Newton-Raphson flow chart

3 How to use HELMPY

3.1 Software requirements

HELMPY is written in Python version 3.6.0, therefore, this or newer versions of the aforementioned programming language along with the following libraries must be installed in order to use this power flow solver package:

- Numpy [7]
- Scipy [8]
- Pandas [9]

No installation process other than copying the files of HELMPY folder to the directory where HELMPY is going to be used is needed.

3.2 Input case

For purposes of portability and simplicity HELMPY receives as input case (grid or system) a .xlsx file which contains all the needed data to solve a power flow problem.

3.2.1 Obtaining a case from MATPOWER

The format of the input .xlsx file has been designed from the format of MAT-POWER [10] cases. Therefore, the script Obtain_case_MATPOWER.m, which is a template for obtaining the HELMPY input data of the desired grid stored in MATPOWER, is included in the HELMPY folder. By means of this .m script, case9, case118, case1354pegase and case2869pegase stored in MAT-POWER have been processed and their respective .xlsx files (of the same name) are also included in the HELMPY folder.

3.2.2 Creating a case:

The .xlsx file for the input case can be created by the user. Such file must contain three sheets, without header, named as follows: Buses, Generator and Branches. According to the sheet, the data that must be stored in each column is presented below:

- Buses, each row stands for a bus of the grid:
 - Column A: Bus number (positive integer).
 - Column B: Type of buses. 1 for PQ, 2 for PV, 3 for slack.
 - Column C: Active power demand (MW).
 - Column D: Reactive power demand (MVAr).
 - Column E: Shunt conductance (MW demanded at V = 1.0 p.u.).
 - Column F: Shunt susceptance (MVAr injected at V = 1.0 p.u.).
- Generators, each row stands for a generator of the grid:
 - Column A: Bus number (positive integer).
 - Column B: Active power output (MW).
 - Column D: Maximum reactive power output (MVAr).
 - Column E: Minimum reactive power output (MVAr).
 - Column F: Voltage magnitude set point (p.u.).
- Branches, each row stands for a branch of the grid:
 - Column A: "From" bus number.
 - Column B: "To" bus number.
 - Column C: Resistance (p.u.).
 - Column D: Reactance (p.u.).
 - Column E: Total line charging susceptance (p.u.).
 - Column I: Transformer off nominal turns ratio (taps at "from" bus, impedance at "to" bus).
 - Column J: Transformer phase shift angle (degrees), positive for delay.

The remaining columns are not used. The input file must be in the directory where HELMPY is going to be used.

3.3 Functions

As it has been said, HELMPY is able to solve the power flow problem by means of the NR method or by the HELM considering whether PV bus model I or II is used. These methods are developed to be used as the following functions:

- nr(GridName, Print_Details=False, Mismatch=1e-4, Results_FileName="", Scale=1, MaxIterations=15, _Qlimits=True)
- helm_PV1(GridName, Print_Details=False, Mismatch=1e-4, Results_FileName="", Scale=1, MaxCoefficients=100, Enforce_Qlimits=True)
- helm_PV2(GridName, Print_Details=False, Mismatch=1e-4, Results_FileName="", Scale=1, MaxCoefficients=100, Enforce_Qlimits=True)

Where the common parameters to the three functions are explained below:

- GridName: String of characters type. This parameter receives the name of the input grid. The .xlsx extension must be included in the string of characters.
- Print_Details: Boolean type. If True, the function prints details of the running power flow problem and the results of it on the Python console, if False, it only prints whether convergence was reached or not. This parameter is set as False by default.
- Mismatch: Float type. It defines the value of the maximum mismatch error. This parameter is set at 1e-4 by default.
- Results_FileName: String of characters type. The received string of characters is used for naming the .txt and .xlsx output files along with other information (used function, Scale and Mismatch). The name will be the same as the input case file if this parameter is an empty string of characters. It is set as an empty string of characters by default.

- Scale: Float or integer type. It receives the scaling factor which multiplies active and reactive power load and active power generation of the grid (loadability scaling factor). This parameter is set at 1 by default.
- Enforce_Qlimits: Boolean type. If True, reactive power generation limits are checked at each PV bus after convergence is reached, if False, limits are not checked. It is set as True by default.

On the other hand, considering the non-common parameters, for each function:

• nr:

- MaxIterations: Integer type. It defines the maximum number of iterations allowed for reaching convergence. The number of iterations is restarted if convergence is reached but reactive power limits are violated. It is set at 15 by default.
- helm_PV1 and helm_PV2:
- MaxCoefficients: Integer type. It defines the maximum number of coefficients to be computed by the algorithm for reaching convergence.
 The number of coefficients is restarted if convergence is reached but reactive power limits are violated. It is set at 100 by default.

Each one of these functions returns the resultant voltage profile given in complex form.

3.4 Output files

In order to show and save the output of each program execution, two files are generated: a .xlsx file and a .txt file.

The resultant voltage profile, in complex and polar form, is presented in the *Buses* sheet of the resultant .xlsx file. On the other hand, the power injection of buses through each branch of the grid is shown in the *Branches* sheet of such file.

Information such as loadability scale factor, convergence time, mismatch error, number of coefficients or number of iterations (according to the used function), and also a power balance of the problem are shown in the output .txt file.

3.5 Running HELMPY

Each one of the aforementioned functions can be imported to the user's Python script by declaring the command:

```
import helmpy
```

The helmpy.py script imports the nr, helm_PV1 and helm_PV2 functions from the respective .py script where each one of them is defined. Therefore, for running HELMPY with a pre-defined input case named Case.xlsx, by means of these three functions, a typical Python script would look as follows:

```
import helmpy
Voltage_profile_nr = helmpy.nr("Case.xlsx")
Voltage_profile_HELM_PV1 = helmpy.helm_PV1("Case.xlsx")
Voltage_profile_HELM_PV2 = helmpy.helm_PV2("Case.xlsx")
```

Where the resulting voltage profile of each function is returned to its corresponding assigned variable.

3.6 Comparing results

The following .py scripts can be used to compare voltage profile results obtained from HELMPY and MATPOWER:

- Compare_Voltages.py: It compares two voltage profiles obtained from HELMPY. The absolute value of the highest magnitude and phase angle differences between both voltage profiles are printed on the Python console. If the print_all variable is set as True, the absolute value of the magnitude and phase angle differences at each bus are also going to be printed.
- Compare_Several_Voltages.py: It compares one voltage profile (base profile) with a list of voltage profiles obtained from HELMPY. The absolute value of the highest magnitude and phase angle differences between the base profile and the rest of profiles are printed on the Python console, respectively. If the print_all variable is set as True, the absolute value of the magnitude and phase angle differences at each bus are also going to be printed.

• Compare_with_MATPOWER.py: It compares two voltage profiles, one obtained from HELMPY and the other obtained from MATPOWER. The absolute value of the highest magnitude and phase angle differences between both voltage profiles are printed on the Python console. If the print_all variable is set as True, the absolute value of the magnitude and phase angle differences at each bus are also going to be printed.

4 Miscellaneous

In order to validate the results obtained from HELMPY, a comparison between these results and the ones obtained from MATPOWER can be made, for such, the Execute_MATPOWER.m script is included in the HELMPY folder. This script allows to run a power flow problem with MATPOWER by means of the NR method, where loadability scale factor of the case, tolerance and initial seed of voltages can be modified. The output of Execute_MATPOWER.m is a .xlsx file containing the resultant voltage profile, which can be used by the Compare_with_MATPOWER.py script.

The mentioned .m script has been used to execute case9, case118, case1354pegase and case2869pegase using a tolerance of 1e-8. Their respective .xlsx output files are named "Results MATPOWER case9.xlsx", "Results MATPOWER case118.xlsx", "Results MATPOWER case1354pegase.xlsx" and "Results MATPOWER case2869pegase.xlsx". These files are included in the HELMpy folder.

References

- [1] Python programming language. [Online]. Available: https://www.python.org/
- [2] A. Trias, "The holomorphic embedding load flow method," in 2012 IEEE Power and Energy Society General Meeting, July 2012, pp. 1–8.
- [3] GNU Affero General Public License v3.0. [Online]. Available: https://opensource.org/licenses/AGPL-3.0
- [4] M. K. Subramanian, "Application of holomorphic embedding to the power-flow problem," Master's thesis, Arizona State University, 2014.

- [5] S. Rao, Y. Feng, D. J. Tylavsky, and M. K. Subramanian, "The holomorphic embedding method applied to the power-flow problem," *IEEE Transactions on Power Systems*, vol. 31, no. 5, pp. 3816–3828, 2016.
- [6] A. Trias, "Fundamentals of the holomorphic embedding load-flow method," 2015. [Online]. Available: http://arxiv.org/abs/1509.02421
- [7] NumPy package. [Online]. Available: http://www.numpy.org/
- [8] SciPy Python-based ecosystem of open-source software. [Online]. Available: https://www.scipy.org/
- [9] Pandas, Python Data Analysis Library. [Online]. Available: https://pandas.pydata.org/
- [10] R. D. Zimmerman, C. E. Murillo-Sanchez, and R. J. Thomas, "Matpower: Steady-state operations, planning, and analysis tools for power systems research and education," *IEEE Transactions on Power Systems*, vol. 26, no. 1, pp. 12–19, Feb 2011.