SHEHDS®

Make any stage the BIG STAGE

USER'S MANUAL

180W Beam Moving Head Light



⚠ **CAUTION!** Keep this device away from rain and moisture!

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY

BEFORE YOU INITIAL START - UP!

1-Maintenance

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

During the operation the housing becomes hot). Allow the fixture to cool approximately 20 minutes prior to manipulate with it.

Make sure that the available voltage is not higher than stated on the rear panel.

to completely remove power from unit when not in use or before cleaning or servicing the fixture.

Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power-cord by the plug. Never pull out the plug by tugging the power cord.

This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.

The electric connection, repairs and servicing must be carried out by a qualified employee.

Do not connect this device to a dimmer pack.

Do not switch the fixture on and off in short intervals as this would reduce the fixture's life.

During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.

Do not touch the device's housing bare hands during its operation (housing becomes hot)!

For replacement use fixtures and fuses of same type and rating only.

CAUTION!

Be careful with your operations.

With a high voltage you can suffer a dangerous electric shock when touching the wires!

2-Operating determination

Attention: The powerCON is a connector without breaking capacity, i.e. the powerCON should not be connected or disconnected under load or live!

This device is a moving head for creating decorative effects and was designed for indoor use only.

This device is for professional use only. It is not for household use.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Before switching the fixture OFF, turn the fixture OFF and allow the fixture to cool for a while.

Never run the device without fixture!

Do not shake the device. Avoid brute force when installing or operating the device.

Never lift the fixture by holding it at the projector-head, as the mechanics may be damaged. Always hold the fixture at the transport handles.

When choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. There should not be any cables lying around. You endanger your own and the safety of others!

The minimum distance between light output and the illuminated surface must be more than 8 meters.

Make sure that the area below the installation place is blocked when rigging, derigging or servicing the fixture.

Always fix the fixture with an appropriate safety rope. Fix the safety rope at the correct holes only.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

The fixture must never be ignited if the objective-lens or any housing-cover is open, as discharge fixtures may

explode and emit a high ultraviolet radiation, which may cause burns.

The maximum ambient temperature 45°C must never be exceeded.

3-Attention Item

1.For guarantee the life of product,please do not put it on the wet place and not use it the place over 40 degree.

2.Please don't lay the product on the un-fixable or shakable place.

3.Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.

4.Power supply should not be changed over +&-10% while the light is using,it will be decreased the life of fixture if the power is too high,but it will be influenced the luminosity if the power is too low.

5.After power off,if it is need used again,please cool down over 20 minuter.

6.Please look round the manual for ensure the product can be used normally.

4-Rigging the fixture

A structure intended for installation of the fixture(s) must safely hold weight of the fixture(s) placed on it.The structure has to be certificated to the purpose.

The fixture (fixtures) must be installed in accordance with national and local electrical and construction codes and regulation.

For overhead installation, the fixture must be always secured with a safety wire that can bear at least 10 times the weight of the fixture

When rigging, derigging or servicing the fixture staying in the area below the installation place, on bridges,under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are

approved by a skilled person once a year.

Allow the fixture to cool for ten minutes before handling.

The projector should be installed outside areas where persons may walk by or be seated.

IMPORTANT! OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE

including calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installation yourself, but use a help of professional companies.

CAUTION: Fixtures may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do not install the fixture!

The fixture has to be installed out of the reach of public.

The fixture must never be fixed swinging freely in the room.

Danger of fire !

When installing the device, make sure there is no highly inflammable material (decoration articles, etc.) in a distance of min. 1 m.

The minimum distance of 8 meters between light output from the moving head and the lit objects must be kept!

CAUTION!

Use 2 appropriate cfixtures to rig the fixture on the truss.

Follow the instructions mentioned at the bottom of the base.

Make sure that the device is fixed properly! Ensure that the structure (truss) to which you are attaching the fixtures is secure.

The fixture can be placed directly on the stage floor or rigged in any orientation on a truss without altering its operation characteristics.

For securing a fixture to the truss, install two safety wires which can hold at least 10 times the weight of the fixture. Use only the safety wires with screw-on carabines.

5-DMX-512 connection

The fixture is equipped with both 3-pin sockets for DMX input and output.The sockets are wired in parallel.

Only use a shielded twisted-pair cable designed for 3-pin XLR-plugs and connectors in order to connect the controller with the fixture or one fixture with another.

DMX - output
XLR mounting-sockets (rear view):




1 - Shield
2 - Signal (-)
3 - Signal (+)

DMX-input
XLR mounting-plugs (rear view):



1 - Shield
2 - Signal (-)
3 - Signal (+)

Building a serial DMX-chain:

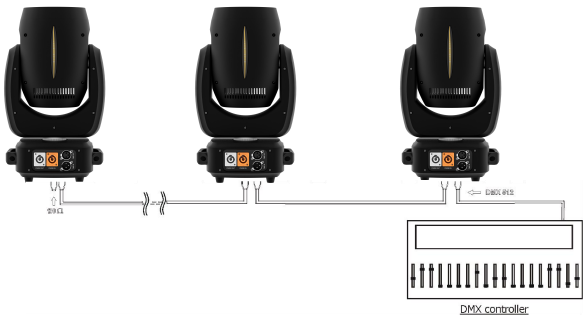

Connect the DMX-output of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected. Up to 32 fixtures can be connected.

Caution: At the last fixture, the DMX-cable has to be terminated with a terminator.

Solder a 120 Ω resistor between Signal (–) and Signal (+) into a 3-pin (5-pin) XLR-plug and plug it in the DMX-output of the last fixture.

6-Technical Specifications

Voltage: AC90V ~ 275V / 50 ~ 60Hz	**Channel**: 15 CH
Output Power: 180W	**Dimmer:** 0-100% 16Bit mechanic
Light source: LED 150W white color	**Shutter:** Flash rate 0-25HZ
Beam Lux: 7790 lux @ 10m / 2500 lux @20m	**Effect:** Frost wash+Rianbow
Beam angle: 2.8 degrees	**IP Grade:** IP20
Control mode: DMX512/Master-Slave/Auto/Sound	**Cooling System:** Box Heat Conduction
Color wheel: 11 colors + open	**Material:** High temperture resistant plastic
Gobo wheel: 14 gobos + open	**Product Color:** Black
Rainbow wheel: 6 colors	**Product Size:** 24x18x41 cm
Prism : 18 face prism and rotating	**Product weight:** 6.72kg
Moving head range: Pan:450° Tilt: 210°	**Package Size:** 43x32x31 cm
Function: DMX512 control, Manual control	

7-Maintenance and cleaning

It is absolutely essential that the fixture is kept clean and that dust, dirt and smoke-fluid residues must not build up on or within the fixture. Otherwise, the fixture's light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliably throughout its life.

A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should alcohol or solvents be used!

DANGER !

Disconnect from the mains before starting any maintenance work

The front objective lens will require weekly cleaning as smoke-fluid tends to building up residues, reducing the light-output very quickly.The cooling-fans should be cleaned monthly. The interior of the fixture should be cleaned at least annually using a vacuum-cleaner or an

air-jet.

Remove dust and dirt from the fans and cooling vents using a soft brush and vacuum-cleaner.

Important! Check the air filters periodically and clean before they become clogged!

Clean two air filters placed in the fixture´s covers and two in the fixture base. Use a vacuum cleaner, compressed air or you can wash them and put back dry.

8-Replacing the fuse.

Before replacing the fuse, unplug mains lead.

1. Remove the fuse holder on the rear panel of the base with a fitting screwdriver from the housing(anti-clockwise).

2. Remove the old fuse from the fuse holder.

3. Install the new fuse in the fuse holder (only the same type and rating).

4. Replace the fuse holder in the housing and fix it.

Checking plastic parts of the fixture.

The plastic parts of the fixture should be checked for damages and beginning cracks at least every two months.

In addition, the plastic part of the front lens has to be checked mechanically (by means of movement by the plastic part) if it is firmly fastened to the fixture. If hint of a crack is found on some plastic part, do not use the fixture until the damaged part will be replaced.

Cracks or another damages of the plastic parts can be caused by the fixture transportation or manipulation and also ageing process may influence plastic materials.

This checking is necessary for both fixed installations and preparing fixtures for renting. Any free moving parts inside of the fixture head, cracked plastic or any plastic part of front lens not sitting properly in place need to be immediately replaced.

9-Control Menu

After the system is powered on, the graphical interface will be displayed to reset and initialize the entire system. At the same time, the functional status of the system will be checked. If there is an error or a certain function is not normal, the square in the upper right corner of the screen will turn red after the reset is completed to indicate an error.You can view error messages in the 'Information Menu/Error Messages/View' section. Normally green.



MenuBoard description:

DMX	DMX Signal indicator light
ERR	Indicator light when triggered by sound mode or Auto mode
Up	Menu Up Selection
Down	Menu Down Selection
Left	Menu Left Selection/Return
Right	Menu Right Selection
OK	confirm button
Time on the left side of the screen	Total system usage time (display can be turned off in standard settings)
Time on the right side of the screen	Total power on time this time (display can be turned off in standard settings)
Vertical signal above the screen	The current DMA signal connection signal strength! Red: no signal
Square icon in the upper right corner of the screen	Green: normal, no errors
	Red: There is an error (you can click on the icon or "Information Menu/Error Messages/View" to check for errors)

System menu description:

Reverse	Invert the screen display
Exit	Exit to the Home screen
语言	Choice of Simplified Chinese or English
Standard	Address codes and some commonly used function settings
Advanced	Main debugging parameter settings at the factory
Info	Display of errors, software versions, and other information
Program	Manually control operation or edit user programs
Perform	Automatic or voice controlled running of built-in programs
Reset	System reset to initial position

10-Control menu map

Menu		Function
1.Dmx Function	1.DmxAddr	001-512
	2.Channel	15CH
2.Run Mode	1.Run Mode	RUnning DMX mode / Auto mode / Sound mode
3.Fixture Setting	1.Encoder	Yes / No
	2.PanREV	Yes / No
	3.TiltREV	Yes / No
	4.No Signal	Keep / Clear
	5.Sensitivity	000-095
4.Display Setting	1.Language	En /中文
	2.Dis Inver	Yes / No
	3.Screen	Yes / No
5.Manual Teset	Eg:Channel mode	Manual channel mode
6.Fixture Infor	Firmware Ber V1.0	
7.Calib Set	Enter 4Bit Password	Password:Up-Dowm-Up-Dowm-OK
8.Special Function	Yes or No	Restore factory settings

10-DMX Channel

DMX Channel Summary-15 Channels Mode

Channel		Value	Features
CH1	Pan	0-255	Pan movement
CH2	Pan fine	0-255	Pan fine movement
CH3	Tilt	0-255	Tilt movement
CH4	Tilt fine	0-255	Tilt fine movement
CH5	Speed	0-255	Pan&Tilt speed
CH6	Dim	0-255	Dimming
CH7	Strobe	1-255	Shutter slow - fast
CH8	Color	0-10	White
		11-21	Color 1
		22-32	Color 2
		33-43	Color 3
		44-54	Color 4
		55-65	Color 5
		66-76	Color 6
		77-87	Color 7
		88-98	Color 8
		99-109	Color 9
		110-120	Color 10

		121-127	Color 11
		128-191	Clockwise Rotation
		192-255	Anti clockwise Rotation
CH9	Gobo	0-15	White
		16-23	Gobo 1
		24-31	Gobo 2
		32-39	Gobo 3
		40-47	Gobo 4
		48-55	Gobo 5
		56-63	Gobo 6
		64-71	Gobo 7
		72-79	Gobo 8
		80-87	Gobo 9
		88-95	Gobo 10
		96-103	Gobo 11
		104-111	Gobo 12
		112-119	Gobo 13
		120-127	Gobo 14
		128-191	Clockwise Rotation
		192-255	Anti clockwise Rotation
CH10	Prism	0-7	Prism Off
		8-127	Prism Open
		128-190	Prism Rotation
CH11	Fucos	0-255	Fucos
CH12	Frost	0-7	No function
		8-127	Rainbow effect
		192-255	Frost
CH13	Macro	0-49	No function
		50-149	Auto mode
		150-255	Sound mode
CH14	Macro speed	0-255	Macro speed slow to fast
CH15	Reset	0-240	No function
		241-255	Reset after 5S

11-Fault handling

Corresponding solutions have been proposed for some common faults. Any unresolved issues should be handled by professionals. Before maintaining the lighting fixtures, please disconnect the power supply.

1.The light bulb does not light up

- **Check if a voltage matching the lamp is installed;**
- **Check for poor contact at the power supply connection or control switch of the lighting fixture;**
- **Check if the power supply is insufficient;**
- **Check if the DMX512 controller has sent instructions.**

2. After the lamp is reset normally, it does not accept control from the control panel

- **Check if the digital start address value and function options of the lighting fixtures are correct;**
- **Check if the connection of the communication control line is correct, if the communication line is too long or has been interrupted;**
- **Check if the control equipment is malfunctioning and if the signal amplifier connected in series is malfunctioning;**
- **Check if the communication line is too long or if there are other devices interfering with each other;**
- **Optimize wiring, shorten the length of control signal lines, and separate high-voltage and low-voltage lines for wiring;**
- **Add a signal amplifier;**
- **The signal line adopts high-quality shielded twisted pair;**
- **Connect the signal terminal resistor (120 ohms) at the end of the lamp.**

3.The lamp cannot be activated

- **Check whether the power supply parameters match the lighting fixtures;**
- **Inspect the lighting fixtures for poor contact during long-distance transportation due to compression deformation, internal component vibration, moisture, and other reasons**
- **Or fall off.**
- **Please check if the internal wires and connectors of the lamp have fallen off or become loose.**
- **Check if the electronic components of the lighting fixtures (such as electronic transformers, PCB boards, motor control boards, etc.) are loose, short circuited, or burnt out.**

4. During operation, the X-axis or Y-axis of the lighting fixture does not operate normally

- **Check one by one according to the previous step;**
- **Check whether the transmission belts corresponding to the X and Y axis directions inside the lamp are detached or broken;**
- **Check if the data feedback receiver (optocoupler) corresponding to the X and Y directions inside the lamp is damaged;**
- **Restart and reset once.**

12-Accessories list

- **Quick lock x 1**
- **Power cable x 1**
- **Dmx512 cable x 1**
- **Manual x 1**