

UMC 0.11um LOGIC/MIXED_MODE AI Advanced Enhancement Native 3.3V MOSFET Monte Carlo Mismatch SPICE Model Document

**Version 0.2 Phase 1
2010/09/16**

Table of Contents

1	INTRODUCTION	5
1.1	Revision History	5
1.2	General Information.....	6
1.3	Model Usage	7
1.3.1	Simulators	7
1.3.2	The combination of statistical model & corner model	7
1.3.3	Mismatching parameters in corner model	7
1.3.4	Sigma number for Monte-Carlo model.....	8
1.3.5	Model usage.....	8
2	MONTE CARLO SIMULATION RESULTS FOR MISMATCH	15
2.1	Threshold voltage in linear region VTLIN	16
2.2	Saturation Current IDSAT	17
3	APPENDIX.....	18
3.1	HSPICE Warning Message.....	18
3.2	ELDO Warning Message.....	18
3.3	SPECTRE Warning Message	18

List of Figures

Figure 1-1 Layout Example of parallel devices.....9

Figure 1-2 Layout Example of parallel devices.....9

Figure 2-1 VTLIN mis-matching simulation of native 1.2V n-ch MOSFET16

Figure 2-2 IDSAT mis-matching simulation of native 1.2V n-ch MOSFET17

List of Tables

Table 1-1 Revision history5

Table 3-1 HSPICE warning message.....18

Table 3-2 Eldo warning message18

Table 3-3 Spectre warning message18

1 Introduction

1.1 Revision History

Table 1-1 Revision history

Version	Date	Author	Remark
0.2_P1	2010/09/16	Chih hung Chuang	1. Original release. 2. This Monte Carlo model includes both process and mis-matching characteristics extracted from model cards as below: l110ae_nvt_33_v021.mdl l110ae_nvt_33_v021.lib

1.2 General Information

This document serves as a reference to the design of products that will be manufactured by UMC using the following process.

UMC 0.11 um Logic and Mixed-Mode 1P8M Metal Metal Capacitor AI
Advanced Enhancement Process

For more information about this process and technology, please see the electrical design rule listed below.

G-02-LOGIC/MIXED_MODE11-1P8M-MMC/AL/L110AE-EDR

The creation, verification, and usage of the compact model of the following device is presented in this document.

Native 3.3V n-ch MOSFET

The following compact model is chosen for the modeling of these device.

BSIM3V3.24

For detailed descriptions of the compact model equations and parameters, please refer to this material.

BSIM3V3.24 MOSFET Model User Manual

In BSIM3V3.24, there are two types of models that can be used. One is a binning model, which means the whole device dimension range is chopped into several "bins" and different model parameter sets are provided for each bin. The other one is a global model, which means one scalable parameter set is provided and it can cover the whole device geometry range. Each of these two approaches has advantages over the other.

UMC provides global models for their many benefits and the model accuracy is guaranteed by a quantitative report of model fitting error against the silicon data, which can be found in the following sections.

1.3 Model Usage

1.3.1 Simulators

The compact model is provided in various formats. It is guaranteed that the simulation results of this model from different simulators show differences less than 0.5% and 1% for DC and AC simulations respectively. It should be noted that the model has been verified on different simulators of the specific versions listed below, and the simulation results from other versions of the simulators might be different

Synopsys HSPICE release 2007.9
Cadence Spectre version 6.2.1.299
Mentor ELDO version 6.10_1.1

1.3.2 The combination of statistical model & corner model

The Monte-Carlo model and corner model (3 corners) are combined into a single model library. The user can choose either the Monte-Carlo model or a corner case by selecting different model sections for simulation. The following sections are included:

mc: Monte-Carlo model
tt: Typical n-ch MOSFET and Typical p-ch MOSFET
ss: Total corner of Slow n-ch MOSFET and Slow p-ch MOSFET
ff: Total corner of Fast n-ch MOSFET and Fast p-ch MOSFET
tt_g: Typical n-ch MOSFET and Typical p-ch MOSFET (the same as tt)
ss_g: Global corner of Slow n-ch MOSFET and Slow p-ch MOSFET
ff_g: Global corner of Fast n-ch MOSFET and Fast p-ch MOSFET

1.3.3 Mismatching parameters in corner model

The mismatching parameters are included in the corner models. Therefore, the user can run Monte-Carlo mismatching simulation over a corner model. For example, the user can evaluate the mismatching performance at the ss_g case.

1.3.4 Sigma number for Monte-Carlo model

The user can define standard deviation at sigma level for Monte-Carlo simulation. If a larger sigma number is used, it means the model parameters will have greater variation. Sigma=3 is recommended to be used.

1.3.5 Model usage

The definitions of sub-circuit model parameters

After invoking Monte-Carlo model parameters, the compact transistor models evolve to sub-circuit models. The input parameters for the sub-circuit model are the same as the compact model, except two more input parameters (mis_flag, & mf) are added for the sub-circuit model.

The following is the parameter list:

- nf: number of gate fingers
- m: number of devices
- mf: the same as "m"
- mis_flag: the flag parameter is used to turn on/off mismatching parameters for individual devices. 1 is turn-on and 0 is turn-off. Default is 1.
- w: total gate width (gate finger width * number of gate fingers)
- l: gate finger length
- as: source area per finger
- ad: drain area per finger
- ps: source periphery per finger
- pd: drain periphery per finger
- sa: distance between OD edge to poly from one side
- sb: distance between OD edge to poly from the other side
- sd: poly space for multiple finger device
- sca: integral of the first distribution function for scattered well dopant
- scb: integral of the second distribution function for scattered well dopant
- scc: integral of the third distribution function for scattered well dopant

The following example shows 3 transistors connected in parallel; each transistor has 5 fingers and each finger has width 5u and length 1u. The mismatching parameters are turned on. And the parameter "mf" is a must for mismatching simulation of parallel devices. Please note mf and m have to be equal.

```
x1 (d g s b) DeviceName w='W1*Nf1' l=1u nf=5 mis_flag=1 m=3 mf=3
```

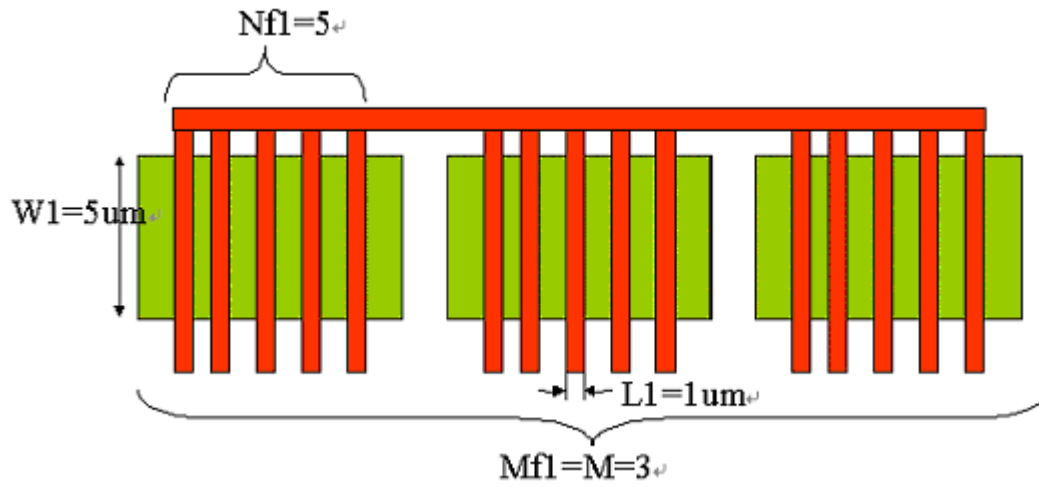



Figure 1-1 Layout Example of parallel devices.

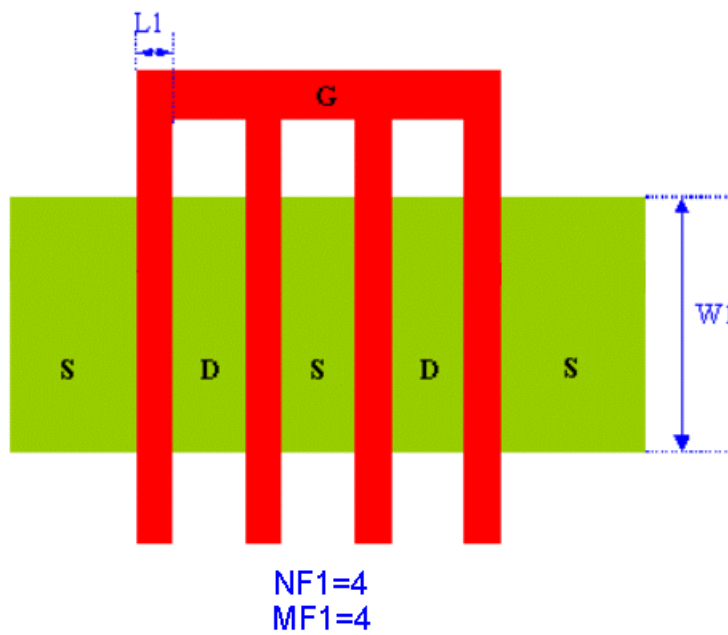


Figure 1-2 Layout Example of parallel devices.

For Synopsys HSPICE

- Include library file and select section.

Example 1: .lib 'l110ae_nvt_12_v021_mc_corner.lib' mc

Example 2: .lib 'l110ae_nvt_12_v021_mc_corner.lib' ff

Example 3: .lib 'l110ae_nvt_12_v021_mc_corner.lib' ff_g

- Define sigma value for MC simulation.

Example: .param sigma=3

- Add the following statement in the input file to the simulator for 90% dimension shrinkage.

.Option scale=0.9

.lib "/ModelFileName.lib" CaseName

, where CaseName could be mc, tt, ff, ss, ff_g, ss_g.

- Define device condition by 'Xxx' statement.

Example: For Finger Number device (Refer to Figure 1-2)

```
X1 Vdd Vgg Vss Vbb DeviceName W='W1*NF1' L=L1 NF=NF1
+ SA=SA1 SB=SB1 SD=SD1 SCA=SCA1 SCB=SCB1 SCC=SCC1
+ NF_ODD='NF-2*INT(NF/2)' NF_EVEN='1-NF_ODD'
+ A_UNIT='SD*W/NF' P_UNIT='2*(SD+W/NF)'
+ A_SA_EDGE='SA*W/NF' P_SA_EDGE='2*(SA+W/NF)'
+ A_SB_EDGE='SB*W/NF' P_SB_EDGE='2*(SB+W/NF)'
+ AD='NF_ODD*(A_UNIT*((NF+1)/2-1)+A_SB_EDGE) +
NF_EVEN*(A_UNIT*NF/2)'
+ AS='NF_ODD*(A_UNIT*((NF+1)/2-1)+A_SA_EDGE) +
NF_EVEN*(A_UNIT*(NF/2-1)+A_SA_EDGE+A_SB_EDGE)'
+ PD='NF_ODD*(P_UNIT*((NF+1)/2-1)+P_SB_EDGE) +
NF_EVEN*(P_UNIT*NF/2)'
+ PS='NF_ODD*(P_UNIT*((NF+1)/2-1)+P_SA_EDGE) +
NF_EVEN*(P_UNIT*(NF/2-1)+P_SA_EDGE+P_SB_EDGE)'
```

- Define the control of Monte-Carlo simulation.

Indicator:

PROCESS: 1 to turn on the global MC simulation

0 to turn off the global MC process simulation

MISMATCH: 1 to turn on the local MC mismatch simulation

0 to turn off the local MC mismatch simulation

Example 1:

run global & local (total) MC simulation together.

.lib "/ModelFileName.lib" mc

.PARAM PROCESS=1 MISMATCH=1

Example 2:

run global MC simulation only.

.lib "/ModelFileName.lib" mc

.PARAM PROCESS=1 MISMATCH=0

Example 3:

run local MC simulation only.

.lib "/ModelFileName.lib" mc

.PARAM PROCESS=0 MISMATCH=1

Example 4:

run local MC simulation on global corners.

.lib "/ModelFileName.lib" ff_g (or ss_g)

.PARAM PROCESS=0 MISMATCH=1

- Define the number of Monte Carlo iterations to run MC simulations.

Example: .DC Vgg 0 1.8 0.01 Sweep Monte=1000

For Cadence SPECTRE

- Include library file and select section.

Example 1: include "l110ae_nvt_12_v021_mc_corner.lib.scs" section=mc

Example 2: include "l110ae_nvt_12_v021_mc_corner.lib.scs" section=ff

Example 3: include "l110ae_nvt_12_v021_mc_corner.lib.scs" section=ff_g

- Define sigma value for MC simulation.

Example: parameters sigma=3

- Add the following statement in the input file to the simulator for 90% dimension shrinkage.

SetOption1 options scale=0.9

include "/ModelFileName.lib.scs" section=CaseName

, where CaseName could be mc, tt, ff, ss, ff_g, ss_g.

- Define device condition by 'Xxx' statement.

Example: For Finger Number device (Refer to Figure 1-2)

X1 (Vdd Vgg Vss Vbb) DeviceName w='W1*Nf1' l=L1 nf=Nf1

+ sa=SA1 sb=SB1 sd=SD1 sca=SCA1 scb=SCB1 scc=SCC1

+ nf_odd=nf-2*int(nf/2) nf_even=1- nf_odd

+ a_unit=sd*w/nf p_unit=2*(sd+w/nf)

+ a_sa_edge=sa*w/nf p_sa_edge =2*(sa+w/nf)

+ a_sb_edge=sb* w/nf p_sb_edge =2*(sb+w/nf)

+ ad=nf_odd *(a_unit *((nf+1)/2-1)+ a_sb_edge) + nf_even *(a_unit *nf/2)

```
+ as=nf_odd *( a_unit *((nf+1)/2-1)+ a_sa_edge) + nf_even *( a_unit
*(nf/2-1)+ a_sa_edge + a_sb_edge)
+ pd=nf_odd *( p_unit *((nf+1)/2-1)+ p_sb_edge) + nf_even *( p_unit
*nf/2)
+ ps=nf_odd *( p_unit *((nf+1)/2-1)+ p_sa_edge) + nf_even *( p_unit
*(nf/2-1)+ p_sa_edge + p_sb_edge)
```

- Define the number of Monte Carlo iterations and control MC simulations.

Example 1: run global & local (total) MC simulation together.

```
mc1 montecarlo numruns=1000 seed=1 variations=all donominal=yes
```

```
savefamilyplots=yes {
```

```
    analysisDC1 dc param=Vgg start=0 stop=1.8 step=0.01}
```

Example 2: run global MC simulation only

```
mc1 montecarlo numruns=1000 seed=1 variations=process donominal=yes
```

```
savefamilyplots=yes {
```

```
    analysisDC1 dc param=Vgg start=0 stop=1.8 step=0.01}
```

Example 3: run local simulation only

```
mc1 montecarlo numruns=1000 seed=1 variations=mismatch donominal=yes
```

```
savefamilyplots=yes {
```

```
    analysisDC1 dc param=Vgg start=0 stop=1.8 step=0.01}
```

Example 4: run local MC simulation on global corners.

```
include "./ModelFileName.lib.scs" section= ff_g ( or ss_g )
```

```
mc1 montecarlo numruns=1000 seed=1 variations=mismatch donominal=yes
```

```
savefamilyplots=yes {
```

```
    analysisDC1 dc param=Vgg start=0 stop=1.8 step=0.01}
```

For Mentor Graphics ELDO

- Include library file and select section.

Example 1: .lib 'l110ae_nvt_12_v021_mc_corner.lib.eldo' mc

Example 2: .lib 'l110ae_nvt_12_v021_mc_corner.lib.eldo' ff

Example 3: .lib 'l110ae_nvt_12_v021_mc_corner.lib.eldo' ff_g

- Define sigma value for MC simulation.

Example: .param sigma=3

- Add the following statement in the input file to the simulator for 90% dimension shrinkage.

```
.Option scale=0.9
```

```
.lib "./ModelFileName.lib.eldo" CaseName
```

, where CaseName could be mc, tt, ff, ss, ff_g, ss_g.

-Define device condition by 'Xxx' statement.

Example: For Finger Number device (Refer to Figure 1-2)

```
X1 Vdd Vgg Vss Vbb DeviceName W='W1*NF1' L=L1 NF=NF1
+ SA=SA1 SB=SB1 SD=SD1 SCA=SCA1 SCB=SCB1 SCC=SCC1
+ NF_ODD='NF-2*INT(NF/2)' NF_EVEN='1-NF_ODD'
+ A_UNIT='SD*W/NF' P_UNIT='2*(SD+W/NF)'
A_SA_EDGE='SA*W/NF' P_SA_EDGE='2*(SA+W/NF)'
+ A_SB_EDGE='SB*W/NF' P_SB_EDGE='2*(SB+W/NF)'
+ AD='NF_ODD*(A_UNIT*((NF+1)/2-1)+A_SB_EDGE) +
NF_EVEN*(A_UNIT*NF/2)'
+ AS='NF_ODD*(A_UNIT*((NF+1)/2-1)+A_SA_EDGE) +
NF_EVEN*(A_UNIT*(NF/2-1)+A_SA_EDGE+A_SB_EDGE)'
+ PD='NF_ODD*(P_UNIT*((NF+1)/2-1)+P_SB_EDGE) +
NF_EVEN*(P_UNIT*NF/2)'
+ PS='NF_ODD*(P_UNIT*((NF+1)/2-1)+P_SA_EDGE) +
NF_EVEN*(P_UNIT*(NF/2-1)+P_SA_EDGE+P_SB_EDGE)'
```

- Define the control of Monte-Carlo simulation.

Indicator:

PROCESS: 1 to turn on the global MC simulation
0 to turn off the global MC process simulation
MISMATCH: 1 to turn on the local MC simulation
0 to turn off the local MC simulation

Example 1:

run global & local (total) MC simulation together.

```
.lib "/ModelFileName.lib.eldo" mc
.PARAM PROCESS=1 MISMATCH=1
```

Example 2:

run global MC simulation only.

```
.lib "/ModelFileName.lib.eldo " mc
.PARAM PROCESS=1 MISMATCH=0
```

Example 3:

run local MC simulation only.

```
.lib "/ModelFileName.lib.eldo " mc
.PARAM PROCESS=0 MISMATCH=1
```

Example 4:

run local MC simulation on global corners.

```
.lib "/ModelFileName.lib.eldo " ff_g (or ss_g )
```

```
.PARAM PROCESS=0 MISMATCH=1
```

- Define the number of Monte Carlo iterations to run MC simulations.

Example: .DC Vgg 0 Vcc 1.8 Sweep Monte=1000

Benchmark Model: l110ae_nvt_12_v021

DeviceName for Native 1.2V n-ch MOSFET: n_nvt_12_l110e

As stated above that one global model is provided and this model is valid within the following geometry, voltage, and temperature ranges. Device behavior beyond these ranges may not be well described by the model and is not guaranteed.

Geometry range (After 90% shrinkage):

For native 3.3V n-ch:

$$1.62 \mu\text{m} \leq L_{\text{DES}} \leq 50 \mu\text{m}$$

$$0.9 \mu\text{m} \leq W_{\text{DES}} \leq 100 \mu\text{m}$$

Voltage range:

For native 3.3V n-ch MOSFET:

$$0\text{V} \leq V_{\text{GS}} \leq 3.3\text{V} (*1.1)$$

$$0\text{V} \leq V_{\text{DS}} \leq 3.3\text{V} (*1.1)$$

$$-3.3\text{V} \leq V_{\text{BS}} \leq 0\text{V}$$

Temperature range:

For native 3.3V n-ch MOSFET:

$$-50^{\circ}\text{C} \sim 125^{\circ}\text{C}$$

UMC L110E is UMC L130E 90% direct shrunk option. The following table give users (including designers) a dimension correlation between Drawing vs. SPICE/Resistor dimensions.

Feature\ GDSII	Drawing in L130E GDSII database (unit : μm)	L110 GDSII = $0.9 * (\text{L130E GDSII})$ Dimension (unit : μm)	L110 SPICE Dimension (unit : μm)
Core (W/L)	10/0.12	9/0.108	(L sizing back 12 nm) 9/0.12
Salicide poly resistor	(Width/Length)	$0.9 * (\text{Width/Length})$	
3.3V I/O (W/L)	10/0.34	9/0.306	(L sizing back 12 nm) 9/0.318
contact size	0.16*0.16	0.144*0.144	
Via size(1X;2X)	0.2*0.2; 0.4*0.4	0.18*0.18; 0.36*0.36	
Metal size	Width/Space	$0.9 * (\text{Width/Space})$	
Slotting inserting	metal line width > 5.556 μm	metal line width > 5 μm	
N-well, salicide and non-salicide resistor	(Width/Length)	$0.9 * (\text{Width/Length})$	

Note:

1. Because process bias make drawn and physical dimension are different, please refer to interconnect capacitance model (G-04 document in individual DSM) for precise interconnection-capacitance extraction.
2. Please refer to SPICE model (G-05 document in individual DSM) for precise device characteristics.

2 Monte Carlo Simulation Results for Mismatch

One thousand Monte Carlo iterations are performed in the following simulation conditions, and the following corner points show tt, ss, ff values individually.

A reasonable number of Monte Carlo iterations is 30. The statistical significance of 30 iterations is quite high. If the circuit operates correctly for all 30 iterations, there is 99% probability that over 80% of all possible component values operate correctly. The relative error of a quantity determined through Monte Carlo analysis is proportional to (iteration times)^(-1/2).

2.1 Threshold voltage in linear region VTLIN

The following figures show the Monte Carlo mis-matching simulation results of linear threshold voltage extracted at $I_D = 300\text{nA} \cdot W_{DES} \cdot 0.9 / (L_{DES} \cdot 0.9 + 0.012\mu\text{m})$ for NMOS at 25C.

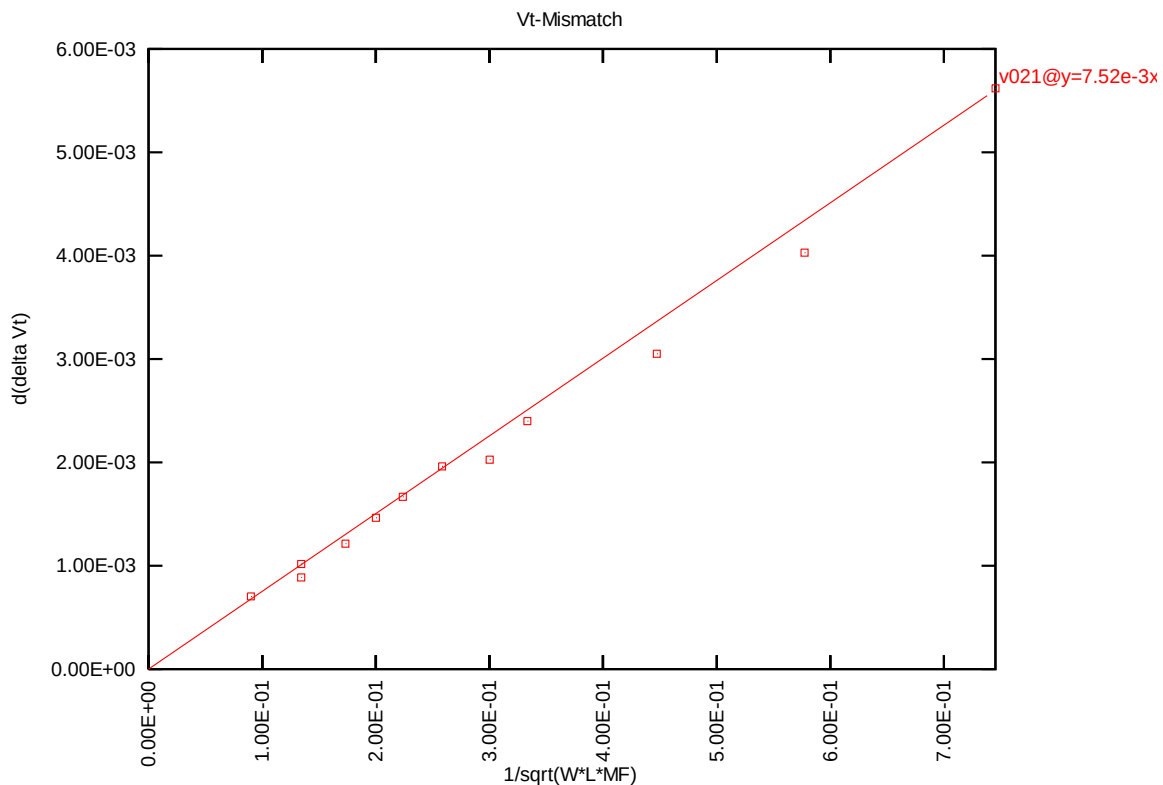


Figure 2-1 VTLIN mis-matching simulation of native 3.3V n-ch MOSFET

2.2 Saturation Current IDSAT

The following figures show the Monte Carlo mis-matching simulation results of saturation current at 25C.

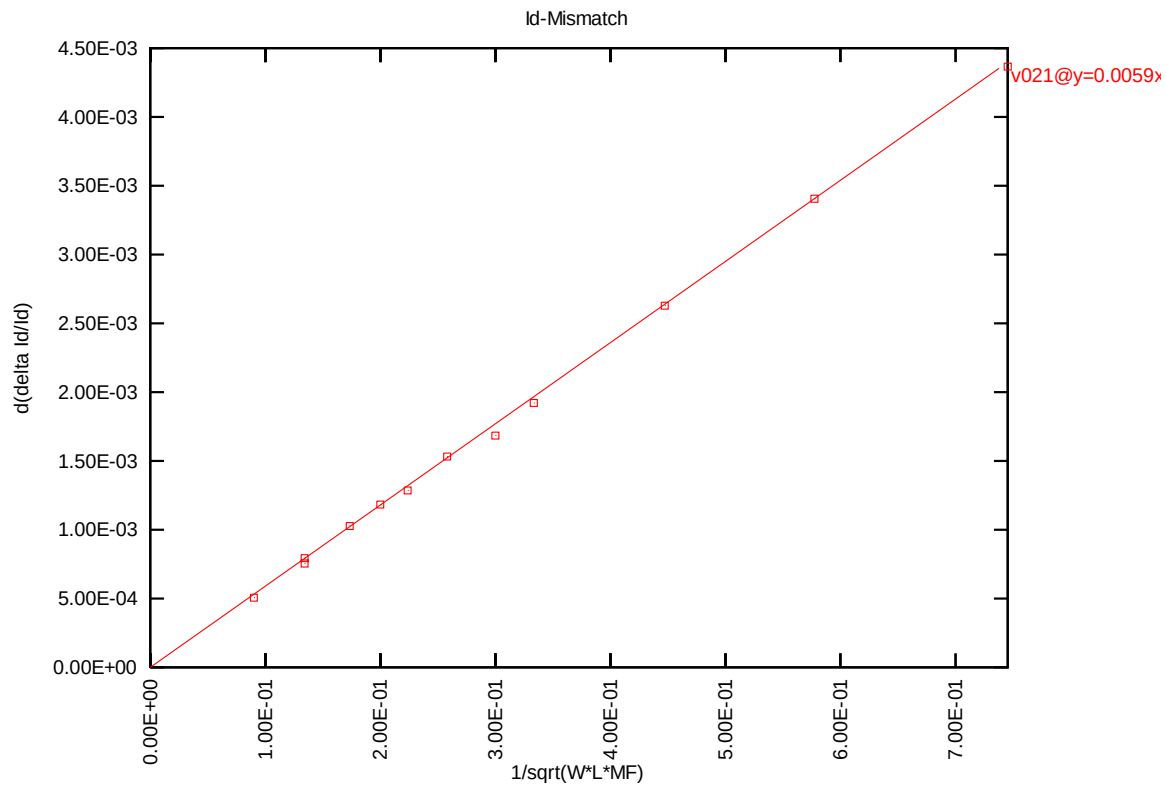


Figure 2-2 IDSAT mis-matching simulation of native 3.3V n-ch MOSFET

3 Appendix

3.1 HSPICE Warning Message

Table 3-1 HSPICE warning message

Item	Warning Message	Explanation
1.	None	None

3.2 ELDO Warning Message

Table 3-2 Eldo warning message

Item	Warning Message	Explanation
1.	None	None

3.3 SPECTRE Warning Message

Table 3-3 Spectre warning message

Item	Warning Message	Explanation
1.	None	None