



27. To check the wire's drive tension, press and hold Trigger to feed the wire against a piece of wood from 2 to 3 inches away.

Note: After pressing Trigger, wire will stop feeding after 3 seconds if there is no arc. Check tension for less than 3 seconds.

If the wire stops instead of bending, unplug the Welder, slightly tighten the Feed Tensioner clockwise, and try again. If the wire bends from the feed pressure, then the tension is set properly. Before proceeding, turn OFF the Power Switch and unplug the Power Cord from its electrical outlet.

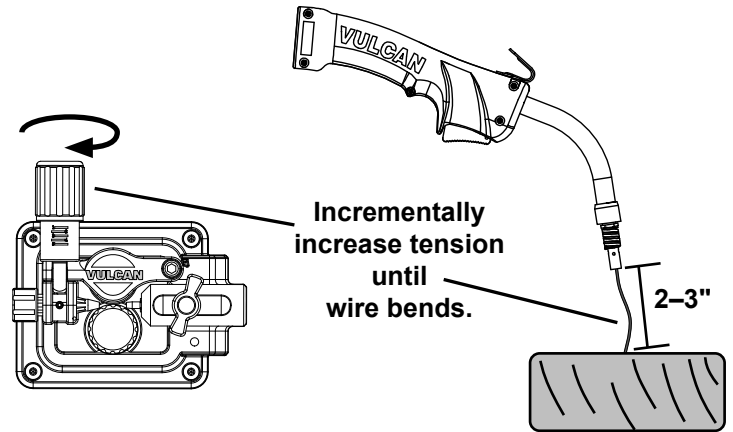

28. Turn OFF the Power Switch and unplug the Power Cord from its electrical outlet.
29. Close the Door. Make sure Door is securely latched.
30. Select a Contact Tip that is compatible with the welding wire used. Slide the Contact Tip over the wire and thread it clockwise into the MIG Gun. Tighten the Contact Tip.
31. Replace the Nozzle and cut the wire off at 1/2" from tip (1/2" stickout).

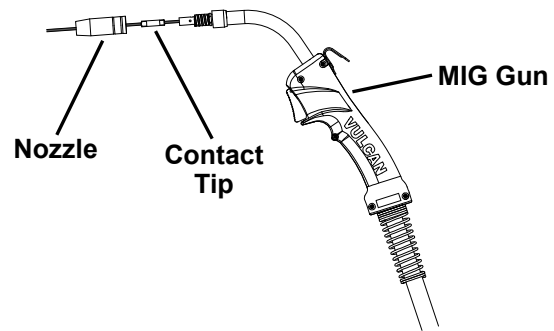

Optional Spool Gun Setup

1. To set up optional Spool Gun (sold separately), plug Ground Clamp Cable into Negative (-) Socket. Plug Wire Feed Power Cable into Positive (+) Socket. Twist cables clockwise all the way to lock in place.
2. Loosen the Knob on the Wire Feed mechanism, then insert the Spool Gun Cable Connector through the hole on the Welder front and into the socket on the Wire Feed.
3. Ensure Cable Connector is fully inserted and tighten the Knob securely. If Connector is not fully inserted, the gas connection will leak, preventing shielding gas from reaching the welding arc.

NOTICE: To prevent damage, do not overtighten the Knob.

4. Insert the Wire Feed Control Cable through hole on Welder front and connect to the Wire Feed Control Socket inside the machine, then tighten lock ring on the Cable plug. Note that the plug on the Cable fits into the Socket in one specific orientation only.
5. Connect Gas Hose on Spool Gun Cable Connector to Spool Gun Gas Outlet on front of Welder. Refer to paragraph 17 on page 14 for further shielding gas setup information.
6. Refer to Spool Gun manual for operational information.

