





X-GUNNER Instruction Manual for Wireless Game Light Guns

product list

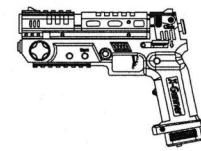

light gun*1




locating light*1
voltage : 5V,
current 600mA



receiver*1




charger*1
voltage : 8.4V,
current: 500mA

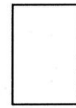


instruction manual*1

Key distribution

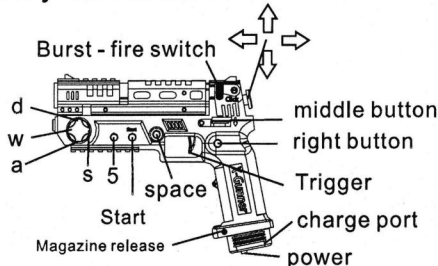

Press the Start key and the Space key simultaneously to enter the engineering mode.


Simultaneously pressing the "5" key and the "Start" is equivalent to pressing the ESC key.

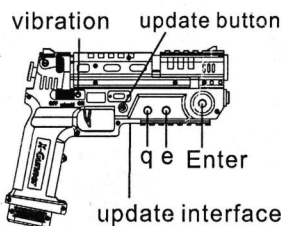

Note: When the light gun detects infrared light, the trigger return electromagnetic coil vibrates. When no infrared light is detected, the trigger motor vibrates

calibrate

1. Simultaneously press the Start key and the Space bar to enter the engineering mode. Pull the trigger once to enter calibration, and the cursor is fixed at the center of the screen

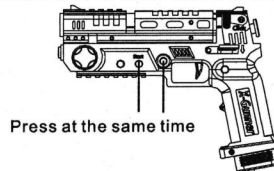


Press at the same time

2. Aim at the cursor in the center of the screen and quickly pull the trigger once to complete the mid-point calibration. At this time, the cursor can only move in the vertical direction.
3. Use the joystick to adjust the cursor up and down so that the cursor is aligned with the light gun at the topmost and bottommost positions on the screen. Then quickly pull the trigger once to complete the vertical calibration. At this time, the cursor can only move in the horizontal direction
4. Move the light gun left and right, and use the joystick to adjust the light left and right. Mark the position so that the cursor is at the leftmost and rightmost positions on the screen. Aim the light gun, quickly pull the trigger, and complete the horizontal calibration, the chambering and motor of the light gun will be synchronized at this time. Shake once, the cursor also returns to the center. Calibration is complete and automatically save data

adjust the frequency


Open the cover as shown in the figure. Inside, there is a 4-bit DIP switch just like the receiver. At the same time, change the positions of the two DIP switches to adjust different frequencies. The positions of the receiver and the light gun must be in the same position.

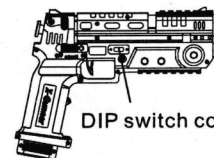

DIP switch cover

Update

1. Use a pointed tool to keep pressing the upgrade button without releasing it.

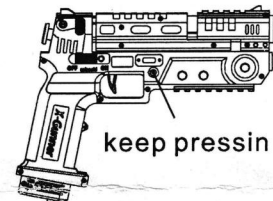

keep pressing

2. Then insert the USB cable into the computer. A mobile disk named RPI - RP2 will appear on the computer. Release the upgrade button and copy the firmware into the mobile disk to complete the upgrade.

MAMEHOOKER ini setting

Light-gun allocation: Hardware ID in the game.

P1:1209&PID_0001.

P2:1209&PID_0002.

P3:1209&PID_0003.

P4:1209&PID_0004.

The sent instructions.


A) send 'S6', Turn on synchronous vibration.

B) send 'F0', The electromagnet vibrates once.

C) send 'F1', The motor vibrates once.


D) send 'E', End the feedback synchronization and restore the default vibration.

DemulShooter synchronous vibration output, please set according to the diagram

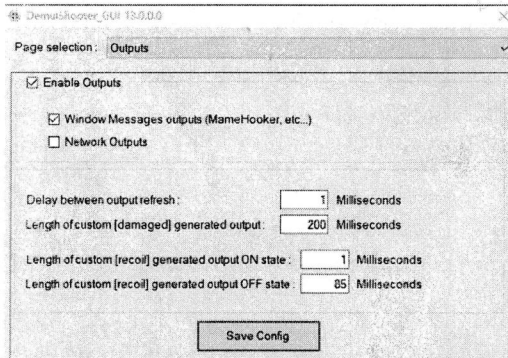

install

Fix the four positioning lights with their fronts facing forward at the four corners of the screen or stick them into a square shape.

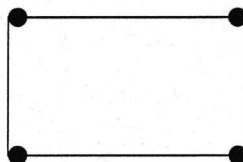

Magazine release button

Press the magazine release button. Remove the magazine. Insert the receiver inside into the USB 3.0 port of the computer. Put two 18650 sharp-tipped lithium-ion batteries into the magazine. Turn on the power switch for use.

setting

All of the following need to be set in the engineering mode.

- 1) Simultaneously press the Space key and the right mouse button to turn off the electromagnet vibration.
- 2) Simultaneously press the Space key and the middle mouse button to turn off the motor vibration.
- 3) Simultaneously press the Start key and the right-click button to disable the trigger button outside the screen as the right-click button.
- 4) Simultaneously press the right button and the joystick up to increase the sensor sensitivity.
- 5) Simultaneously press the right button and the joystick down to decrease the sensor sensitivity.

After the above settings are completed, press the space bar once to exit the engineering mode. After a power-off restart, the above settings will return to the default mode



warn: There are small parts inside, not suitable for children aged three and under to use

Precautions for battery use:

Regularly inspect the metal sheets of the battery box. When damage is found, it should be stopped from use until it is repaired completely.

Avoid dropping, impacting, or exposing this product to fire, high temperatures, or water.

If the product experiences overheating, swelling, or odor, please stop using it immediately.

If you do not use this product for a long time, please remove the battery from the battery box.