

Levtron Instruments Pvt Ltd.

Office No 02, 1st Floor, Plot No 6, Sr. No. 78/1, Pandhari Industrial Estate, Shivane, Pune 411023

Contact: 9730042725 /9579430012 Email: Sales@levtron.in

Capacitance level transmitter - Calibration procedure:

Model: CPLT1200L/CPLT 1200F (3/4-wire, isolated model)

Power & Output Wiring there are 2nos, 2-pin connectors

1st connector: 24 V DC (Power Supply Terminals)


Pin 1: +24v supply

Pin 2: Ground

2nd connector: Output Connector

Pin1: Common / Ground

Pin2: 4-20 mA Output

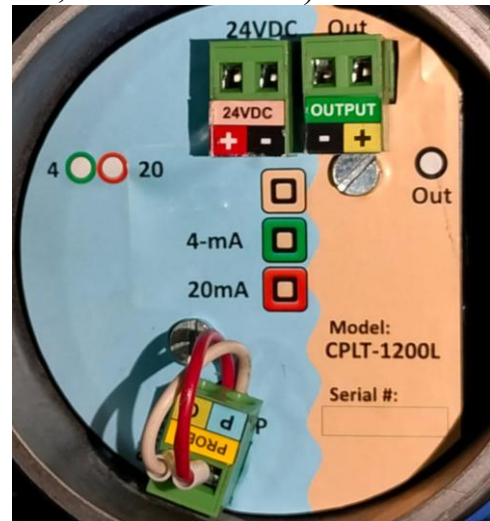

Calibration Key Details: Total 3 Keys

Top key: Brown key - For factory setting. User will not allowed to use

Middle key: GREEN key -used for low level calibration of 4 mA

Bottom key: RED key -used for high level calibration 20 mA

Status LEDs: there are 2 LEDs, **GREEN** & **RED**.

Calibration procedure:

Power -ON the unit, the unit enters into measurement mode.

a. Measurement mode: Both RED & GREEN LEDs will toggle on/off continuously.

b. Low level calibration procedure:

Step-1: fill the tank level up to Low level height.

Step-2: press & hold the 4-mA green key till both red & green LEDs become steady.

It means : (unit enters into calibration mode)

Step-3: press & hold the 4-mA green key till RED LED lit-off & GREEN LED ON

Within few seconds, the unit returns to measurement mode, both LEDs start toggle on/off continuously this completes the low calibration.

c. High level calibration procedure:

Step-4: fill the tank level up to high level height.

Step-5: Press & hold the 20-mA RED key till both RED AND GREEN LEDs becomes steady.

It means: (unit enters into calibration mode)

Step-6: press & hold the 4-mA Green key till Green LED lit-off & Red LED ON

within few seconds, the unit returns to measurement mode, both LEDs start toggle on/off continuously. this completes the high calibration

Now, you shall get actual level OUTPUT in the PROCESS INDICATOR