

I N S T R U C T I O N - M A N U A L

VIBRATING ROD LEVEL SWITCH SOLID

FUNCTION:

The electronically stimulated Rod vibrates at its mechanically resonance frequency of approx.128 Hz.to 350Hz.... If the bulk material covers the fork, the damping of the vibration is detected electronically and a corresponding signal output is actuated. The vibration of the fork has self-cleaning properties. The light deposit on the container wall does not affect the operation of the VIBRATING ROD

MEASURING SYSTEM:

The complete system, VIBRATING Rod -...VRLS-500S series consists of: -

The sensing probe of Vibrating Rod with The Electronic Switching unit

PRIMARY AREA OF APPLICATION

Building industry materials, cement, sand, lime, etc

Foodstuff industry, milk powder, flour, salt, foodgrains, etc

Plastic industry, powder, granular etc.

Timber industry, chemical and mining etc.

TECHNICAL SPECIFICATIONS:

CONTROL UNIT:

Housing	Cast Aluminum, weatherproof, powder coated Integral with the fork.
Cable entry	2 nos.
Ambient temperature	0 ° C to + 80° C
Power consumption	1.9 VA
Mains Voltage	230 V AC (+/-15%), 50 Hz Optional 110 V AC / 24 V DC
Compact rod mains voltage:	20 V AC to 265 VAC & 18 VDC to 55 VDC Universal Supply 24 VDC /110 VAC /230 VAC (Specify)
Output	2 sets of potential free c/o contacts rated at 5 amps, 230 V AC for non-inductive loads.
Signal delay	Rod covered to fork free about 2 to 3 sec. Rod free to Rod covered about 2 sec.
-	

I N S T R U C T I O N - M A N U A L

Switching delay optional	continuously adjustable from 2 to 20 secs. Rod free and Rod covered.
Safety operation (FSL/FSH)	Field selected switch over for minimum or maximum switching points.
Switch status display	Green LED shows Normal and Red LED shows Alarm Conditions.

SENSING PROBE (FORK):

Mounting	Screwed – 1 ½” BSP (standard) Flanged (as per requirement)
Rod	stainless steel, 316
Operating temperature	90 ° C max. (inside vessel) 165 ° C max for HT Versions (inside vessel temp. on request)
Probe Length	250 mm Standard and extendable UP TO 3000mm on Request

INSTALLATION OF VIBRATING ROD LEVEL SWITCH

The standard unit has screwed mounting, which can be mounted laterally on the container wall at the desired level of the material to be controlled. The Rod tines should be horizontally or pointed slightly downward.

Following precautions should be taken during installations -

The tines should not be bent or position distorted.

During filling operation, the material should not fall directly onto the tines. Otherwise protection shield should be provided over the tines.

During installation of probe with screwed mounting, turn the hexagonal mounting nut of the probe and not the housing.

For side mounting location the tines position should be such that the material can flow freely through them.

The knife-edges of the tines should face the ground plane in horizontal mounting position

The tines should extend far enough into the vessel so that they are free to vibrate despite the build-up on the vessel wall. The extended probe should be mounted in such a way that it does not extend further than necessary in the vessel.

Turbulence during pneumatic conveying can cause operational problems and can be avoided by shielding the tines by windscreen.

I N S T R U C T I O N - M A N U A L

For remote mounting of the Electronics Switching unit, the probe connection cable gland of the Cast Aluminum housing of the Switching unit should point towards ground plane.

FAIL SAFE MODE SELECTION:

Depending upon the process requirement, the minimum or maximum fail-safe mode can be selected in the vibrating fork.

In VIBRATING FORK the Relay is in energised condition. When level changes state the relay de-energises. Thus, besides level alarm condition, the operator gets an alarm even in case of mains failure or the instrument failure. This imparts a better overall reliability of operation.

Maximum fail safe mode means the relay de-energises when the level exceeds the desired or when mains supply fails.

Minimum fail-safe mode means the relay de-energises when the level drops below the desired level or when mains supply fails.

NOTE: THE CONTACTS SHOWN ON THE LOGIC CARD PANEL IS FOR FAIL SAFE LOW MODE. THE CONTACTS WOULD CHANGE WHEN THE FAIL SAFE MODE IS CHANGED.


ELECTRICAL CONNECTION TO SOLID FORK AI -200

Please refer the connection diagram for the electrical connection. Appropriate mains voltage should be connected to the terminals of the instruments as specified. The connectors are suitable for 1.5 sq.mm cable cross section.

The SOLIDFORK does not need any calibration/setting. The switching delay can be set as per the process requirement, between 2 sec and 20 secs.(Optional)

Power and relay connections :

INSTRUCTION - MANUAL

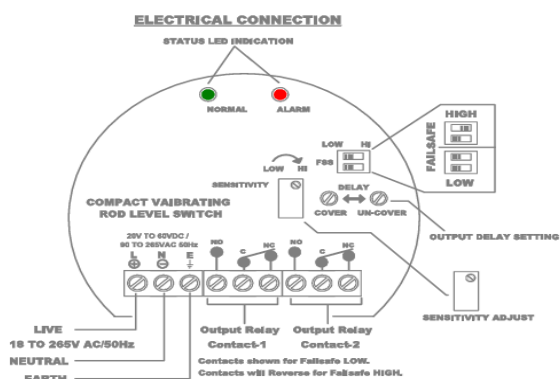

Compact Vibrating Rod Point level switch

**Supply : Universal
: 20 VDC to 265 VAC
& 18 VDC to 55 VDC
And 24VDC/110 VAC /230 VAC (Specify)**

L	N	E	NO	COM	NC	NO	COM	NC
---	---	---	----	-----	----	----	-----	----

MAINTENANCE

The Vibrating Rod VRLS-500S need no maintenance.

However, if the material has built up tendency, over a period of time, tines should be cleaned whenever need occurs.

Ensure that the cable glands and the housing lid are sealed to prevent ingress of moisture.

FAULT FINDING PROCEDURE

If the instrument fails, Please observe following points:

Check the mains supply connection - is it connected as per specifications?

Check the FSH and FSL mode – is the mode selected as per the required logic?