



HOW TO GET THE BEST OUT OF YOUR GODREJ EON WASHING MACHINE

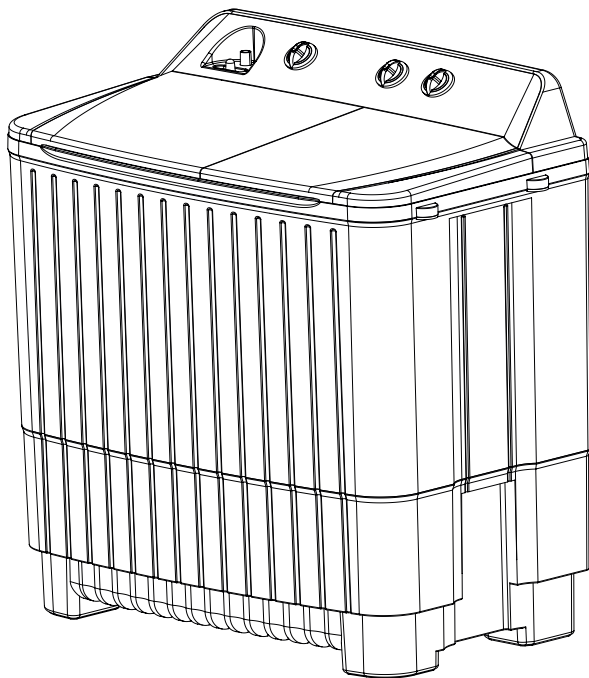


Image shown is for representation purpose only.

Fully Automatic Top Load
User Manual
WSAXIS DX 70 5.0 SN2 T


Congratulations!

You are now the proud owner of a new Godrej Washing Machine. You can look forward to years of smooth, trouble-free washing with your machine, as well as considerable savings in time, money and effort. Please read this manual carefully as it will tell you how to operate your machine optimally in order to get the best results. If you need any further clarifications, do contact your nearest Godrej dealer or any of our service centres/ offices. We would be glad to help you. We wish you an easier, more convenient life with your new Godrej Washing Machine.

CONTENTS

Description of parts	1
Specifications	2
Guidelines for safety & durability	3
Point of attention	4
How to install	5
How to wash	6
How to do intermediate spinning	7
How to rinse	8
How to spin	9
Caution	10
How to maintain	11
Troubleshooting Guide	12
Warranty terms & conditions	13
Branches / Service Connect	15

DESCRIPTION OF PARTS

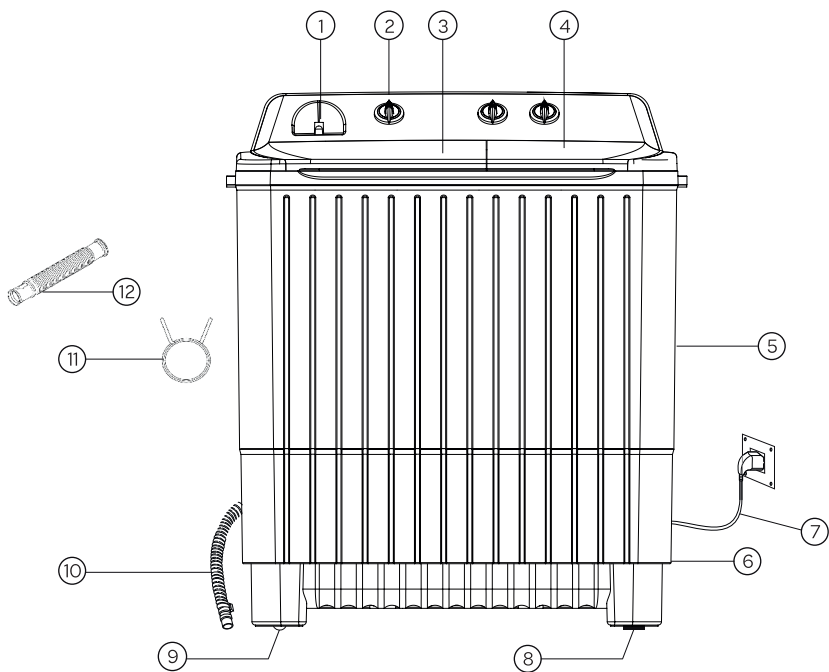

- | | |
|-----------------|-----------------|
| ① Water Inlet | ⑦ Power Cord |
| ② Control Panel | ⑧ Rubber Pads |
| ③ Spin Lid | ⑨ Castor Wheels |
| ④ Wash Lid | ⑩ Drain Pipe |
| ⑤ Tub | ⑪ Hose Clamp |
| ⑥ Base | ⑫ Inlet Hose |

*The diagram shown above is indicative and for reference only.







SPECIFICATIONS

Model		WSAXIS DX 70 5.0 SN2 T
Wash Capacity (Dry Load Capacity)		7.0 kg
Power Source		230 Volts AC ~ 50 Hz
Input Wattage	Wash	450 W Max
	Spin	300 W Max
Water Capacity (High)		67 L
Water Capacity (Low)		44 L
Wash Motor Capacity (Output Wattage)		120 W
Net dimensions (in mm)		810mm(W) x 465mm(D) x 965 mm(H)
Net weight		19.85kg

In view of Godrej policy of continuous development, features/ specifications may change without notice. Features/ may vary With products. For specific features, please refer to the catalog/ website.

GUIDANCES FOR SAFETY AND DURABILITY

Observe the following guidelines for the durability of the washing machine and safety problems.

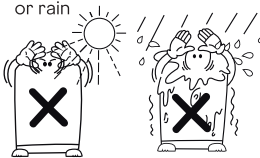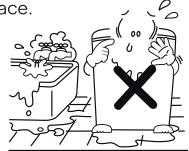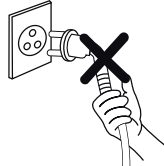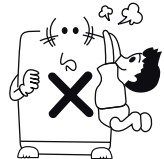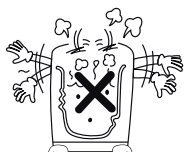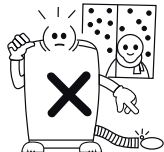Do not expose the washing machine to direct sunlight or rain 	Do not install the washing machine around a damp place. 	Do not sprinkle water over the control panel switches. 
Do not plug many cords in one outlet at the same time. 	When plugging out the power cord, do not hold the wire. 	Keep children away from the washing machine. 
Keep the Machine away from fire or heat source. 	Do not pour caustic soda & bleach over the washing machine. It causes damage to the rubber parts. 	Do not pour water with a temperature exceeding 50° C into the tub. 
Make sure of closing the lid, particularly during spinning. 	Do not put your hands into the rotating tub. 	Let water drain away from the drain hose thoroughly. 


POINT OF ATTENTION

*In case the plug of the power supply cord is damaged, user should not attempt to fix it without electrical knowledge. Please call on authorised service center.	*Do not share one power outlet with other electrical appliances. Do not use unappointed power source. Keep the plug strip clean.
*Keep children away from the machine.	*Never put hands into the tub while it is operating.
*Keep machine away from heat-generating equipment. Keep it away from direct sunlight.	*Do not place the machine in the bathroom. Such action may damage the electrical insulation and cause body-rust.
*Do not put heavy or hot things on top of the machine.	* Do not wash waterproof clothes such as rain-coat. Abnormal vibration may occur in the spin tub *Add clothes one by one. Remove hooks, laces, pins and pull up all zips. If the hooks cannot be removed tie all of them up in one Garment. Failure to do so will damage the machine.
•Do not wash laundry soaked with Petrol or organic solvents,	*Place machine on a flat and solid ground.


HOW TO INSTALL

Install on a stable and levelled surface

- Install washing machine at a stable/level surface
- Keep the washing machine more than 5cm from the wall to prevent a noisy sound while spinning.
- A carpet must not obstruct the ventilation openings.

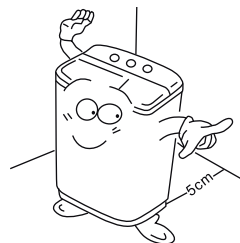

Placement of the drain hose

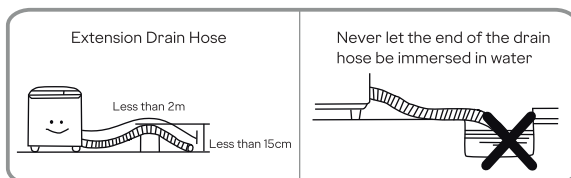

Connecting power and earthing

- Your machine has three core power cord to power the machine. Make sure that electrical and earthing connections are done properly.
- Connect the power cord to an Indian standard 3pin power socket. Never plug it into an ungrounded power socket.
- The machine must be positioned where the plug is
- The machine requires 230V, 50HzAC supply.

Grounding method:


- If the external socket does not have grounding terminal, then a separate grounding is needed.
- Burying copper plate- Connect ground wire to a ground plate and bury it more than 75cm in the ground.
- Using a short circuit breaker- A separate ground breaker should be employed and installed by a qualified engineer.
- Do not repair or disassemble the washing machine by yourself it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

Connecting the Inlet hose:

- Connect the water supply pipe to the water inlet securely.

CAUTION




- Never connect the earth wire to a gas pipe water tap pipe phonewire or lighting rod ,
- Do not use it in case, the power cord or plug have been damaged, so as to avoid electric shock and fire risk.
- If the supply cord is damaged ,it must be replaced by the manufacturer or its service agent or a qualified person in order to avoid a hazard.
- For optimum performance Of the product. ensure that the product is in standard voltage (Midition of 230 V

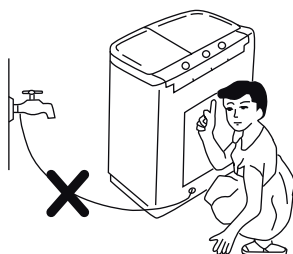

HOW TO WASH



Precautions before washing

- Put your delicate clothes and undergarments in a washing net. This will prevent clothes from getting entangled during wash and protect your clothes. The washing nets are available in the market.
- Strings of aprons, petticoats, pyjamas etc. should be tied as this will prevent clothes from getting entangled.
- Close fasteners/zippers of trousers and jeans as this will prevent scratching of the wash tub.
- Remove articles like match sticks, hair pins etc. from pockets before washing.
- Add clothes one by one. Remove hooks, laces, pins and pull up all zips. If the hooks cannot be removed tie all of them up in one Garment. Failure to do so will damage the machine.

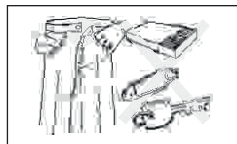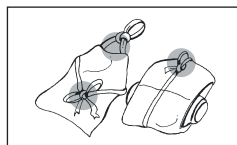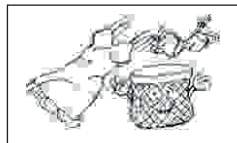

Washing

- Shift the wash selector knob to 'Regular/Gentle' position and the water supply knob to 'Wash Tub' position.
- Set the water level depending on the wash load. (Refer to section 8 on how to estimate the wash load and select water level.)
- Turn on the water supply and allow water to fill 2-3 cms lower than the water level selected. Add the detergent and mix properly so that the detergent dissolves fully in water.

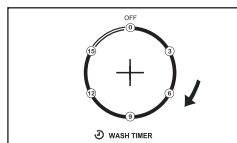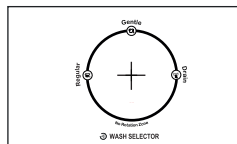

Note: If water flows out of the water feed indicator outlet located in the Wash Tub it indicates that water is flowing at a high speed which could cause water to spill over into the Spin Tub. Reduce the water flow till water stops flowing out of the water feed indicator outlet.

- Now put the wash load in to the Wash Tub and fill water up to the water level selected.
- Select the cycle required for washing depending on the quantity of clothes to be washed, the type of fabric and the dirt levels of the clothes. Refer to section 8 for guidelines on selecting Wash Cycle. Choose between Regular and Gentle by turning the wash selector knob.
- Select the wash time required. The time will vary depending on the number of clothes and type of fabric. (Refer to section 8 for guidelines on setting wash time.)
- Set the wash time by turning the Wash Timer clockwise. The machine starts working immediately on turning the knob.
- After washing has shift the Wash selector knob to 'Drain' position to drain out the water from the Wash Tub.

*For Energy saving course refer below instructions in Wash/Rinse/Spin function.

- Select "Gentle" wash program and fill water up to mark "Overflow" in wash tub.
- Refer following function & time selection :



*Under test condition, when tested in accordance with standard IEC 60456:2010 Actual Performance of machine will depend on how the appliance is being used.

HOW TO DO INTERMEDIATE SPINNING

After the wash cycle, it is suggested that an Intermediate spin cycle with the Spin Shower facility be carried out.




This helps remove the detergent solution from clothes and rinsing becomes more effective.

How to use the Spin Shower

- Remove washed clothes from the Wash Tub and transfer them uniformly into the Spin Tub as shown in Fig A.
- The Spin Cap needs to be placed horizontally above the clothes as shown in Fig A. Even in case of a small lot of clothes, the Spin Cap should be placed above the clothes. This is a safety requirement. The clothes and the Spin Cap should not be placed as shown in Fig B. as this could lead to vibrations and cause a rattling sound during the Spin Cycle,
- Shift the Water Supply Selector knob to 'Spin Tub' and allow the water to flow for about 1 minute.
- Turn off the water supply and close the Inner Spin Tub lid and the Spin Tub lid.

Note: Spinning will not start till the Spin Tub lid is shut. For safety reasons the machine is provided with a brake mechanism which gets activated as the spin tub lid is opened. This safeguards against accidental opening of the Spin Tub lid when the tub is in spinning at a high speed,




- Set the Spin timer by turning the knob clockwise. Choose between 1-5 minutes depending upon type and no. of clothes. For details refer to section 7.

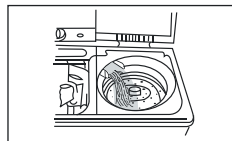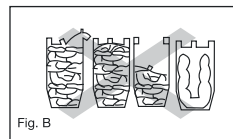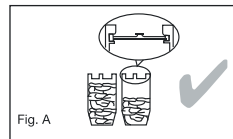

HOW TO RINSE



After the wash and Intermediate Spin cycle use the Rinse cycle. This helps remove detergent from the clothes and makes them soap-free. Rinsing can be done in the following way:

- Shift the Wash selector knob to 'Regular/Gentle' position.
- Fill water upto the desired level.
- Set the wash timer to 2-3 minutes.
- After the rinsing cycle is over shift the Wash Selector knob to 'Drain' position. This will drain out the water from the Wash Tub.
- Transfer the clothes to the Spin Tub for intermediate spinning.
- Repeat this process two to three times for best results.

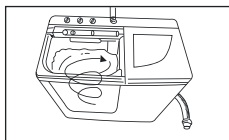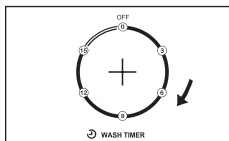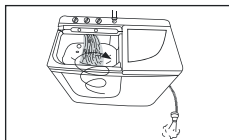

HOW TO SPIN

- Remove washed clothes from the Wash Tub and transfer clothes uniformly into the Spin Tub as shown in Fig A.
- The Spin Cap needs to be placed horizontally above the clothes as shown in Fig A. Even in case of a small lot of clothes, the Spin Cap should be placed above the clothes. This is a safety requirement.
- The clothes and the Spin Cap should not be placed as shown in Fig B. as this could lead to vibrations and cause a rattling sound during the Spin cycle.
- Shut the Inner Spin Tub lid and the Spin Tub lid.

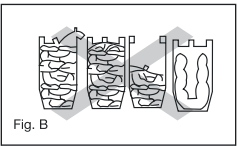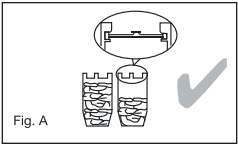

- **Close the spin inner lid and spin lid**

Note: The Spinning will not start till the Spin Tub lid is shut. For safety reasons the machine is provided with a brake mechanism which gets activated as the Spin Tub lid is opened. This safeguards against accidental opening of the Spin Tub lid when the tub is spinning at a high speed.

- Set the Spin time by turning the Spin Timer clockwise. Refer to table on guidelines for setting Spin time.
- Once the set spin time is over the timer returns to its original position and the spinning activity stops.

Type of Fabric	Spin Time
Synthetic clothes	1 minute
Woolens	1-2 minute
Shirts/ Trousers	2-3 minute
Bedsheets / Towels	5 minute

Ending the process





- Switch off the main power supply and unplug the power cord.
- Drain the water completely from the drain pipe. Then hang the drainage hose on the hook provided on the side of the machine.

Caution

- If bleaching powder or starch is used for washing rinse the Wash Tub and Spin Tub with water and drain. This is required to remove any left over bleach/starch which may otherwise damage the Wash/Spin Tub.
Remove the water supply joint first and then remove the water supply hose as this prevents water from spilling on to the controls of the machine.

CAUTION

- Never put organic chemicals like benzene, alcohol or thinner, or even clothes stained with such material in the washing machine as this may lead to fire hazards.
- Never put your hands in the Spin Tub while it is moving.
- The washing machine Should be plugged into a separate power socket. Do not take power supply for other appliances from the same source.
- Do not get the control panel wet as this may lead to an electric shock.
- Remove hooks, pins etc, and pull up all zips. If the hooks cannot be removed then tie all of them up in one garment.
- If the Spin Lid is open and the rotations do not stop completely within 15 seconds, it indicates that the self acting brakes are malfunctioning. Get them repaired immediately by an authorised service personnel.
- Switch off the power supply immediately if the supply voltage drops abnormally. Low voltage supply may result in overheating of the electrical parts of your machine.
- It is necessary to use the Spin Cap for the spinning operation. The cap holds the clothes in place during spinning and prevents them from flying off.
- Do not rub the control panel with chemicals like benzene, thinner, etc. This may deform the parts or the colour may fade.
- Do not keep lit match sticks, cigarettes or candles near the machine as the plastic parts in your machine may deform or catch fire,
- Do not pour water of temperatures above 5000 into the Wash or Spin Tub as this may result in deformation or damage to the plastic parts.

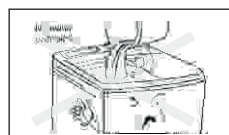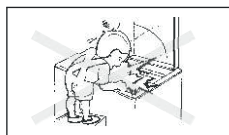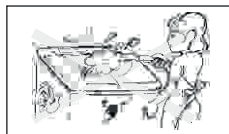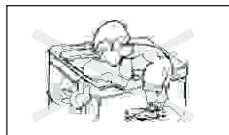

HOW TO MAINTAIN

- A. Remove the power plug after washing.
 - B. Wipe the washing machine with a soft piece Of Clean and dry Cloth,
 - C. Clean tubs after bleaching or starching else it will lead to deposit creation.
- Do not use a hard brush as it could scratch the wash tub.



BE SURE TO REMOVE THE POWER PLUG FROM MAIN POWER SUPPLY BEFORE CLEANING THE MACHINE.

How to clean the Lint Filter

1. Push the upper part of the Lint filter and pull out (Fig. 1)

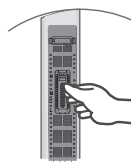


Fig 1

2. Clean the Lint Filter (Fig.2)

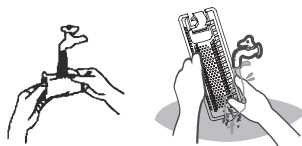


Fig.2

3. Insert the lower part of the filter and push (Fig.3)



Fig.3

Cleaning the Wash Tub

1. After washing is complete, fill fresh water above the level of Pulsator, without adding clothes.
2. Run the machine for 12 minutes and then turn the Cycle Selector knob to "DRAIN" position when Pulsator is still rotating.
3. When water is completely drained out, turn the Cycle Selector knob to "WASH/RINSE" position.
4. Finally turn OFF the machine.

TROUBLESHOOTING GUIDE

Before you call for a technician or send the machine for repair, please check from this troubleshooting lists.

*Do not attempt to repair the machine by yourself. Please contact the authorised service center.

TROUBLE	CHECKPOINT
The washing machine does not work:	• Is the power supply cord connected to a power outlet? • Is the power cut? • Is the pulsator tangled with something?
Unable to drain	• Has the Drain Hose been lowered? • Is the Drain Hose blocked? • Is the Drain Hose kinked?
Abnormal sound during wash..	Are there any loose articles in the Tub?
Incomplete spinning (Severe vibration or unbalance)	• Is the laundry arranged evenly? • Is the machine being placed on a flat and solid ground? • Are there any clothes dangling on the Spin Tub? • Is the Spin tub overloaded?

WARRANTY

The GODREJ WASHING MACHINE comes with 5 YEARS on wash motor & 2 Year Warranty on rest of functional parts of appliance from the date of purchase, against defective material or workmanship. In case of any such defect, Godrej & Boyce Mfg. Co.Ltd. - Appliance Division to get the appliance repaired free of charge during warranty period, subject to terms and conditions below.

INSTRUCTIONS FOR THE CUSTOMER

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorised Godrej & Boyce Service Centre for obtaining warranty service and provide the defect, Model details & Serial No.
4. Product will function between +/- 5% of rated volts. For any fluctuation beyond specified limit, company shall not be responsible. In turn, warranty stands terminated.
5. Earthing provision is necessary for the safety.
6. Frequency must be between 5% variation of 50Hz. Beyond this, company shall not be liable for any unforeseen hazards like fire, shock etc. & in turn, warranty stands terminated.
7. Appliance or any part thereof is subjected to neglect, abuse or misuse, tampering, alteration, accident, fire, floods or other act of God, or damage by rodents or insects, the COMPANY is not responsible for any damage caused to the appliances & shall not be liable for any consequential loss or compensation, not refund of purchase price or replacement of the appliances.
8. In event of repair/replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of warranty. Moreover, the time taken for repair/ replacement and in transit whether under the warranty or otherwise shall not be excluded from the warranty period.
9. Any damage/defect arising due to entry of coin/foreign particle into the machine, and causes malfunctioning is not covered under warranty. These calls will be chargeable to customer during warranty period.
10. House wiring related issues are not covered under warranty and such calls will be chargeable to customer.
11. Calls related to lint filter or water inlet filter cleaning are not covered under warranty and are chargeable to customer.

TERMS AND CONDITIONS

1. Repairs and replacement of parts will be carried out through the Authorised Customer Service Centre.
2. All transportation and handling expenses incurred while repairing will be payable by the customer.
3. For appliances installed beyond the municipal limits of the jurisdiction of the authorised service centre, charges towards technician's visit and other incidentals will be borne by the customer.
4. While the company will make every effort to carry out the repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
5. The company/its authorised service center will collect any parts, components replaced.
6. Warranty does not cover accessories to the appliance.
7. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only. The maximum claim/s if entertained by the company will be subject to the maximum retail price of the product purchased or purchase price, whichever is lower.
8. In the event of any unforeseen circumstances, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
9. Warranty is not applicable in case the original number (serial no. sticker) is removed, obliterated or altered from the machine or cabinet.
10. 5 years warranty on wash motor only applicable on the following model no.: WSEGE CLS 72 SN2 M

Godrej & Boyce Manufacturing. Company Ltd.-Appliance Division
(a part of Godrej Enterprises Group)
CUSTOMER COPY

Model No.

Unit Sr. No.

Date of Purchase

Customer's Name & Address

Tel. _____

Customer's Name & Address

Tel. _____

Customer's Signature

--

BRANCHES / SERVICE CONNECT

For any further assistance, please contact our nearest branches office or service center:

BRANCHES			
Ahmedabad Bangalore Bhopal Bhubaneshwar Chandigarh/Mohali Chennai	Coimbatore Delhi Faridabad Ghaziabad Guwahati Hyderabad	Jaipur Kochi Kolkata Lucknow Mumbai Nagpur	Patna Pune Raipur Ranchi Vijaywada

CALL	WhatsApp
080-6743-6743	Text "hi" To 9321665511 On Whatsapp

24 x 7 Call Center • Weekend Service

Website: www.godrejenterprises.com/support
E-mail: smartcare@godrej.com SMS: <godrejcare> to 56677

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Protection of Environment:

Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that the product, packaging and plastic material is not disposed as unsorted municipal waste.



This symbol is known as the "Crossed-out Wheellie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste.

It should be disposed of only through the company's collection points with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** for applicable buy back arrangement or www.godrejenterprises.com/green-think for details about authorised collection points.

'This product is RoHS compliant'

The Godrej logo, featuring the word "Godrej" in a stylized, cursive script font.

Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group)

Plant 11, Pirojshanagar, Vikhroli (W), Mumbai 400 079.

V5_29072025