

EXPERIMENT – 8

INTRODUCTION TO IRB360 IN AUTOMATIC MODE AND PALLETISING SELECTED OBJECTS

AIM

To program IRB360 flex picker 4 axis parallel manipulator using pickMaster software

EQUIPMENT REQUIRED


IRB 360 Flex picker
Conveyer assembly with VFD
Camera assembly (Ethernet compatible)

PROCEDURE:


- Open pick Master software Select New as shown in (**Screen shot -01**)
- The default layer appears as shown in (**Screen shot -02**).
- Right click on the layout to get the following options
 - Object
 - Pick position
- Select the objects and place them on the screen as shown in (**screen shot -03**) rename them as **SRM** and **ABB** respectively
- Select the container by right click on the screen as shown in (**screen shot -04**) rename if required
- Select the at least two position sources by right clicking on the main screen and drop them as shown in (**screen shot -05**)
- Edit each and every position source properties by double clicking on the position source icon on the main screen by any one of the following methods
 - Blob detection
 - Geometric
- Create a template and assign the drop position , which is the position source for picking the objects as shown in (**screen shot -06**)
- Create pattern for placing accepted objects by selecting the container configuration as shown in (**screen shot -07**)
- click on the run button in the main screen for execution of the project

Safety precautions:


- Proper care should be taken and avoid entering into the work cell as there exist an interlock for door opening which immediately stops the operation

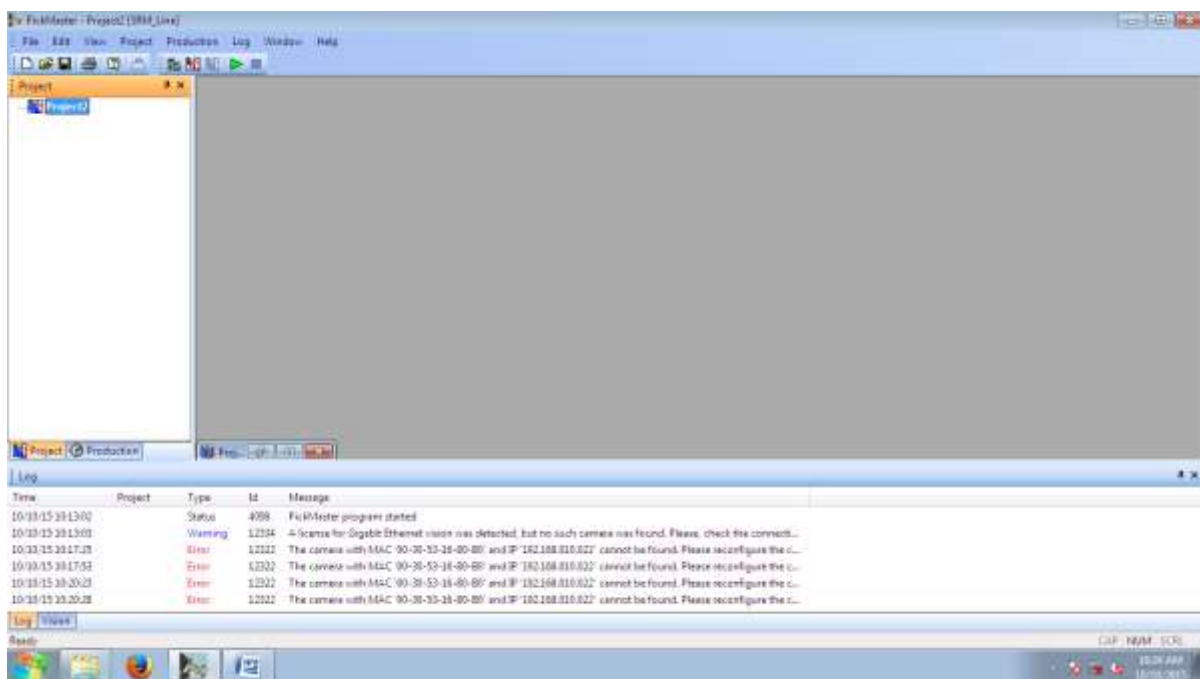


Screen Shot -01

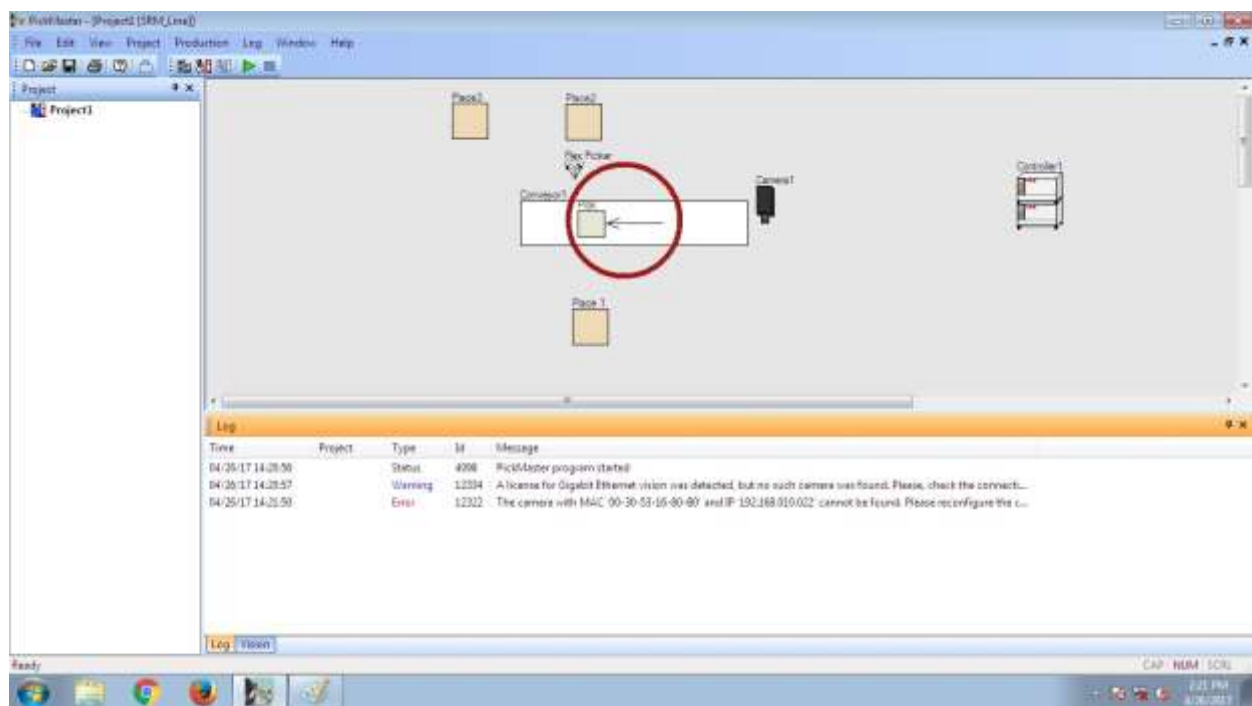


Screen Shot -02

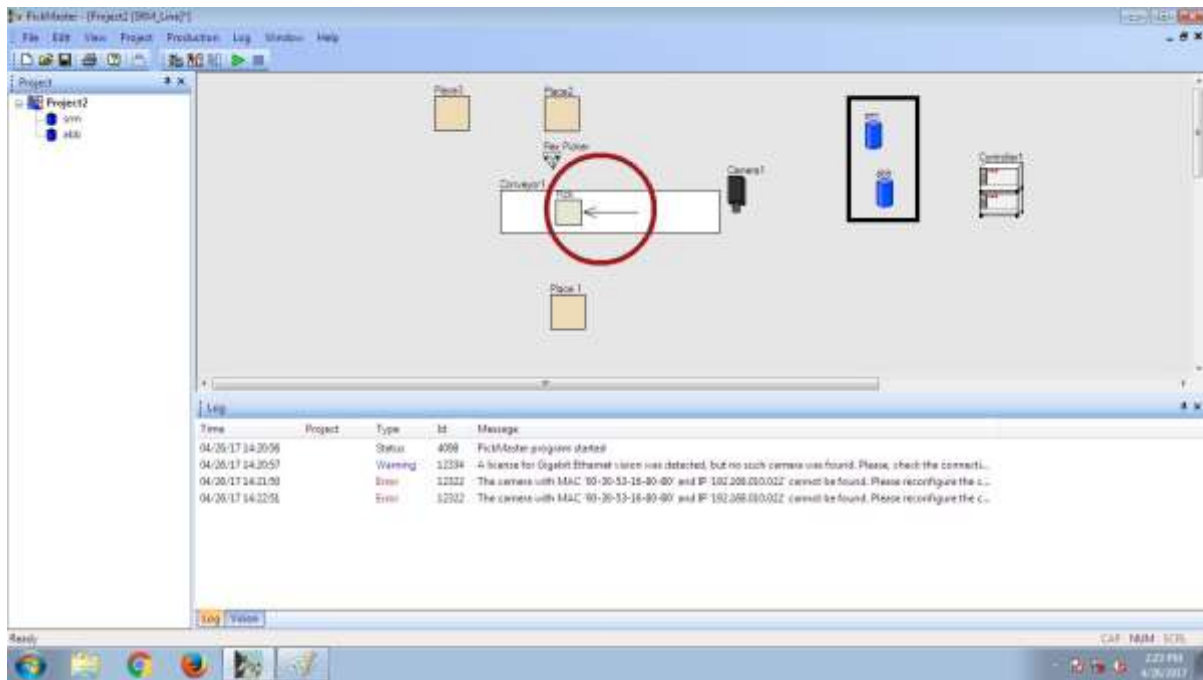


Screen Shot -03

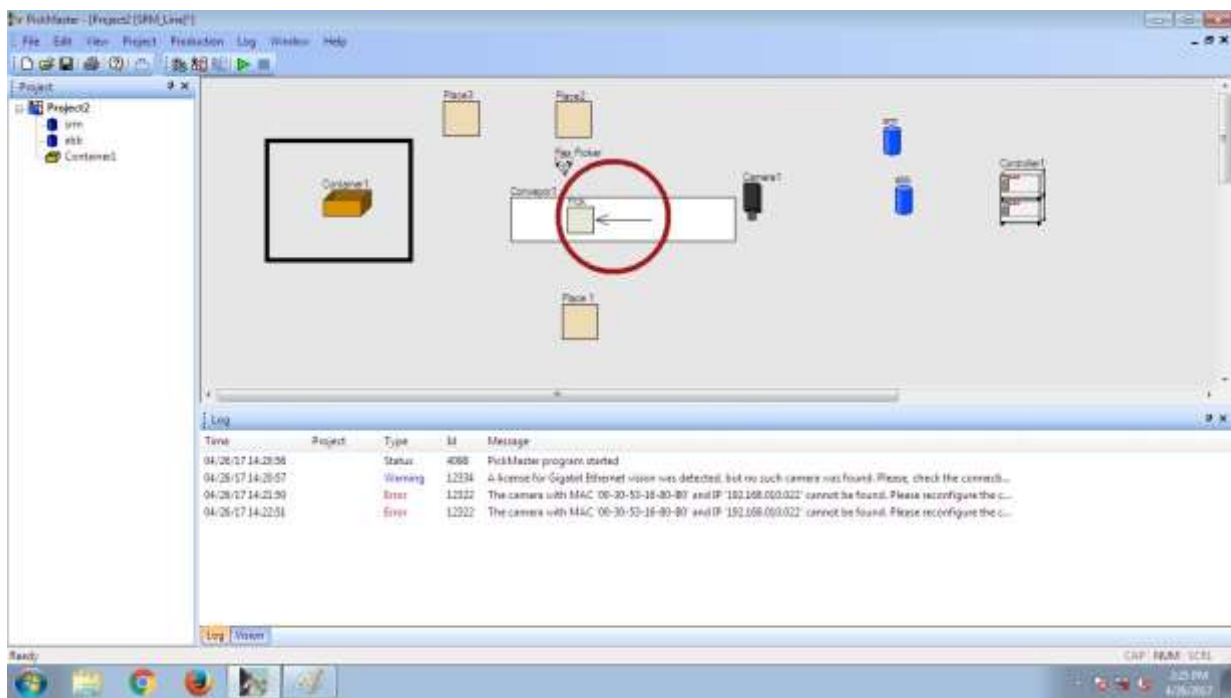


Screen Shot-04

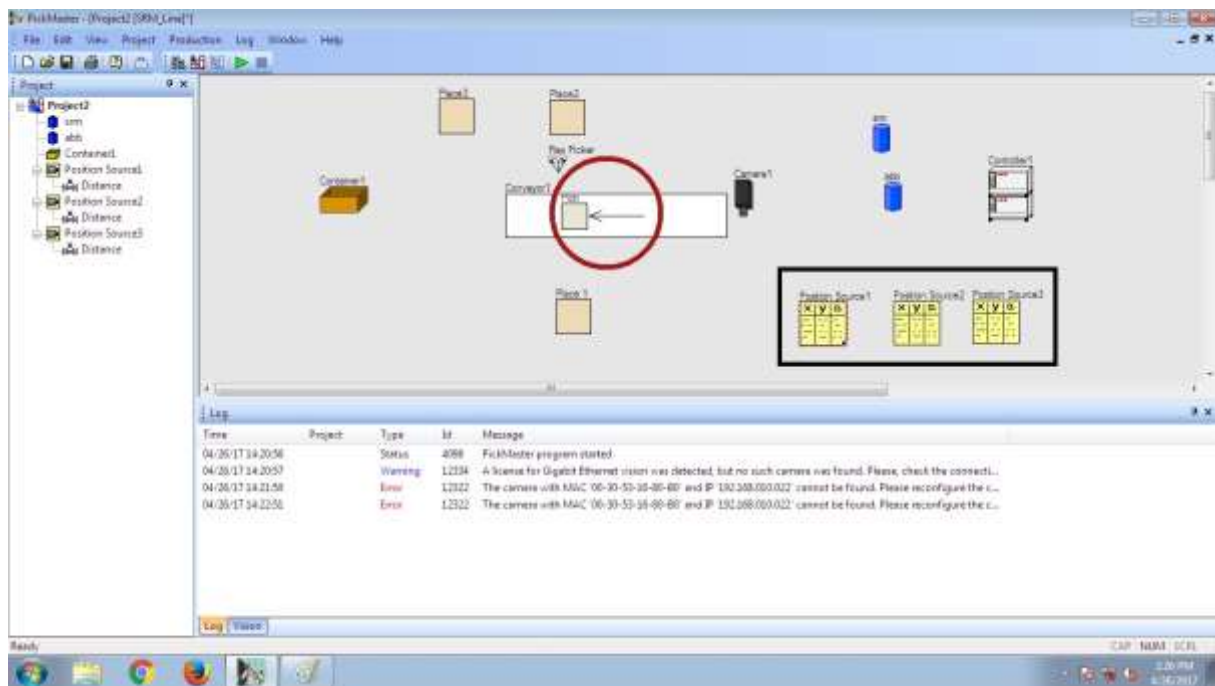


Screen Shot -05

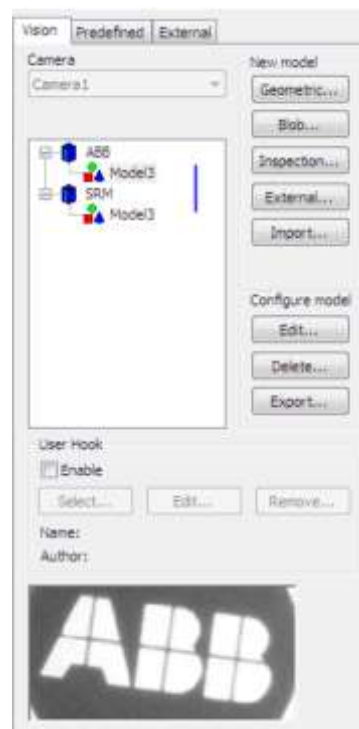

Screen Shot- 06

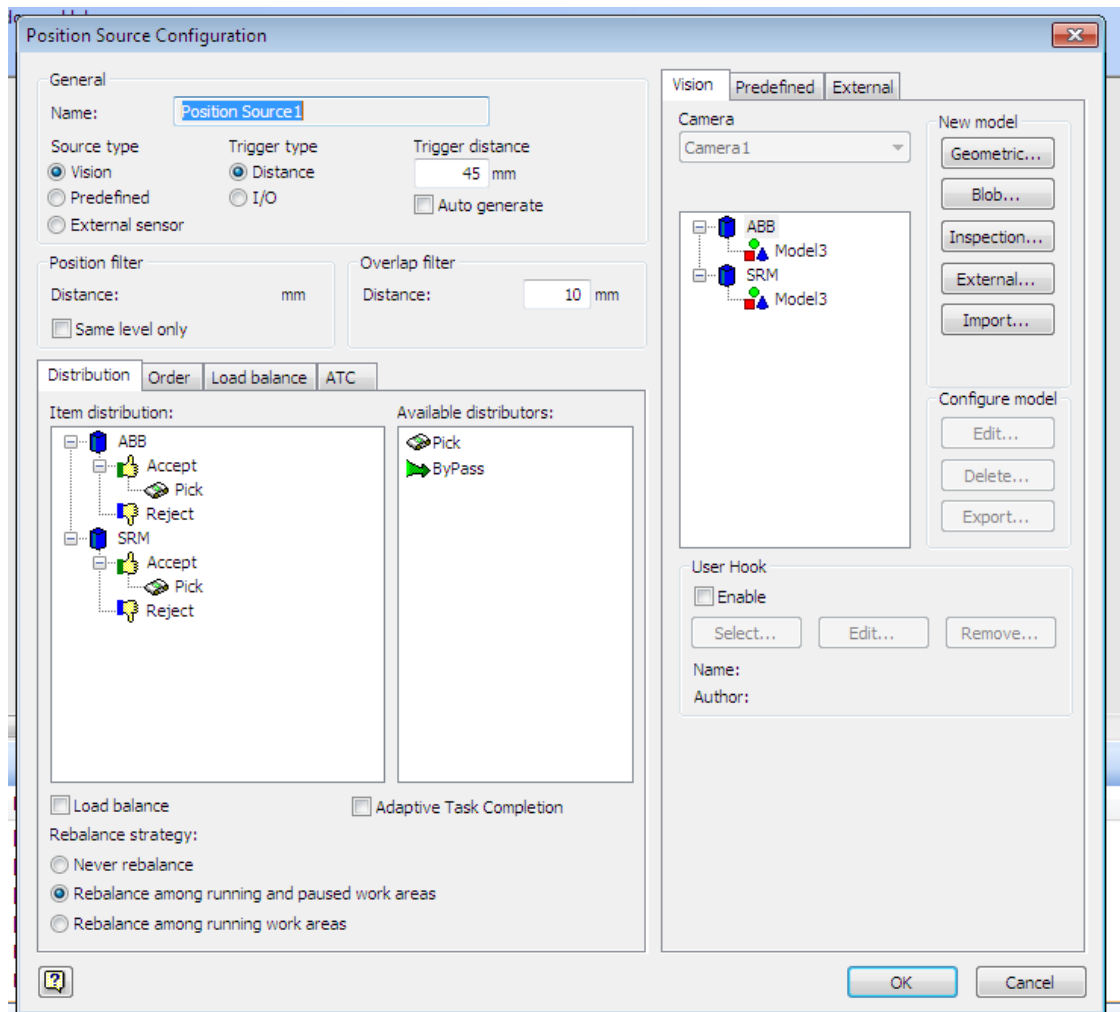

Screen Shot -07

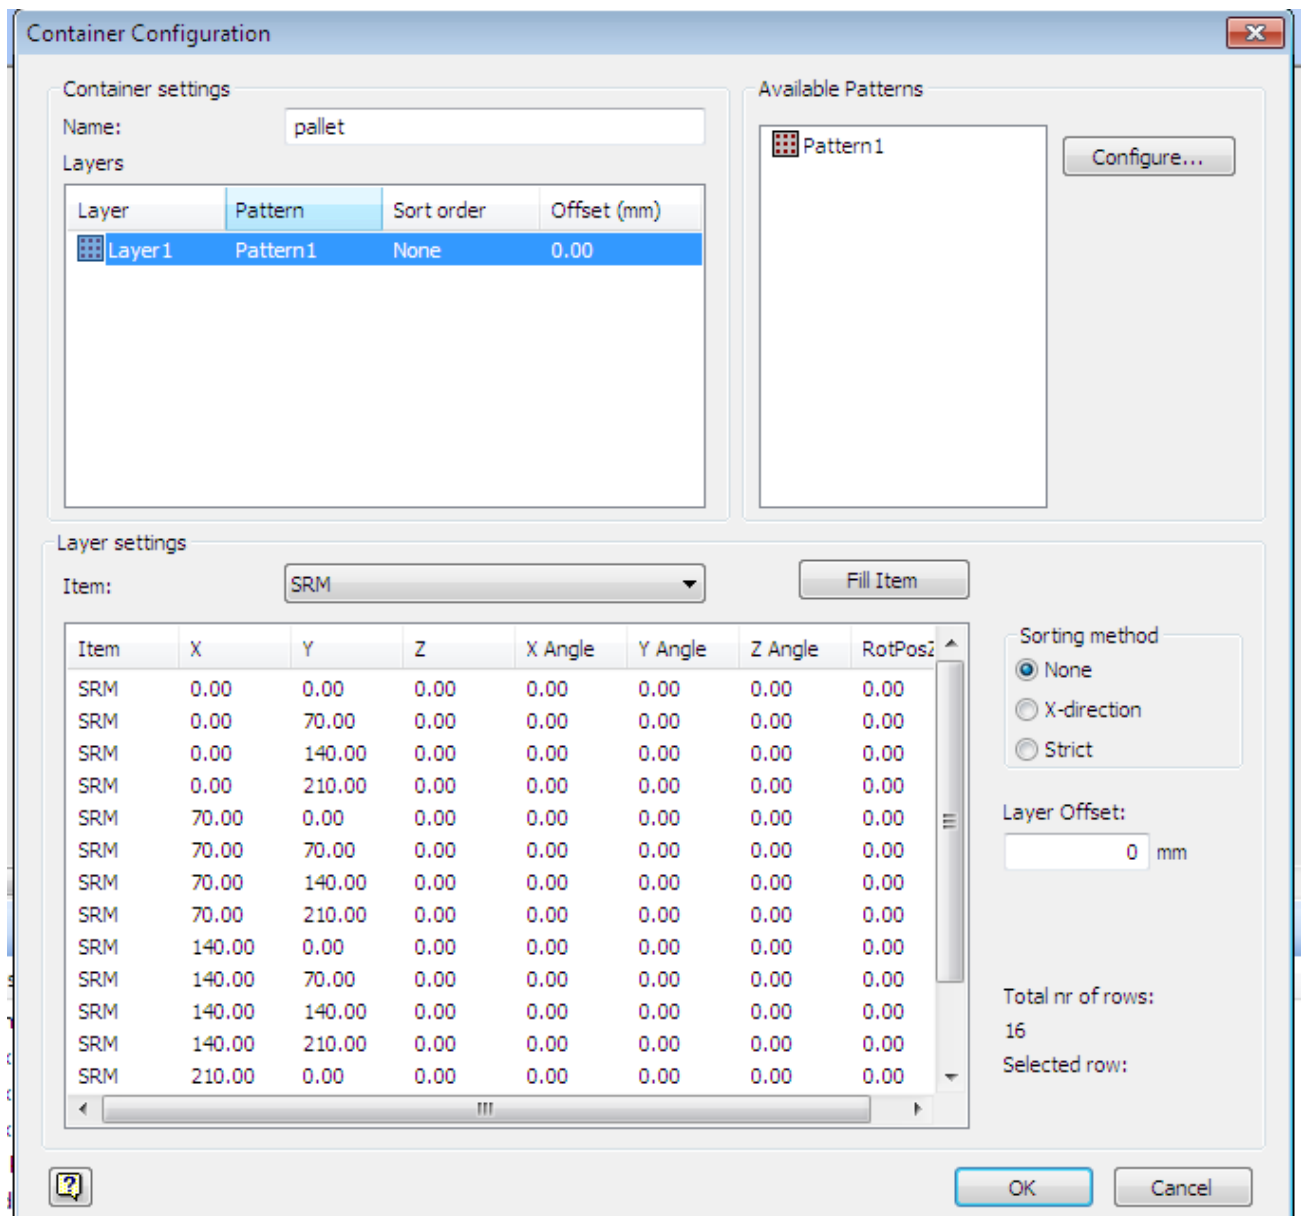

Screen Shot- 08

RESULT

Thus to program IRB360 flex picker 4 axis parallel manipulator using pickMaster software is successfully completed.